

TI-RTOS 2.12

User's Guide



Literature Number: SPRUHD4I
March 2015

Preface	7
1 About TI-RTOS	8
1.1 What is TI-RTOS?	8
1.2 What are the TI-RTOS Components?	9
1.3 SYS/BIOS — The TI-RTOS Kernel	10
1.4 UIA — TI-RTOS Instrumentation	10
1.5 NDK — TI-RTOS Networking	11
1.6 IPC — TI-RTOS Interprocessor Communication	11
1.7 FatFS Module in SYS/BIOS — TI-RTOS File System	12
1.8 TI-RTOS Drivers and Board Initialization	12
1.8.1 Drivers	12
1.8.2 MWare	12
1.8.3 MSPWare	13
1.8.4 TivaWare	13
1.8.5 C26xxWare and the CC3200 Driverlib	14
1.9 TI-RTOS Network Services	14
1.10 XDCtools	14
2 Instrumentation with TI-RTOS	15
2.1 Overview	15
2.2 Adding Logging to a Project	16
2.3 Modifying an Example to Upload Logging Data at Runtime	18
2.3.1 Project Changes	18
2.3.2 Code Changes	20
2.3.3 Configuration Changes	21
2.4 Using Log Events	23
2.4.1 Adding Log Events to your Code	23
2.4.2 Using Instrumented or Non-Instrumented Libraries	23
2.5 Viewing the Logs	24
2.5.1 Using RTOS Analyzer and System Analyzer	24
2.5.2 Viewing Log Records in ROV	25
3 Debugging TI-RTOS Applications	26
3.1 Using CCS Debugging Tools	26
3.1.1 Stepping Through TI-RTOS Code	28
3.2 Generating printf Output	29
3.2.1 Output with printf()	29
3.2.2 Output with System_printf()	29
3.3 Controlling Software Versions for Use with TI-RTOS	32
3.4 Understanding the Build Flow	33
4 Board-Specific Files	34
4.1 Overview	34
4.2 Board-Specific Code Files	35

4.3	Linker Command Files	35
4.4	Target Configuration Files	36
5	TI-RTOS Drivers	37
5.1	Overview	38
5.2	Driver Framework	39
5.2.1	Static Configuration	39
5.2.2	Driver Object Declarations	40
5.2.3	Dynamic Configuration and Common APIs	43
5.2.4	TI-RTOS Driver Implementations for Concerto Devices	43
5.2.5	TI-RTOS Driver Implementations for TivaC Devices	44
5.2.6	TI-RTOS Driver Implementations for CC26xx Devices	44
5.2.7	TI-RTOS Driver Implementations for CC3200 Devices	45
5.2.8	TI-RTOS Driver Hwis for MSP43x Devices	46
5.3	Camera Driver	49
5.3.1	Static Configuration	49
5.3.2	Runtime Configuration	49
5.3.3	Camera Modes	49
5.3.4	APIs	50
5.3.5	Examples	50
5.4	EMAC Driver	51
5.4.1	Static Configuration	51
5.4.2	Runtime Configuration	51
5.4.3	APIs	51
5.4.4	Usage	51
5.4.5	Instrumentation	52
5.4.6	Examples	52
5.5	GPIO Driver	53
5.5.1	Static Configuration	53
5.5.2	Runtime Configuration	55
5.5.3	APIs	55
5.5.4	Usage	55
5.5.5	Instrumentation	56
5.5.6	Examples	56
5.6	I2C Driver	57
5.6.1	Static Configuration	57
5.6.2	Runtime Configuration	57
5.6.3	APIs	57
5.6.4	Usage	58
5.6.5	I2C Modes	59
5.6.6	I2C Transactions	60
5.6.7	Instrumentation	63
5.6.8	Examples	63
5.7	I2S Driver	64
5.7.1	Static Configuration	64
5.7.2	Runtime Configuration	64
5.7.3	I2S Modes	65
5.7.4	APIs	65
5.7.5	Examples	67
5.8	PWM Driver	68

5.8.1	Static Configuration	68
5.8.2	Runtime Configuration	68
5.8.3	APIs	68
5.8.4	Usage.	69
5.8.5	PWM Modes	69
5.8.6	Instrumentation	70
5.8.7	Examples	70
5.9	SDSPI Driver	71
5.9.1	Static Configuration	71
5.9.2	Runtime Configuration	71
5.9.3	APIs	72
5.9.4	Usage.	72
5.9.5	Instrumentation	72
5.9.6	Examples	72
5.10	SPI Driver	73
5.10.1	Static Configuration	73
5.10.2	Runtime Configuration	73
5.10.3	APIs	73
5.10.4	Usage.	74
5.10.5	Callback and Blocking Modes	75
5.10.6	SPI Transactions	76
5.10.7	Master/Slave Modes	77
5.10.8	Instrumentation	78
5.10.9	Examples	78
5.11	SPIMessageQTransport	79
5.11.1	Static Configuration	79
5.11.2	Runtime Configuration	79
5.11.3	Error Conditions	79
5.11.4	Examples	80
5.12	UART Driver	81
5.12.1	Static Configuration	81
5.12.2	Runtime Configuration	81
5.12.3	APIs	81
5.12.4	Usage.	82
5.12.5	UART DMA Driver for TivaC Devices	83
5.12.6	UART DMA Driver for SimpleLink CC32xx Devices	84
5.12.7	Instrumentation	84
5.12.8	Examples	85
5.13	USBMSCHFatFs Driver	86
5.13.1	Static Configuration	86
5.13.2	Runtime Configuration	86
5.13.3	APIs	86
5.13.4	Usage.	87
5.13.5	Instrumentation	88
5.13.6	Examples	88
5.14	USB Reference Modules	89
5.14.1	USB Reference Modules in TI-RTOS	90
5.14.2	USB Reference Module Design Guidelines	91
5.15	USB Device and Host Modules.	92

5.16	Watchdog Driver	94
5.16.1	Static Configuration	94
5.16.2	Runtime Configuration	94
5.16.3	APIs	94
5.16.4	Usage.	95
5.16.5	Instrumentation	95
5.16.6	Examples	96
5.17	WiFi Driver	96
5.17.1	Static Configuration	97
5.17.2	Runtime Configuration	98
5.17.3	APIs	98
5.17.4	Usage.	99
5.17.5	Instrumentation	99
5.17.6	Examples	99
6	TI-RTOS Network Services	100
6.1	Overview	100
6.2	HTTP Client	100
6.3	Static Configuration	101
6.4	APIs	101
6.5	Examples	101
7	TI-RTOS Utilities	102
7.1	Overview	102
7.2	UARTMon Module	102
7.2.1	UARTMon with CCS Tools	104
7.2.2	GUI Composer	108
7.3	UART Example Implementation	108
8	Using the FatFs File System Drivers	109
8.1	Overview	109
8.2	FatFs, SYS/BIOS, and TI-RTOS.	110
8.3	Using FatFs	111
8.3.1	Static FatFS Module Configuration	111
8.3.2	Defining Drive Numbers.	112
8.3.3	Preparing FatFs Drivers.	112
8.3.4	Opening Files Using FatFs APIs	113
8.3.5	Opening Files Using C I/O APIs.	113
8.4	Cautionary Notes	113
9	Rebuilding TI-RTOS	114
9.1	Rebuilding TI-RTOS	115
9.1.1	Building TI-RTOS for CCS.	115
9.1.2	Building TI-RTOS for IAR.	116
9.1.3	Building TI-RTOS for GCC.	116
9.1.4	Rebuilding the TI-RTOS Drivers with the Debug Profile	117
9.2	Rebuilding MSPWare's driverlib for TI-RTOS and Its Drivers.	117
9.3	Rebuilding Individual Components	118
10	Memory Usage with TI-RTOS	119
10.1	Memory Footprint Reduction.	119
10.2	Networking Stack Memory Usage.	131

A	Revision History	132
	Index	135

Read This First

About This Manual

This manual describes TI-RTOS and contains information related to all supported device families. The version number as of the publication of this manual is v2.12.

Notational Conventions

This document uses the following conventions:

- Program listings, program examples, and interactive displays are shown in a special typeface. Examples use a bold version of the special typeface for emphasis.

Here is a sample program listing:

```
#include <xdc/runtime/System.h>
int main(void) {
    System_printf("Hello World!\n");
    return (0);
}
```

- Square brackets ([and]) identify an optional parameter. If you use an optional parameter, you specify the information within the brackets. Unless the square brackets are in a **bold** typeface, do not enter the brackets themselves.

Trademarks

Registered trademarks of Texas Instruments include Stellaris, and StellarisWare.

Trademarks of Texas Instruments include: the Texas Instruments logo, Texas Instruments, TI, TI.COM, BoosterPack, C2000, C5000, C6000, Code Composer, Code Composer Studio, Concerto, controlSUITE, DSP/BIOS, E2E, MSP430, MSP430Ware, MSP432, OMAP, SimpleLink, SPOX, Sitara, TI-RTOS, Tiva, TivaWare, TMS320, TMS320C5000, TMS320C6000, and TMS320C2000.

ARM is a registered trademark, and Cortex is a trademark of ARM Limited.

Windows is a registered trademark of Microsoft Corporation.

Linux is a registered trademark of Linus Torvalds.

IAR Systems and IAR Embedded Workbench are registered trademarks of IAR Systems AB:

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

March 24, 2015

About TI-RTOS

This chapter provides an overview of TI-RTOS.

Topic	Page
1.1 What is TI-RTOS?	8
1.2 What are the TI-RTOS Components?	9
1.3 SYS/BIOS — The TI-RTOS Kernel	10
1.4 UIA — TI-RTOS Instrumentation	10
1.5 NDK — TI-RTOS Networking	11
1.6 IPC — TI-RTOS Interprocessor Communication	11
1.7 FatFS Module in SYS/BIOS — TI-RTOS File System	12
1.8 TI-RTOS Drivers and Board Initialization	12
1.9 TI-RTOS Network Services	14
1.10 XDCtools	14

1.1 What is TI-RTOS?

TI-RTOS is a scalable, one-stop embedded tools ecosystem for TI devices. It scales from a real-time multitasking kernel (SYS/BIOS) to a complete RTOS solution including additional middleware components and device drivers. By providing essential system software components that are pre-tested and preintegrated, TI-RTOS enables you to focus on differentiating your application.

If you use Code Composer Studio (CCS), you can install TI-RTOS in the **CCS App Center**. There are several different versions of TI-RTOS to support different device families, including TI-RTOS for MSP43x, TI-RTOS for TivaC, and TI-RTOS for C2000. You can also use TI-RTOS outside of CCS, including with IAR Embedded Workbench and GNU compilers.



For information about installing TI-RTOS and creating and configuring examples that use TI-RTOS, see the TI-RTOS Getting Started Guide for your device family:

- *TI-RTOS for C2000 Getting Started Guide* -- [SPRUHU3](#)
- *TI-RTOS for MSP43x Getting Started Guide* -- [SPRUHU4](#)
- *TI-RTOS for TivaC Getting Started Guide* -- [SPRUHU5](#)
- *TI-RTOS for SimpleLink™ Wireless MCUs Getting Started Guide* -- [SPRUHU8](#)

1.2 What are the TI-RTOS Components?

TI-RTOS contains its own source files, pre-compiled libraries (both instrumented and non-instrumented), and examples. Additionally, TI-RTOS contains a number of components within its "products" subdirectory. The components of TI-RTOS are as follows. Some components are not available for all device families.

Table 1–1. TI-RTOS Components

TI-RTOS Component	Name	PDF Documentation Location
TI-RTOS	TI-RTOS examples	Chapter 3 of the <i>TI-RTOS Getting Started Guide</i> for your device
TI-RTOS Kernel	SYS/BIOS	<i>SYS/BIOS (TI-RTOS Kernel) User's Guide</i> -- SPRUEX3
TI-RTOS Instrumentation	UIA	<i>System Analyzer User's Guide</i> -- SPRUH43
TI-RTOS Networking	NDK	<i>TI Network Developer's Kit (NDK) Guide</i> -- SPRU523 <i>TI Network Developer's Kit (NDK) API Reference</i> -- SPRU524
TI-RTOS Interprocessor Communication	IPC	<i>IPC User's Guide</i> on Texas Instruments Wiki
TI-RTOS File System	FatFS	Chapter 8 of this User's Guide
TI-RTOS USB	USB stack	Section 5.14 and Section 5.15 of this User's Guide
TI-RTOS Drivers and Board Initialization	Drivers and TivaWare, MSPWare, MWare, CC26xxWare, or the CC3200 SDK's driverlib	Section 1.8 and Chapter 5 of this User's Guide
TI-RTOS Network Services	Network Services	Section 1.9 and Chapter 6 of this User's Guide

- **TI-RTOS Kernel — SYS/BIOS.** SYS/BIOS is a scalable real-time kernel. It is designed to be used by applications that require real-time scheduling and synchronization or real-time instrumentation. It provides preemptive multi-threading, hardware abstraction, real-time analysis, and configuration tools. SYS/BIOS is designed to minimize memory and CPU requirements on the target.
- **TI-RTOS Instrumentation — UIA.** The Unified Instrumentation Architecture (UIA) provides target content that aids in the creation and gathering of instrumentation data (for example, Log data).
- **TI-RTOS Networking — NDK.** The Network Developer's Kit (NDK) is a platform for development and demonstration of network enabled applications on TI embedded processors.
- **TI-RTOS Interprocessor Communication — IPC.** IPC contains packages that are designed to allow communication between processors in a multi-processor environment and communication to peripherals. This communication includes message passing, streams, and linked lists. These work transparently in both uni-processor and multi-processor configurations.
- **MSPWare, MWare, TivaWare, CC26xxWare, and the CC3200 SDK's driverlib.** These provide software designed to simplify and speed development of applications on the corresponding device family. These components are rebuilt to include only the portions required by TI-RTOS
- **XDCtools.** This core component provides the underlying tooling for configuring and building TI-RTOS and its components. XDCtools is installed as part of CCS v6.x. If you install TI-RTOS outside CCS, a compatible version of XDCtools is installed automatically.

1.3 SYS/BIOS — The TI-RTOS Kernel

SYS/BIOS is an advanced real-time operating system from Texas Instruments for use in a wide range of DSPs, microprocessors, and microcontrollers. It is designed for use in embedded applications that need real-time scheduling, synchronization, and instrumentation. SYS/BIOS is designed to minimize memory and CPU requirements on the target. SYS/BIOS provides a wide range of services, such as:

- Preemptive, deterministic multi-threading
- Hardware abstraction
- Memory management
- Configuration tools
- Real-time analysis

For more information about SYS/BIOS, see the following:

[SYS/BIOS User's Guide \(SPRUEX3\)](#)

SYS/BIOS API and configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS Kernel Runtime APIs and Configuration (cdoc)** item.

[SYS/BIOS on Texas Instruments Wiki](#)

[TI-RTOS forum on TI's E2E Community](#)

1.4 UIA — TI-RTOS Instrumentation

The Unified Instrumentation Architecture (UIA) provides target content that aids in the creation and gathering of instrumentation data (for example, Log data).

The System Analyzer tool suite, which is part of CCS, provides a consistent and portable way to instrument software. It includes the views that can be opened from the **Tools > RTOS Analyzer** and **Tools > System Analyzer** menus in CCS. It enables software to be re-used with a variety of silicon devices, software applications, and product contexts. It works together with UIA to provide visibility into the real-time performance and behavior of software running on TI's embedded single-core and multicore devices.

For more information about UIA and System Analyzer, see the following:

[System Analyzer User's Guide \(SPRUH43\)](#)

UIA API and configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS Instrumentation Runtime APIs and Configuration (cdoc)** item.

[System Analyzer on Texas Instruments Wiki](#)

1.5 NDK — TI-RTOS Networking

The Network Developer's Kit (NDK) is a platform for development and demonstration of network enabled applications on TI embedded processors, currently limited to the TMS320C6000 family and ARM processors. The NDK stack serves as a rapid prototyping platform for the development of network and packet processing applications. It can be used to add network connectivity to existing applications for communications, configuration, and control. Using the components provided in the NDK, developers can quickly move from development concepts to working implementations attached to the network.

The NDK is a networking stack that operates on top of SYS/BIOS.

For more information about NDK, see the following:

[NDK User's Guide \(SPRU523\)](#)

[NDK Programmer's Reference Guide \(SPRU524\)](#)

NDK API reference.

Run `<tirtos_install>/products/ndk_#_##_##_###/docs/doxygen/html/index.html`.

NDK configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS Networking Configuration (cdoc)** item.

[NDK on Texas Instruments Wiki](#)

[TI-RTOS forum on TI's E2E Community](#)

1.6 IPC — TI-RTOS Interprocessor Communication

IPC is a component containing packages that are designed to allow communication between processors in a multi-processor environment and communication between threads and peripherals in a uni-processor and multi-processor environment. This communication includes message passing, streams, and linked lists. These work transparently in both uni-processor and multi-processor configurations.

The `ti.sdo.ipc` package contains modules and interfaces for interprocessor communication. The `ti.sdo.utils` package contains utility modules for supporting the `ti.sdo.ipc` modules and other modules.

IPC is designed for use on processors running SYS/BIOS applications. IPC can be used to communicate with the following:

- Other threads on the same processor
- Threads on other processors running SYS/BIOS
- Threads on general purpose processors (GPP) running SysLink

For more information about IPC, see the following:

[IPC User's Guide \(SPRUG06\)](#)

IPC API reference. Run `<tirtos_install>/products/ipc_#_##_##_###/docs/doxygen/index.html`.

IPC configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS IPC Configuration (cdoc)** item.

1.7 FatFS Module in SYS/BIOS — TI-RTOS File System

FatFS is an open-source FAT file system module intended for use in embedded systems. The API used by your applications is generic to all FatFS implementations, and is described and documented at http://elm-chan.org/fsw/ff/00index_e.html. In order to use FatFS in TI-RTOS applications, you must configure the module for use with the SYS/BIOS `ti.sysbios.fatfs.FatFS` module.

For more information about FatFS, see the following:

[Chapter 8, "Using the FatFs File System Drivers"](#)

[FatFS for SYS/BIOS wiki page](#)

SYS/BIOS API and configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS Kernel Runtime APIs and Configuration (cdoc)** item and see help under the `ti.sysbios.fatfs.FatFS` module topic.

1.8 TI-RTOS Drivers and Board Initialization

TI-RTOS provides drivers for device families for which a *Ware package is supported by TI-RTOS. This *Ware packages include TivaWare, MSPWare, MWare, CC26xxWare, and the CC3200SDK Driverlib. The *Ware libraries distributed with TI-RTOS have been reduced in size to include only the necessary portions of the libraries.

1.8.1 Drivers

TI-RTOS includes drivers for a number of peripherals. See [Chapter 5](#) for a list of the specific drivers and details about each one.

The drivers are in the `<tirtos_install>/packages/ti/drivers` directory. TI-RTOS examples are provided to show how to use these drivers.

Note that all of these drivers are built on top of MWare, MSPWare, and TivaWare. These drivers provide the following advantages over those provided by MWare, MSPWare, and TivaWare:

- The TI-RTOS drivers are thread-safe for use with SYS/BIOS threads.
- The TI-RTOS drivers are provided in both instrumented and non-instrumented versions. The instrumented versions support logging and asserts.
- The TI-RTOS drivers provide support for the RTOS Object View (ROV) tool in CCS.

1.8.2 MWare

MWare is the M3 portion of controlSUITE, a software package that provides support for F28M3x (Concerto) devices. It includes low-level drivers and examples.

- The version of MWare provided with TI-RTOS differs from the version in controlSUITE in that it has been rebuilt. See the TI-RTOS.README file in the `<tirtos_install>/products/MWare_v###a` directory for more specific details. To indicate that the version has been modified, the name of the MWare folder has an added letter (beginning with "a" and to be incremented in subsequent versions). For example `<tirtos_install>/products/MWare_v110a`.

Note that the MWare drivers are not thread-safe. You can use synchronization mechanisms provided by SYS/BIOS to protect multiple threads that access the same MWare APIs.

For more information about MWare and controlSUITE, see the following:

Documents in `<tirtos_install>/products/MWare_##/docs`

[controlSUITE on Texas Instruments Wiki](#)

[controlSUITE Product Folder](#)

1.8.3 **MSPWare**

MSPWare is an extensive suite of drivers, code examples, and design resources designed to simplify and speed development of MSP430 and MSP432 microcontroller applications. Currently, TI-RTOS uses MSPWare to support MSP430F5xx, MSP430F6xx, and MSP432 devices. TI-RTOS utilizes MSPWare's driverlib, usb1430, and grlib components.

- The version of MSPWare provided with TI-RTOS differs from the full version in several ways. See the TI-RTOS.README file in the `<tirtos_install>\products\MSPWare_1_##_##_##a` directory for more specific details. To indicate that the version has been modified, the name of the MSPWare folder has an added letter (beginning with "a" and to be incremented in subsequent versions). For example `<tirtos_install>\products\MSPWare_1_80_01_03a`.

Note that the MSPWare drivers are not thread-safe. You can use synchronization mechanisms provided by SYS/BIOS to protect multiple threads that access the same MSPWare APIs.

For more information about MSPWare, see the following:

Documents in `<tirtos_install>/products/MSPWare_#_##_##_##a/doc`

Documents in `<tirtos_install>/products/MSPWare_#_##_##_##a/driverlib/doc`

Documents in `<tirtos_install>/products/MSPWare_#_##_##_##a/usb1430/
MSP430_USB_Software/Documentation`

[MSPWare Product Folder](#)

1.8.4 **TivaWare**

This software is an extensive suite of software designed to simplify and speed development of Tiva-based (ARM Cortex-M) microcontroller applications. (TivaWare was previously called StellarisWare.)

The version of TivaWare provided with TI-RTOS differs from the standard release in that it has been rebuilt. See the TI-RTOS.README file in the `<tirtos_install>\products\TivaWare_C_Series-1.##` directory for more specific details.

Note that the TivaWare drivers are not thread-safe. You can use synchronization mechanisms provided by SYS/BIOS to protect multiple threads that access the same TivaWare APIs.

For more information about TivaWare, see the following:

Documents in `<tirtos_install>/products/TivaWare_####/docs`

[TivaWare Product Folder](#)

[Online StellarisWare Workshop](#)

1.8.5 C26xxWare and the CC3200 Driverlib

The CC3200 Driverlib provides driver source code and libraries for SimpleLink Wireless MCUs. This Driverlib is a subset of the CC3200 SDK. It provides register-level access to CC3200 peripherals. The version of the Driverlib provided with TI-RTOS differs from the standard release in that it has been rebuilt with an Operating System Abstraction Library (OSAL) for TI-RTOS.

CC26xxWare is a software suite that provides register-level access to CC26xx peripherals.

Note that these drivers are not thread-safe. You can use synchronization mechanisms provided by SYS/BIOS to protect multiple threads that access the same CC3200 Driverlib and CC26xxWare APIs.

For more information, see the following:

[SimpleLink WiFi Radio Tool](#)

1.9 TI-RTOS Network Services

TI-RTOS includes high-level network stacks for communication such as HTTP. They are available in the `<tirtos_install>/packages/ti/net` directory. TI-RTOS examples are provided to show how to use these stacks.

For more information about Network Services, see [Chapter 6](#).

1.10 XDCtools

XDCtools is a separate software component provided by Texas Instruments that provides the underlying tooling needed for configuring and building SYS/BIOS, IPC, NDK, and UIA.

TI-RTOS installs XDCtools only if the version needed by TI-RTOS has not already been installed as part of a CCS or SYS/BIOS installation. If TI-RTOS installs XDCtools, it places it in the top-level CCS directory (for example, `c:\ti`), not the TI-RTOS products directory.

- XDCtools provides the XGCONF Configuration Editor and the scripting language used in the *.cfg files. This is used to configure modules in a number of the components that make up TI-RTOS.
- XDCtools provides the tools used to build the configuration file. These tools are used automatically by CCS if your project contains a *.cfg file. This build step generates source code files that are then compiled and linked with your application code.
- XDCtools provides a number of modules and runtime APIs that TI-RTOS and its components leverage for memory allocation, logging, system control, and more.

XDCtools is sometimes referred to as "RTSC" (pronounced "rit-see"—Real Time Software Components), which is the name for the open-source project within the Eclipse.org ecosystem for providing reusable software components (called "packages") for use in embedded systems. For more about how XDCtools and SYS/BIOS are related, see the [SYS/BIOS User's Guide \(SPRUEX3\)](#).

For more information about XDCtools, see the following:

XDCtools API and configuration reference. In TI Resource Explorer (in CCS), choose the **Documentation Links** item for your version of TI-RTOS. In the Documentation Links page, choose the **TI-RTOS Kernel Runtime APIs and Configuration (cdoc)** item and see help for the xdc.runtime modules.

[RTSC-Pedia Wiki](#)

[TI-RTOS forum on TI's E2E Community](#)

Instrumentation with TI-RTOS

This chapter describes how to instrument your application with log calls and view the data with System Analyzer (SA).

Topic	Page
2.1 Overview	15
2.2 Adding Logging to a Project	16
2.3 Modifying an Example to Upload Logging Data at Runtime	18
2.4 Using Log Events	23
2.5 Viewing the Logs	24

2.1 Overview


TI-RTOS uses the Unified Instrumentation Architecture (UIA) to instrument your application with log calls. The data can be viewed and visualized with System Analyzer (SA) to create execution graphs, load graphs and more. For detailed information on using UIA and SA refer to the Getting Started Guide in the `<tirtos_install>/products/uia_#_##_##_###/docs` directory and the [System Analyzer User's Guide \(SPRUH43\)](#).

Note that System Analyzer includes the views that can be opened from both the **Tools > RTOS Analyzer** and **Tools > System Analyzer** menus in CCS. That is, the RTOS Analyzer tools in CCS are part of System Analyzer.

2.2 Adding Logging to a Project

To add SYS/BIOS logging to a project, follow these steps:

1. Double-click on the configuration file (.cfg) for your project to open it with the XGCONF Configuration Editor.
2. If LoggingSetup is already listed in your Outline pane, skip to [Step 5](#).
3. In the "Available Products" area, expand the list as shown here to find the **LoggingSetup** module in the UIA product.

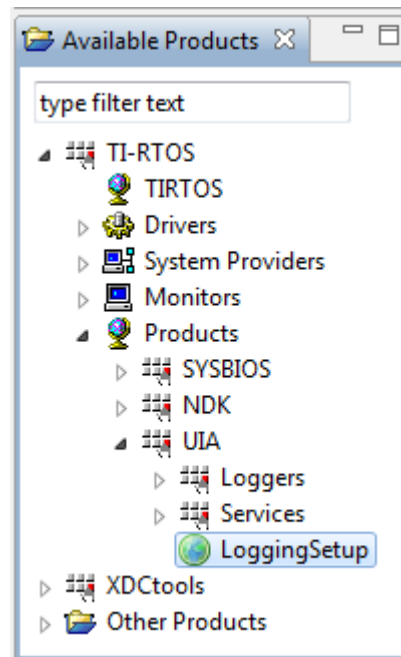

4. Right-click on the LoggingSetup module, and select **Use LoggingSetup**. This adds the LoggingSetup module to your project and opens the configuration page for the module.

5. Use the configuration page for the LoggingSetup module as follows:

- a) In the **Built-in Software Instrumentation** area, use the check boxes to select what types of threads you want to be logged for execution analysis, including tasks, software interrupts (Swi), and hardware interrupts (Hwi). If you check the **Run-time control of Event Logging** box, you can turn that type of logging on or off at runtime.

☒ **Add LoggingSetup to my configuration**

▼ **Built-in Software Instrumentation**

☒ **RTOS Execution Analysis** [More Info...](#)

☒ Task Context (Always on)
☐ Swi Context
☐ Hwi Context
☐ Semaphores

☒ **RTOS Load Analysis** [More Info...](#)

☒ CPU Load (Always on)
☒ Task Load
☐ Swi Load
☐ Hwi Load

☐ **Task Profiler** [More Info...](#)

☐ **Context-Aware Function Profiler** [More Info...](#)

▼ **User-written Software Instrumentation**

Enable modules for use in instrumenting your application code. Please click on the provided tutorial links for informat software.

☒ Error, Warning, Info and Print Events (e.g. Log_print2) [Tutorial...](#)

☐ Duration Analysis (Benchmarking) [Tutorial...](#)

☐ Statistical Analysis (Counting and Graphing) [Tutorial...](#)

☐ Snapshot Events (e.g. to log memory blocks, dynamic strings) [Tutorial...](#)

☒ Run-time Control of Event Logging [Tutorial...](#)

▼ **Loggers**

LoggingSetup generates any loggers required by the below setting automatically. If you wish to create and use differer assign them manually. [More info...](#)

LoggerStopMode (JTAG only)

▼

- b) Also in the **Built-in Software Instrumentation** area, you can check boxes if you want the CPU load to be logged for various types of activity.
- c) In the **User-written Software Instrumentation** area, you can enable logging of any additional instrumentation you have added with application code.
- d) In the **Loggers** area, you configure the logger to use in your main application. Calls to Log_info(), Log_warning(), and Log_error() in your main application as well as any instrumented driver logs will be sent to this logger. By default, LoggingSetup creates a logger that sends events over JTAG when the target is halted (that is, in Stop Mode).

The examples provided with TI-RTOS include and configure the LoggingSetup module. For more information on using LoggingSetup refer to Section 5.3.1 in the [System Analyzer User's Guide \(SPRUH43\)](#).

SPRUHD4I—March 2015
[Submit Documentation Feedback](#)

Instrumentation with TI-RTOS

17

2.3 Modifying an Example to Upload Logging Data at Runtime

The UART Console example uses UIA to upload logging data at runtime to RTOS Analyzer and System Analyzer views in CCS. All other TI-RTOS examples, including UART Echo, use Stop Mode uploading of such data. This section provides the steps to modify the UART Echo example to use the USB for the same type of runtime data uploading performed by the UART Console example. These steps can be adapted to other TI-RTOS examples.

In order to change from stop mode to runtime uploading, you need to make changes to the UART Echo project, code, and configuration as described in the following pages.

2.3.1 Project Changes

Add the following two files to your UART Echo project:

- USBCDCD_LoggerIdle.c
- USBCDCD_LoggerIdle.h

These two files are included in the UART Console example. You can choose **Project > Add Files** in CCS and copy them into your project from the `<tirtos_install>/packages/examples` directory.


The UART Echo examples already include the appropriate USB library. This library is provided by MWare, TivaWare, and MSPWare. If you are modifying an example other than UART Echo, add the appropriate library from the following list to your project:

- `<tirtos_install>\products\MWare_v20#a\MWare\usbllib\ccs\Debug\usbllib.lib`
- `<tirtos_install>\products\TivaWare_C_Series-2.#a\usbllib\ccs\Debug\usbllib.lib`
- `<tirtos_install>\products\MSPWare_1_##_##_##a\driverlib\ccs-MSP430F5529\ccs-MSP430F5529.lib`

To add a library to a CCS project, follow these steps:

1. Right-click on the project name in the Project Explorer pane of CCS and select **Properties** from the context menu.
2. Expand the **Build > Linker** category and select the **File Search Path** category.
3. Click the **+** button over the **Include library file or command file as input** field.
4. Click **File System** in the Add file path dialog.
5. Browse to the location of the appropriate usbllib library, and select the library file. Click **Open**.
6. Click **OK** in the Add file path dialog.

7. Click **OK** in the Properties dialog.

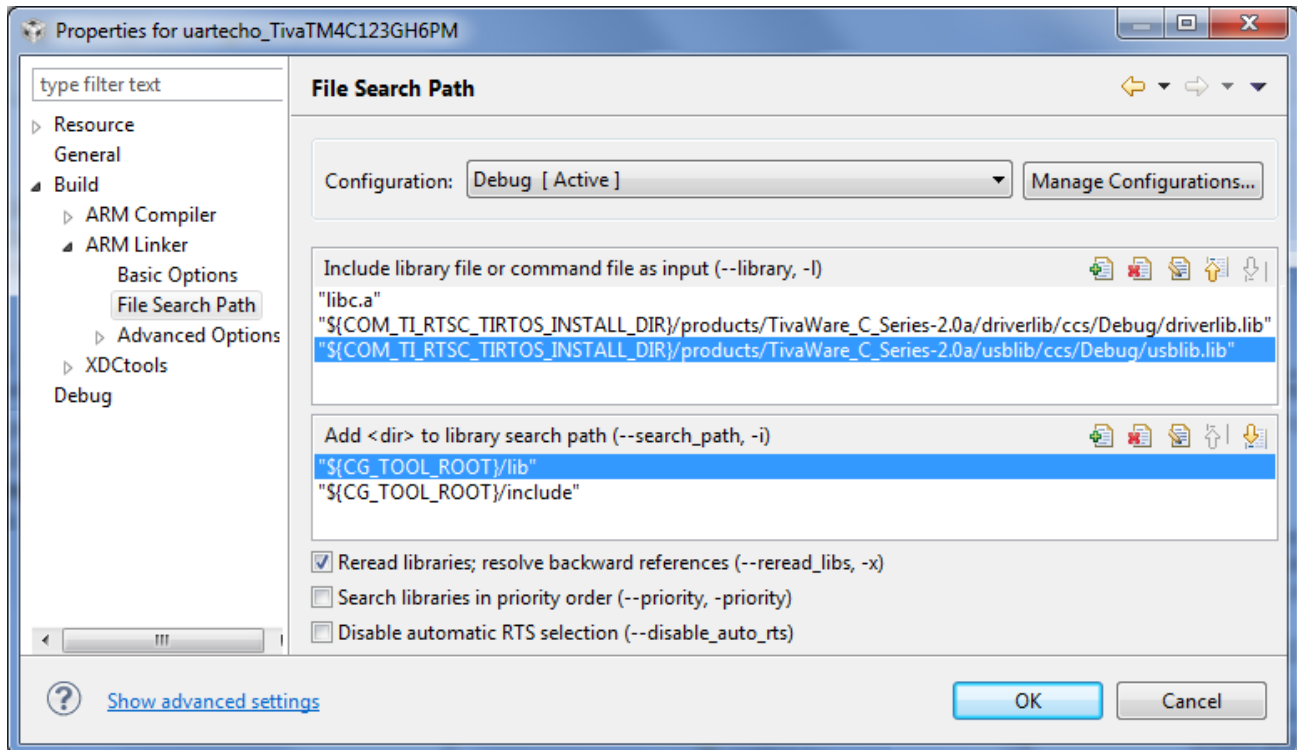

2.3.2 Code Changes

Open the uartecho.c file in CCS and add the following code:

- Include the USBDCDCD_LoggerIdle.h header file:

```
#include "USBDCDCD_LoggerIdle.h"
```

- Add the calls to Board_initUSB() and USBDCDCD_init() to the main() function as shown in green below:

```
Int main(Void)
{
    Error_Block eb;
    Task_Params taskParams;

    /* Call board init functions. */
    Board_initGeneral();
    Board_initGPIO();
    Board_initUART();

    Board_initUSB(Board_USBDEVICE);

    System_printf("Starting the example\nSystem provider is set to SysMin,"
                  "halt the target and use ROV to view output.\n");
    /* SysMin will only print to the console when you call flush or exit */
    System_flush();

    /* Turn on user LED */
    GPIO_write(Board_LED, Board_LED_ON);

    /* Initialize the USB CDC device for logging transport */
    USBDCDCD_init();

    /* Create the task */
    Error_init(&eb);
    Task_Params_init(&taskParams);
    taskParams.instance->name = "echo";
    echo = Task_create(echoFxn, &taskParams, &eb);
    if (echo == NULL) {
        System_printf("Task was not created\n");
        System_abort("Aborting...\n");
    }


    /* Enable interrupts and start SYS/BIOS */
    BIOS_start();

    return (0);
}
```

2.3.3 Configuration Changes


You can modify the project's configuration with the XGCONF Configuration Editor or with a text editor. Here are the steps for both of these methods:

1. Using the XGCONF Configuration Editor, open the UART Echo project's uartecho.cfg file.
2. Select the **LoggingSetup** module in the Outline pane.
3. In the LoggingSetup configuration page, move to the **Loggers** section and change the logger type to **LoggerIdle - Upload in Idle loop**.

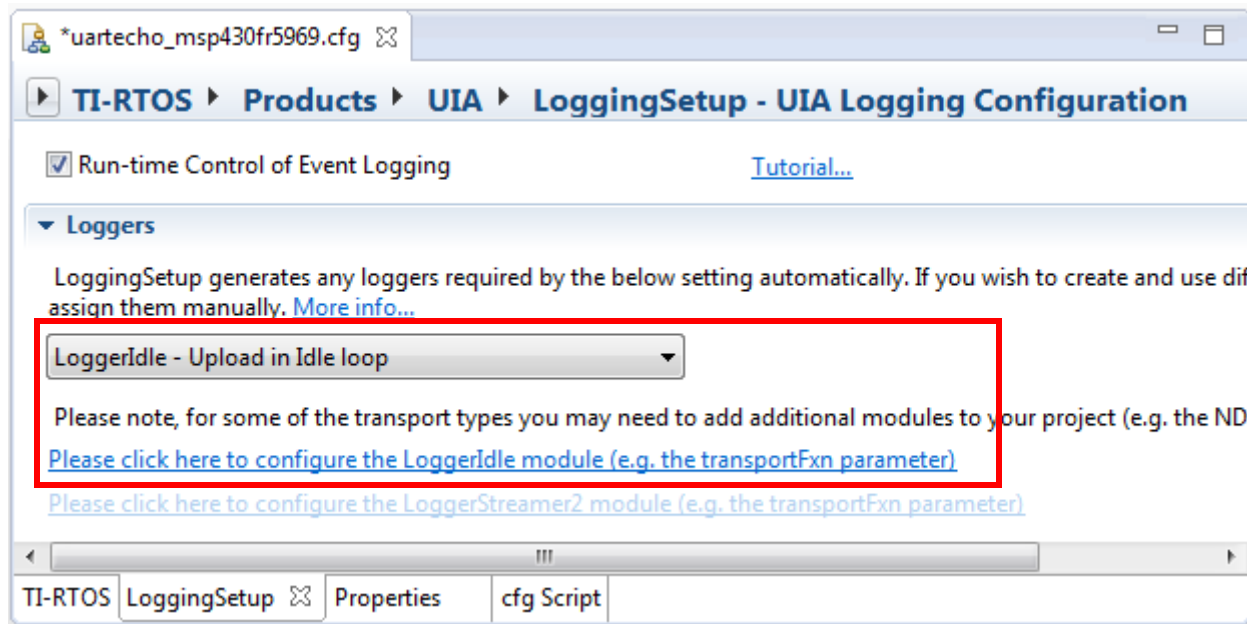

4. Follow the **Please click here to configure the LoggerIdle module** link.

5. In the Logger Idle configuration page, check the **Add the LoggerIdle module to my configuration** box.
6. Set the **Buffer Size** to 1024.
Set the **Transport Function** to USBDCDCD_LoggerIdle_sendData,
Set the **Transport Type** to TransportType_USB.

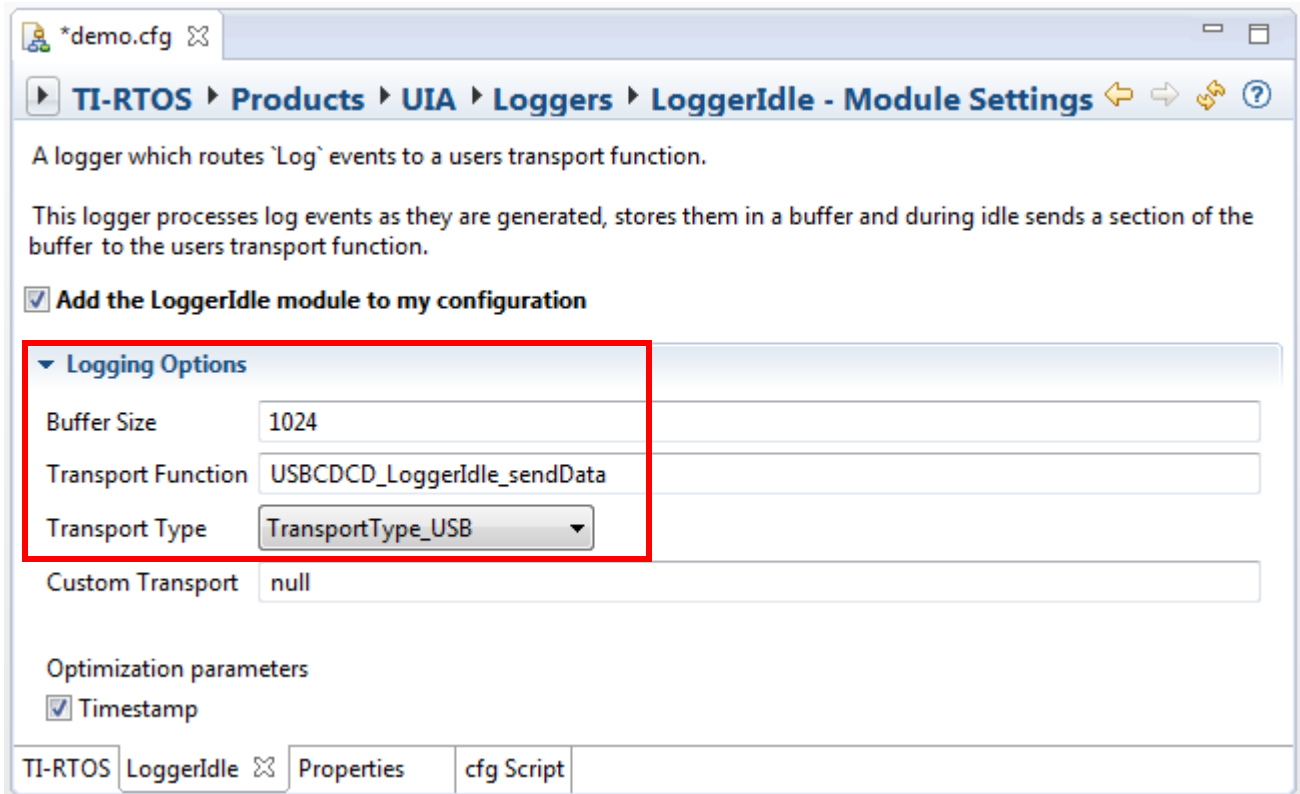

7. Save the configuration file.

To modify the configuration with a text editor, add the following statements at the end of the uartechno.cfg file:

```
LoggingSetup.loggerType = LoggingSetup.LoggerType_IDLE;
LoggerIdle.transportType = LoggerIdle.TransportType_USB;
LoggerIdle.bufferSize = 1024;
LoggerIdle.transportFxn = "&USBDCDCD_LoggerIdle_sendData";
```

Note: The configuration file should already contain the following statement:

```
var LoggingSetup = xdc.useModule('ti.uia.sysbios.LoggingSetup');
```

2.4 Using Log Events

You can add Log events to your application and control whether Log events are processed by drivers as described in the following sub-sections.

2.4.1 Adding Log Events to your Code

Your application can send messages to a Log using the standard Log module APIs (xdc.runtime.Log).

Log calls are of the format `Log_typeN(String, arg1, arg2... argN)`. Valid types are print, info, warning and error. N is the number of arguments between 0 and 5. For example:

```
Log_info2("tsk1 Entering. arg0,1 = %d %d", arg0, arg1)
```



See the SYS/BIOS Log example project for more use cases.

2.4.2 Using Instrumented or Non-Instrumented Libraries

TI-RTOS allow you to control whether or not Log events are handled by choosing to build with the instrumented or non-instrumented libraries. The instrumented libraries process Log events and Asserts, while the non-instrumented libraries do not.

To select the type of library to build with, follow these steps:

1. Double-click on the configuration file (.cfg) for your project to open it with the XGCONF Configuration Editor.
2. In the "Available Products" area, select the TIRTOS module.
3. Select the **Driver Options** link.
4. On the configuration page, choose whether to use the instrumented or non-instrumented libraries.

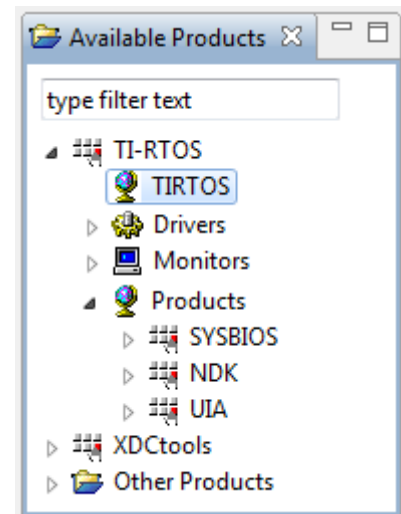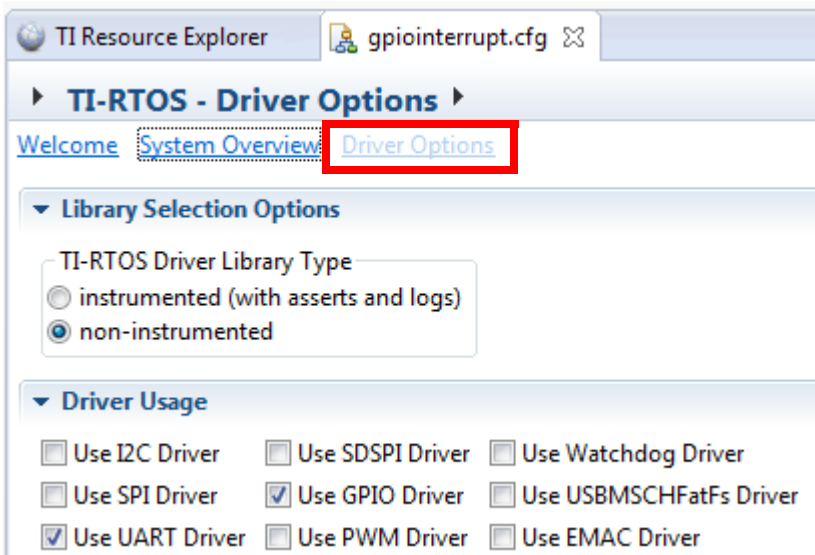

5. On the same page, check the boxes for any drivers your application will use. The WiFi driver must be configured as a separate module. Use the Drivers folder in the Available Products pane.

See Section 5.2.1 for more about configuring instrumented or non-instrumented libraries. Refer to the individual drivers in [Chapter 5](#) for details about what is logged and which Diags masks are used.


2.5 Viewing the Logs

You can use CCS to view Log messages using the RTOS Analyzer, System Analyzer, and/or ROV tools.


2.5.1 Using RTOS Analyzer and System Analyzer

After you have built and run your application, follow these steps in the CCS Debug view to see Log messages from your application with RTOS Analyzer:


1. Open an analyzer by selecting **Tools > RTOS Analyzer > Printf and Error Logs**.
2. The Analysis Configuration detects the type of transport you are using.

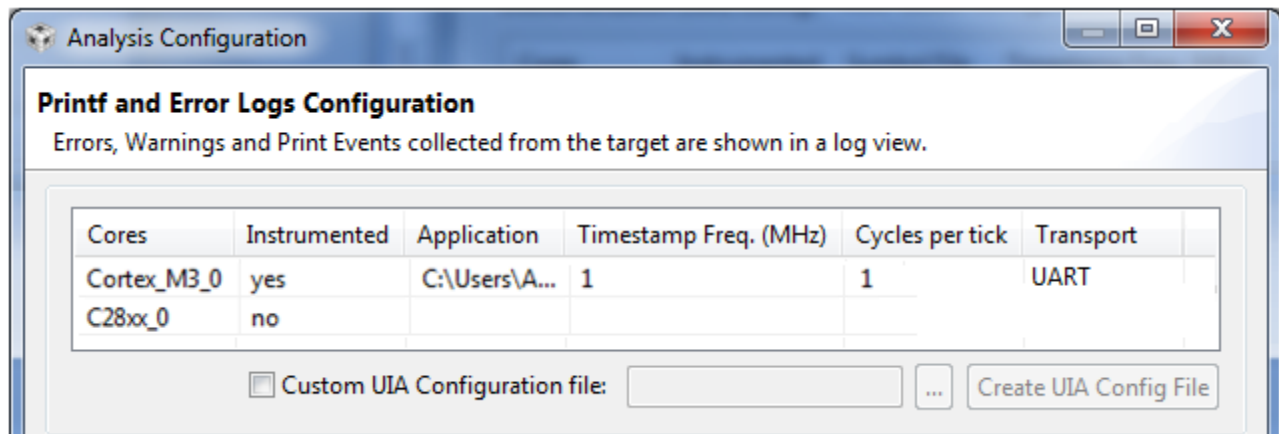

3. Select additional analyzer views you would like to run.

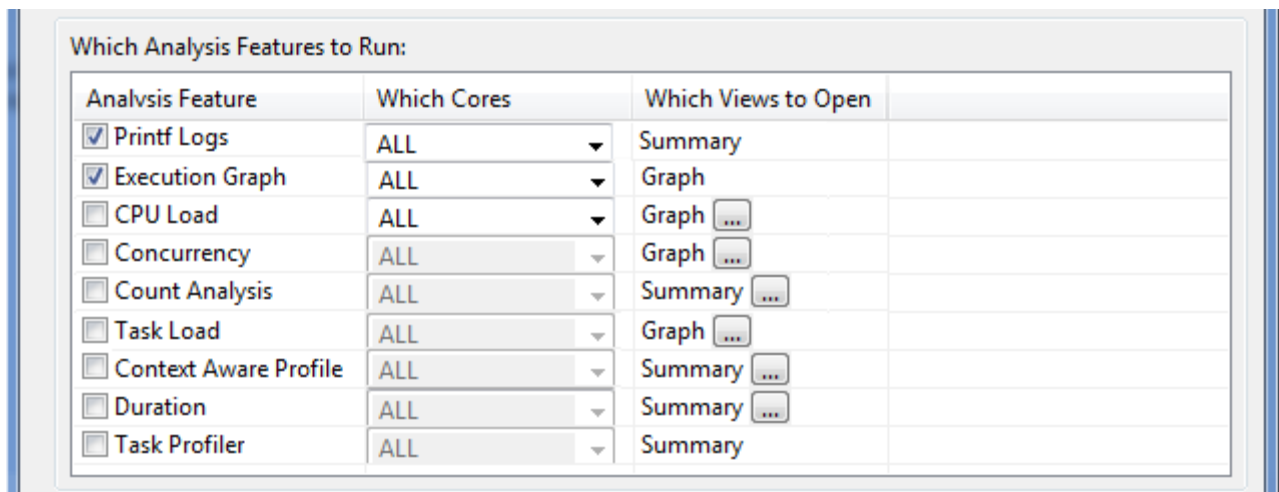

4. Configure the analyzer to run for a set time or forever (that is, until you manually pause the data transfer). You can also choose when to process the data (Transport Data only after collection), whether to clear existing data and save the data to a file which can be imported back into SA.

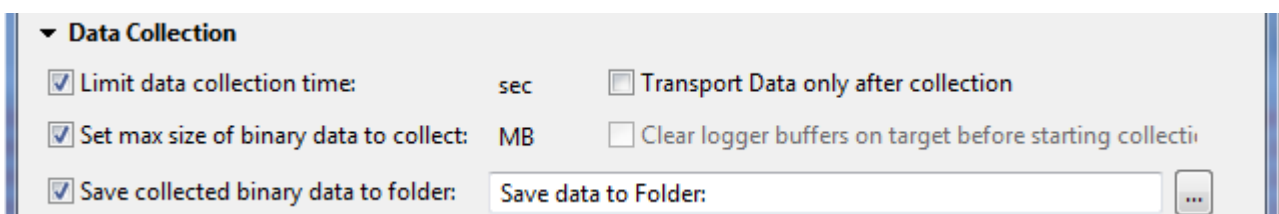

If you save data to a file, you can analyze it later by selecting **Tools > RTOS Analyzer > Open File > Open Binary File**.

See Section 4.2 ("Starting an RTOS Analyzer or System Analyzer Session") in the [System Analyzer User's Guide \(SPRUH43\)](#) for more about using this dialog.

2.5.2 Viewing Log Records in ROV

The RTOS Object View (ROV) can be used to view log events stored on the target.

After you have built and run your application, you can open the ROV tool in the CCS Debug view by selecting **Tools > RTOS Object View (ROV)** and then navigating to the logging module you want to view (for example, LoggerStopMode or LoggerIdle). When the target is halted, ROV repopulates the data. Select the **Records** tab to view log events still stored in the buffer. For loggers configured to use JTAG, the records shown here are also uploaded to System Analyzer. If you are using the LoggerIdle module, these are the records that have not yet been sent.

See the http://rtsc.eclipse.org/docs-tip/RTSC_Object_Viewer web page for more about using the RTOS Object View (ROV) tool.

Debugging TI-RTOS Applications


This chapter provides information about ways to debug your TI-RTOS applications.

Topic	Page
3.1 Using CCS Debugging Tools	26
3.2 Generating printf Output	29
3.3 Controlling Software Versions for Use with TI-RTOS	32
3.4 Understanding the Build Flow	33

3.1 Using CCS Debugging Tools


Within Code Composer Studio (CCS), there are several tools you can use to debug your TI-RTOS applications:

- **RTOS Object View (ROV)** is a stop-mode debugging tool, which means it can receive data about an application only when the target is halted, not when it is running. ROV is a tool provided by the XDCtools component. ROV gets information from many of the modules your applications are likely to use.

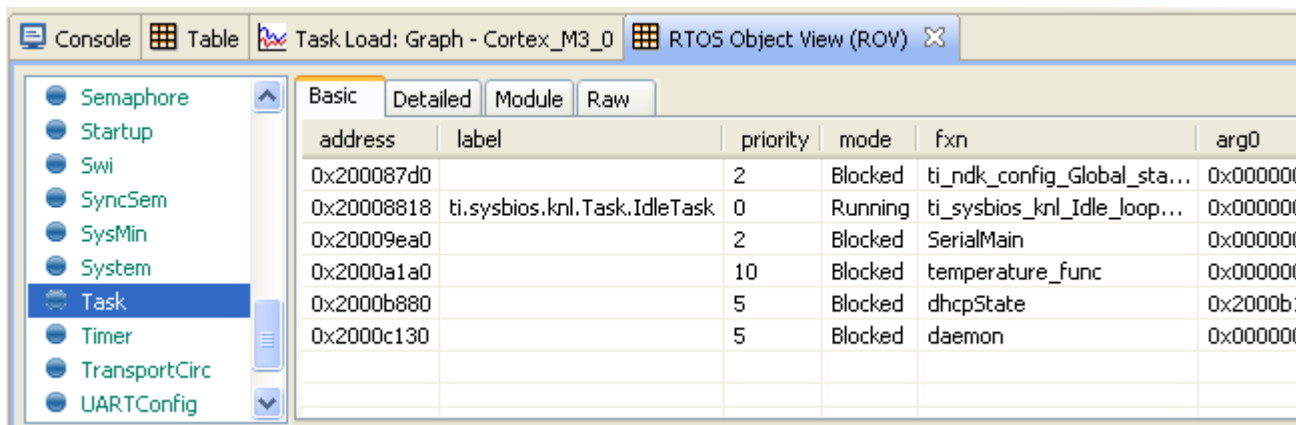

The ROV tool is also available for use with TI-RTOS examples within IAR Embedded Workbench. See the *TI-RTOS Getting Started Guide* for your device family for details.


- **System Analyzer** includes analysis features for viewing the CPU and thread loads, the execution sequence, thread durations, and context profiling. The features include graphs, detailed logs, and summary logs. These views gather data from the UIA component. For information, see the [System Analyzer User's Guide \(SPRUH43\)](#).

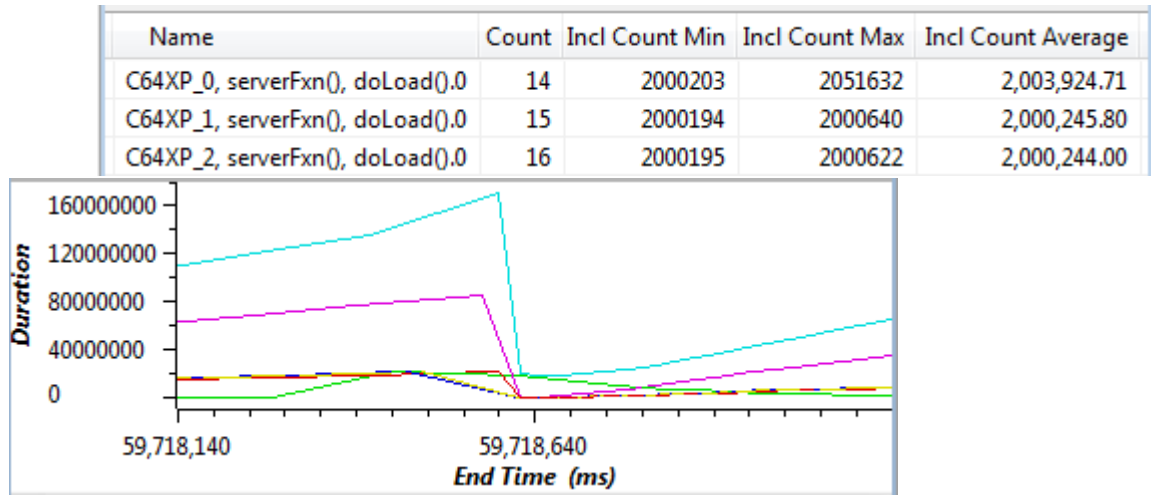

- **Printf-style output** lets you use the tried-and-true debugging mechanism of sending execution information to the console. For information, see [“Generating printf Output” on page 29](#).
- **Standard CCS IDE features** provide many tools for debugging your applications. In CCS, choose **Help > Help Contents** and open the **Code Composer Help > Views and Editors** category for a list of debugging tools and more information. These debugging features include:
 - Source-level debugger
 - Assembly-level debugger
 - Breakpoints (software and hardware) See Section 3.1.1 for information about stepping through driver code.
 - Register, memory, cache, variable, and expression views
 - Pin and port connect views
 - Trace Analyzer view
- **Exception Handling** is provided by SYS/BIOS. If this module is enabled, the execution state is saved into a buffer that can be viewed with the ROV tool when an exception occurs. Details of the behavior of this module are target-specific. In the CCS online help, see the SYS/BIOS API Reference help on the ti.sysbios.family.c64p.Exception module or the ti.sysbios.family.arm.exc.Exception module for details.
- **Assert Handling** is provided by XDCtools. It provides configurable diagnostics similar to the standard C assert() macro. In the CCS online help, see the XDCtools API Reference help on the xdc.runtime.Assert module for details.

3.1.1 Stepping Through TI-RTOS Code

Stepping through code is vital when debugging an application. When using CCS there are instances where stepping into a TI-RTOS Kernel or Driver API will produce an output message on the code editor window similar to the following. A similar message is shown in IAR Embedded Workbench.

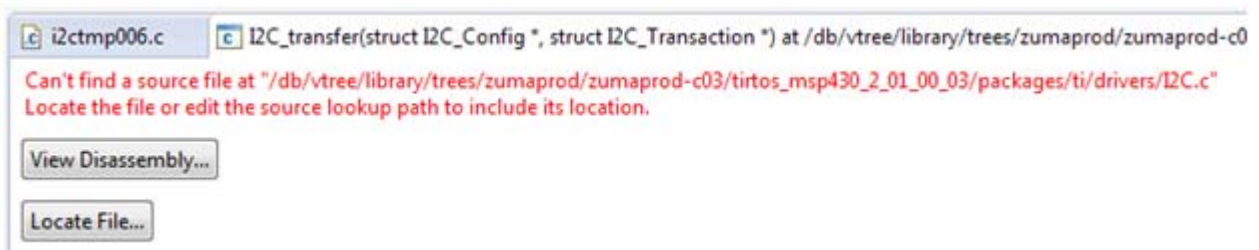


Since TI-RTOS provides pre-compiled libraries, the debug information in the library is based on the file locations when the libraries were built. Because these locations differ on your system, when the debugger attempts to access TI-RTOS library debug information, it cannot find the source files. There are two ways to correct this issue: rebuild TI-RTOS or locate the source files.


Rebuilding TI-RTOS in your development environment regenerates the debug information for all libraries. This process is only done once per TI-RTOS installation. (You will need to repeat these steps if you use a different TI-RTOS product or if install a newer TI-RTOS version.) To rebuild TI-RTOS, see Section 9.1 and Section 9.1.4.

The other method is to locate the source files within the filesystem. This process is faster than rebuilding TI-RTOS, but will need to be repeated for every TI-RTOS driver or kernel module being debugged. To locate the source files for CCS, follow these steps:

1. Click the **Locate File** button when the message shown above appears.
2. Navigate to the directory that contains the source file mentioned in the message. For TI-RTOS drivers, this is likely `<tirtos_install_dir>\packages\ti\drivers` as shown in the figure below:

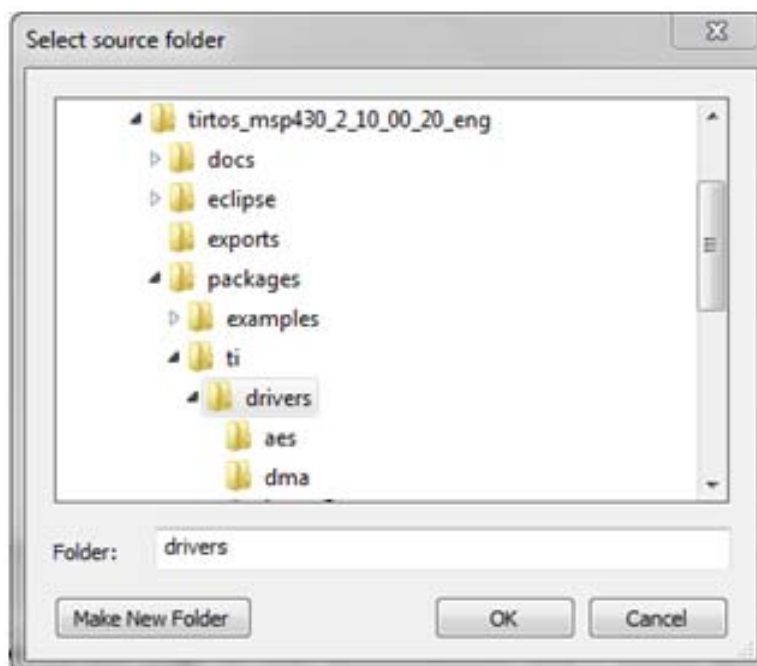

3. Click **OK**. The editor window will search for the file and show the source code.

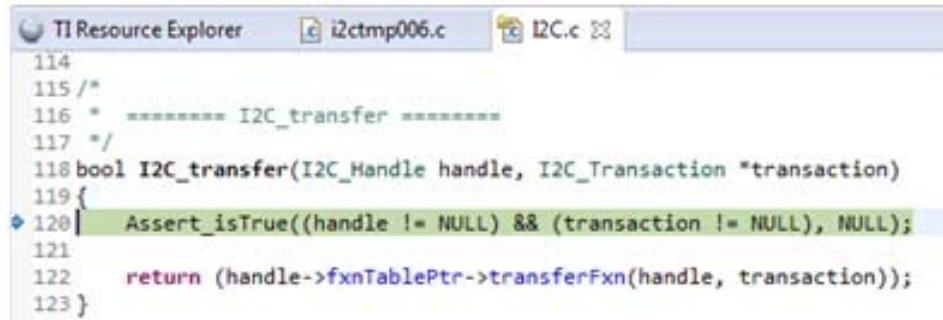

```

114
115 /*
116 * ===== I2C_transfer =====
117 */
118 bool I2C_transfer(I2C_Handle handle, I2C_Transaction *transaction)
119 {
120     Assert_isTrue((handle != NULL) && (transaction != NULL), NULL);
121
122     return (handle->fxnTablePtr->transferFxn(handle, transaction));
123 }

```

IAR Embedded Workbench provides similar tools for locating the source files within the filesystem.

3.2 Generating printf Output

Along with many advanced GUI debugging features described in [“Using CCS Debugging Tools” on page 26](#), TI-RTOS provides flexibility with the tried-and-true printf method of debugging. TI-RTOS supports both the standard printf() and a more flexible replacement called System_printf().

3.2.1 Output with printf()

By default, the printf() function outputs data to a CIO buffer on the target. When CCS is attached to the target (for example, via JTAG or USB), the printf() output is displayed in the Console window. It is important to realize that when the CIO buffer is full or a ‘\n’ is output, a CIO breakpoint is hit on the target. This allows CCS to read the data and output the characters to the console. Once the data is read, CCS resumes running the target. This interruption of the target can have significant impact on a real-time system. Because of this interruption and the associated performance overhead, use of the printf() API is discouraged.

The UART Console example shows how to route the printf() output to a UART via the add_device() API.

3.2.2 Output with System_printf()

The xdc.runtime.System module provided by the XDCtools component offers a more flexible and potentially better-performing replacement to printf() called System_printf().

The System module allows different low-level implementations (System Support implementations) to be plugged in based on your needs. You can plug in the System Support implementation you want to use via the application configuration. Your choice does not require any changes to the runtime code.


Currently the following System Support implementations are available:

- **SysMin:** Stores output to an internal buffer. The buffer is flushed to stdout (which goes to the CCS Console view) when System_flush() is called or when an application terminates (for example, when BIOS_exit() or exit() is called). When the buffer is full, the oldest characters are over-written. Characters that have not been sent to stdout can be viewed via the RTOS Object View (ROV) tool. The SysMin module is part of the XDCtools component. Its full module path is xdc.runtime.SysMin.
- **SysCallback:** Simply calls user-defined functions that implement the System module's functionality. The UART Console example provides a set of functions that use the UART. The SysCallback module is part of the XDCtools component. Its full module path is xdc.runtime.SysCallback.


- **SysStd:** Sends the characters to the standard printf() function. The SysStd module is part of the XDCtools component. Its full module path is xdc.runtime.SysStd.

Most TI-RTOS examples use either the SysMin or SysStd module. The UART Console example uses SysCallback and routes the output to a UART.

To configure the SysMin module, open the application's *.cfg file with the XGCONF Configuration Editor. In the Outline area, select the System module. Configure the System Provider to use SysMin as follows:

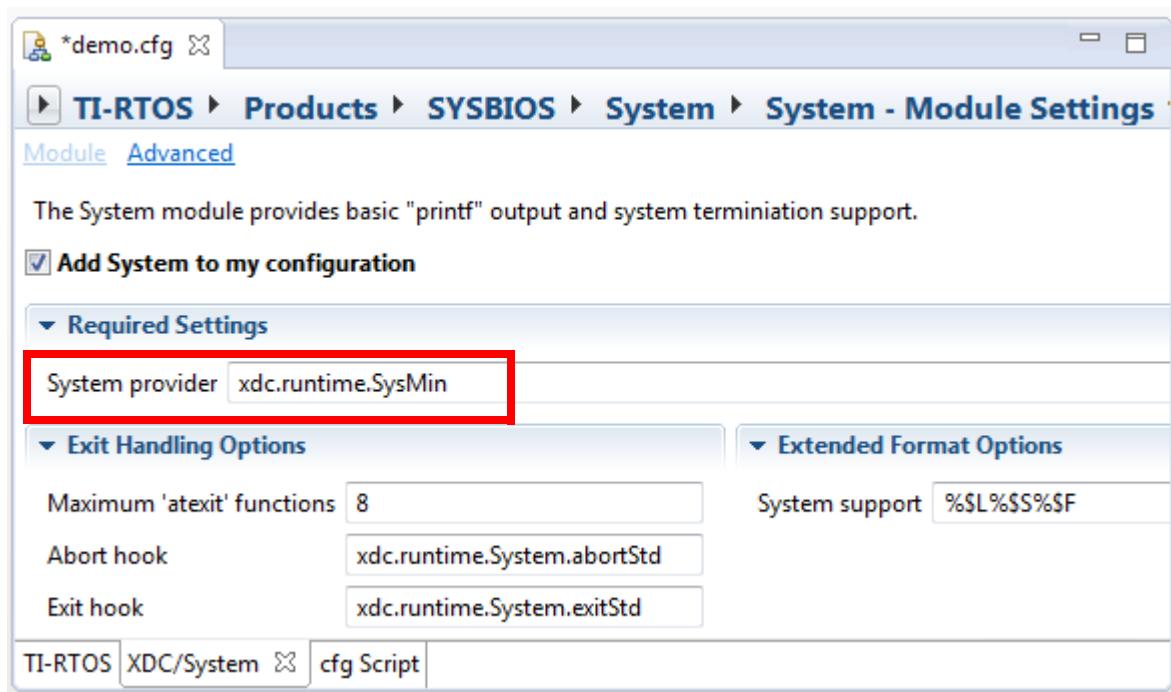

Then, find the SysMin module in the Outline pane, and configure the output buffer and options as needed. For example, here are the settings used by most examples provided with TI-RTOS:

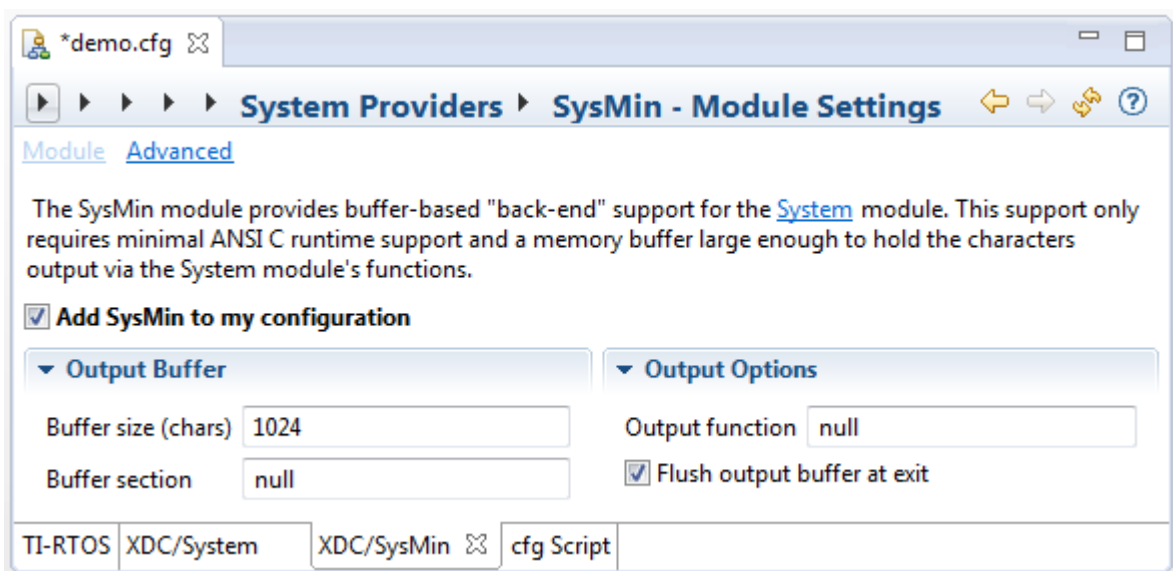

The following statements create the same configuration as the graphical settings shown for the System and SysMin modules:

```
var System = xdc.useModule('xdc.runtime.System');
var SysMin = xdc.useModule('xdc.runtime.SysMin');
System.SupportProxy = SysMin;
```

The following table shows the pros and cons of the various System provider modules:

Table 3-1 System providers shipped with TI-RTOS


System Provider	Pros	Cons
SysMin	<ul style="list-style-type: none"> • Good performance 	<ul style="list-style-type: none"> • Requires RAM (but size is configurable) • Potentially lose data • Out-of-box experience • To view in CCS console, you must add System_flush() or have the application terminate • Can use ROV to view output, but requires you halt the target
SysStd	<ul style="list-style-type: none"> • Easy to use (just like printf) 	<ul style="list-style-type: none"> • Bad to use (just like printf). CCS halts target when CIO buffer is full or a '\n' is written • Cannot be called from a SYS/BIOS Hwi or Swi thread
SysCallback	<ul style="list-style-type: none"> • Can be used for many custom purposes 	<ul style="list-style-type: none"> • Requires that you provide your own callback functions

Please note, the System module also provides the additional APIs that can be used instead of standard 'C' functions: System_abort(), System_atexit(), System_exit(), System_putch(), and System_flush().

3.3 Controlling Software Versions for Use with TI-RTOS

You do not need to add the "products" subdirectory to the RTSC (also called XDCtools) discovery path. Once CCS has found the main TI-RTOS directory, it will also find the additional components provided in that tree.

In addition, the components installed with TI-RTOS will be used as needed by examples you import with the TI Resource Explorer. When you choose **Project > Properties** for a project that uses TI-RTOS, the sub-components are not checked in the **RTSC** tab of the **General** category. However, the version installed with TI-RTOS is automatically used for sub-components that are needed by the example. You can see these components and which versions are used by going to the **Order** tab.

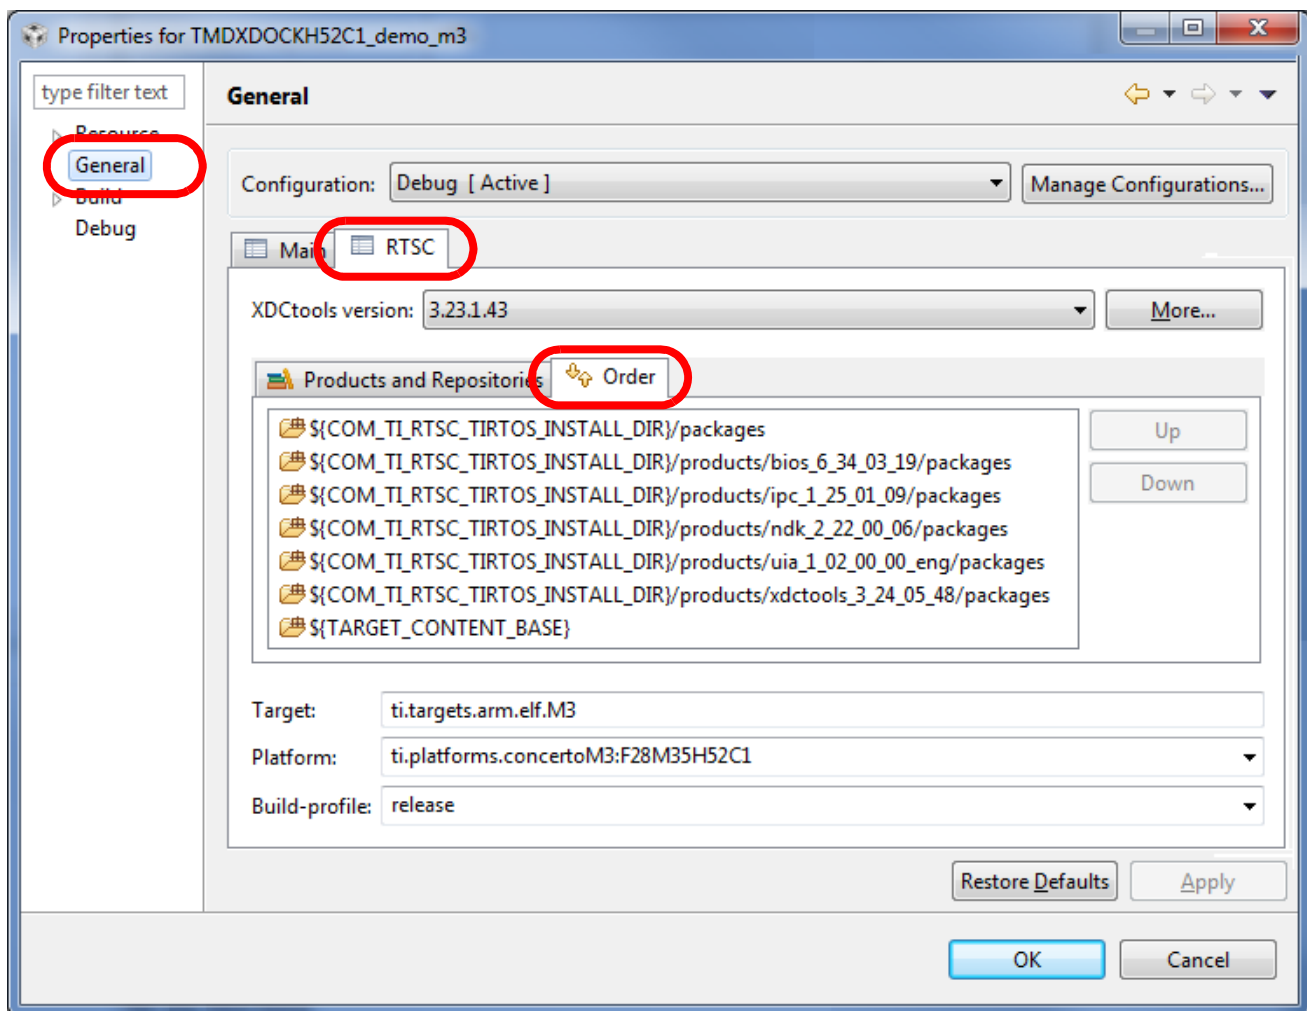

If, at a later time, you install newer software versions that you want to use instead of the versions installed with TI-RTOS, you can use the **Products and Repositories** tab to add those versions to your project and the **Up** and **Down** buttons in the **Orders** tab to make your newer versions take precedence over the versions installed with TI-RTOS. However, you should be aware that it is possible that newer component versions may not be completely compatible with your version of TI-RTOS.

Note that in the **RTSC** tab, the XDCtools version in the drop-down list is the version that controls UI behavior in CCS, such as the XGCONF editor and various RTSC dialog layouts. The XDCtools version in the list of products is the version used for APIs and configuration, such as the xdc.runtime modules.

3.4 Understanding the Build Flow


The build flow for TI-RTOS applications begins with an extra step to process the configuration file (*.cfg) in the project. The configuration file is a script file with syntax similar to JavaScript. You can edit it graphically in CCS using the XGCONF Configuration Editor. The configuration determines which modules in TI-RTOS components are used, sets global behavior parameters for modules, and statically creates objects managed by the modules. Static configuration has several advantages, including reducing code memory use by the application. Components that can be configured using this file include XDCtools, SYS/BIOS, TI-RTOS, IPC, NDK, and UIA.

The configuration file is processed by the XDCtools component. If you look at the messages printed during the build, you will see a command line that runs the “xs” executable in the XDCtools component with the “xdc.tools.configuro” tool specified. For example:

```
'Invoking: XDCtools'

"<>/xs" --xdcpath="<tirtos_install>/packages;
<bios_install>/packages;<uia_install>/packages;" xdc.tools.configuro -o configPkg
-t ti.targets.arm.elf.M3 -p ti.platforms.concertoM3:F28M35H52C1 -r release
-c "C:/ccs/ccsv6/tools/compiler/tms470" "../<project>.cfg"
```

In CCS, you can control the command-line options used with XDCtools by choosing **Project > Properties** from the menus and selecting the **Build > XDCtools** category.

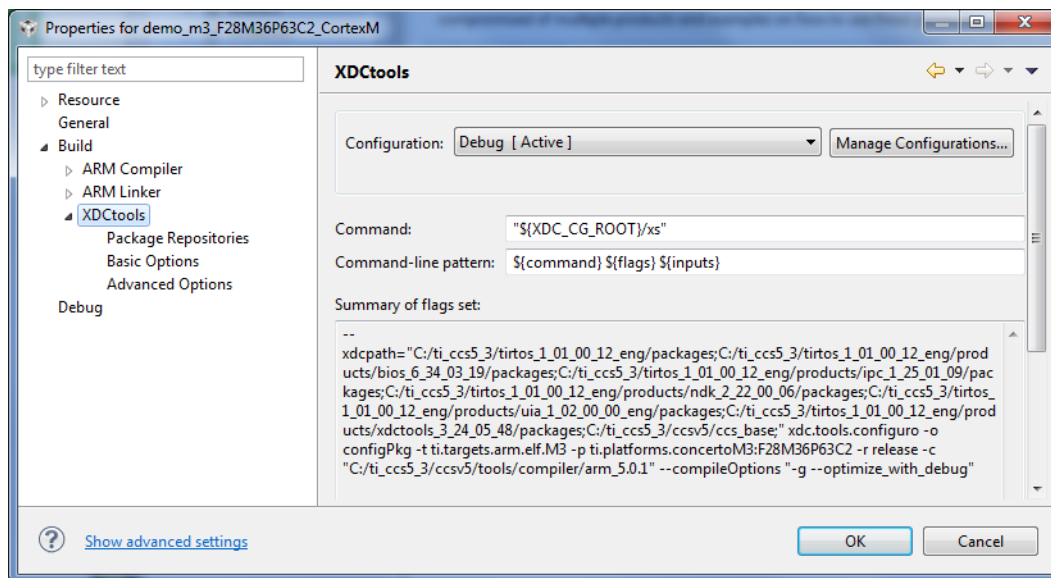

Target settings for processing your individual project are in the **RTSC** tab of the **CCS General** category. (RTSC is the name for the Eclipse specification implemented by XDCtools.)

When XDCtools processes your *.cfg file, the code is generated in the <project_dir>/Debug/configPkg directory. This code is compiled so that it can be linked with your final application. In addition, a compiler.opt file is created for use during program compilation, and a linker.cmd file is created for use in linking the application. You should not modify the files in the <project_dir>/Debug/configPkg directory after they are generated, since they will be overwritten the next time you build.

For more information about the build flow, see Chapter 2 of the [SYS/BIOS User's Guide \(SPRUEX3\)](#). For command-line details about xdc.tools.configuro, see the [RTSC-pedia reference topic](#).

Board-Specific Files

This chapter provides information that is specific to targets for which you can use TI-RTOS.

Topic	Page
4.1 Overview	34
4.2 Board-Specific Code Files	35
4.3 Linker Command Files	35
4.4 Target Configuration Files	36

4.1 Overview

Currently, TI-RTOS provides examples for the following boards:

Family	Device on Board	Board
Concerto (ARM M3 + DSP 28x)	F28M35H52C1	TMDXDOCKH52C1 Experimenter Kit
Concerto (ARM M3 + DSP 28x)	F28M36P63C2	TMDXDOCK28M36 Experimenter Kit
ARM (Tiva)	TM4C123GH6PM	EK-TM4C123GXL LaunchPad
ARM (Stellaris)	LM4F120H5QR	EK-LM4F120XL LaunchPad (earlier version of EK-TM4C123GXL LaunchPad)
ARM (Tiva)	TM4C123GH6PGE	DK-TM4C123G Evaluation Kit
ARM (Stellaris)	LM4F232H5QD	EKS-LM4F232 Evaluation Kit (earlier version of DK-TM4C123G Evaluation Kit)
ARM (Tiva) Cortex-M4F	TM4C129XNCZAD	DK-TM4C129X Evaluation Kit
ARM (Tiva)	TM4C1294NCPDT	EK_TM4C1294XL Evaluation Kit
MSP430F5xx/6xx	MSP430F5529	MSP-EXP430F5529LP LaunchPad
MSP430F5xx/6xx	MSP430F5529	MSP-EXP430F5529 Experimenter Board
MSP430F5xx/6xx	MSP430FR5969	MSP-EXP430FR5969LP LaunchPad
MSP432	MSP432P401R	MSP-EXP432P401RLP LaunchPad
CC3200 (ARM Cortex-M4)	CC3200	CC3200-LAUNCHXL
CC2650 (ARM Cortex-M3)	CC2650F128	CC2650DK

F28M3x devices contain both M3 and 28x subsystems.

TI-RTOS can also be used on other boards. Examples are provided specifically for the supported boards, but libraries are provided for each of these device families, so that you can port the examples to similar boards. The Texas Instruments Wiki contains a [TI-RTOS Porting Guide](#) and a topic on [Creating TI-RTOS Projects for Other MSP430 Devices](#).

4.2 Board-Specific Code Files

TI-RTOS examples contain a board-specific C file (and its companion header file). The filenames are `<board>.c` and `<board>.h`, where `<board>` is the name of the board, such as TMDXDOCKH52C1. Notice that an underscore is used in place of a hyphen in file and folder names for board names that contain a hyphen, such as EKS-LM4F232.

All the examples for a specific board have identical `<board>` files. These files are considered part of the application, and you can modify them as needed.

The board-specific code files do not perform any dynamic memory allocation.

The `<board>` files perform board-specific configuration of the drivers provided by TI-RTOS. For example, they perform the following:

- GPIO port and pin configuration
- LED configuration

In addition, the board-specific files provide the following functions that you can use in your applications. These are typically called from `main()`. Files are provided only for boards on which the driver is supported.

- `<board>_initDMA()` function
- `<board>_initEMAC()` function
- `<board>_initGeneral()` function
- `<board>_initGPIO()` function
- `<board>_initI2C()` function
- `<board>_initSDSPI()` function
- `<board>_initSPI()` function
- `<board>_initUART()` function
- `<board>_initUSB()` function
- `<board>_initUSBMSCHFatFs()` function
- `<board>_initWatchdog()` function
- `<board>_initWiFi()` function

4.3 Linker Command Files


All of TI-RTOS examples contain a `<board>.cmd` linker command file. A different file is provided for each supported board. These files define memory segments and memory sections used by the application.

4.4 Target Configuration Files

To create a target configuration for an example provided with TI-RTOS, use Step 3 (Debugger Configuration) in the TI Resource Explorer. (To create TI-RTOS example projects using the TI Resource Explorer, see Chapter 3 of the [TI-RTOS Getting Started Guide](#).)



When you click the link for Step 3, you see the Debugger Configuration dialog. Choose an emulator from the list. For F28M3x devices, choose the **Texas Instruments XDS 100v2 USB Emulator**. For Tiva devices, choose the **Stellaris In-Circuit Debug Interface**. For MSP430 devices, choose the **TI MSP430 USB1**. For MSP432 devices, use the **Texas Instruments XDS 110 USB Emulator**.

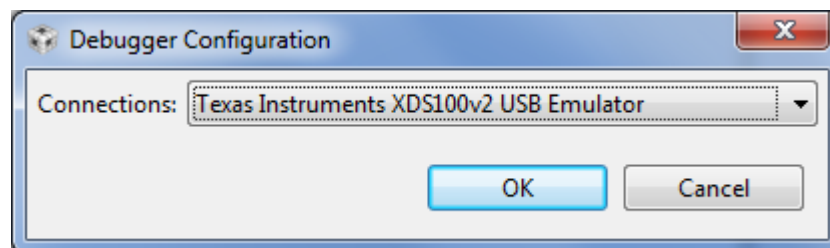

The Debugger Configuration step creates a CCS Target Configuration File (*.ccxml). This file specifies the connection and device for the project for use in a debugging session. You can choose **View > Target Configurations** in CCS to see and edit these files.

Note: If you want to use a simulator instead of a hardware connection, select any emulator in the Debugger Configuration dialog and click **OK**. Then choose **View > Target Configurations**. Expand the **Projects** list and double-click on the *.ccxml file for your example project to open the target configuration editor. Select **Texas Instruments Simulator** in the Connection field, and the simulator for your device in the Device list. Then click **Save**.

For the F28M3x Demo example, you should not use a C28 target configuration. Instead, use the target configuration for the M3 and connect to the C28 and load that application manually as described in the example's readme file.

TI-RTOS Drivers

This chapter provides information about the drivers provided with TI-RTOS.

Topic	Page
5.1 Overview	38
5.2 Driver Framework	39
5.3 Camera Driver	49
5.4 EMAC Driver	51
5.5 GPIO Driver	53
5.6 I2C Driver	57
5.7 I2S Driver	64
5.8 PWM Driver	68
5.9 SDSPI Driver	71
5.10 SPI Driver	73
5.11 SPIMessageQTransport	79
5.12 UART Driver	81
5.13 USBMSCHFatFs Driver	86
5.14 USB Reference Modules	89
5.15 USB Device and Host Modules	92
5.16 Watchdog Driver	94
5.17 WiFi Driver	96

5.1 Overview

TI-RTOS includes drivers for a number of peripherals. These drivers are in the `<tirtos_install>/packages/ti/drivers` directory. TI-RTOS examples show how to use these drivers. Note that all of these drivers are built on top of MWare, MSPWare, TivaWare, CC26xxWare, and CCWare. This chapter contains a section for each driver.

- **Camera.** Driver for CC3200 Camera BoosterPack.
- **EMAC.** Ethernet driver used by the networking stack (NDK) and not intended to be called directly.
- **GPIO.** API set intended to be used directly by the application or middleware to manage the GPIO interrupts, pins, and ports (and therefore the LEDs).
- **I²C.** (Inter-Integrated Circuit) API set intended to be used for attaching low-speed peripherals to embedded system boards. The APIs are used directly by the application or middleware.
- **I²S.** (Inter-IC Sound) API set intended to be used for connecting digital audio devices so that audio signals can be communicated between devices. The APIs are used directly by the application or middleware.
- **LCD.** Driver for CC26xx LCD display.
- **PIN.** Driver for CC26xx Pin interrupts.
- **PWM.** API set intended to be used directly by the application or middleware to generate Pulse Width Modulated signals.
- **SDSPI.** SPI-based SD driver used by FatFs and not intended to be interfaced directly.
- **SPI.** API set intended to be used directly by the application or middleware to communicate with the Serial Peripheral Interface (SPI) bus. This driver has been designed to operate in an RTOS environment such as SYS/BIOS. It protects SPI transactions with OS primitives supplied by SYS/BIOS. SPI is sometimes called SSI (Synchronous Serial Interface).
- **UART.** API set intended to be used directly by the application to communicate with the UART.
- **USBMSCHFatFs.** USB MSC Host under FatFs (for flash drives). This driver is used by FatFS and is not intended to be called directly.
- **Other USB functionality.** See the USB examples for reference modules that provide support for the Human Interface Device (HID) class (mouse and keyboard) and Communications Device Class (CDC). This code is provided as part of the examples, not as a separate driver.
- **Watchdog.** API set for use directly by the application or middleware to manage the Watchdog timer.
- **WiFi.** Driver used by a Wi-Fi device's host driver to exchange commands, data, and events between the host MCU and the wireless network processor. Not intended to be interfaced directly.

In addition, TI-RTOS provides the following MessageQ transport:

- **SPIMessageQTransport.** Transport for the SPI driver for use in multicore applications that use the IPC component.

5.2 Driver Framework

TI-RTOS drivers have a common framework for static configuration and for a set of APIs that all drivers implement. This section describes that common framework. The driver-specific sections after the framework description provide details about individual implementations.

5.2.1 Static Configuration

The following line in the *.cfg file for a TI-RTOS application causes all TI-RTOS drivers to be available to the application build.

```
var TIRTOS = xdc.useModule('ti.tirtos.TIRTOS');
```

In addition, a statement similar to the following should be added to the configuration for each TI-RTOS driver used by the application:

```
TIRTOS.useGPIO = true;
```

Note that this does not mean that all the driver code will be compiled into the application. To minimize the memory footprint of the application, only driver library code called by the application will be included in the compiled and linked executable.


By default, the application is configured to use non-instrumented libraries, which do not process Log events and Asserts. You can select the instrumented libraries by using XGCONF as shown in Section 2.4.2 or by adding the following statement to your application's *.cfg file:

```
TIRTOS.libType = TIRTOS.LibType_Instrumented;
```

Refer to the individual drivers in this chapter for details about what is logged and which Diags masks are used when instrumentation is enabled.


5.2.2 Driver Object Declarations

All TI-RTOS drivers require the application to allocate data storage and define a set of data structures with specific hardware attributes. Drivers are designed in a two-tier hierarchy to facilitate scalable driver additions and enhancements while providing a consistent application programming interface.

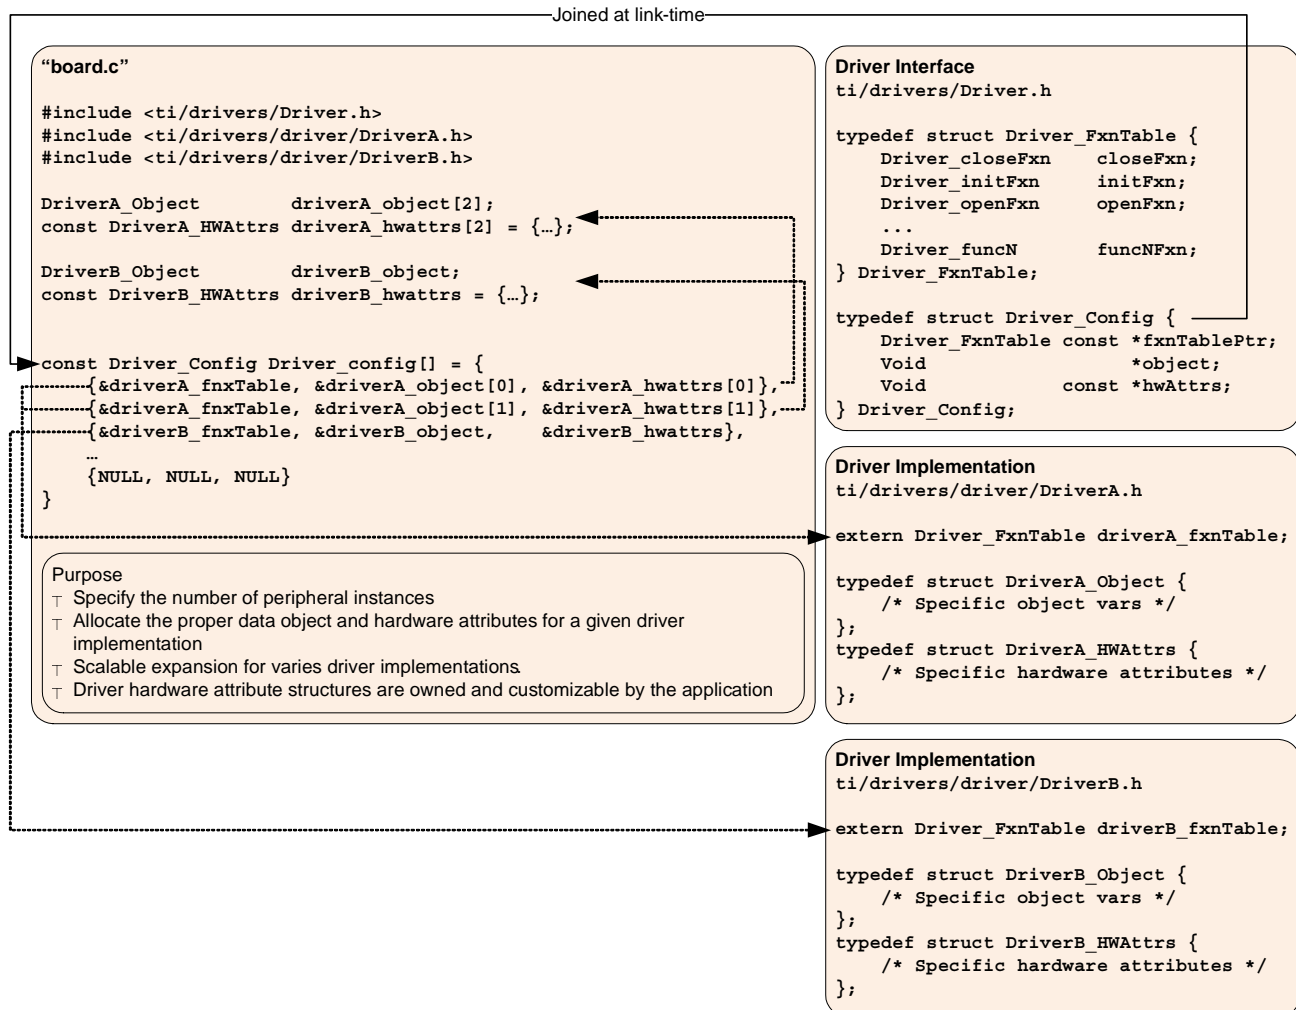

This diagram shows the relationship between a driver interface and two driver implementations. The driver interface named "Driver" is configured to operate on two driver implementations: "DriverA" and "DriverB". The driver's Driver_config[] structure contains three instances. The first two instances are of type "DriverA" and the third is of type "DriverB".

Applications interface with a TI-RTOS driver using a top-level *driver interface*. This interface is configured via a set of data structures that specify one or more specific lower-level *driver implementations*. Driver interfaces define data structures in `<tirtos_install>\packages\ti\drivers\Driver.h` while driver implementations are define in an additional subdirectory, named after the driver interface. For example, the UART driver interface resides at `<tirtos_install>\packages\ti\drivers\UART.h` and its driver implementations exist in the `<tirtos_install>\packages\ti\drivers\uart\` subdirectory.

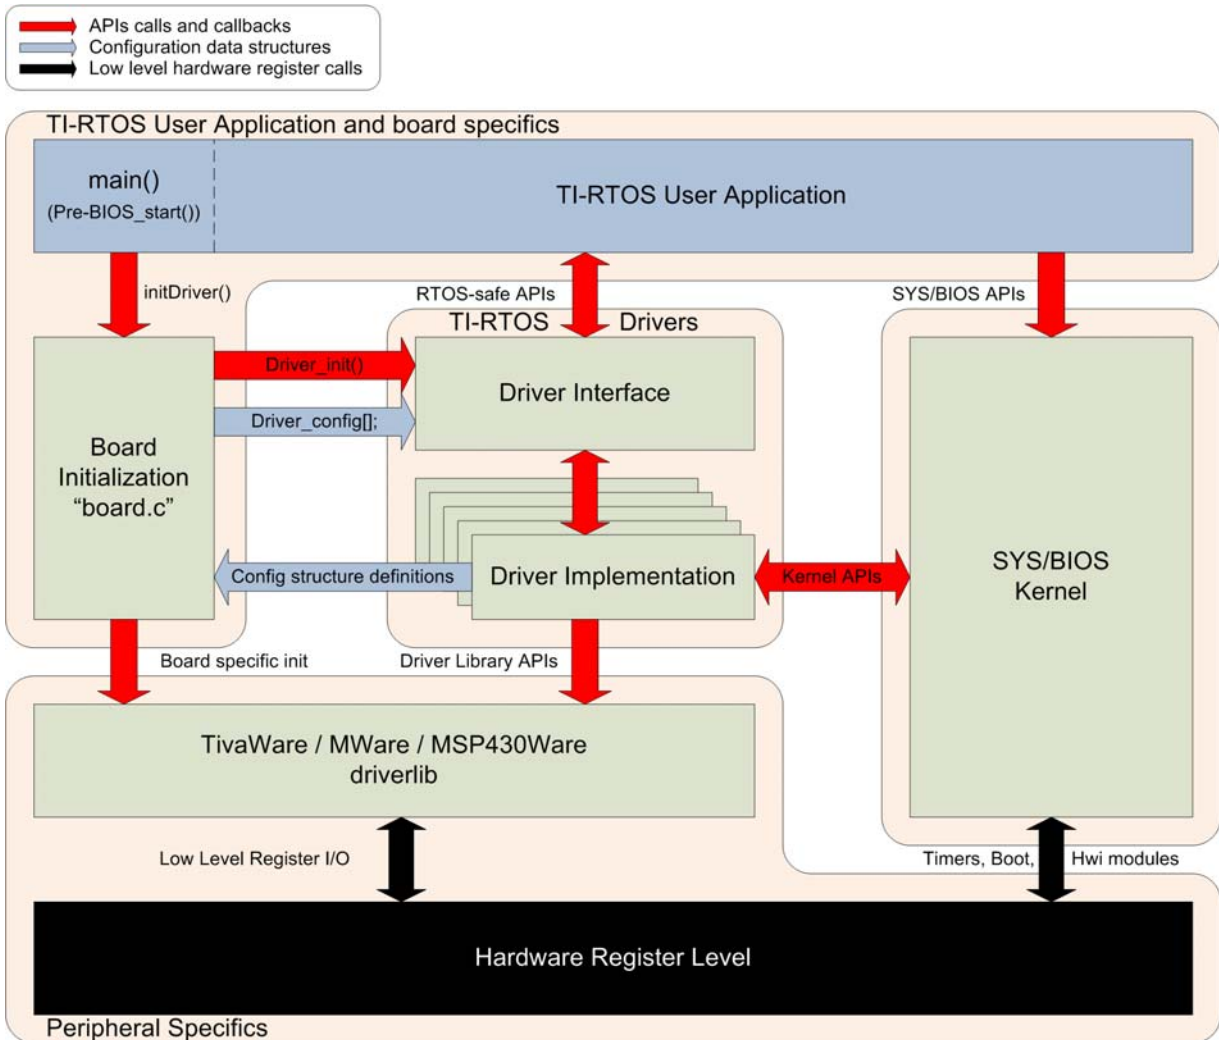

5.2.2.1 Driver Interface

Each driver's interface defines a configuration data structure as:

```
typedef struct Driver_Config {
    Driver_FxnTable const *fxnTablePtr;
    Void                  *object;
    Void                  const *hwAttrs;
} Driver_Config;
```

(The GPIO driver is an exception. See [Section 5.5.1.1.](#))

The application must declare a NULL-terminated array of Driver_Config elements as Driver_config[]. The index argument in a driver's _open() call is used to select the array element of this Driver_config[] array where each element corresponds to a peripheral instance. There is no correlation between the index and the peripheral designation (such as UART0 or UART1). For example, it is possible to use UART_config[0] for UART1.

Each individual Driver_Config element must be populated by pointers to a specific driver implementation's Driver_FxnTable, Driver_Object, and Driver_HWAttrs data structures. While the function table is defined by the driver implementation, the implementation-specific data object and hardware attribute structures need to be defined by the application. With this Driver_config[] table, it is possible to use any number of permutations of driver implementations per driver interface; assuming that the device has the same number of peripherals available.

5.2.2.2 Driver Implementations

The application needs to create instances of both the object and hardware attribute structures for every peripheral used with a given driver implementation. Instances of data objects are used to store driver variables on a per peripheral basis and should be accessed exclusively by the driver. Hardware attribute structures are used to specify implementation-specific constants such as peripheral base addresses, interrupt vectors, GPIO pins, and more. Field definitions for these hardware attributes are determined by the driver implementation's Doxygen documentation.

All TI-RTOS examples use a <board>.c file that contains necessary data object and hardware structure instances, similar to the following:

```
static DriverA_Object driverAObject;

const DriverA_HWAttrs driverAHWAttrs = {
    type field0;
    type field1;
    ...
    type fieldn;
};
```

These structures should be used as a reference when moving from a development board to a custom printed circuit board. The following is an example that integrates a UART driver implementation into the UART driver interface:

```
/* UART objects */
UARTTiva_Object uartTivaObjects[EKS_LM4F232_UARTCOUNT];

/* UART configuration structure */
const UARTTiva_HWAttrs uartTivaHWAttrs [EKS_LM4F232_UARTCOUNT] = {
    {UART0_BASE, INT_UART0}, /* UART0 */
};

const UART_Config UART_config[] = {
    {&UARTTiva_fxnTable, &uartTivaObjects[0], &uartTivaHWAttrs[0]},
    {NULL, NULL, NULL}
};
```

5.2.3 Dynamic Configuration and Common APIs

TI-RTOS drivers all implement the following APIs (with the exception of the GPIO driver*).

- `Void Driver_init(Void)`
 - Initializes the driver. Must be called only once and before any calls to the other driver APIs. Generally, this is done before SYS/BIOS is started.
 - The board files in the examples call this function for you.
- `Void Driver_Params_init(Driver_Params *params)`
 - Initializes the driver's parameter structure to default values. All drivers, with the exception of GPIO, implement the Params structure. The Params structure is empty for some drivers.
- `Driver_Handle Driver_open(UInt index, Driver_Params *params)`
 - Opens the driver instance specified by the index with the params provided.
 - If the params field is NULL, the driver uses default values. See specific drivers for their defaults.
 - Returns a handle that will be used by other driver APIs and should be saved.
 - If there is an error opening the driver or the driver has already been opened, `Driver_open()` returns NULL.
- `Void Driver_close(Driver_Handle handle)`
 - Closes the driver instance that was opened, specified by the driver handle returned during open.
 - Closes the driver immediately, without checking if the driver is currently in use. It is up to the application to determine when to call `Driver_close()` and to ensure it doesn't disrupt on-going driver activity.
 - The Watchdog driver does not have a `close()` function, because the watchdog timer cannot be disabled once it has been enabled.

* The GPIO driver implements only `GPIO_init()` to avoid complicating the driver. See [Section 5.5](#) for information on using the GPIO driver.

5.2.4 TI-RTOS Driver Implementations for Concerto Devices

If you are modifying the `<board>.c` file for an application, you will see types and data structures that are defined by the lower-level driver implementations. These implementations are provided in the driver directories. For example, the lower-level implementation for the I2C driver is in the `I2CTiva.c` and `I2CTiva.h` files in the `<tirtos_install_dir>\packages\ti\drivers\i2c` directory.

The lower-level driver implementations for the TI-RTOS drivers on the M3 portion of Concerto devices are as follows. (The *.c file is listed, but the *.h file contains important type definitions.)

- **EMAC:** EMACTiva.c
- **GPIO:** GPIOTiva.c
- **I2C:** I2CTiva.c
- **SDSPI:** SDSPITiva.c
- **SPI:** SPITivaDMA.c
- **UART:** UARTTiva.c
- **USBMSCHFatFs:** USBMSCHFatFsTiva.c
- **Watchdog:** WatchdogTiva.c
- **WiFi:** not available

5.2.5 TI-RTOS Driver Implementations for TivaC Devices

If you are modifying the `<board>.c` file for an application, you will see types and data structures that are defined by the lower-level driver implementations. These implementations are provided in the driver directories. For example, the lower-level implementation for the I2C driver is in the `I2CTiva.c` and `I2CTiva.h` files in the `<tirtos_install_dir>\packages\ti\drivers\i2c` directory.

The lower-level driver implementations for the TI-RTOS drivers on Tiva devices are as follows. (The *.c file is listed, but the *.h file contains important type definitions.)

- **EMAC:** EMACTiva.c
- **GPIO:** GPIOTiva.c
- **I2C:** I2CTiva.c
- **PWM:** PWMTiva.c
- **SDSPI:** SDSPITiva.c
- **SPI:** SPITivaDMA.c
- **UART:** UARTTiva.c
- **UART DMA:** UARTTivaDMA.c
- **USBMSCHFatFs:** USBMSCHFatFsTiva.c
- **Watchdog:** WatchdogTiva.c
- **WiFi:** WiFiCC3100.c

5.2.6 TI-RTOS Driver Implementations for CC26xx Devices

For CC26xx devices, the `<board.c>` and `<board.h>` files are replaced with literal "Board.c" and "Board.h" files. The purpose of these files is to #include a common device-specific "Board.c" and "Board.h" located in `<ti/board>`. The board files located in `<tirtos_install_dir>\packages\ti\boards` are shared with other CC2650 examples, so use caution if you choose to modify these files.

The data structures in these board files are defined by lower-level driver implementations. These implementations are provided in the driver directories. For example, the lower-level implementation for the I2C driver is in the `I2CCC26XX.c` and `I2CCC26XX.h` files in the `<tirtos_install_dir>\packages\ti\drivers\i2c` directory.

The lower-level driver implementations for the TI-RTOS drivers on CC26xx devices are as follows. (The *.c file is listed, but the *.h file contains important type definitions.)

- **Crypto:** CryptoCC26XX.c
- **I2C:** I2CCC26XX.c
- **PIN:** PINCC26XX.c
- **SPI:** SPICCC26XXDMA.c
- **UART:** UARTCC26XX.c
- **Watchdog:** WatchdogCC26XX.c

5.2.7 TI-RTOS Driver Implementations for CC3200 Devices

If you are modifying the <board>.c file for an application, you will see types and data structures that are defined by the lower-level driver implementations. These implementations are provided in the driver directories. For example, the lower-level implementation for the I²C driver is in the I2CCC3200.c and I2CCC3200.h files in the <tirtos_install_dir>\packages\ti\drivers\i2c directory.

The lower-level driver implementations for the TI-RTOS drivers on CC3200 devices are as follows. (The *.c file is listed, but the *.h file contains important type definitions.)

- **Camera:** CameraCC3200DMA.c.
- **GPIO:** GPIOCC3200.c.
- **I2C:** I2CCC3200.c
- **I2S:** I2SCC3200DMA.c
- **Power:** PowerCC3200.c
- **PWM:** PWMTimerCC3200.c
- **SDSPI:** SDSPICC3200.c
- **SPI:** SPICC3200DMA.c
- **UART:** UARTCC3200.c
- **UART DMA:** UARTCC3200DMA.c
- **Watchdog:** WatchdogCC3200.c

5.2.8 TI-RTOS Driver Hwis for MSP43x Devices

MSP432 devices use the Hwi dispatcher provided by the TI-RTOS Kernel. This dispatcher create the necessary interrupts at run-time, so no special steps are required to support MSP432 interrupts.

However, for MSP430 devices, the TI-RTOS Kernel does not use a Hwi dispatcher to allow for run-time creation of interrupts. For this reason, MSP430 users must create Hwis statically in the application's *.cfg file. Follow the steps below to configure the appropriate Hwis for applications that use TI-RTOS drivers.

1. Identify the TI-RTOS drivers and implementations that you want to add into your application. TI-RTOS has a set of MSP43x driver implementations to support the USCI and EUSCI peripherals. Some TI-RTOS drivers (for example, WiFi) have dependencies on other TI-RTOS drivers.
2. Use [Table 5-1](#) for MSP430F5xxx devices and [Table 5-2](#) for MSP430FR5xxx devices to determine whether these drivers require any Hwi interrupts to be created.

Table 5-1 Hwi functions required for TI-RTOS driver ISRs (USCI on MSP430F5xxx)

TI-RTOS Driver	MSP430 Driver Implementations	Interrupt Service Routine Hwi Function Name
I ² C	I2CUSCIB	I2CUSCIB_hwiIntFxn
SDSPI	SDSPIUSCIA, SDSPIUSCIB	N/A. This driver is polling based
SPI	SPIUSCIADMA, SPIUSCIBDMA	A DMA interrupt function defined by the user must call the SPI driver's SPI_serviceISR function.
UART	UARTUSCIA	UARTUSCIA_hwiIntFxn
Watchdog	WatchdogMSP430	N/A. This driver only generates a reset signal
WiFi	WiFiCC3100	The WiFiCC3100_hostIntHandler function is tied to a GPIO interrupt. A user DMA interrupt function calls SPI_serviceISR. (The WiFi driver uses the SPI driver as a dependency.)

Table 5-2 Hwi functions required for TI-RTOS driver ISRs (EUSCI on MSP430FR5xxx)

TI-RTOS Driver	MSP430 Driver Implementations	Interrupt Service Routine Hwi Function Name
I ² C	I2CEUSCIB	I2CEUSCIB_hwiIntFxn
SDSPI	SDSPIEUSCIA, SDSPIEUSCIB	N/A. This driver is polling based
SPI	SPIUSCIADMA, SPIUSCIBDMA	A DMA interrupt function defined by the user must call the SPI driver's SPI_serviceISR function.
UART	UARTEUSCIA	UARTEUSCIA_hwiIntFxn
Watchdog	WatchdogMSP430	N/A. This driver only generates a reset signal
WiFi	WiFiCC3100	The WiFiCC3100_hostIntHandler function is tied to a GPIO interrupt. A user DMA interrupt function calls SPI_serviceISR. (The WiFi driver uses the SPI driver as a dependency.)

3. If the TI-RTOS driver is interrupt driven, find the peripheral's base address for every driver implementation entry in the HWAttrs data structure of the driver's *Driver_config[]* array.

For example, I2C_Config[0] has its HWAttrs data structure configured to USCI_B0_BASE. Similarly, I2C_Config[1] has its HWAttrs data structure configured to use USBI_B1_BASE.

```
/* I2C objects */
I2CUSCIB_Object i2cUSCIBObjects[MSP_EXP430F5529LP_I2CCOUNT];

/* I2C configuration structure */
const I2CUSCIB_HWAttrs i2cUSCIBHWAttrs[MSP_EXP430F5529LP_I2CCOUNT] = {
    {
        USCI_B0_BASE,
        USCI_B_I2C_CLOCKSOURCE_SMCLK
    },
    {
        USCI_B1_BASE,
        USCI_B_I2C_CLOCKSOURCE_SMCLK
    }
};

const I2C_Config I2C_config[] = {
    {
        &I2CUSCIB_fxnTable,
        &i2cUSCIBObjects[0],
        &i2cUSCIBHWAttrs[0]
    },
    {
        &I2CUSCIB_fxnTable,
        &i2cUSCIBObjects[1],
        &i2cUSCIBHWAttrs[1]
    },
    {NULL, NULL, NULL}
};
```


4. Find the associated interrupt vector number for each peripheral at the specified base address. For example, on the MSP430F5529, the USBI_B0 interrupt vector is 55 and the USCI_B1 interrupt vector is 45. The interrupt vector number is set in the device's main *.h header file. For MSP430F5529, the file would be msp430f5529.h.
 - In CCS, this file is found in: <CCS_install>/ccsv6/ccs_base/msp430/include.
 - In IAR, this file is found in: <IAR_install>/430/inc.
5. Create Hwi objects for each entry in the *Driver_config[]* array using the information obtained in the previous steps. Map the information to the Hwi in the following manner:
 - **Hwi (ISR) function.** Use the Hwi function name from [Table 5-1](#).
 - **Interrupt vector number.** Use the vector number from the device's main *.h header file.
 - **Argument passed to ISR function.** Use the index number into the *Driver_config[]* array.

Hwi objects can be created using the graphical user interface or by manually adding it to the project's *.cfg file. Both of the following examples configure two Hwi objects that run the I2CUSCIB_hwiIntFxn function required by the I²C driver with the interrupt vectors for USBI_B0 and USBI_B1.

This example shows the statements in the *.cfg file:

```
/* ===== Hwi configuration ===== */
/*
 * All Hwis for MSP430 must be created statically; including Hwis for TI-RTOS
 * drivers
 */
var hwi0Params = new Hwi.Params();
hwi0Params.instance.name = "hwi0";
hwi0Params.arg = 0;
Program.global.hwi0 = Hwi.create(55, "&I2CUSCIB_hwiIntFxn", hwi0Params);
var hwi1Params = new Hwi.Params();
hwi1Params.instance.name = "hwi1";
hwi1Params.arg = 1;
Program.global.hwi1 = Hwi.create(45, "&I2CUSCIB_hwiIntFxn", hwi1Params);
```

This example shows how to configure the Hwi objects graphically with the XGCONF Configuration Editor:

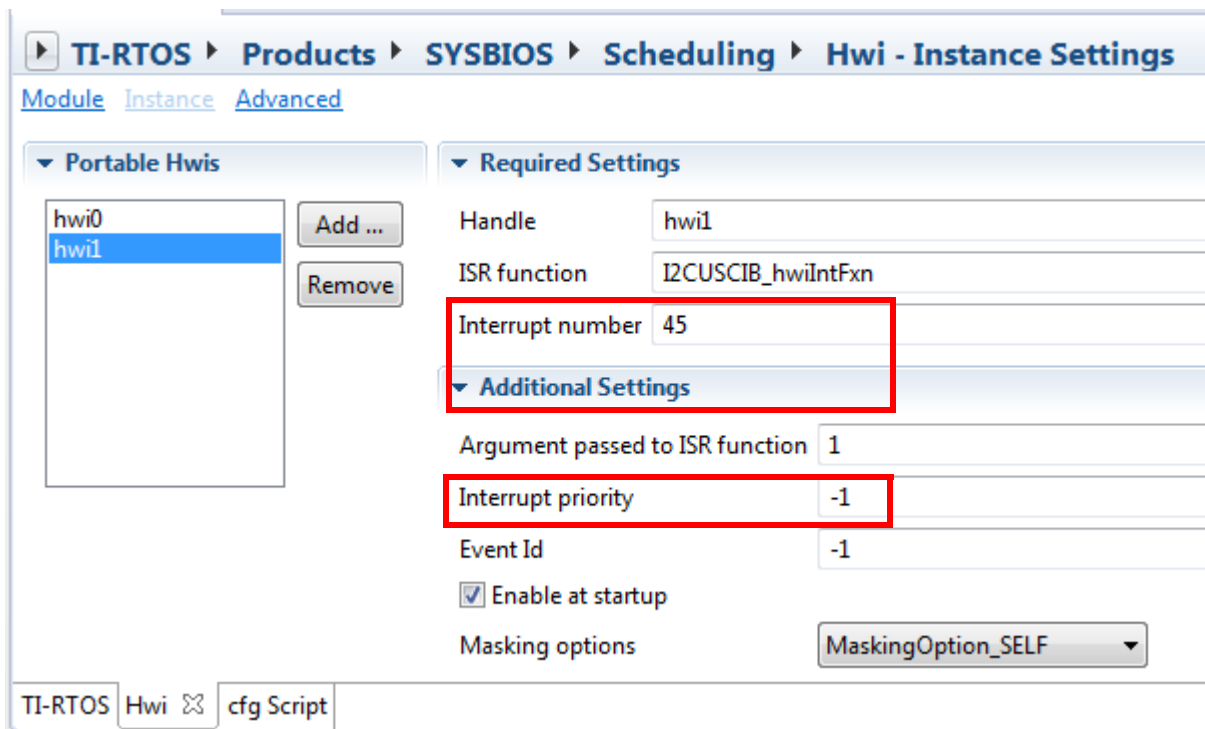

The screenshot shows the XGCONF Configuration Editor interface. The breadcrumb navigation at the top reads: **TI-RTOS** > **Products** > **SYSBIOS** > **Scheduling** > **Hwi - Instance Settings**. Below the breadcrumb, there are three tabs: **Module**, **Instance**, and **Advanced**. The **Instance** tab is selected. On the left, under the heading **Portable Hwis**, there is a list box containing **hwi0** and **hwi1**, with **hwi1** selected. To the right of the list box are **Add ...** and **Remove** buttons. The main area on the right is titled **Required Settings** and contains the following fields: **Handle** (set to **hwi1**), **ISR function** (set to **I2CUSCIB_hwiIntFxn**), **Interrupt number** (set to **45**), **Additional Settings** (expanded section), **Argument passed to ISR function** (set to **1**), **Interrupt priority** (set to **-1**), **Event Id** (set to **-1**), **Enable at startup** (checked checkbox), and **Masking options** (set to **MaskingOption_SELF** in a dropdown menu). At the bottom of the window, there are three tabs: **TI-RTOS**, **Hwi**, and **cfg Script**, with **Hwi** currently selected.

5.3 Camera Driver

The Camera driver is used to retrieve the data being transferred by the Camera sensor. This driver provides an API for capturing the image from the Camera sensor. The camera sensor control and implementation are the responsibility of the application using the interface.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help give details about statically configuring the driver, but no information about the APIs.)

5.3.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging. To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useCamera = true;
```

5.3.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the Camera driver requires the application to initialize board-specific settings and provide the Camera driver with the Camera_config structure.

5.3.2.1 Board-Specific Configuration

The `<board>.c` files contain a `<board>_initCamera()` function that initializes the board-specific Camera peripheral settings. This function also calls `Camera_init()` to initialize the Camera driver.

5.3.2.2 Camera_Params Structure

The Camera_Params structure may be used to override the default settings for an Camera instance you are creating. The params in the structure must be set before calling `Camera_open()`. The structure has the following fields:

```
typedef struct Camera_Params {
    Camera_CaptureMode    captureMode;    /* blocking or callback mode */
    uint32_t              outputClock;    /* to set divider */
    Camera_HSyncPolarity  hsyncPolarity;  /* polarity of horizontal Sync */
    Camera_VSyncPolarity  vsyncPolarity;  /* polarity of vertical Sync */
    Camera_PixelClkConfig pixelClkConfig;  /* rising edge or falling edge */
    Camera_ByteOrder      byteOrder;      /* order of bytes captured */
    Camera_IfSynchronisation interfaceSync; /* camera-sensor synchronisation */
    Camera_StopCaptureConfig stopConfig;   /* action when capture stops */
    Camera_StartCaptureConfig startConfig; /* action when capture starts */
    uint32_t              captureTimeout; /* timeout length for capture */
    void                  *custom;        /* custom target-specific option */
}
```

5.3.3 Camera Modes

The Camera operation mode determines whether transmit and/or receive modes are enabled. The mode is specified with one of the following constants:

- **Camera_MODE_BLOCKING:** Uses a semaphore to block while data is being sent. Context of the call must be a Task.
- **Camera_MODE_CALLBACK:** *Non-blocking call, which will return immediately. When the capture by the interrupt, is finished the configured callback function is called.*

Other enumerated types are available for other Camera driver parameters.

5.3.4 APIs

In order to use the Camera module APIs, the Camera.h header file should be included in an application as follows:

```
#include <ti/drivers/Camera.h>
```

The following are the Camera APIs:

- **Camera_init()** initializes the Camera module.
- **Camera_Params_init()** initializes an Camera_Params data structure.
- **Camera_open()** initializes a given Camera instance.
- **Camera_close()** deinitializes a given Camera instance.
- **Camera_control()** performs implementation-specific features on a given Camera peripheral.
- **Camera_capture()** handles the capture of a frame.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.3.4.1 Opening the Camera driver

To open a Camera driver instance, initialize a Camera_Params object and specify the desired parameters.

```
Camera_Handle      handle;
Camera_Params      params;

Camera_Params_init(&params);
params.captureMode  = Camera_MODE_BLOCKING;
/* Change any other params as needed */

handle = Camera_open(someCamera_configIndexValue, &params);
if (!handle) {
    System_printf("Camera did not open");
}
```

5.3.4.2 Writing Data

The following example calls Camera_capture() to cause a picture to be taken by the camera and the photo to be placed in a buffer.

```
unsigned char captureBuffer[1920];

ret = Camera_capture(handle, &captureBuffer, sizeof(captureBuffer));
```

5.3.5 Examples

See the SimpleLink Wi-Fi CC3200 Software Development Kit (SDK) for examples that use this driver.

5.4 EMAC Driver

This is the Ethernet driver used by the networking stack (NDK).

5.4.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useEMAC = true;
```

5.4.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the EMAC driver requires the application to initialize board-specific portions of the EMAC and provide the EMAC driver with the EMAC_config structure.

5.4.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initEMAC() function that must be called to initialize the board-specific EMAC peripheral settings. This function also calls the EMAC_init() to initialize the EMAC driver.

5.4.2.2 EMAC_config Structure

The <board>.c file also declare the EMAC_config structure. This structure must be provided to the EMAC driver. It must be initialized before the EMAC_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The configuration help available from within CCS provides information about configuring the driver, but no information about the APIs.)

5.4.3 APIs

To use the EMAC module APIs, the EMAC header file should be included in an application as follows:

```
#include <ti/drivers/EMAC.h>
```

The following EMAC API is provided:

- **EMAC_init()** sets up the EMAC driver. This function must be called before the NDK stack thread is started.

For details, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

See the NDK documentation for information about NDK APIs that can be used if the EMAC driver is enabled and initialized.

5.4.4 Usage

The EMAC driver is designed to be used by the NDK. The only function that must be called is the EMAC_init() function. This function must be called before BIOS_start() is called to ensure that the driver is initialized before the NDK starts.

5.4.5 Instrumentation

The EMAC driver logs the following actions using the Log_print() APIs provided by SYS/BIOS.

- EMAC driver setup success or failure.
- EMAC started or stopped.
- EMAC failed to receive or transmit a packet.
- EMAC successfully sent or received a packet.
- No packet could be allocated.
- Packet is too small for the received buffer.

Logging is controlled by the Diags_USER1 and Diags_USER2 masks. Diags_USER1 is for general information and Diags_USER2 is for more detailed information.

The EMAC driver provides the following ROV information through the EMAC module.

- Basic parameters:
 - intVectId
 - macAddr
 - libType
- Statistics:
 - rxCount
 - rxDropped
 - txSent
 - txDropped

5.4.6 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.5 GPIO Driver

The GPIO module allows you to manage General Purpose I/O pins via simple and portable APIs. GPIO pin behavior is usually configured statically, but can also be configured or reconfigured at runtime.

The application is required to supply a device specific GPIOxxx_Config structure to the module, where xxx is the name of the target family. This structure communicates to the GPIO module which GPIO pins are used by the application and how they are to be configured. (See the GPIO_PinConfig array description in [Section 5.5.1.2](#).)

The application is required to call GPIO_init(). This function initializes all the GPIO pins defined in the GPIO_PinConfig table to the configurations specified. Once initialization is complete, the other APIs can be used to access the pins.

Because of its simplicity, the GPIO driver does not follow the model of other TI-RTOS drivers in which a driver application interface has separate device-specific implementations. This difference is most apparent in the GPIOxxx_Config structure (described in more detail in [Section 5.5.1.1](#)), which does not require you to specify a particular function table or object.

5.5.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useGPIO = true;
```

5.5.1.1 GPIO_Config Structure

The <board>.c file declares a board-specific GPIOxxx_Config structure. This structure is used internally by the GPIO Driver and must be provided by the user. Currently the GPIOxxx_Config structure usually consists of pointers to two arrays—an array of GPIO_PinConfig elements and an array of GPIO_Callback elements—their respective number of elements, and an interrupt priority field used to configure the interrupts that will be used for input pins with callbacks.

Below is an example of a typical GPIOxxx_Config structure, in this case specific to Tiva boards:

```
typedef struct GPIONtiva_Config {
    /*! Pointer to the board's GPIO_PinConfig array */
    GPIO_PinConfig *pinConfigs;

    /*! Pointer to the board's GPIO_CallbackFxn array */
    GPIO_CallbackFxn *callbacks;

    /*! number of GPIO_PinConfigs defined */
    uint32_t numberOfPinConfigs;

    /*! number of GPIO_Callbacks defined */
    uint32_t numberOfCallbacks;

    /*! GPIO interrupt priority. Setting (~0) configures lowest priority */
    uint32_t intPriority;
} GPIONtiva_Config;
```

A brief discussion of several fields in this structure follows. For more additional details, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.5.1.2 GPIO_pinConfig Array

The elements in this array define the configuration and device-specific identities for each of the physical GPIO pins used by the application. A pin is referenced in the application by its corresponding index in this array.

The pin type (that is, INPUT/OUTPUT), its initial state (that is OUTPUT_HIGH or LOW), and interrupt behavior (RISING/FALLING edge, etc.) are configured in each element of this array.

For example, this GPIO_PinConfig array for Tiva is provided in the EK_TM4C1294XL.h file.

```
GPIO_PinConfig gpioPinConfigs[] = {
    /* Input pins */
    /* EK_TM4C1294XL_USR_SW1 */
    GPIOTiva_PJ_0 | GPIO_CFG_IN_PU | GPIO_CFG_IN_INT_RISING,
    /* EK_TM4C1294XL_USR_SW2 */
    GPIOTiva_PJ_1 | GPIO_CFG_IN_PU | GPIO_CFG_IN_INT_RISING,

    /* Output pins */
    /* EK_TM4C1294XL_USR_D1 */
    GPIOTiva_PN_1 | GPIO_CFG_OUT_STD | GPIO_CFG_OUT_STR_HIGH | GPIO_CFG_OUT_LOW,
    /* EK_TM4C1294XL_USR_D2 */
    GPIOTiva_PN_0 | GPIO_CFG_OUT_STD | GPIO_CFG_OUT_STR_HIGH | GPIO_CFG_OUT_LOW,
};
```

5.5.1.3 GPIO_callbackFxn Array

Each element in this array is a callback function pointer for each of the GPIO pins configured to interrupt the device. The indexes for these array elements correspond to the pins defined in the GPIO_pinConfig array. These function pointers can be defined statically by referencing the callback function name in the array element, or dynamically, by setting the array element to NULL and using GPIO_setCallback() at runtime to plug the callback entry.

For example, this GPIO_callbackFxn array for Tiva is provided in the EK_TM4C1294XL.h file.

```
GPIO_CallbackFxn gpioCallbackFunctions[] = {
    NULL, /* EK_TM4C1294XL_USR_SW1 */
    NULL /* EK_TM4C1294XL_USR_SW2 */
};
```

Pins not used for interrupts can be omitted from callbacks array to reduce memory usage (if they are placed at end of GPIO_pinConfig array).

5.5.1.4 intPriority

(Not used for MSP430.)

This parameter defines the priority of the interrupt associated with the pins. Values for this parameter are device-specific. You should be well-acquainted with the interrupt controller used in your device before setting this parameter to a non-default value. The sentinel value of ~(0) (the default value) is used to indicate that the lowest possible priority should be used.

5.5.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the GPIO driver requires the application to initialize board-specific portions of the GPIO and provide the GPIO driver with a board-specific GPIOxxx_config structure.

5.5.2.1 Board-Specific Configuration

The `<board>.c` files contain a `<board>_initGPIO()` function that must be called at runtime—usually within `main()`—to initialize board-specific GPIO peripheral settings. Unlike other drivers, there is no board-specific initialization performed by this function. It simply calls `GPIO_init()`, which initializes the GPIO driver and configures all the pins as prescribed by the `GPIOxxx_Config` structure.

5.5.3 APIs

In order to use the GPIO module APIs, the GPIO header file should be included in an application as follows:

```
#include <ti/drivers/GPIO.h>
```

The following are the GPIO APIs:

- **GPIO_init()** sets up the configured GPIO pins.
- **GPIO_read()** gets the current state of the specified GPIO input pin.
- **GPIO_write()** sets the state of the specified GPIO pin to on or off.
- **GPIO_toggle()** toggles the state of the specified GPIO pin.
- **GPIO_setCallback()** dynamically binds a callback function to the specified GPIO input pin.
- **GPIO_setConfig()** dynamically configures the specified GPIO input pin.
- **GPIO_clearInt()** clears the interrupt flag for the specified GPIO pin.
- **GPIO_disableInt()** disables interrupts on the specified GPIO pin.
- **GPIO_enableInt()** enables interrupts on the specified GPIO pin.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`.

5.5.4 Usage

Once the `GPIO_init()` function has been called, the other GPIO APIs functions can be called. For example, LEDs can be switched on as follows:

```
GPIO_write(Board_LED0, Board_LED_ON);
GPIO_write(Board_LED1, Board_LED_ON);
GPIO_write(Board_LED2, Board_LED_ON);
```

For GPIO interrupts, once the `GPIO_setCallback()` function has been called to install a callback for a pin that pin's interrupt can be enabled as shown below:

```
/* Install callback and enable interrupts */
GPIO_setCallback(Board_BUTTON0, gpioButtonFxn0);
GPIO_setCallback(Board_BUTTON1, gpioButtonFxn1);

GPIO_enableInt(Board_BUTTON0);
GPIO_enableInt(Board_BUTTON1);
```

5.5.5 **Instrumentation**

The GPIO driver logs the following actions using the Log_print() APIs provided by SYS/BIOS:

- GPIO pin read.
- GPIO pin toggled.
- GPIO pin written to.
- GPIO hardware interrupt creation failure.
- GPIO interrupt flag cleared.
- GPIO interrupt enabled.
- GPIO interrupt disabled.

Logging is controlled by the Diags_USER1 and Diags_USER2 masks. Diags_USER1 is for general information and Diags_USER2 is for more detailed information.

The GPIO driver provides ROV information through the GPIO module. All GPIOs that have been created are displayed by their base address and show the following information:

- Basic parameters:
 - index
 - port
 - pin
 - direction (input/output)
 - value (only output values are shown)

5.5.6 **Examples**

All the TI-RTOS examples use the GPIO driver. The GPIO Interrupt example demonstrates interrupt usage. The GPIO_init() function is called in the board-specific file (for example, CC3200_LP.c). A filled in GPIO_Config structure is provided in the same file.

5.6 I²C Driver

This section assumes that you have background knowledge and understanding about how the I²C protocol operates. For the full I²C specifications and user manual ([UM10204](#)), see the NXP Semiconductors website.

The I²C driver has been designed to operate as a single I²C master by performing I²C transactions between the target and I²C slave peripherals. The I²C driver does not support I²C slave mode at this time. I²C is a communication protocol—the specifications define how data transactions are to occur via the I²C bus. The specifications do not define how data is to be formatted or handled, allowing for flexible implementations across different peripheral vendors. As a result, the I²C handles only the exchange of data (or transactions) between master and slaves. It is left to the application to interpret and manipulate the contents of each specific I²C peripheral.

The I²C driver has been designed to operate in a RTOS environment such as SYS/BIOS. It protects its transactions with OS primitives supplied by SYS/BIOS.

5.6.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useI2C = true;
```

5.6.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the I²C driver requires the application to initialize board-specific portions of the I²C and provide the I²C driver with the I2C_config structure.

5.6.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initI2C() function that must be called to initialize the board-specific I²C peripheral settings. This function also calls the I2C_init() to initialize the I²C driver.

5.6.2.2 I2C_config Structure

The <board>.c file also declare the I2C_config structure. This structure must be provided to the I²C driver. It must be initialized before the I2C_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.6.3 APIs

In order to use the I²C module APIs, the I2C.h header file should be included in an application as follows:

```
#include <ti/drivers/I2C.h>
```

The following are the I²C APIs:

- **I2C_init()** initializes the I²C module.

- **I2C_Params_init()** initializes an I2C_Params data structure. It defaults to Blocking mode.
- **I2C_open()** initializes a given I²C peripheral.
- **I2C_close()** deinitializes a given I²C peripheral.
- **I2C_transfer()** handles the I²C transfer for SYS/BIOS.

The I2C_transfer() API can be called only from a Task context. It requires an I2C_Transaction structure that specifies the location of the write and read buffer, the number of bytes to be processed, and the I²C slave address of the device.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.6.4 Usage

The application needs to supply the following structures in order to set up the framework for the driver:

- **I2C_Params** specifies the transfer mode and any callback function to be used. See [Section 5.6.4.1](#).
- **I2C_Transaction** specifies details about a transfer to be performed. See [Section 5.6.4.2](#).
- **I2C_Callback** specifies a function to be used if you are using callback mode. See [Section 5.6.4.3](#).

5.6.4.1 I²C Parameters

The I2C_Params structure is used with the I2C_open() function call. If the transferMode is set to I2C_MODE_BLOCKING, the transferCallback argument is ignored. If transferMode is set to I2C_MODE_CALLBACK, a user-defined callback function must be supplied.

```
typedef struct I2C_Params {
    I2C_TransferMode transferMode;           /* Blocking or Callback mode */
    I2C_CallbackFxn  transferCallbackFxn;    /* Callback function pointer */
} I2C_Params;
```

5.6.4.2 I²C Transaction

The I2C_Transaction structure is used to specify what type of I2C_transfer needs to take place.

```
typedef struct I2C_Transaction {
    UChar *writeBuf;           /* Pointer to a buffer to be written */
    UInt  writeCount;          /* Number of bytes to be written */

    UChar *readBuf;           /* Pointer to a buffer to be read */
    UInt  readCount;          /* Number of bytes to be read */

    UChar  slaveAddress;       /* Address of the I2C slave device */

    UArg  arg;                 /* User definable argument to the callback function */
    Ptr   nextPtr;             /* Driver uses this for queuing in I2C_MODE_CALLBACK */
} I2C_Transaction;
```

slaveAddress specifies the I²C slave address the I²C will communicate with. If writeCount is nonzero, I2C_transfer writes writeCount bytes from the buffer pointed by writeBuf. If readCount is nonzero, I2C_transfer reads readCount bytes into the buffer pointed by readBuf. If both writeCount and readCount are non-zero, the write operation always runs before the read operation.

The optional arg variable can only be used when the I²C driver has been opened in Callback mode. This variable is used to pass a user-defined value into the user-defined callback function.

nextPtr is used to maintain a linked-list of I2C_Transactions when the I²C driver has been opened in Callback mode. It must never be modified by the user application.

5.6.4.3 I²C Callback Function Prototype

This typedef defines the function prototype for the I²C driver's callback function for Callback mode. When the I²C driver calls this function, it supplies the associated I2C_Handle, a pointer to the I2C_Transaction that just completed, and a Boolean value indicating the transfer result. The transfer result is the same as from the I2C_transfer() when operating in Blocking mode.

```
typedef Void (*I2C_Callback)(I2C_Handle, I2C_Transaction *, Bool);
```

5.6.5 I²C Modes

The I²C driver supports two modes of operation, *blocking* and *callback* modes. The mode is determined when the I²C driver is opened using the I2C_Params data structure. If no I2C_Params structure is specified, the I²C driver defaults to blocking mode. Once opened, the only way to change the operation mode is to close and re-open the I²C instance with the new mode.

5.6.5.1 Opening in Blocking Mode

By default, the I²C driver operates in blocking mode. In blocking mode, a Task's code execution is blocked until an I²C transaction has completed. This ensures that only one I²C transaction operates at a given time. Other tasks requesting I²C transactions while a transaction is currently taking place are also placed into a blocked state and are executed in the order in which they were received.

```
I2C_Handle i2c;
UInt peripheralNum = 0;      /* Such as I2C0 */
I2C_Params i2cParams;

I2C_Params_init(&i2cParams);
i2cParams.transferMode = I2C_MODE_BLOCKING;
i2cParams.transferCallbackFxn = NULL;

i2c = I2C_open(peripheralNum, &i2cParams);
if (i2c == NULL) {
    /* Error opening I2C */
}
```

If no I2C_Params structure is passed to I2C_open(), default values are used. If the open call is successful, it returns a non-NULL value.

5.6.5.2 Opening in Callback Mode

In callback mode, an I²C transaction functions asynchronously, which means that it does not block a Task's code execution. After an I²C transaction has been completed, the I²C driver calls a user-provided hook function. If an I²C transaction is requested while a transaction is currently taking place, the new transaction is placed onto a queue to be processed in the order in which it was received.

```
I2C_Handle i2c;
UInt peripheralNum = 0;      /* Such as I2C0 */
I2C_Params i2cParams;

I2C_Params_init(&i2cParams);
i2cParams.transferMode = I2C_MODE_CALLBACK;
i2cParams.transferCallbackFxn = UserCallbackFxn;

i2c = I2C_open(peripheralNum, &i2cParams);
if (i2c == NULL) {
    /* Error opening I2C */
}
```

5.6.5.3 Specifying an I²C Bus Frequency

The I²C controller's bus frequency is determined as part the I2C_Params data structure and is set when the application calls I2C_open(). The standard I²C bus frequencies are 100 kHz and 400 kHz, with 100 kHz being the default.

```
I2C_Handle i2c;
UInt peripheralNum = 0; /* Such as I2C0 */
I2C_Params i2cParams;

I2C_Params_init(&i2cParams); /* Default is I2C_100kHz */
i2cParams.bitRate = I2C_400kHz;
i2c = I2C_open(peripheralNum, &i2cParams);
if (i2c == NULL) {
    /* Error Initializing I2C */
}
```

5.6.6 I²C Transactions

I²C can perform three types of transactions: Write, Read, and Write/Read. All I²C transactions are atomic operations with the slave peripheral. The I2C_transfer() function determines how many bytes need to be written and/or read to the designated I²C peripheral by reading the contents of an I2C_Transaction data structure.

The basic I2C_Transaction arguments include the slave peripheral's I²C address, pointers to write and read buffers, and their associated byte counters. The I²C driver always writes the contents from the write buffer before it starts reading the specified number of bytes into the read buffer. If no data needs to be written or read, simply set the corresponding counter(s) to 0.

5.6.6.1 Write Transaction (Blocking Mode)

As the name implies, an I²C write transaction writes data to a specified I²C slave peripheral. The following code writes three bytes of data to a peripheral with a 7-bit slave address of 0x50.

```
I2C_Transaction    i2cTransaction;
UChar              writeBuffer[3];
UChar              readBuffer[2];
Bool               transferOK;

i2cTransaction.slaveAddress = 0x50;      /* 7-bit peripheral slave address */
i2cTransaction.writeBuf = writeBuffer;  /* Buffer to be written */
i2cTransaction.writeCount = 3;          /* Number of bytes to be written */
i2cTransaction.readBuf = NULL;          /* Buffer to be read */
i2cTransaction.readCount = 0;           /* Number of bytes to be read */

transferOK = I2C_transfer(i2c, &i2cTransaction); /* Perform I2C transfer */
if (!transferOK) {
    /* I2C bus fault */
}
```

5.6.6.2 Read Transaction (Blocking Mode)

A read transaction reads data from a specified I²C slave peripheral. The following code reads two bytes of data from a peripheral with a 7-bit slave address of 0x50.

```
I2C_Transaction    i2cTransaction;
UChar              writeBuffer[3];
UChar              readBuffer[2];
Bool               transferOK;

i2cTransaction.slaveAddress = 0x50;      /* 7-bit peripheral slave address */
i2cTransaction.writeBuf = NULL;          /* Buffer to be written */
i2cTransaction.writeCount = 0;           /* Number of bytes to be written */
i2cTransaction.readBuf = readBuffer;     /* Buffer to be read */
i2cTransaction.readCount = 2;            /* Number of bytes to be read */

transferOK = I2C_transfer(i2c, &i2cTransaction); /* Perform I2C transfer */
if (!transferOK) {
    /* I2C bus fault */
}
```

5.6.6.3 Write/Read Transaction (Blocking Mode)

A write/read transaction first writes data to the specified peripheral. It then writes an I²C restart bit, which starts a read operation from the peripheral. This transaction is useful if the I²C peripheral has a pointer register that needs to be adjusted prior to reading from referenced data registers. The following code writes three bytes of data, sends a restart bit, and reads two bytes of data from a peripheral with the slave address of 0x50.

```
I2C_Transaction    i2cTransaction;
UChar              writeBuffer[3];
UChar              readBuffer[2];
Bool               transferOK;

i2cTransaction.slaveAddress = 0x50;      /* 7-bit peripheral slave address */
i2cTransaction.writeBuf = writeBuffer;   /* Buffer to be written */
i2cTransaction.writeCount = 3;           /* Number of bytes to be written */
i2cTransaction.readBuf = readBuffer;     /* Buffer to be read */
i2cTransaction.readCount = 2;            /* Number of bytes to be read */

transferOK = I2C_transfer(i2c, &i2cTransaction); /* Perform I2C transfer */
if (!transferOK) {
    /* I2C bus fault */
}
```

5.6.6.4 Write/Read Transaction (Callback Mode)

In callback mode, I²C transfers are non-blocking transactions. After an I²C transaction has completed, the I²C interrupt routine calls the user-provided callback function, which was passed in when the I²C driver was opened.

In addition to the standard I2C_Transaction arguments, an additional user-definable argument can be passed through to the callback function.

```
I2C_Transaction    i2cTransaction;
UChar              writeBuffer[3];
UChar              readBuffer[2];
Bool               transferOK;

i2cTransaction.slaveAddress = 0x50;      /* 7-bit peripheral slave address */
i2cTransaction.writeBuf = writeBuffer;   /* Buffer to be written */
i2cTransaction.writeCount = 3;           /* Number of bytes to be written */
i2cTransaction.readBuf = readBuffer;     /* Buffer to be read */
i2cTransaction.readCount = 2;            /* Number of bytes to be read */
i2cTransaction.arg = someOptionalArgument;

/* I2C_transfers will always return successful */
I2C_transfer(i2c, &i2cTransaction);      /* Perform I2C transfer */
```

5.6.6.5 Queuing Multiple I²C Transactions

Using the callback mode, you can queue up multiple I²C transactions. However, each I²C transfer must use a unique instance of an I2C_Transaction data structure. In other words, it is not possible to reschedule an I2C_Transaction structure more than once. This also implies that the application must make sure the I2C_Transaction isn't reused until it knows that the I2C_Transaction is available again.

The following code posts a Semaphore after the last I2C_Transaction has completed. This is done by passing the Semaphore's handle through the I2C_Transaction data structure and evaluating it in the UserCallbackFxn.

```
Void UserCallbackFxn(I2C_Handle handle, I2C_Transaction *msg, Bool transfer) {
    if (msg->arg != NULL) {
        Semaphore_post((Semaphore_Handle) (msg->arg));
    }
}

Void taskfxn(arg0, arg1) {
    I2C_Transaction i2cTransaction0;
    I2C_Transaction i2cTransaction1;
    I2C_Transaction i2cTransaction2;

    /* Set up i2cTransaction0/1/2 here */
    ...
    i2cTransaction0.arg = NULL;
    i2cTransaction1.arg = NULL;
    i2cTransaction2.arg = semaphoreHandle;

    /* Start and queue up the I2C transactions */
    I2C_transfer(i2c, &i2cTransaction0);
    I2C_transfer(i2c, &i2cTransaction1);
    I2C_transfer(i2c, &i2cTransaction2);

    /* Do other optional code here */
    ...

    /* Pend on the I2C transactions to have completed */
    Semaphore_pend(semaphoreHandle);
}
```

5.6.7 Instrumentation

The instrumented I²C library contains Log_print() statements that help to debug I²C transfers. The I²C driver logs the following actions using the Log_print() APIs provided by SYS/BIOS:

- I²C object opened or closed.
- Data written or read in the interrupt handler.
- Transfer results.

Logging is controlled by the Diags_USER1 and Diags_USER2 masks. Diags_USER1 is for general information and Diags_USER2 is for more detailed information. Diags_USER2 provides detailed logs intended to help determine where a problem may lie in the I²C transaction. This level of diagnostics will generate a significant amount of Log entries. Use this mask when granular transfer details are needed.

The I²C driver provides ROV information through the I2C module. All I²Cs that have been created are displayed by their base address and show the following information:

- Basic parameters:
 - objectAddress: Address of the I²C object.
 - baseAddress: Base address of the peripheral being used.
 - mode: Current state of the I²C controller (Idle, Write, Read, or Error).
 - slaveAddress: The I²C address of the peripheral with which the I²C controller communicates.

5.6.8 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.7 I²S Driver

The I²S driver facilitates the use of Inter-IC Sound (I²S), which is used to connect digital audio devices so that audio signals can be communicated between devices. The I²S driver simplifies reading and writing to any of the Multichannel Audio Serial Port (McASP) peripherals on the board with Receive and Transmit support. These include blocking, non-blocking, read and write characters on the McASP peripheral.

5.7.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useI2S = true;
```

5.7.2 Runtime Configuration

The board's I²S peripheral and pins must be configured before initializing an I²S instance.

As the overview in [Section 5.2.2](#) indicates, the I²S driver requires the application to initialize board-specific settings and provide the I²S driver with the I2S_config structure.

5.7.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initI2S() function that initializes the board-specific I2S peripheral settings. This function also calls I2S_init() to initialize the I²S driver.

5.7.2.2 I2S_Params Structure

The I2S_Params structure may be used to override the default settings for an I²S instance you are creating. The params in the structure must be set before calling I2S_open().

The structure has the following fields:

```
typedef struct I2S_Params {
    I2S_OpMode      operationMode;
    uint32_t        samplingFrequency; /* in samples/second, default = 16000 */
    unsigned char    slotLength;       /* default = 16 */
    unsigned char    bitsPerSample;    /* default = 16 */
    unsigned char    numChannels;      /* Mono/Stereo */

    I2S_DataMode     readMode;          /* mode for all read calls */
    I2S_Callback     readCallback;      /* pointer to read callback */
    uint32_t         readTimeout;

    I2S_DataMode     writeMode;         /* mode for all write calls */
    I2S_Callback     writeCallback;     /* pointer to write callback */
    uint32_t         writeTimeout;
    void *           customParams;
} I2S_Params;
```


5.7.3 I²S Modes

The I²S operation mode determines whether transmit and/or receive modes are enabled. The mode is specified with one of the following constants:

- `I2S_OPMODE_TX_ONLY`: Enable transmit only.
- `I2S_OPMODE_RX_ONLY`: Enable receive only.
- `I2S_OPMODE_TX_RX_SYNC`: Enable both transmit and receive.

A separate data mode may be specified for read calls and write calls. The available modes are:

- `I2S_MODE_CALLBACK`: This mode is non-blocking. Calls to read or write return immediately. When the transfer is finished, the configured callback function is called.
- `I2S_MODE_ISSUERECLAIM`: Call `I2S_readIssue()` and `I2S_writeIssue()` to queue buffers to the I²S. `I2S_readReclaim()` blocks until a buffer of data is available. `I2S_writeReclaim()` blocks until a buffer of data has been issued and the descriptor can be returned back to the caller.

5.7.4 APIs

In order to use the I²S module APIs, the `I2S.h` header file should be included in an application as follows:

```
#include <ti/drivers/I2S.h>
```

The following are the I²S APIs:

- `I2S_init()` initializes the I²S module.
- `I2S_Params_init()` initializes an `I2S_Params` data structure.
- `I2S_open()` initializes a given I²S instance.
- `I2S_close()` deinitializes a given I²S instance.
- `I2S_control()` performs implementation-specific features on a given I²S peripheral.
- `I2S_read()` queues a buffer for reading from the peripheral.
- `I2S_readIssueFxn()` queues a buffer for reading from the peripheral.
- `I2S_readReclaimFxn()` retrieves a received buffer of data from the peripheral.
- `I2S_write()` queues a buffer for writing from the peripheral.
- `I2S_writeIssueFxn()` queues a buffer for writing from the peripheral.
- `I2S_writeReclaimFxn()` retrieves a sent buffer of data from the peripheral.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.7.4.1 Opening the I²S driver

To open an I²S driver instance, initialize an I2S_Params object and specify the desired parameters.

```
I2S_Handle      handle;
I2S_Params      params;
I2SCC3200DMA_SerialPinParams customParams;

I2S_Params_init(&params);
params.operationMode = I2S_MODE_TX_RX_SYNC;
/* Change other params as required */

handle = I2S_open(someI2S_configIndexValue, &params);
if (!handle) {
    System_printf("I2S did not open");
}
```

5.7.4.2 Writing Data

The following example calls I2S_write() to write to an I²S driver instance that has been opened. It first queues up two buffers of text. Within an infinite loop, it then calls I2S_writeReclaim to retrieve a buffer, prints the size of the buffer retrieved, and re-queues the buffer.

```
const unsigned char hello[] = "Hello World\n";
const unsigned char hello1[] = "Hello World1\n";
I2S_BufDesc writeBuffer1;
I2S_BufDesc writeBuffer2;
I2S_BufDesc *pDesc = NULL;

writeBuffer1.bufPtr = &hello;
writeBuffer1.bufSize = sizeof(hello);
writeBuffer2.bufPtr = &hello1;
writeBuffer2.bufSize = sizeof(hello1);

ret = I2S_write(handle, &writeBuffer1);
ret = I2S_write(handle, &writeBuffer2);

while(1)
{
    ret = I2S_writeReclaim(handle, &pDesc);
    System_printf("The I2S wrote %d bytes\n", ret);
    pDesc->bufPtr = &hello;
    pDesc->bufSize = sizeof(hello);
    ret = I2S_write(handle, pDesc);
}
```

5.7.4.3 Reading Data

The following example calls `I2S_read()` to queue a buffer for reading from an I²S driver instance. It first queues up two buffers of text. Within an infinite loop, it then calls `I2S_readReclaim` to queue a buffer and reads the buffer.

```
unsigned char rxBuffer[20];
unsigned char rxBuffer1[20];
I2S_BufDesc readBuffer1;
I2S_BufDesc readBuffer2;
I2S_BufDesc *pDesc = NULL;

readBuffer1.bufPtr = &rxBuffer;
readBuffer1.bufSize = 20;
readBuffer2.bufPtr = &rxBuffer1;
readBuffer2.bufSize = 20;

ret = I2S_read(handle, &readBuffer1);
ret = I2S_read(handle, &readBuffer2);

while(1)
{
    ret = I2S_readReclaim(handle, &pDesc);
    System_printf("The I2S read %d bytes\n", ret);
    pDesc->bufPtr = &rxBuffer;
    pDesc->bufSize = 20;
    ret = I2S_read(handle, pDesc);
}
```

5.7.5 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.8 PWM Driver

The PWM module facilitates the generation of Pulse Width Modulated signals via simple and portable APIs. The PWM driver is designed such that a driver instance generates a single waveform. This section assumes that you have an understanding of Pulse Width Modulation techniques.

5.8.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.usePWM = true;
```

5.8.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the PWM driver requires the application to initialize board-specific settings and provide the PWM driver with the PWM_config structure.

5.8.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initPWM() function that initializes the board-specific PWM peripheral settings. This function also calls PWM_init() to initialize the PWM driver.

5.8.2.2 PWM_config Structure

The <board>.c file also declares the PWM_config structure. This structure must be provided to the PWM driver. It must be initialized before the PWM_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.8.3 APIs

To use the PWM module APIs, the PWM.h header file should be included in an application as follows:

```
#include <ti/drivers/PWM.h>
```

The following are the PWM APIs:

- **PWM_init()** initializes the PWM module.
- **PWM_Params_init()** initializes an PWM_Params data structure.
- **PWM_open()** initializes a given PWM instance.
- **PWM_close()** deinitializes a given PWM instance.
- **PWM_control()** performs implementation-specific features to a given PWM peripheral.
- **PWM_getPeriodCounts()** returns the PWM period in timer ticks.
- **PWM_getPeriodMicroSecs()** returns the PWM period in microseconds.
- **PWM_setDuty()** sets a PWM instances duty cycle.

For details, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.8.4 Usage

The application needs to supply the following structures in order to set up the framework for the driver:

- **PWM_Params** specifies the period, units in which the duty is specified and the PWM output polarity. See [Section 5.8.4.1](#).

5.8.4.1 PWM Parameters

The PWM_Params structure is used to initialize a PWM driver instance with the PWM_open() function call. Before opening the driver, the desired PWM period should be specified set in the PWM_Params. The period must be specified in microseconds. Additionally, the PWM output polarity and the duty mode should also be configured as desired.

```
typedef struct PWM_Params {
    uint32_t    period;           /* PWM period in microseconds */
    PWM_DutyMode dutyMode;       /* Units which duty is specified */
    PWM_Polarity polarity;       /* Set duty active high or active low */
} PWM_Params;
```

5.8.5 PWM Modes

The PWM operating mode determines the units in which the duty specified when calling PWM_setDuty(). The PWM driver supports three modes of operation:

- **PWM_DUTY_COUNTS**: The duty is specified in PWM timer counts.
- **PWM_DUTY_TIME**: The duty is specified in microseconds.
- **PWM_DUTY_SCALAR**: The duty is an integer scaled to the period, where 0 corresponds to a duty of 0% and 65535 corresponds to 100% duty.

The mode is determined by the PWM_DutyMode field within PWM_Params data structure. The PWM_Params default for this field is PWM_DUTY_TIME mode. Once opened, the only way to change the operating mode is to close and re-open the PWM instance with a new mode.

5.8.5.1 Opening the PWM driver

To open a PWM driver instance, initialize a PWM_Params object and specify the desired PWM period. Additionally, if a duty mode other than PWM_DUTY_TIME (default) is desired, specify it in the PWM_Params before opening the driver instance.

```
PWM_Handle handle;
PWM_Params params;
uint8_t    pwmOutputNumber = 0;

PWM_Params_init(&params);
params.period = 20000;           // Period in microseconds
params.dutyMode = PWM_DUTY_COUNTS; // Set PWM duty mode

handle = PWM_open(Board_PWM0, &params);
if (handle == NULL) {
    /* Error opening PWM */
}

PWM_setDuty(handle, 3000);       // Set a duty cycle of 3000 PWM timer counts
```

5.8.6 Instrumentation

The instrumented PWM library contains Log_print() statements that help to debug PWM driver calls. The PWM driver logs the following actions using the Log_print() APIs provided by SYS/BIOS:

- PWM object opened or closed.
- The duty cycle of a PWM output has been changed.

Logging is controlled by the Diags_USER1 and Diags_USER2 masks. Diags_USER1 is for general information and Diags_USER2 is for more detailed information. Diags_USER2 provides detailed logs intended to help determine if a problem has occurred while changing a duty cycle. This level of diagnostics generates a significant number of Log entries. Use this mask when granular details are needed.

The PWM driver provides ROV information through the PWM module. All PWM instances created are displayed by their base address and show the following information:

- Basic parameters:
 - objectAddress: Address of the PWM object.
 - baseAddress: Base address of the peripheral being used.
 - functionTable: PWM function table address.

5.8.7 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.9 SDSPI Driver

The SDSPI FatFs driver is used to communicate with SD (Secure Digital) cards via SPI (Serial Peripheral Interface).

The SDSPI driver is a FatFs driver module for the FatFs module provided in SYS/BIOS. With the exception of the standard TI-RTOS driver APIs—SDSPI_open(), SDSPI_close(), and SDSPI_init()—the SDSPI driver is exclusively used by FatFs module to handle the low-level hardware communications. See [Chapter 8](#), "Using the FatFs File System Drivers" for usage guidelines.

The SDSPI driver only supports one SSI (SPI) peripheral at a given time. It does not utilize interrupts.

The SDSPI driver is polling based for performance reasons and due the relatively high SPI bus bit rate. This means it does not utilize the SPI's peripheral interrupts, and it consumes the entire CPU time when communicating with the SPI bus. Data transfers to or from the SD card are typically 512 bytes, which could take a significant amount of time to complete. During this time, only higher priority Tasks, Swis, and Hwis can preempt Tasks making calls that use the FatFs.

5.9.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statements to your application's *.cfg file.

```
var FatFs = xdc.useModule('ti.sysbios.fatfs.FatFS');
TIRTOS.useSDSPI = true;
```

5.9.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the SDSPI driver requires the application to initialize board-specific portions of the SDSPI and provide the SDSPI driver with the SDSPI_config structure.

5.9.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initSDSPI() function that must be called to initialize the board-specific SDSPI peripheral settings. This function also calls the SDSPI_init() to initialize the SDSPI driver.

5.9.2.2 SDSPI_config Structure

The <board>.c file also declare the SDSPI_config structure. This structure must be provided to the SDSPI driver. It must be initialized before the SDSPI_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.9.3 APIs

In order to use the SDSPI module APIs, include the SDSPI header file in an application as follows:

```
#include <ti/drivers/SDSPI.h>
```

The following are the SDSPI APIs:

- **SDSPI_init()** sets up the specified SPI and GPIO pins for operation.
- **SDSPI_open()** registers the SDSPI driver with FatFs and mounts the FatFs file system.
- **SDSPI_close()** unmounts the file system and unregisters the SDSPI driver from FatFs.
- **SDSPI_Params_init()** initializes a SDSPI_Params structure to its defaults.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.9.4 Usage

Before any FatFs or C I/O APIs can be used, the application needs to open the SDSPI driver. The `SDSPI_open()` function ensures that the SDSPI disk functions get registered with the FatFs module that subsequently mounts the FatFs volume to that particular drive.

```
SDSPI_Handle sdspiHandle;
SDSPI_Params sdspiParams;
UInt peripheralNum = 0;      /* Such as SPI0 */
UInt FatFsDriveNum = 0;

SDSPI_Params_init(&sdspiParams);
sdspiHandle = SDSPI_open(peripheralNum, FatFsDriveNum, &sdspiParams);
if (sdspiHandle == NULL) {
    System_abort("Error opening SDSPI\n");
}
```

Similarly, the `SDSPI_close()` function unmounts the FatFs volume and unregisters SDSPI disk functions.

```
SDSPI_close(sdspiHandle);
```

Note that it is up to the application to ensure the no FatFs or C I/O APIs are called before the SDSPI driver has been opened or after the SDSPI driver has been closed.

5.9.5 Instrumentation

The SDSPI driver does not make any Log calls.

The SDSPI driver provides the following information to the ROV tool through the SDSPI module.

- Basic parameters:
 - **baseAddress**. Base address of the peripheral being used to access the SD card.
 - **CardType**. The SD card type detected during the disk initialization phase. The card type can be Multi-media Memory Card (MMC), Standard SDCard (SDSC), High Capacity SDCard (SDHC), or NOCARD for an unrecognized card.
 - **diskState**. Current status of the SD card.

5.9.6 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.10 SPI Driver

The Serial Peripheral Interface (SPI) driver is a generic, full-duplex driver that transmits and receives data on a SPI bus. SPI is sometimes called SSI (Synchronous Serial Interface).

The SPI protocol defines the format of a data transfer over the SPI bus, but it leaves flow control, data formatting, and handshaking mechanisms to higher-level software layers.

5.10.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useSPI = true;
```

5.10.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the SPI driver requires the application to initialize board-specific portions of the SPI and to provide the SPI driver with the SPI_config structure.

5.10.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initSPI() function that must be called to initialize the board-specific SPI peripheral settings. This function also calls the SPI_init() to initialize the SPI driver.

5.10.2.2 SPI_config Structure

The <board>.c file also declares the SPI_config structure. This structure must be provided to the SPI driver. It must be initialized before the SPI_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.10.3 APIs

In order to use the SPI module APIs, the SPI.h header file should be included in an application as follows:

```
#include <ti/drivers/SPI.h>
```

The following are the SPI APIs:

- **SPI_init()** initializes the SPI module.
- **SPI_Params_init()** initializes a SPI_Params data structure to default values.
- **SPI_open()** initializes a given SPI peripheral.
- **SPI_close()** deinitializes a given SPI peripheral.
- **SPI_transfer()** handles the SPI transfers for SYS/BIOS.

The SPI_transfer() API can be called only from a Task context when used in SPI_MODE_BLOCKING. It requires a SPI_Transaction structure that specifies the location of the write and read buffer and the number of SPI frames to be transmitted/received. In SPI frame formats, data is sent in full-duplex mode.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.10.4 Usage

The application needs to supply the following structures in order to set up the framework for the driver:

- **SPI_Params** specifies the transfer mode and any callback function to be used. See [Section 5.10.4.1](#).
- **SPI_Transaction** specifies details about a transfer to be performed. See [Section 5.10.4.2](#).
- **SPI_Callback** specifies a function to be used if you are using callback mode. See [Section 5.10.4.3](#).

5.10.4.1 SPI Parameters

The SPI_Params structure is used with the SPI_open() function call.

If the transferMode is set to SPI_MODE_BLOCKING, the transferCallback argument is ignored. If transferMode is set to SPI_MODE_CALLBACK, a user-defined callback function must be supplied. The mode parameter determines whether the SPI operates in master or slave mode. The desired SPI bit transfer rate, frame data size, and frame format are specified with bitRate, dataSize and frameFormat respectively.

```
typedef struct SPI_Params {
    SPI_TransferMode transferMode;    /* Blocking or Callback mode */
    SPI_CallbackFxn  transferCallbackFxn; /* Callback function pointer */
    SPI_Mode         mode;            /* Master or Slave mode */
    UInt             bitRate;         /* SPI bit rate in Hz */
    UInt             dataSize;        /* SPI data frame size in bits */
    SPI_FrameFormat  frameFormat;     /* SPI frame format */
} SPI_Params;
```

5.10.4.2 SPI Frame Formats, Transactions, and Data Sizes

The SPI driver can configure the device's SPI peripheral with various SPI frameFormat options: SPI (with various polarity and phase settings), TI, and Micro-wire.

The smallest single unit of data transmitted onto the SPI bus is called a SPI frame and is of size dataSize. A series of SPI frames transmitted/received on a SPI bus is known as a SPI transaction. A SPI_transfer() of a SPI transaction is performed atomically.

```
typedef struct SPI_Transaction {
    UInt    count;    /* Number of frames for this transaction */

    Ptr     txBuf;    /* Ptr to a buffer with data to be transmitted */
    Ptr     rxBuf;    /* Ptr to a buffer to receive data */

    UArg     arg;    /* Argument to be passed to the callback function */
} SPI_Transaction;
```

The txBuf and rxBuf parameters are both pointers to data buffers. If txBuf is NULL, the driver sends SPI frames with all data bits set to 0. If rxBuf is NULL, the driver discards all SPI frames received.

When the SPI is opened, the dataSize value determines the element types of txBuf and rxBuf. If the dataSize is from 4 to 8 bits, the driver assumes the data buffers are of type UChar (unsigned char). If the dataSize is larger than 8 bits, the driver assumes the data buffers are of type UShort (unsigned short).

The optional arg variable can only be used when the SPI driver has been opened in callback mode. This variable is used to pass a user-defined value into the user-defined callback function.

Specifics about SPI frame formatting and data sizes are provided in device-specific data sheets and technical reference manuals.

5.10.4.3 SPI Callback Function Prototype

This typedef defines the function prototype for the SPI driver's callback function for callback mode:

```
typedef Void (*SPI_Callback) (SPI_Handle, SPI_Transaction *);
```

When the SPI driver calls this function, it supplies the associated SPI_Handle and a pointer to the SPI_Transaction that just completed. There is no formal definition for what constitutes a successful SPI transaction, so every callback is considered a successful transaction. The application or middleware should examine the data to determine if the transaction met application-specific requirements.

5.10.5 Callback and Blocking Modes

The SPI driver supports two modes of operation: blocking and callback modes. The mode is determined by the mode parameter in the SPI_Params data structure used when the SPI driver is opened. If no SPI_Params structure is specified, the SPI driver defaults to blocking mode. Once a SPI driver is opened, the only way to change the operation mode is to close and re-open the SPI instance with the new mode.

5.10.5.1 Opening a SPI Driver in Blocking Mode

By default, the SPI driver operates in blocking mode. In blocking mode, a Task's code execution is blocked until a SPI transaction has completed. This ensures that only one SPI transaction operates at a given time. Other tasks requesting SPI transactions while a transaction is currently taking place are also placed into a blocked state and are executed in the order in which they were received.

```
SPI_Handle spi;
UInt peripheralNum = 0; /* Such as SPI0 */
SPI_Params spiParams;

SPI_Params_init(&spiParams);
spiParams.transferMode = SPI_MODE_BLOCKING;
spiParams.transferCallbackFxn = NULL;

spi = SPI_open(peripheralNum, &spiParams);
if (spi == NULL) {
    /* Error opening SPI */
}
```

Blocking mode is not supported in the execution context of a Swi or Hwi.

If no SPI_Params structure is passed to SPI_open(), default values are used. If the open call is successful, it returns a non-NULL value.

5.10.5.2 Opening a SPI Driver in Callback Mode

In callback mode, a SPI transaction functions asynchronously, which means that it does not block code execution. After a SPI transaction has been completed, the SPI driver calls a user-provided hook function.

```
SPI_Handle  spi;
UInt       peripheralNum = 0; /* Such as SPI0 */
SPI_Params spiParams;

SPI_Params_init(&spiParams);
spiParams.transferMode = SPI_MODE_CALLBACK;
spiParams.transferCallbackFxn = UserCallbackFxn;

spi = SPI_open(peripheralNum, &spiParams);
if (spi == NULL) {
    /* Error opening SPI */
}
```

Callback mode is supported in the execution context of Tasks, Swis and Hwis. However, if a SPI transaction is requested while a transaction is taking place, the SPI_transfer() returns FALSE.

5.10.6 SPI Transactions

SPI_transfer() always performs full-duplex SPI transactions. This means the SPI simultaneously receives data as it transmits data. The application is responsible for formatting the data to be transmitted as well as determining whether the data received is meaningful. The following code snippets perform SPI transactions.

Transferring n 4-8 bit SPI frames:

```
SPI_Transaction spiTransaction;
UChar          transmitBuffer[n];
UChar          receiveBuffer[n];
Bool           transferOK;

SPI_Params_init(&spiParams);
spiParams.dataSize = 6; /* dataSize can range from 4 to 8 bits */
spi = SPI_open(peripheralNum, &spiParams);

...

spiTransaction.count = n;
spiTransaction.txBuf = transmitBuffer;
spiTransaction.rxBuf = receiveBuffer;

transferOK = SPI_transfer(spi, &spiTransaction);
if (!transferOK) {
    /* Error in SPI transfer or transfer is already in progress */
}
```

Transferring n 9-16 bit SPI frames:

```

SPI_Transaction  spiTransaction;
UShort          transmitBuffer[n];
UShort          receiveBuffer[n];
Bool            transferOK;

SPI_Params_init(&spiParams);
spiParams.dataSize = 12; /* dataSize can range from 9 to 16 bits */
spi = SPI_open(peripheralNum, &spiParams);

...

spiTransaction.count = n;
spiTransaction.txBuf = transmitBuffer;
spiTransaction.rxBuf = receiveBuffer;

transferOK = SPI_transfer(spi, &spiTransaction);
if (!transferOK) {
    /* Error in SPI transfer or transfer is already in progress */
}

```

5.10.7 Master/Slave Modes

This SPI driver functions in both SPI master and SPI slave modes. Logically, the implementation is identical; however the difference between these two modes is driven by hardware. As a SPI master, the peripheral is in control of the clock signal and therefore will commence communications to the SPI slave immediately. As a SPI slave, the SPI driver prepares the peripheral to transmit and receive data in a way such that the peripheral is ready to transfer data when the SPI master initiates a transaction.

Asserting on Chip Select

The SPI protocol requires that the SPI master asserts a SPI slave's chip select pin prior starting a SPI transaction. While this protocol is generally followed, various types of SPI peripherals have different timing requirements as to when and for how long the chip select pin must remain asserted for a SPI transaction.

Commonly, the SPI master uses a hardware chip select to assert and de-assert the SPI slave for every data frame. In other cases, a SPI slave imposes the requirement of asserting the chip select over several SPI data frames. This is generally accomplished by using a regular, general-purpose output pin. Due to the complexity of such SPI peripheral implementations, the SPI driver provided with TI-RTOS has been designed to operate transparently to the SPI chip select. When the hardware chip select is used, the peripheral automatically selects/enables the peripheral. When using a software chip select, the application needs to handle the proper chip select and pin configuration.

- **Hardware chip select.** No additional action by the application is required.
- **Software chip select.** The application needs to handle the chip select assertion and de-assertion for the proper SPI peripheral.

Note that the implementation of hardware chip select is device-dependent. MSP43x does not support the hardware chip select feature. Tiva devices performs hardware chip select only when pin-muxed out.

5.10.8 Instrumentation

The instrumented SPI library contains `Log_print()` and `Log_error()` statements that help debug SPI transfers. The SPI driver logs the following actions:

- SPI object opened or closed
- DMA transfer configurations enabled
- SPI interrupt occurred
- Initialization error occurred
- Semaphore pend or post

Logging is controlled by the `Diags_USER1` and `Diags_USER2` masks. `Diags_USER1` is for general information and `Diags_USER2` is for more detailed information. `Diags_USER2` provides detailed logs intended to help determine where a problem may lie in the SPI transactions. This level of diagnostics will generate a significant amount of Log entries. Use this mask when granular transfer details are needed.

The SPI driver provides ROV information through the SPI module. All SPI instances are shown by the address of the SPI handle.

- Basic parameters:
 - SPI handle
 - base address
 - SPI function table

5.10.9 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.11 SPIMessageQTransport

This MessageQ transport allows point to point communication over an SSI (Synchronous Serial Interface) using the Serial Peripheral Interface (SPI) driver (see [Section 5.10](#)). It uses the MessageQ modules, which is part of the Inter-Processor Communication (IPC) component.

To use this transport, there must be a master and slave processor. The master drives the SPI link. The slave transport must be created and running before the master attempts to communicate to the master. You can delay creation of the master by waiting to call `SPIMessageQTransport_create()` on the master processor or using the `clockStartDelay` parameter when creating the transport instance.

5.11.1 Static Configuration

SPIMessageQTransport currently supports only dynamic creation of transport instances; you currently cannot create a static transport instance in the .cfg file.

5.11.2 Runtime Configuration

The application must first initialize the SPI peripherals by calling `<board>_initSPI()` on both the master and slave processors. This function performs pin-muxing and calls `SPI_init()` to initialize the driver.

After the SPI driver is initialized on both processors, the application should call `SPIMessageQTransport_create()` on both processors to create an instance of the transport and open the SPI drivers. For example, this code creates a SPIMessageQTransport instance:

```
/* Create the transport to the slave M3 */
SPIMessageQTransport_Params_init(&transportParams);
transportParams.maxMsgSize = BLOCKSIZE;
transportParams.heap      = (IHeap_Handle) (heapHandle);
transportParams.spiIndex  = 0;
transportParams.clockRate = 1;
transportParams.spiBitRate = 6000000;
transportParams.master    = TRUE;
transportParams.priority   = SPIMessageQTransport_Priority_NORMAL;
handle = SPIMessageQTransport_create(SLAVEM3PROCID, &transportParams, &eb);
if (handle == NULL) {
    System_abort("SPIMessageQTransport_create failed\n");
}
```

The application also needs to set up a MessageQ instance to use the transport.

5.11.3 Error Conditions

During transport startup, the master and slave exchange a handshake. Any `MessageQ_put()` calls to the remote processor fail until this handshake is completed.

Asynchronous errors can occur when using the transport. When one of these occur, the this transport calls the any `errFxn` that was specified by the `SPIMessageQTransport_setErrFxn()` API. The following list shows the errors that can occur and what information is passed in arguments to the `errFxn`.

- **Bad Msg.** The transport received a badly formed message.
 - Reason: `SPIMessageQTransport_Reason_PHYSICALERR`
 - Handle: Transport handle
 - Ptr: pointer to the received msg
 - UArg: `SPIMessageQTransport_Failure_BADMSG`

- **Failed Checksum.** The transport received a message with a bad checksum.
 - Reason: SPIMessageQTransport_Reason_PHYSICALERR
 - Handle: Transport handle
 - Ptr: pointer to the received msg
 - UArg: SPIMessageQTransport_Failure_BADCHECKSUM
- **Allocation failure.** The allocation failed when the transport tried to copy incoming messages into an allocated message.
 - Reason: SPIMessageQTransport_Reason_FAILEDALLOC
 - Handle: Transport handle
 - Ptr: NULL
 - UArg: heapId used to try to allocate the message
- **Failed transmit.** The transport failed to transmit a message.
 - Reason: SPIMessageQTransport_Reason_FAILEDPUT
 - Handle: Transport handle
 - Ptr: pointer to the msg that was not transmitted. The msg will be freed after the errFxn is called.
 - UArg: SPIMessageQTransport_Failure_TRANSFER

5.11.4 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.12 UART Driver

A UART is used to translate data between the chip and a serial port. The UART driver simplifies reading and writing to any of the UART peripherals on the board with multiple modes of operation and performance. These include blocking, non-blocking, and polling as well as text/binary mode, echo and return characters.

5.12.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useUART = true;
```

5.12.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the UART driver requires the application to initialize board-specific portions of the UART and provide the UART driver with the UART_config structure.

5.12.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initUART() function that must be called to initialize the board-specific UART peripheral settings. This function also calls the UART_init() to initialize the UART driver.

5.12.2.2 UART_config Structure

The <board>.c file also declare the UART_config structure. This structure must be provided to the UART driver. It must be initialized before the UART_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.12.3 APIs

In order to use the UART module APIs, the UART header file should be included in an application as follows:

```
#include <ti/drivers/UART.h>
```

The following are the UART APIs:

- **UART_init()** initializes the UART module.
- **UART_Params_init ()** initializes the UART_Params struct to its defaults for use in calls to UART_open().
- **UART_open()** opens a UART instance.
- **UART_close()** closes a UART instance.
- **UART_write()** writes a buffer of characters to the UART.
- **UART_writePolling()** writes a buffer to the UART in the context of the call and returns when finished.

- **UART_writeCancel()** cancels the current write action and unblocks or make the callback.
- **UART_read()** reads a buffer of characters to the UART.
- **UART_readPolling()** reads a buffer to the UART in the context of the call and returns when finished.
- **UART_readCancel()** cancels the current read action and unblocks or make the callback.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.12.4 Usage

The UART driver does not configure any board peripherals or pins; this must be completed before any calls to the UART driver. The examples call `Board_initUART()`, which is mapped to a specific `initUART()` function for the board. The board-specific `initUART()` functions are provided in the board .c and .h files. For example, a sample UART setup is provided in the `TMDXDOCKH52C1_initUART()` function in the `TMDXDOCKH52C1.c` file. This function sets up the peripheral and pins used by UART0 for operation through the JTAG emulation connection (no extra hardware needed). The examples that use the UART driver call the `Board_initUART()` function from within `main()`.

Once the peripherals are set up, the application must initialize the UART driver by calling `UART_init()`. If you add the provided board setup files to your project, you can call the `Board_initUART()` function within `main()`.

Once the UART has been initialized, you can open UART instances. Only one UART index can be used at a time. If the index is already in use, the driver returns NULL and logs a warning. Opening a UART requires four steps:

1. Create and initialize a `UART_Params` structure.
2. Fill in the desired parameters.
3. Call `UART_open()` passing in the index of the UART from the configuration structure and Params.
4. Save the UART handle that is returned by `UART_open()`. This handle will be used to read and write to the UART you just created.

For example:

```
UART_Handle uart;
UART_Params uartParams;

Board_initUART();           // Calls UART_init for you

/* Create a UART with data processing off. */
UART_Params_init(&uartParams);
uartParams.writeDataMode = UART_DATA_BINARY;
uartParams.readDataMode = UART_DATA_BINARY;
uartParams.readReturnMode = UART_RETURN_FULL;
uartParams.readEcho = UART_ECHO_OFF;

uart = UART_open(Board_UART, &uartParams);
```

Options for the `writeMode` and `readMode` parameters are `UART_MODE_BLOCKING` and `UART_MODE_CALLBACK`.

- `UART_MODE_BLOCKING` uses a semaphore to block while data is being sent. The context of the call must be a SYS/BIOS Task.

- `UART_MODE_CALLBACK` is non-blocking and will return while data is being sent in the context of a Hwi. The UART driver will call the callback function whenever a write or read finishes. In some cases, the action might have been canceled or received a newline, so the number of bytes sent/received are passed in. Your implementation of the callback function can use this information as needed.

Options for the `writeDataMode` and `readDataMode` parameters are `UART_MODE_BINARY` and `UART_MODE_TEXT`. If the data mode is `UART_MODE_BINARY`, the data is passed as is, without processing. If the data mode is `UART_MODE_TEXT`, write actions add a return before a newline character, and read actions replace a return with a newline. This effectively treats all device line endings as LF and all host PC line endings as CRLF.

Options for the `readReturnMode` parameter are `UART_RETURN_FULL` and `UART_RETURN_NEWLINE`. These determine when a read action unblocks or returns. If the return mode is `UART_RETURN_FULL`, the read action unblocks or returns when the buffer is full. If the return mode is `UART_RETURN_NEWLINE`, the read action unblocks or returns when a newline character is read.

Options for the `readEcho` parameter are `UART_ECHO_OFF` and `UART_ECHO_ON`. This parameter determines whether the driver echoes data back to the UART. When echo is turned on, each character that is read by the target is written back independent of any write operations. If data is received in the middle of a write and echo is turned on, the characters echoed back will be mixed in with the write data.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`.

5.12.5 UART DMA Driver for TivaC Devices

For TivaC devices, the UART driver can be configured to use DMA, if desired. The `<board>.c` file contains configuration for both the DMA-based UART driver and the non-DMA-based UART driver. To use the DMA-based UART driver, compile `<board>.c` with the preprocessor symbol `TI_DRIVERS_UARTDMA` set to 1. This can be set either in `<board>.c` by adding:

```
#define TI_DRIVERS_UART_DMA 1
```

or, in the CCS project settings, under the compiler flags:

```
--define=TI_DRIVERS_UART_DMA=1
```

Of the TI-RTOS UART examples, only the UART Echo example is suitable for using UART DMA.

The UART Console example calls `scanf()`, requiring the UART driver to inspect the data and return from a `UART_read()` call when a newline character is received. The UART DMA driver does not examine input or output data, so using UART DMA with the UART Console example causes the call to `scanf()`, which calls `UART_read()`, to hang waiting for input.

The other UART example, UART Logging, calls `UART_writePolling()`, which does not use DMA; only `UART_write()` and `UART_read()` use DMA. Although the UART Echo example can be built to use UART DMA, it is not an interesting use case, as it reads and writes only one character at a time.

5.12.6 UART DMA Driver for SimpleLink CC32xx Devices

For CC32xx devices, the UART driver can be configured to use DMA, if desired. The `<board>.c` file contains configuration for both the DMA-based UART driver, and the non-DMA-based UART driver. To use the DMA-based UART driver, compile `<board>.c` with the preprocessor symbol `TI_DRIVERS_UARTDMA` set to 1. This can be set either in `<board>.c` by adding:

```
#define TI_DRIVERS_UART_DMA 1
```

or, in the CCS project settings, under the compiler flags:

```
--define=TI_DRIVERS_UART_DMA=1
```

Of the TI-RTOS UART examples, only the UART Echo example is suitable for using UART DMA.

The other UART example, UART Logging, calls `UART_writePolling()`, which does not use DMA; only `UART_write()` and `UART_read()` use DMA. Although the UART Echo example can be built to use UART DMA, it is not an interesting use case, as it reads and writes only one character at a time.

5.12.7 Instrumentation

The UART module provides instrumentation data both by making log calls and by sending data to the ROV tool in CCS.

5.12.7.1 Logging

The UART driver is instrumented with Log events that can be viewed with UIA and RTOS Analyzer. Diags masks can be turned on and off to provide granularity to the information that is logged.

Use `Diags_USER1` to see general Log events such as success opening a UART, number of bytes read or written, and warnings/errors during operation.

Use `Diags_USER2` to see more granularity when debugging. Each character read or written will be logged as well as several other key events.

The UART driver makes log calls when the following actions occur:

- `UART_open()` success or failure
- `UART_close()` success
- UART interrupt triggered
- `UART_write()` finished
- Byte was written
- `UART_read()` finished
- Byte was read
- `UART_write()` finished, canceled or timed out
- `UART_read()` finished, canceled or timed out

5.12.7.2 ROV

The UART driver provides ROV information through the UART module. All UARTs that have been created are displayed by their base address and show the following information:

- Configuration parameters:
 - Base Address

- Write Mode
- Read Mode
- Write Timeout
- Read Timeout
- Write Data Mode
- Read Data Mode
- Read Return mode
- Read Echo
- Write buffer: Contents of the write buffer
- Read buffer: Contents of the read buffer

5.12.8 **Examples**

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.13 USBMSCHFATFS Driver

The USBMSCHFATFS driver is a FatFS driver module that has been designed to be used by the FatFS module that comes with SYS/BIOS. With the exception of the standard TI-RTOS driver APIs—`_open()`, `_close()`, and `_init()`—the USBMSCHFATFS driver is exclusively used by FatFS module to handle communications to a USB flash drive. See [Chapter 8](#) for usage guidelines.

The USBMSCHFATFS driver uses the USB Library, which is provided with TivaWare and MWare to communicate with USB flash drives as a USB Mass Storage Class (MSC) host controller. Only one USB flash drive connected directly to the USB controller at a time is supported.

Tasks that make FatFS calls can be preempted only by higher priority tasks, Swis, and Hwis.

5.13.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable messages about this driver's activity that feed into the RTOS Object View (ROV) tool, add the following statement to your application's *.cfg file.

```
var FatFs = xdc.useModule('ti.sysbios.fatfs.FatFS');
TIRTOS.useUSBMSCHFATFS = true;
```

5.13.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the USBMSCHFATFS driver requires the application to initialize board-specific portions of the USBMSCHFATFS and provide the USBMSCHFATFS driver with the USBMSCHFATFS_config structure.

5.13.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initUSBMSCHFATFS() function that must be called to initialize the board-specific USBMSCHFATFS peripheral settings. This function also calls the USBMSCHFATFS_init() to initialize the USBMSCHFATFS driver.

5.13.2.2 USBMSCHFATFS_config Structure

The <board>.c file also declare the USBMSCHFATFS_config structure. This structure must be provided to the USBMSCHFATFS driver. It must be initialized before the USBMSCHFATFS_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.13.3 APIs

In order to use the USBMSCHFATFS module APIs, the USBMSCHFATFS header file should be included in an application as follows:

```
#include <ti/drivers/USBMSCHFATFS.h>
```

The following are the USBMSCHFATFS APIs:

- **USBMSCHFATFS_init()** initializes the USBMSCHFATFS data objects pointed by the driver's config structure.
- **USBMSCHFATFS_open()** registers the USBMSCHFATFS driver with FatFs and mounts the FatFs file system.
- **USBMSCHFATFS_close()** unmounts the file system and unregisters the USBMSCHFATFS driver from FatFs.
- **USBMSCHFATFS_Params_init()** initializes a USBMSCHFATFS_Params structure to its defaults.
- **USBMSCHFATFS_waitForConnect()** blocks a task's execution until a USB flash drive was detected.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.13.4 Usage

Before the FatFs APIs can be used, the application needs to open the USBMSCHFATFS driver. The USBMSCHFATFS_open() function ensures that the USBMSCHFATFS disk functions get registered with the FatFs module. The FatFs module then mounts the FatFs volume to that particular drive.

Internally, opening the USBMSCHFATFS driver creates a high-priority Task to service the USB library. The default priority for this task is 15 and runs every 10 SYS/BIOS system ticks. You can change the priority of this task using the USBMSCHFATFS_Params structure.

```
USBMSCHFATFS_Handle usbmschfatfsHandle;
USBMSCHFATFS_Params usbmschfatfsParams;
UInt peripheralNum = 0; /* Such as USB0 */
UInt FatFsDriveNum = 0;

USBMSCHFATFS_Params_init(&usbmschfatfsParams);
usbmschfatfsHandle =
    USBMSCHFATFS_open(peripheralNum, FatFsDriveNum, &usbmschfatfsParams);
if (usbmschfatfsHandle == NULL) {
    System_abort("Error opening USBMSCHFATFS\n");
}
```

Similarly, the close() function unmounts the FatFs volume and unregisters the USBMSCHFATFS disk functions.

```
USBMSCHFATFS_close(usbmschfatfsHandle);
```

The application must ensure the no FatFs or C I/O APIs are called before the USBMSCHFATFS driver has been opened or after the USBMSCHFATFS driver has been closed.

Although the USBMSCHFATFS driver may have been opened, there is a possibility that a USB flash drive may not be present. To ensure that a Task will wait for a USB drive to be present, the USBMSCHFATFS driver provides the USBMSCHFATFS_waitForConnect() function to block the Task's execution until a USB flash drive is detected.

5.13.5 Instrumentation

The USBMSCHFatFs driver logs the following actions using the Log_print() APIs provided by SYS/BIOS:

- USB MSC device connected or disconnected.
- USB drive initialized.
- USB drive read or failed to read.
- USB drive written to or failed to write.
- USB status OK or error.

Logging is controlled by the Diags_USER1 and Diags_USER2 masks. Diags_USER1 is for general information and Diags_USER2 is for more detailed information.

The USBMSCHFatFs driver does not provide any information to the ROV tool.


5.13.6 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.14 USB Reference Modules

This section provides general guidelines for integrating TI's USB Library into an RTOS environment such as SYS/BIOS. The USB Library incorporated with TI-RTOS is a released version of TivaWare's, MWare's, or MSPWare's USB library. This document does not explain each Ware's USB Library in detail. Instead, it points out important design considerations to consider in application development.

The USB library is highly customizable, and it uses its associated driverlib software to access physical registers on the device, in particular those of the USB controller. To avoid limiting its capabilities by providing a driver that uses the library in a particular way, the TI-RTOS USB examples are structured as reference modules with the expectation that the developer makes the necessary changes for production.

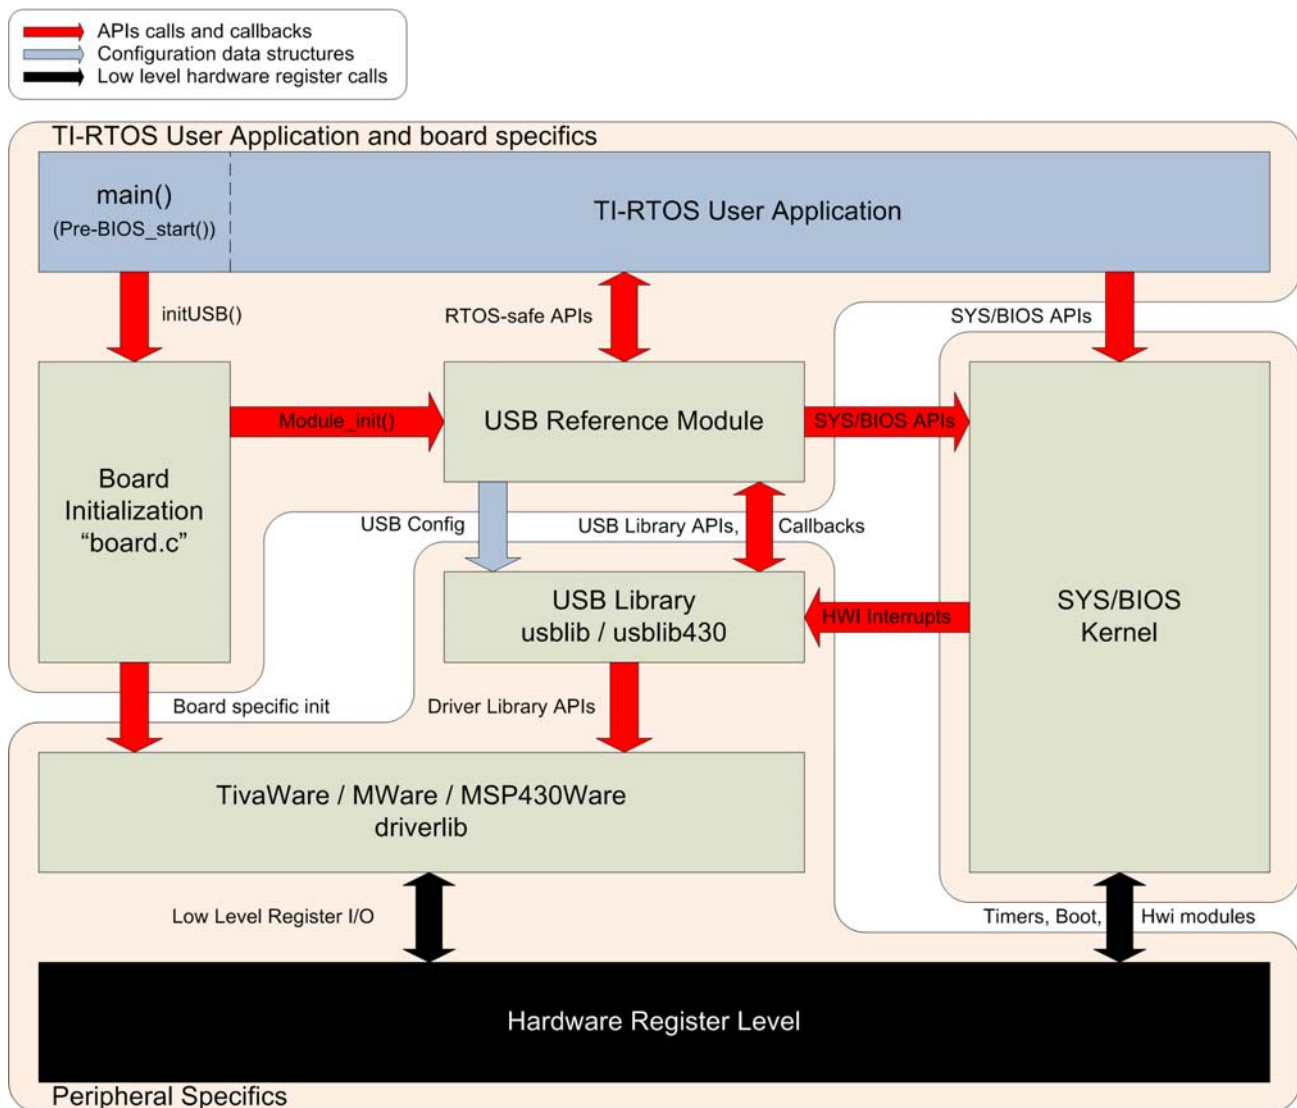

Reference modules are examples that give developers full access, so they can make changes and modifications as needed. The goal of these modules is to provide a starting point for integrating the USB library into a SYS/BIOS application.

5.14.1 USB Reference Modules in TI-RTOS

Each module handles the following items:

- Initializes the USB library and provides the necessary memory allocation, data structures, and callback functions.
- Installs the associated USB interrupt service routine provided with the USB library as a SYS/BIOS HWI object.
 - For MSP43x devices, interrupts are installed via the configuration file (*.cfg). The interrupt service routine was generated using the MSP43x USB Descriptor Tool.
- Provides a set of thread-safe APIs that can be used by one or more SYS/BIOS Tasks.
- Creates the necessary RTOS primitives to protect critical regions and allows Tasks to block when possible.
- For USB Host examples, it also creates separate Task that services the USB stack.

5.14.1.1 Reference module APIs

All of the reference modules include the following APIs. Each module also includes specific APIs unique to that particular module.

- `Module_init()` – This function initializes the USB library, creates RTOS primitives, and installs the proper interrupt handler. For the host examples, it also creates a Task to service the USB controller.
- `Module_waitForConnect()` – This function causes a Task to block when the USB controller is not connected.

5.14.1.2 USB Examples

TI-RTOS has six USB reference examples and one USB FatFs (MSC host) driver. (On-the-go (OTG) examples are not available with TI-RTOS.) The reference examples and driver are as follows:

- **HID Host Keyboard** – Allows a USB keyboard to be connected to the target. Keys pressed on the keyboard are registered on the target.
- **HID Host Mouse** – Allows a USB mouse to be connected to the target. The target registers the overall mouse movements and button presses.
- **HID Device Keyboard** – Causes the target to emulate a USB keyboard. When connected to a workstation, the target functions as another USB keyboard.
- **HID Device Mouse** – Causes the target to emulate a USB mouse when connected to a workstation.
- **CDC Device (Serial)** – The target enumerates a virtual serial COM port on a workstation. This method of communication is commonly used to replace older RS-232 serial adapters.
- **HID Mouse and CDC composite device** – This example enumerates two different USB devices—a HID mouse and a CDC serial virtual COM port.
- **MSC Host (Mass Storage)** – This example uses an actual driver instead of a USB reference module. This driver is modeled after the FatFs driver APIs. This driver allows external mass storage devices such as a USB flash drives to be used with FatFs.

5.14.1.3 USB Reference Modules for MSP43x

The USB reference modules for MSP43x devices closely follow the USB examples available in MSPWare. Here are a few items to note:

- Since USB reference modules for MSP43x are imported via TI Resource Explorer, a full copy of the MSPWare's usb430 USB stack and a set of pre-generated USB descriptor files are copied into the CCS project.
- The generated USB descriptor files are considered user code. These descriptor files have been tested to work with this version of TI-RTOS. Refer to the MSPWare USB documentation if you are generating custom USB descriptors using the USB Descriptor Tool.
- The Usblsr.c file, which is generated by the USB Descriptor Tool, contains the interrupt service routine needed by MSPWare's usb430 library. The TI-RTOS USB reference module examples use this interrupt service routine through configuration in the project's *.cfg file.

5.14.2 USB Reference Module Design Guidelines

This section discusses the structure of the USB reference examples.

Design considerations involved in creating these examples included:

- **USB Device Specifics.** Each module contains memory, data structures, and a callback function needed to function properly with the USB library. In device mode, the reference module also includes device descriptors that need to be sent to the USB host controller upon request.
- **OS Primitives.** OS primitives that implement gates, mutexes, and semaphores are used to guard data against race-conditions and reduce unwanted processing time by blocking Tasks when needed.
- **Memory Allocation.** The USB library is designed so that the user application performs all required memory allocation. In a multi-tasked / preempted environment such as SYS/BIOS, it is necessary to protect this memory from other threads. In the reference examples, this is done using the GateMutex module.
- **Callback Functions.** The USB library requires user-provided callback functions to notify the application of events. The USB reference modules provide a set of callback functions to notify the module of status updates. The callback functions update an internal state variable and in some cases post Semaphores to unblock pending Tasks.
- **Interrupts.** Some of the events that trigger callback functions are hardware notifications about the device being connected or disconnected from a USB host controller.

5.14.2.1 Device Mode

USB Device mode examples are rather straightforward. In device mode, the job of the USB library is to respond to the USB host controller with its current state/status. By making USB library API calls in device mode, the example updates information stored in the USB controller's endpoints. This information can be queried by the USB host controller.

5.14.2.2 Host Mode

All USB Host mode examples install a high-priority Task to service the USB controller. This Task calls the USB library's HCDMain() function, which maintains the USB library's internal state machine. This state machine performs actions that include enumerating devices and performing callbacks as described in the Tiva USB library documentation.

To protect the USB library from race conditions between the service Task and other Tasks making calls to the module's APIs, a GateMutex is used.

5.14.2.3 On-The-Go Mode

OTG is not currently used by a USB reference module.

5.15 USB Device and Host Modules

See the USB examples for reference modules that provide support for the Human Interface Device (HID) class (mouse and keyboard) and the Communications Device Class (CDC). This code is provided as part of the examples, not as a separate driver.

The code for the HID keyboard device is in USBKBD.c in the USB Keyboard Device example. This file provides the following functions:

- USBKBD_init()
- USBKBD_waitForConnect()
- USBKBD_getState()
- USBKBD_putChar()
- USBKBD_putString()

The code for the HID keyboard host is in USBKBH.c in the USB Keyboard Host example. This file provides the following functions:

- USBKBH_init()
- USBKBH_waitForConnect()
- USBKBH_getState()
- USBKBH_setState()
- USBKBH_putChar()
- USBKBH_putString()

The code for the HID mouse device is in USBMD.c in the USB Mouse Device example. This file provides the following functions:

- USBMD_init()
- USBMD_waitForConnect()
- USBMD_setState()

The code for the HID mouse host is in USBMH.c in the USB Mouse Host example. This file provides the following functions:

- USBMH_init()
- USBMH_waitForConnect()
- USBMH_getState()

The code for the CDC device is in USBCDCD.c in the F28M3x Demo example, the USB Serial Device example, and the UART Console example. This file provides the following functions:

- USBCDCD_init()
- USBCDCD_waitForConnect()
- USBCDCD_sendData()
- USBCDCD_receiveData()

The code for the CDC mouse is in USBCDCMOUSE.c in the USB CDC Mouse Device example. This file provides the following functions:

- USBCDCMOUSE_init()
- USBCDCMOUSE_receiveData()
- USBCDCMOUSE_sendData()
- USBCDCMOUSE_waitForConnect()

5.16 Watchdog Driver

A watchdog timer can be used to generate a reset signal if a system has become unresponsive. The Watchdog driver simplifies configuring and starting the watchdog peripherals. The watchdog peripheral can be configured with resets either on or off and a user-specified timeout period.

When the watchdog peripheral is configured not to generate a reset, it can be used to cause a hardware interrupt at a programmable interval. The driver provides the ability to specify a user-provided callback function that is called when the watchdog causes an interrupt.

5.16.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
TIRTOS.useWatchdog = true;
```

5.16.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the Watchdog driver requires the application to initialize board-specific portions of the watchdog and to provide the Watchdog driver with the Watchdog_config structure.

5.16.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initWatchdog() function that must be called to initialize the board-specific watchdog peripheral settings. This function also calls the Watchdog_init() to initialize the Watchdog driver.

5.16.2.2 Watchdog_config Structure

The <board>.c file also declares the Watchdog_config structure. This structure must be provided to the Watchdog driver. It must be initialized before the Watchdog_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.16.3 APIs

In order to use the Watchdog module APIs, the Watchdog header file should be included in an application as follows:

```
#include <ti/drivers/Watchdog.h>
```

The following are the Watchdog APIs:

- **Watchdog_init()** initializes the Watchdog module.
- **Watchdog_Params_init()** initializes the Watchdog_Params struct to its defaults for use in calls to Watchdog_open().
- **Watchdog_open()** opens a Watchdog instance.

- **Watchdog_clear()** clears the Watchdog interrupt flag.
- **Watchdog_setReload()** sets the Watchdog reload value.

For details, see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.16.4 Usage

The Watchdog driver does not configure board peripherals. This must be done before any calls to the Watchdog driver. The examples include board-specific `initWatchdog()` functions in the board .c and .h files. Once the watchdog is initialized, a Watchdog object can be created through the following steps:

1. Create and initialize the Watchdog_Params structure.
2. Assign desired values to parameters.
3. Call Watchdog_open().
4. Save the Watchdog_Handle returned by Watchdog_open(). This will be used to interact with the Watchdog object just created.

To have a user-defined function run at the hardware interrupt caused by a watchdog timer timeout, define a Void-type function that takes an argument of type Watchdog_Handle cast as a UArg as follows:

```
typedef Void (*Watchdog_Callback) (UArg);
```

An example of the Watchdog creation process that uses a callback function:

```
Watchdog_Params params;
Watchdog_Handle watchdog;

Board_initWatchdog();

/* Create and enable a Watchdog with resets enabled */
Watchdog_Params_init(&params);
params.resetMode = Watchdog_RESET_ON;
params.callbackFxn = UserCallbackFxn;

watchdog = Watchdog_open(Board_WATCHDOG, &params);
if (watchdog == NULL) {
    /* Error opening watchdog */
}
```

If no Watchdog_Params structure is passed to Watchdog_open(), the default values are used. By default, the Watchdog driver has resets turned on, no callback function specified, and stalls the timer at breakpoints during debugging.

Options for the resetMode parameter are Watchdog_RESET_ON and Watchdog_RESET_OFF. The latter allows the watchdog to be used like another timer interrupt. When resetMode is Watchdog_RESET_ON, it is up to the application to call Watchdog_clear() to clear the Watchdog interrupt flag to prevent a reset. Watchdog_clear() can be called at any time.

5.16.5 Instrumentation

The Watchdog module provides instrumentation data by both making log calls and by sending data to the ROV tool in CCS.

The Watchdog driver logs the following actions using the Log_print() APIs provided by SYS/BIOS.

- Watchdog_open() success or failure
- Reload value changed

In the ROV tool, all Watchdogs that have been created are displayed and show the following information.

- Basic parameters:
 - Watchdog handle
 - base address
 - Watchdog function table

5.16.6 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

5.17 WiFi Driver

The TI-RTOS WiFi driver implements many elements needed to communicate with a TI Wi-Fi device such as the SimpleLink Wi-Fi CC3100. The WiFi driver uses the TI-RTOS SPI module and implements a state machine to send and receive commands, data, and events to and from a Wi-Fi device.

This driver's APIs let you open a WiFi driver instance to communicate with the Wi-Fi device's host driver without further direct calls to the WiFi driver from the application. TI-RTOS provides host drivers for its supported Wi-Fi devices in `<tirtos_install>\packages\ti\drivers\wifi\<wi-fi_device_name>`.

You can configure the driver to allow calling the WiFi driver from a single thread or to be safe to call from multiple threads. The multi-threaded version of host driver consumes more resources than the single-thread version. The WiFi driver supports only one instance of the driver.

For details on which resources each implementation of the WiFi driver uses (such as DMA channels and interrupts), see the Doxygen help by opening `<tirtos_install>\docs\doxygen\html\index.html`.


5.17.1 Static Configuration

See Section 2.4.2 and Section 5.2.1 for information about configuring your application to use the instrumented driver libraries, which are helpful in debugging.

To enable this driver, add the following statement to your application's *.cfg file.

```
var WiFi = xdc.useModule('ti.drivers.WiFi');
```

or configure this driver graphically:

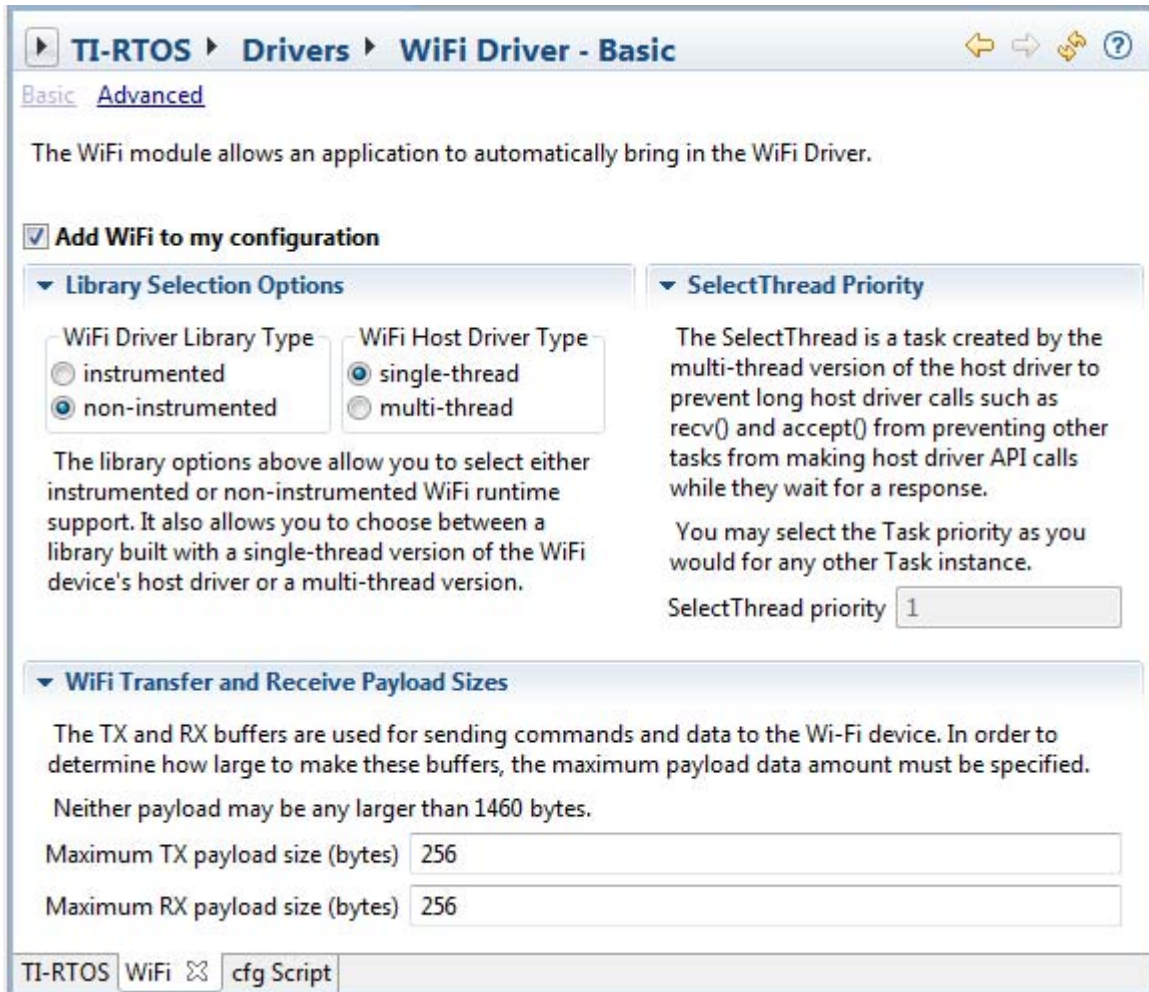

TI-RTOS Drivers - WiFi Driver - Basic

Basic Advanced

The WiFi module allows an application to automatically bring in the WiFi Driver.

☒ **Add WiFi to my configuration**

Library Selection Options

WiFi Driver Library Type

☐ instrumented

☒ non-instrumented

WiFi Host Driver Type

☒ single-thread

☐ multi-thread

The library options above allow you to select either instrumented or non-instrumented WiFi runtime support. It also allows you to choose between a library built with a single-thread version of the WiFi device's host driver or a multi-thread version.

SelectThread Priority

The SelectThread is a task created by the multi-thread version of the host driver to prevent long host driver calls such as `recv()` and `accept()` from preventing other tasks from making host driver API calls while they wait for a response.

You may select the Task priority as you would for any other Task instance.

SelectThread priority


WiFi Transfer and Receive Payload Sizes

The TX and RX buffers are used for sending commands and data to the Wi-Fi device. In order to determine how large to make these buffers, the maximum payload data amount must be specified.

Neither payload may be any larger than 1460 bytes.

Maximum TX payload size (bytes)

Maximum RX payload size (bytes)

TI-RTOS WiFi  **cfg Script**

By default, the WiFi library linked into the project is prebuilt with a version of the WiFi device's host driver that is only safe to call from a single task. You can choose to allow calling the WiFi driver from multiple threads. The multi-threaded version of host driver consumes more resources than the single-thread version.

If you choose the multi-threaded version, internal calls by the WiFi host driver are run from within a Task thread called SelectThread in order to allow other host driver API calls to run while the WiFi driver is waiting for a response. You can configure the priority of the SelectThread task; the default priority is 1, which is just above the priority of the Idle thread.

In addition to library type, the WiFi driver requires the maximum TX and RX data payload sizes to be configured statically. These payload sizes are used by the WiFi module to create appropriately-sized buffers for use by the WiFi driver and Wi-Fi device's host driver. They can be specified graphically as shown in the previous image or textually as follows:

```
WiFi.txPayloadSize = 1468;
WiFi.rxPayloadSize = 1468;
```

In order to use the WiFi driver, your configuration must also include the SPI module. See [Section 5.10, SPI Driver](#) for details.

5.17.2 Runtime Configuration

As the overview in [Section 5.2.2](#) indicates, the WiFi driver requires the application to initialize board-specific portions of the WiFi driver and provide the WiFi driver with the WiFi_config structure. A SPI_config structure is also required by the WiFi driver.

5.17.2.1 Board-Specific Configuration

The <board>.c files contain a <board>_initWiFi() function that must be called to initialize the board-specific WiFi peripheral settings. This function also calls WiFi_init() and SPI_init() to initialize the WiFi driver and its resources.

5.17.2.2 WiFi_config Structure

The <board>.c file also declares the WiFi_config structure. This structure must be provided to the WiFi driver. It must be initialized before the WiFi_init() function is called and cannot be changed afterwards.

For details about the individual fields of this structure, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

Note that the SPI_config structure must also be present and initialized before the WiFi driver may be used. See [Section 5.10, SPI Driver](#) for details.

5.17.3 APIs

In order to use the WiFi module APIs, the WiFi header file should be included in an application as follows:

```
#include <ti/drivers/WiFi.h>
```

The following are the WiFi APIs:

- **WiFi_init()** initializes the WiFi module.
- **WiFi_Params_init()** initializes the WiFi_Params struct to its defaults for use in calls to WiFi_open().
- **WiFi_open()** opens a WiFi instance.
- **WiFi_close()** closes a WiFi instance.

For details, see the Doxygen help by opening <tirtos_install>\docs\doxygen\html\index.html. (The CDOC help provides information about configuring the driver, but no information about the APIs.)

5.17.4 Usage

Before any APIs from the Wi-Fi device's host driver can be used, the application must open the WiFi driver. The `WiFi_open()` function configures the SPI driver, creates necessary interrupts, and registers a callback to inform the application of events that may occur on the Wi-Fi device. Once `WiFi_open()` has returned, host driver APIs may be used to start sending commands and data to the Wi-Fi device.

```
WiFi_Params params;
WiFi_Handle handle;

/* Open WiFi */
WiFi_Params_init(&params);
params.bitRate = 5000000; /* Set bit rate to 5 MHz */
handle = WiFi_open(Board_wifiIndex, Board_spiIndex, userCallback, &params);
if (handle == NULL) {
    System_abort("Error opening WiFi\n");
}

/* Host driver APIs such as socket() may now be called. */
```

The `WiFi_close()` function should be called when use of the host driver APIs is complete.

5.17.5 Instrumentation

The WiFi driver provides instrumentation data by both making Log calls and by sending data to the ROV tool in CCS.

5.17.5.1 Logging

The WiFi driver is instrumented with Log events that can be viewed with UIA and RTOS Analyzer. Diags masks can be turned on and off to provide granularity to the information that is logged. Use `Diags_USER1` to see general Log events. The WiFi driver logs the following actions using the `Log_print()` APIs provided by SYS/BIOS.

- WiFi device enabled or disabled
- Interrupts enabled or disabled
- `WiFi_open()` success or failure
- `WiFi_close()` success
- Send or receive buffer overrun
- Reads and writes to WiFi device completed
- `SPI_transfer()` failure

5.17.5.2 ROV

In the ROV tool, the following information about the WiFi driver is shown:

- Function table
- WiFi handle
- IRQ interrupt vector ID number
- SPI handle
- SPI state machine state

5.17.6 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this driver.

TI-RTOS Network Services

This chapter provides information about utilities provided by TI-RTOS.

Topic	Page
6.1 Overview	100
6.2 HTTP Client	100
6.3 Static Configuration	101
6.4 APIs	101
6.5 Examples	101

6.1 Overview

The TI-RTOS Network Services provides high-level networking communication protocols, such as the HTTP Client.

6.2 HTTP Client

The HyperText Transfer Protocol (HTTP), an ubiquitous application protocol that powers the web, has become the preferred communication protocol for device-to-device communication as well. To jumpstart the development of such connected embedded devices, TI-RTOS provides a lightweight client-side implementation of the IETF standard for HTTP/1.1 (RFC2616). This implementation includes support for the GET, POST, PUT, HEAD, OPTIONS, and DELETE methods, response codes, request and response bodies, and redirections (via 3xx response codes). At the IP level, both IPv4 and IPv6 transports are supported.

With security increasingly being a key concern, the standard security via SSL/TLS to make the session secure (HTTPS) and communication through proxies are included.

The SSL/TLS version of the HTTP Client is not provided by default; it requires building CyaSSL. The HTTP Client SSL/TLS is rebuilt along with the CyaSSL libraries. For more information about CyaSSL, read the [Using CyaSSL with TI-RTOS](#) topic on the TI wiki.

6.3 Static Configuration

To enable the HTTP Client, add the following statements to your application's *.cfg file.

```
var HttpCli = xdc.useModule('ti.net.http.HttpCli');
HttpCli.networkStack = HttpCli.NDK;
```

To enable the SSL/TLS layer, add the following statement after the above statements.

```
HttpCli.enableTLS = true;
```

6.4 APIs

In order to use the HTTP Client module APIs, the HTTP Client file should be included in an application as follows:

```
#include <ti/net/http/httpcli.h>
```

The following are the HTTP Client APIs:

- **HTTPCli_initSockAddr()** initializes the socket address structure for the given URI.
- **HTTPCli_construct()** creates a new instance object in the provided structure.
- **HTTPCli_create()** allocates and initializes a new instance object and returns its handle.
- **HTTPCli_connect()** opens a connection to a HTTP server.
- **HTTPCli_delete()** destroys a HTTP client instance and frees a previously allocated instance object.
- **HTTPCli_destruct()** destroys the HTTP client instance.
- **HTTPCli_setRequestFields()** sets an array of header fields to be sent for every HTTP request.
- **HTTPCli_setResponseFields()** sets the header fields to filter the response headers.
- **HTTPCli_sendRequest()** makes an HTTP request to the HTTP server.
- **HTTPCli_sendField()** sends a header field to the HTTP server.
- **HTTPCli_sendRequestBody()** sends the request message body to the HTTP server.
- **HTTPCli_getResponseStatus()** processes a response header from the HTTP server and returns status.
- **HTTPCli_getResponseField()** processes a response header from the HTTP server and returns field.
- **HTTPCli_readResponseBody()** reads the parsed response body data from the HTTP server.
- **HTTPCli_readRawResponseBody()** reads the raw response message body from the HTTP server.
- **HTTPCli_setSecureParams()** sets the secure communication parameters.
- **HTTPCli_setProxy()** sets the proxy address.

For details, see the Doxygen help by opening

```
<tirtos_install>\docs\networkservices\doxygen\html\index.html.
```

6.5 Examples

See the *TI-RTOS Getting Started Guide* for your device family for a list of examples that use this service.

TI-RTOS Utilities

This chapter provides information about utilities provided by TI-RTOS.

Topic	Page
7.1 Overview	102
7.2 UARTMon Module	102
7.3 UART Example Implementation	108

7.1 Overview


Utilities for use with TI-RTOS are provided in the `<tirtos_install>\packages\ti\tirtos\utils` directory. This chapter describes such modules.

7.2 UARTMon Module


The UARTMon module (`ti.tirtos.utils.UARTMon`) enables host communication with a target device using the target's UART. The target device can respond to requests to read and write memory at specified addresses. CCS includes features that allow you to leverage this utility to monitor the target device with the Debug view or with GUI Composer.

The GPIO example enables the UARTMon module. See the readme file in the example project for information about the example.

To use UARTMon in your application, open the project's *.cfg file with the XGCONF Configuration Editor. Select the TIRTOS module, and choose the **System Overview** to see the diagram below. Right-click on the **UART Monitor** module and select **Use UARTMon** from the drop-down to add it to your application. No extra user code is needed on the target to use this utility.

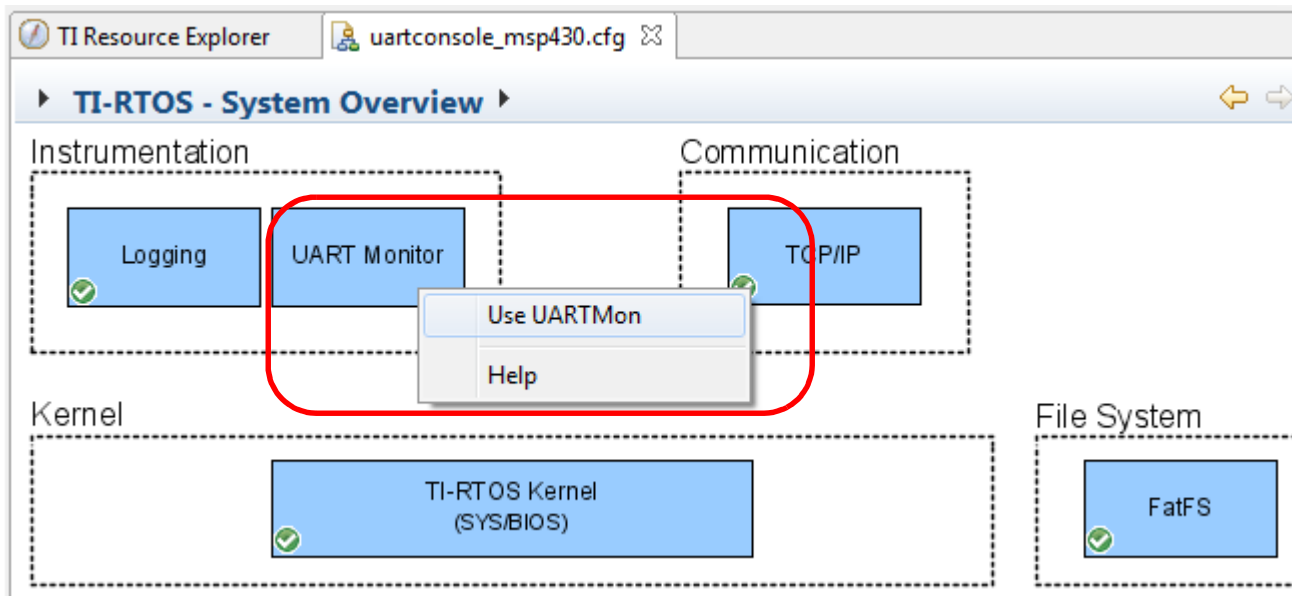


To configure this module, select **UARTMon** in the Outline pane to view its configuration page.

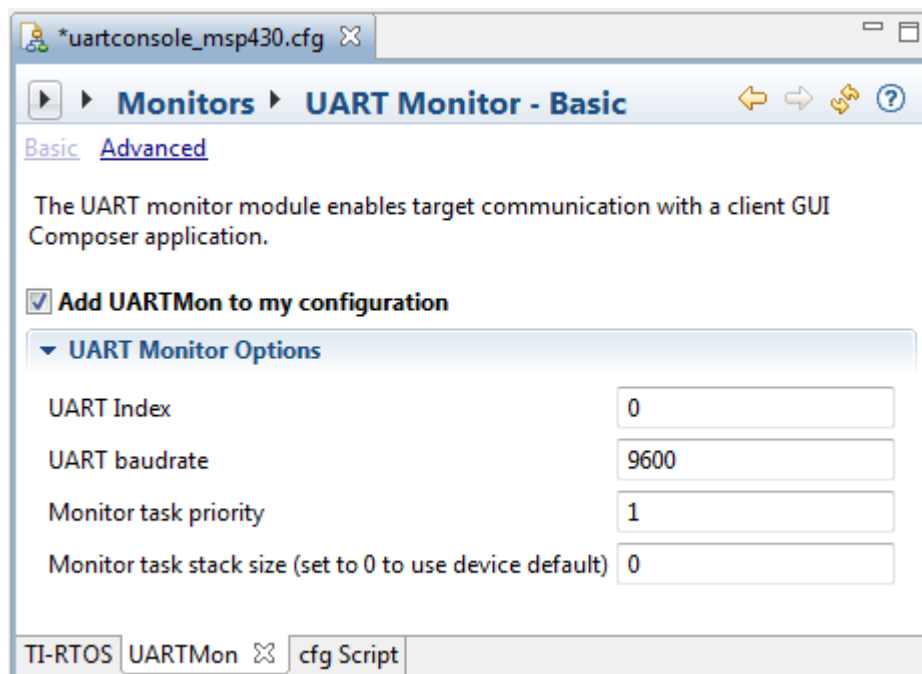

The UART Index property is the board index of the UART peripheral to be used as a monitor. In the Board.h file, Board_UART0 has an index of 0 and Board_UART1 has an index of 1. Other options that can be adjusted are the baud rate for the UART and the priority and stack size for the Task that performs the monitoring.

Once UARTMon is enabled in your configuration, a task called UARTMonTask is automatically created and can be seen among your task instances in XGCONF Configuration Editor as shown below. This task will also show up in ROV when you are debugging.

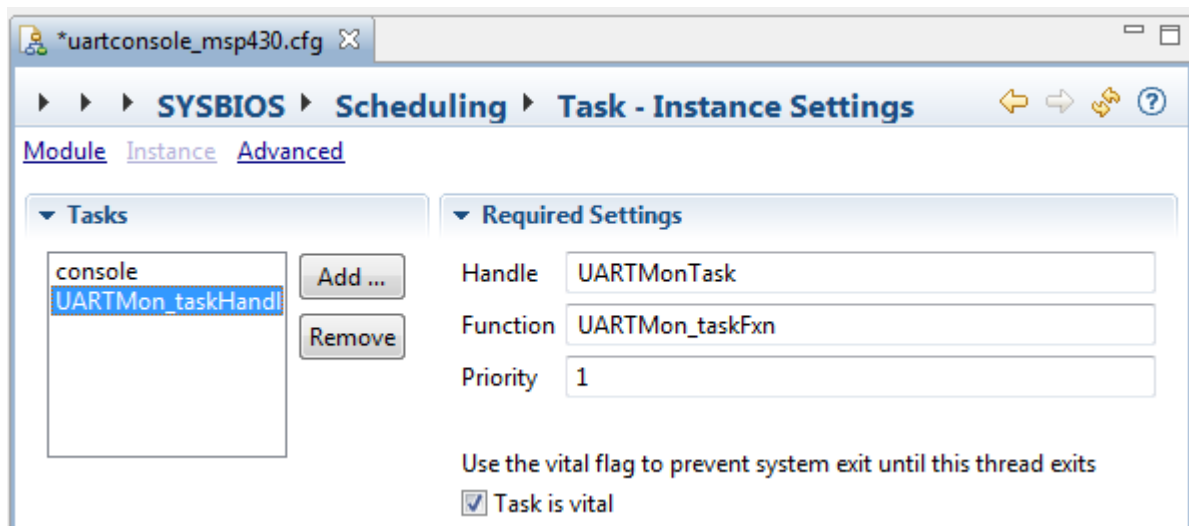

The UARTMon module has no C APIs.


The GPIO Interrupt examples for the MSP-EXP430F5529LP, Tiva EK-TM4C123GXL LaunchPad and Tiva DK-TM4C123G Evaluation Kit boards have UARTMon enabled.

7.2.1 UARTMon with CCS Tools

CCS supports UART communication alongside a JTAG connection. This section explains how to create the necessary target configuration and run the debug session.

Follow these steps to create a target configuration file that allows you to use a UART Monitor connection in addition to your existing JTAG connection:

1. Choose **File > New > Target Configuration File** from the CCS menus.
2. Type a filename for this configuration, and click **Finish**. The target configuration will be stored in a *.ccxml file.
3. In the Target Configuration window, select the main connection used to communicate with the device. For example, for Stellaris and Tiva boards, you might use the **Stellaris In-Circuit Debug Interface**.
4. To specify the device, begin typing the name of your device. The filter field shows only those devices that match what you type.
5. When you see your device, check the box next to it.
6. If the device you select has a UART on its board, you see the Alternate Communication area to the right of the device selection.

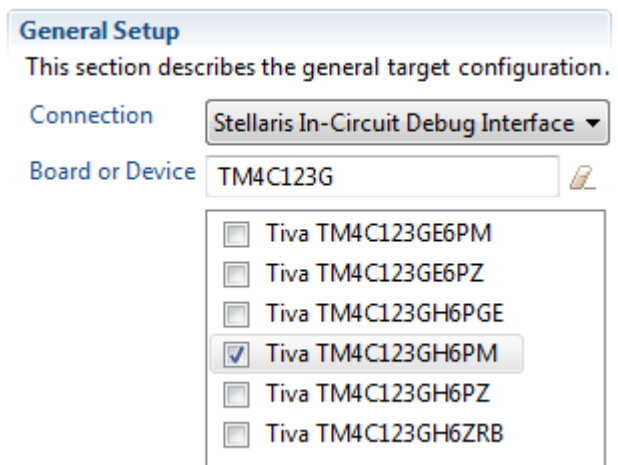

7. Make sure UART Communication is selected in the drop-down list. It is typically the only option.


Alternate Communication

Uart Communication ▼

To enable host side (i.e. PC) configuration necessary to facilitate data communication over UART, target application needs to include a monitor implementation. Please check example project in TI Resource Explorer. If your target application leverages TI-RTOS, then please check documentation on how to enable Uart Monitor module.

To add a port in the target application for Uart Monitor, click the Add button.

To remove a port in the target application for Uart Monitor, select the port to be removed and click the Remove button.

 ComPort

Add Cortex_M4 CPU

Delete COM Port


Baud Rate

Note: When using a driver based on the Tiva In-Circuit Debug Interface (ICDI) or an MSP430 driver, the COM Port must have the same number as one identified in the Windows Device manager. When using a XDSv2 USB Emulator, there is no such limitation; the emulator can create a new COM port.

8. Click the **Add** button and select the **ComPort** that is created.
9. Modify the **COM Port** and **Baud Rate** as needed.
10. Click **Save** to save your target configuration file.


To run and debug a program that has the UARTMon module enabled, follow these steps:

1. Build your application if you have not already done so.
2. Choose **Run > Debug Configurations** from the CCS menus.

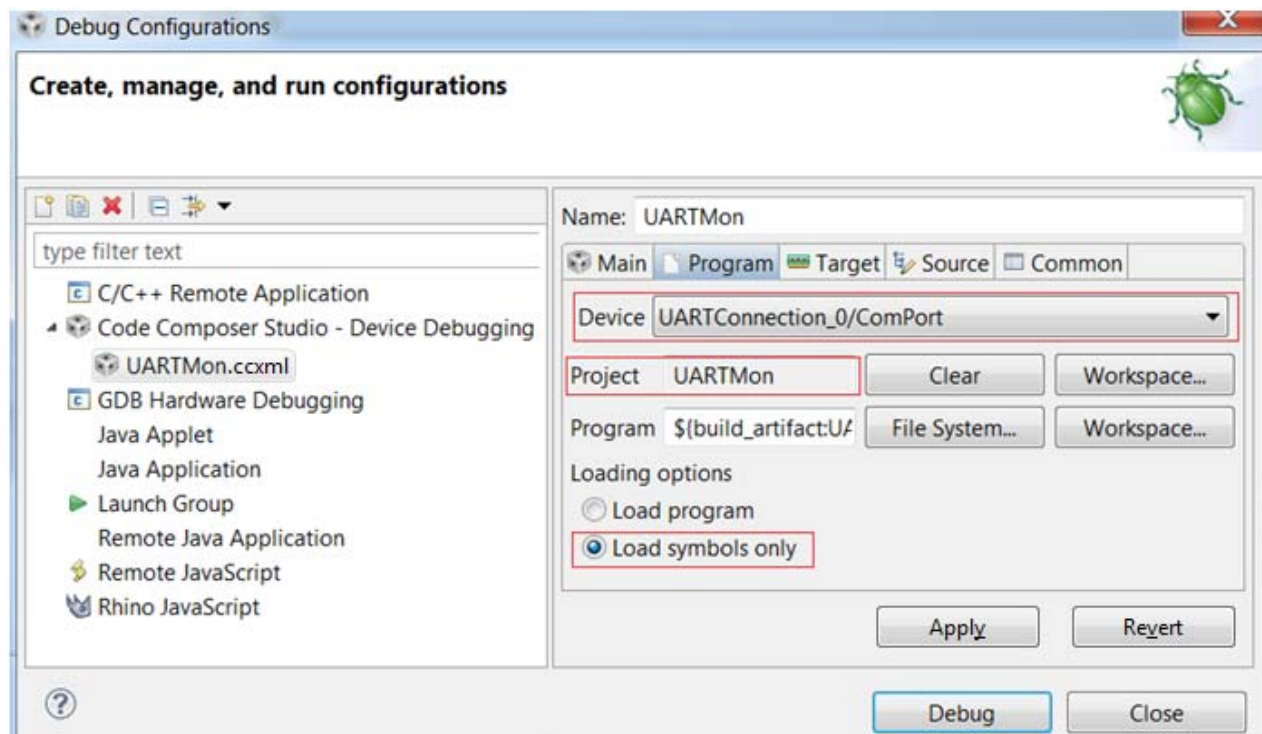


3. Expand the **Code Composer Studio - Device Debugging** category and select the target configuration you just created. (If your target configuration file is not listed under the Device Debugging category, close this dialog, launch the target configuration, and then re-open the Debug Configuration dialog to cause the new target configuration to be listed.)
4. In the right page of the dialog, choose the **Program** tab.
5. Make sure the interface or emulator used for non-UART communication is selected in the **Device** drop-down list. For example, for Tiva and Stellaris boards, you might be using the **Stellaris In-Circuit Debug Interface**.
6. If your project is not already selected for the non-UART interface or emulator, click **Workspace** in the **Project** row and select the project you want to debug. Click **OK**.
7. Select the **Load program** loading option for this device.
8. Move back up to the **Device** drop-down list. This time, select the **UARTConnection_0/ComPort** option in the **Device** drop-down list.
9. If your project is not already selected for the UART connection, click **Workspace** in the **Project** row and select the project you want to debug. Click **OK**.
10. Select the **Load symbols only** loading option for this device. If you skip this step, the debugger will attempt to program the device using the UART connection.
11. Click **Debug**.

12. In the Debug view, the UARTConnection is listed among the available connections and is marked as Running, meaning that the COM Port specified is now being listened to.

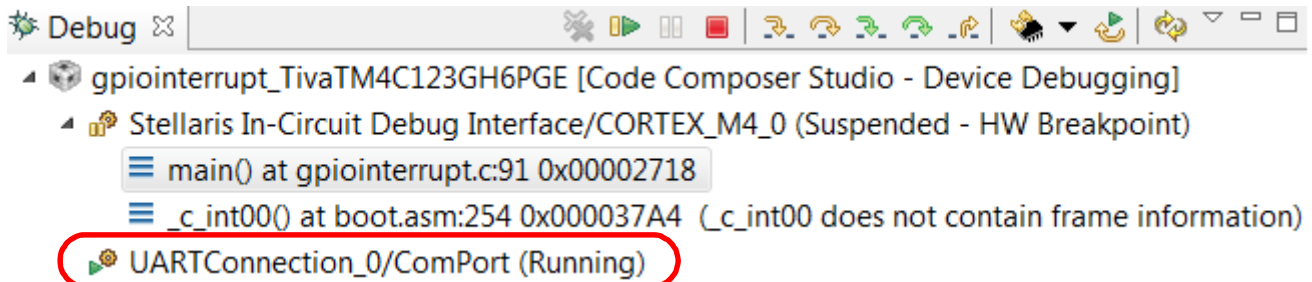

13. If you configured the project to enable UARTMon as described in the previous section, you can select the UART connection to watch variables and expressions the same way you would with an emulator.

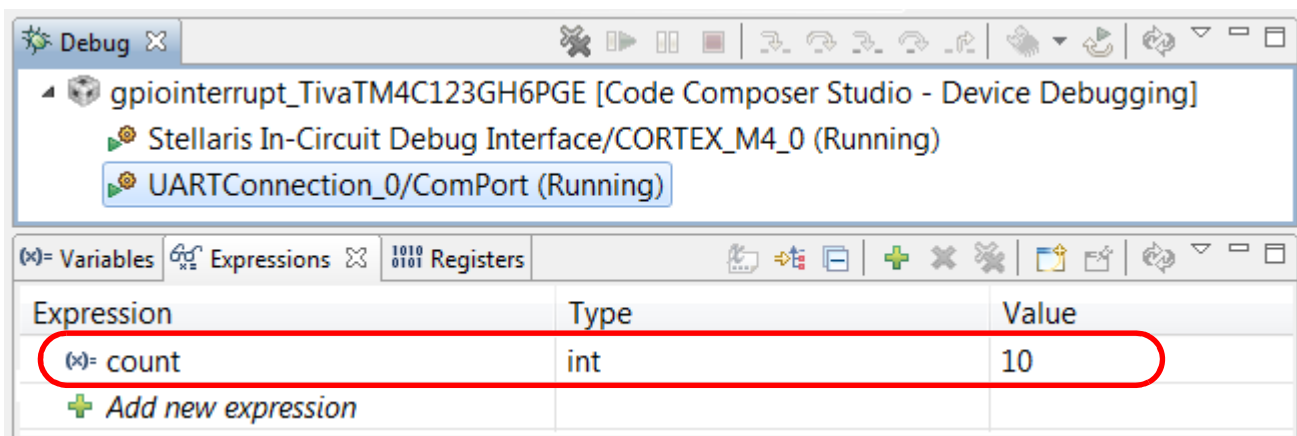

In this example, the count variable in the Expressions window is being watched using the UART Connection when that item is selected. If the Stellaris In-Circuit Debug Interface is selected, that connection is used to watch the same variable.

7.2.2 GUI Composer

GUI Composer is a tool in CCS for creating custom graphical user interfaces that interact with your target application. You can use it to create interface widgets that are bound to variables in the running target and update themselves accordingly. With UARTMon included in your application, GUI Composer can use the UART connection to interact with the running target.

For example, the count variable shown in the previous section can be bound to a dial widget in GUI Composer. When the value of the count variable changes on the target, the UART connection is used to change the reading on the dial. In addition, you can use the dial to set the value of the count variable on the target. To learn more about GUI Composer, see the [Texas Instruments Wiki](#).



7.3 UART Example Implementation

The `UARTUtils.c` file provides an example implementation using a UART. Three of the System functions are initialized (the others default to NULL) in the `uartconsole.cfg` file. The example uses the SysCallback module provided by XDCtools.

The configuration source is as follows. These statements create the same configuration as the graphical settings shown in Section 7.2:

```
var SysCallback = xdc.useModule('xdc.runtime.SysCallback');
SysCallback.abortFxn = "&UARTUtils_systemAbort";
SysCallback.putchFxn = "&UARTUtils_systemPutch";
SysCallback.readyFxn = "&UARTUtils_systemReady";
System.SupportProxy = SysCallback;
```

In `uartconsole.c`, `main()` does the following

1. Calls the board-specific `setupUART()` function to initialize the UART peripheral.
2. Calls `UARTUtils_systemInit()` as follows to initialize the UART 0 software. After the `UARTUtils_systemInit` function is called, any `System_printf` output will be directed to UART 0.

```
/* Send System_printf to the UART 0 also */
UARTUtils_systemInit(0);
```

Using the FatFs File System Drivers

This chapter provides an overview of FatFs and discusses how FatFs is interconnected and used with TI-RTOS and SYS/BIOS.

Topic	Page
8.1 Overview	109
8.2 FatFs, SYS/BIOS, and TI-RTOS	110
8.3 Using FatFs	111
8.4 Cautionary Notes.....	113

8.1 Overview

FatFs is a free, 3rd party, generic File Allocation Table (FAT) file system module designed for embedded systems. The module is available for download at http://elm-chan.org/fsw/ff/00index_e.html along with API documentation explaining how to use the module. Details about the FatFs API are not discussed here. Instead, this section gives a high-level explanation about how it is integrated with TI-RTOS and SYS/BIOS.

The FatFs drivers provided by TI-RTOS enable you to store data on removable storage media such as Secure Digital (SD) cards and USB flash drives (Mass Storage Class). Such storage may be a convenient way to transfer data between embedded devices and conventional PC workstations.

8.2 FatFs, SYS/BIOS, and TI-RTOS

SYS/BIOS provides a FatFS module. TI-RTOS extends this feature by supplying "FatFs" drivers that link into the SYS/BIOS FatFs implementation. The FatFS module in SYS/BIOS is aware of the multi-threaded environment and protects itself with OS primitives supplied by SYS/BIOS.

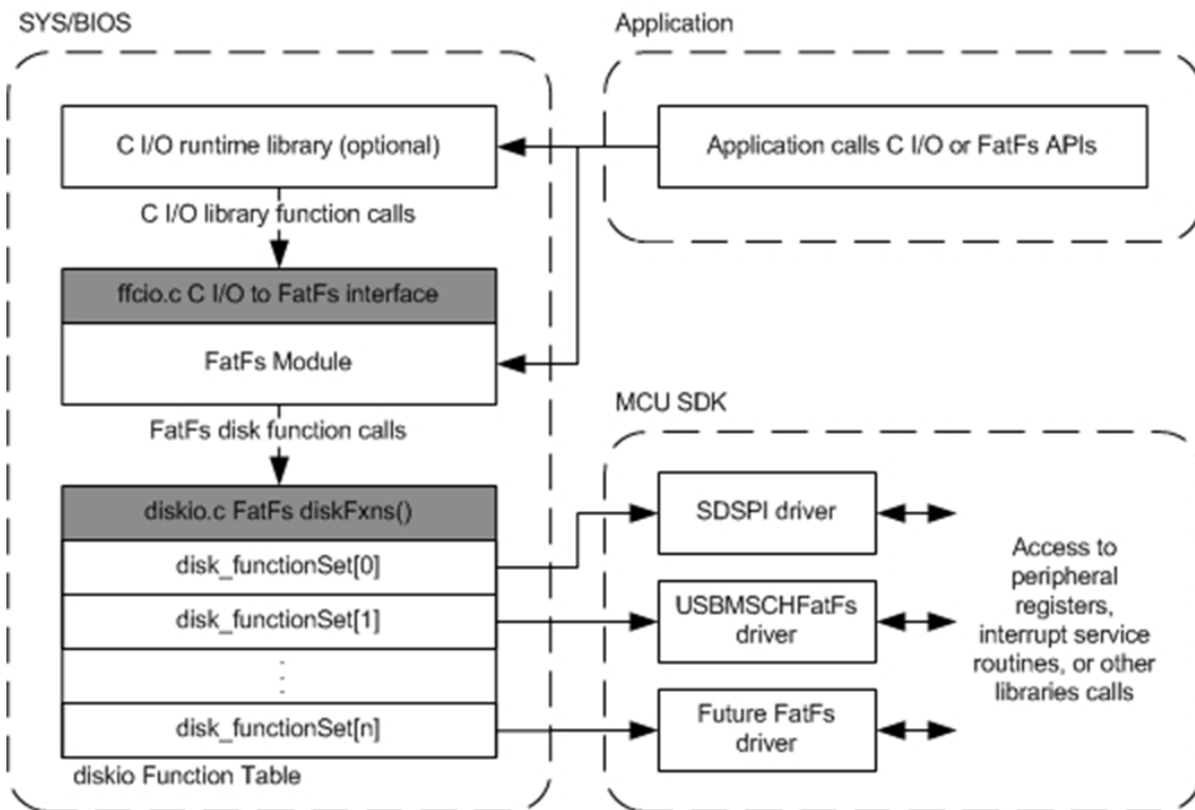


Figure 8-1 FatFs data flow

From the start of this data flow to the end, the components involved behave as follows:

- Application.** The top application layer calls the basic open, close, read, and write functions. Users who are familiar with FatFs can easily use the FatFs API, which is documented at the module's download site. Alternatively, SYS/BIOS also connects the C input/output (C I/O) runtime support library in TI's Code Generation Tools to FatFs. You can call familiar functions such as `fopen()`, `fclose()`, `fread()`, and `fwrite()`. Functionally, the C I/O interface and the FatFs APIs perform the same operations (with a few exceptions described in [Section 8.3](#)).
- FatFS module.** The next layer, the `ti.sysbios.fatfs.FatFS` module, is provided as part of SYS/BIOS. This module handles the details needed to manage and use the FAT file system, including the media's boot sector, FAT tables, root directories, and data regions. It also protects its functions in a multi-threaded environment. Internally, the FatFS module makes low-level data transfer requests to the Disk IO functions described on the [FatFs product web page](#). Implementations of this set of functions are called "FatFs drivers" in this document.
- diskIO Function table.** To allow products to provide multiple FatFs drivers, the SYS/BIOS FatFS module contains a simple driver table. You can use this to register multiple FatFs drivers at runtime. Based on the drive number passed through FatFs, the driver table routes FatFs calls to a particular FatFs driver.

- **FatFs drivers.** The last layer in [Figure 8-1](#) is the FatFs drivers. TI-RTOS comes with pre-built FatFs drivers that plug into the FatFS module provided by SYS/BIOS. A FatFs driver has no knowledge of the internal workings of FatFs. Its only task is to perform disk-specific operations such as initialization, reading, and writing. The FatFs driver performs read and write operations in data block units called sectors (commonly 512 bytes). Details about writing data to the device are left to the particular FatFs driver, which typically accesses a peripheral's hardware registers or uses a driver library.

8.3 Using FatFs

The subsections that follow show how to configure FatFs statically, how to prepare the FatFs drivers for use in your application, and how to open files. For details about performing other file-based actions once you have opened a file, see the FatFs APIs described on http://elm-chan.org/fsw/ff/00index_e.html in the "Application Interface" section or the standard C I/O functions.

The TI-RTOS F28M3x Demo example and all 3 FatFs File Copy examples use FatFs with the SDSPI driver. The FatSD USB Copy example uses the USBMSCHFatFs driver.

8.3.1 Static FatFS Module Configuration

To incorporate the SYS/BIOS FatFS module into an application, simply "use" this module in a configuration (.cfg) file. You can do this by searching the **Available Products** list in the XGCONF Configuration Editor for FatFS, selecting the SYS/BIOS FatFS module, and checking the **Enable FAT File System in My Application** box. Or, you can add the following statement to the .cfg file.

```
var FatFS = xdc.useModule('ti.sysbios.fatfs.FatFS');
```

Note: The name of the product and the drivers is "FatFs" with a lowercase "s". The name of the SYS/BIOS module is "FatFS" with an uppercase "S". If you are using a text editor to write configuration statements, be sure to use the uppercase "S". If you are using the XGCONF Configuration Editor to edit your configuration graphically, the correct capitalization is used automatically.

By default, the prefix string used in C I/O fopen() calls that uses this module is "fat" and no RAM disk is created. You can change these defaults by modifying the FatFS module properties.

For example, you can change the C I/O prefix string used in fopen() calls by adding this line to the .cfg file:

```
FatFS.fatfsPrefix = "newPrefix";
```

The application would then need to use the prefix in C I/O fopen() calls as follows:

```
src = fopen("newPrefix:0:signal.dat", "w");
```

See the online help for the module for more details about FatFS configuration.

You will also need to configure the FatFs driver or drivers you want to use. See [Section 5.9, SDSPI Driver](#) and [Section 5.13, USBMSCHFatFs Driver](#) for details.

8.3.2 Defining Drive Numbers

Calls to the `open()` functions of individual FatFs drivers—for example, `SDSPI_open()`—require a drive number argument. Calls to the C I/O `fopen()` function and the FatFs APIs also use the drive number in the string that specifies the file path. The following C code defines driver numbers to be used in such functions:

```
/* Drive number used for FatFs */
#define SD_DRIVE_NUM      0
#define USB_DRIVE_NUM     1
```

Here are some statements from the FatSD USB Copy example that use these drive number definitions. Note that `STR(SD_DRIVE_NUM)` uses a MACRO that expands `SD_DRIVE_NUM` to 0.

```
SDSPI_Handle sdspiHandle;
SDSPI_Params sdspiParams;
FILE *src;
const Char  inputfilesd[] = "fat:"STR(SD_DRIVE_NUM)":input.txt";

/* Mount and register the SD Card */
SDSPI_Params_init(&sdspiParams);
sdspiHandle = SDSPI_open(Board_SDSPI0, SD_DRIVE_NUM, &sdspiParams);

/* Open the source file */
src = fopen(inputfilesd, "r");
```

8.3.3 Preparing FatFs Drivers

In order to use a FatFs driver in an application, you must do the following:

- **Include the header file for the driver.** For example:

```
#include <ti/drivers/SDSPI.h>
```

- **Run the initialization function for the driver.** All drivers have `init()` functions—for example, `SDSPI_init()`—that need to be run in order to set up the hardware used by the driver. Typically, these functions are run from `main()`. In the TI-RTOS examples, a board-specific initialization function for the driver is run instead of running the driver's initialization function directly. For example:

```
Board_initSDSPI();
```

- **Open the driver.** The application must open the driver before the FatFs can access the drive and its FAT file system. Similarly, once the drive has been closed, no other FatFs calls shall be made. All drivers have `open()` functions—for example, `SDSPI_open()`—that require a drive number to be passed in as an argument. For example:

```
sdspiHandle = SDSPI_open(Board_SDSPI0, SD_DRIVE_NUM, NULL);
```

See [Section 5.9, *SDSPI Driver*](#) and [Section 5.13, *USBMSCHFatFs Driver*](#) for details about the FatFs driver APIs.

8.3.4 Opening Files Using FatFs APIs

Details on the FatFs APIs can be found at http://elm-chan.org/fsw/ff/00index_e.html in the "Application Interface" section.

The drive number needs to be included as a prefix in the filename string when you call `f_open()` to open a file. The drive number used in this string needs to match the drive number used to open the FatFs driver. For example:

```
res = f_open(&fsrc, "SD_DRIVE_NUM:source.dat", FA_OPEN_EXISTING | FA_READ);  
res = f_open(&fdst, "USB_DRIVE_NUM:destination.dat", FA_CREATE_ALWAYS | FA_WRITE);
```

A number of other FatFs APIs require a path string that should include the drive number. For example, `f_opendir()`, `f_mkdir()`, `f_unlink()`, and `f_chmod()`.

Although FatFs supports up to 10 (0-9) drive numbers, the SYS/BIOS diskIO function table supports only up to 4 (0-3) drives. You can modify this default by changing the definition of `_VOLUMES` in the `ffconf.h` file in the SYS/BIOS FatFS module. You will then need to rebuild SYS/BIOS as described in the *SYS/BIOS User's Guide* (SPRUEX3).

It is important to use either the FatFs APIs or the C I/O APIs for file operations. Mixing the APIs in the same application can have unforeseen consequences.

8.3.5 Opening Files Using C I/O APIs

The C input/output runtime implementation for FatFs works similarly to the FatFs API. However, you must add the file name prefix configured for the FatFS module ("fat" by default) and the logical drive number as prefixes to the filename. The file name prefix is extracted from the filename before it gets passed to the FatFs API.

In this example, the default file name prefix is used and the drive number is 0:

```
fopen("fat:0:input.txt", "r");
```

It is important to use either the FatFs APIs or the C I/O APIs for file operations. Mixing the APIs in the same application can have unforeseen consequences.

8.4 Cautionary Notes

FatFs drivers perform data block transfers to and from physical media. Depending on the FatFs driver, writing to and reading from the disk could prevent lower-priority tasks from running during that time. If the FatFs driver blocks for the entire transfer time, only higher-priority SYS/BIOS Tasks, Swis or Hwis can interrupt the Task making FatFs calls. In such cases, the application developer should consider how often and how much data needs to be read from or written to the media.

By default the SYS/BIOS FatFS module keeps a complete sector buffered for each opened file. While this requires additional RAM, it helps mitigate frequent disk operations when operating on more than one file simultaneously.

The SYS/BIOS FatFS implementation allows up to four unique volumes (or drives) to be registered and mounted.

Rebuilding TI-RTOS

This chapter describes how and when to rebuild TI-RTOS and components of TI-RTOS.

Topic		Page
9.1	Rebuilding TI-RTOS	115
9.2	Rebuilding MSPWare's driverlib for TI-RTOS and Its Drivers	117
9.3	Rebuilding Individual Components	118

9.1 Rebuilding TI-RTOS

In most cases, you will not need to rebuild the TI-RTOS libraries. Pre-built libraries for CCS, IAR, and GCC are provided when you install TI-RTOS. However, if you want to change the compiler or linker options, you may need to rebuild the libraries.

9.1.1 Building TI-RTOS for CCS

By default, TI-RTOS is ready to be rebuilt for use with CCS from a top-level make file called `tirtos.mak`.

If TI-RTOS is installed in `c:\ti`, you can print a list of available make rules by running the following command from a command shell window:

```
% cd <tirtos_install>
% ../<xdctools>/gmake -f tirtos.mak
```

To rebuild the TI-RTOS drivers and several of its included components (SYS/BIOS, IPC, NDK, and UIA), for example, you can run the following:

```
% ../<xdctools>/gmake -f tirtos.mak all
```

If you installed CCS and TI-RTOS in a location other than `c:\ti`, you can edit the definition of `DEFAULT_INSTALLATION_DIR` in `tirtos.mak` to point to this location. Note that all other product installation locations are defined relative to the `DEFAULT_INSTALLATION_DIR`, but you can adjust them as necessary. You can also pass in installation locations as necessary. For example to use a different location for XDCtools, do the following:

```
% ../<xdctools>/gmake -f tirtos.mak XDCTOOLS_INSTALLATION_DIR=c:/ti/xdctools_version
```

The following list (from TI-RTOS for MSP43x for example) shows items you can change and sample values. The `tirtos.mak` file differs for each device family. The version numbers in your copy of the `tirtos.mak` file will match the versions of the components installed with TI-RTOS.

```
CCS_BUILD ?= true
DEFAULT_INSTALLATION_DIR := c:/ti
ti.targets.msp430.elf.MSP430X ?=$(DEFAULT_INSTALLATION_DIR)/ccsv6/tools/compiler/msp430_4.3.1

XDCTOOLS_INSTALLATION_DIR ?= $(DEFAULT_INSTALLATION_DIR)/xdctools_3_31_01_07_core
export XDCTOOLS_JAVA_HOME    ?= $(DEFAULT_INSTALLATION_DIR)/ccsv6/eclipse/jre

TIRTOS_INSTALLATION_DIR    := $(DEFAULT_INSTALLATION_DIR)/tirtos_msp43x_2_00_00_21
BIOS_INSTALLATION_DIR      ?= $(TIRTOS_INSTALLATION_DIR)/products/bios_6_41_00_42
UIA_INSTALLATION_DIR       ?= $(TIRTOS_INSTALLATION_DIR)/products/uia_2_00_00_27
MSPWARE_INSTALLATION_DIR   ?=$(TIRTOS_INSTALLATION_DIR)/products/MSPWare_2_00_01_03a
MSP430HEADERS              ?= $(DEFAULT_INSTALLATION_DIR)/ccsv6/ccs_base/msp430/include
MSP432HEADERS              ?= $(DEFAULT_INSTALLATION_DIR)/ccsv6/ccs_base/arm/include
```

If you are rebuilding on Linux, change all of the Windows paths in the `tirtos.mak` file to Linux paths.

The `CCS_BUILD?=true` flag in the `tirtos.mak` file causes TI-RTOS to be rebuilt for CCS by default. Other supported tool-chains (such as IAR) also have flags that can be turned on to build for them as well. If these are not needed, keep them turned off for a faster build.

9.1.2 Building TI-RTOS for IAR

By default, TI-RTOS is not rebuilt for use with IAR when you run the top-level `tirtos.mak` make file. To rebuild TI-RTOS for IAR Embedded Workbench, follow these steps:

1. Edit the `tirtos.mak` file and find the following lines:

```
IAR_BUILD ?= false
IAR_COMPILER_INSTALLATION_DIR ?= C:/Program Files (x86)/IAR Systems/Embedded Workbench 6.5
```

2. Set the `IAR_BUILD` flag to true in `tirtos.mak`. Alternately, you can pass a different value on the make command line as follows:

```
% ../<xdctools>/gmake -f tirtos.mak all IAR_BUILD=true
```

3. Change the IAR compiler installation directory to match the location where you installed IAR. Alternately, you can pass a different value on the make command line as follows:

```
% ../<xdctools>/gmake -f tirtos.mak all IAR_COMPILER_INSTALLATION_DIR=YOUR_PATH
```

4. Modify the installation locations as needed for the components of TI-RTOS (SYS/BIOS, IPC, NDK and UIA) that you want to rebuild for IAR.

For a faster build, you can turn off TI-RTOS building for CCS by setting the `CCS_BUILD` flag to false.

9.1.3 Building TI-RTOS for GCC

By default, TI-RTOS is not rebuilt for GCC when you run the top-level `tirtos.mak` make file. The GCC code generator used is the Linaro distribution `gcc-arm-none-eabi-4_7-2012q4` version that ships with CCS. To rebuild TI-RTOS with GCC, follow these steps:

1. Edit the `tirtos.mak` file and find the following lines:

```
GCC_BUILD ?= false
GCC_INSTALLATION_DIR := $(DEFAULT_INSTALLATION_DIR)/ccsv6/tools/compiler/gcc-arm-none-eabi-4_7-2013q3
```

2. Set the above `GCC_BUILD` flag to true in `tirtos.mak`. Alternately, you can pass a value on the make command line as follows:

```
% ../<xdctools>/gmake -f tirtos.mak all GCC_BUILD=true
```

3. If you installed CCS in a location other than `c:\ti`, change the path for `GCC_INSTALLATION_DIR` to specify the correct location. Alternately, you can pass a different value on the make command line as follows:

```
% ../<xdctools>/gmake -f tirtos.mak all GCC_INSTALLATION_DIR=YOUR_PATH
```

4. Modify the installation locations as needed for the components of TI-RTOS (SYS/BIOS, IPC, NDK and UIA) that you want to rebuild for GCC.

For a faster build, you can turn off TI-RTOS building for CCS and IAR by setting the `CCS_BUILD` and `IAR_BUILD` flags to false.

9.1.4 Rebuilding the TI-RTOS Drivers with the Debug Profile

By default, the TI-RTOS driver libraries are rebuilt with the **release** profile. The release profile sets compiler flags to optimize libraries for performance. During the compilation process, this causes the compiler to perform several operations to achieve better performance, one of which is to reorganize code. Reorganized code is difficult to debug when stepping through code.

If you would like to step through driver library code during debugging, you can rebuild the driver libraries without optimization by following these steps:

1. Open the `tirtos.mak` file and find lines similar to the following. (This example is from TI-RTOS for SimpleLink.)

```
XDCARGS= \  
    profile='release' \  
    CCWareDir='${CCWARE_INSTALLATION_DIR}' \  

```

2. Change the profile parameter to `'debug'`:

```
XDCARGS= \  
    profile='debug' \  
    CCWareDir='${CCWARE_INSTALLATION_DIR}' \  

```

3. Rebuild the TI-RTOS drivers as follows:

```
% cd <tirtos_install>  
% ../<xdctools>/gmake -f tirtos.mak clean-drivers drivers
```

Your applications must be rebuilt to use the non-optimized TI-RTOS driver library. Once debugging is complete, repeat the steps above setting `profile='release'` to return to the optimized library.

9.2 Rebuilding MSPWare's driverlib for TI-RTOS and Its Drivers

The TI-RTOS drivers for MSP43x depend on MSPWare's driverlib as an abstraction layer to access peripheral registers. This level of abstraction promotes code reusability and scales well for TI-RTOS drivers, because device specifics are stored in driverlib.

To reduce the build time of CCS projects and to be consistent with other TI driverlib components, MSPWare's driverlib source files have been compiled into a library in the TI-RTOS installation.

TI-RTOS allows you to build for either MSP430, MSP432, or both. Set one of the following definitions in the `tirtos.mak` file to false if you do not want to build for that target.

```
MSP430_BUILD ?= true  
MSP432_BUILD ?= true
```

TI-RTOS provides prebuilt TI-RTOS drivers and prebuilt MSPWare driverlib libraries only for the MSP430F5529, MSP430FR5969, and MSP432P401R. Libraries for other MSP43x devices can be added by editing the `tirtos.mak` file. To build TI-RTOS drivers for other devices, add those devices to

the MSP430DEVLIST or MSP432DEVLIST variable (with spaces between the devices in the list). For example, the following modification to the `tirtos.mak` file causes MSPWare's driverlib and TI-RTOS drivers to be built for the MSP430F5529, MSP430F6779, and MSP432P401R.

```
# To build TI-RTOS driver libraries for other MSP430 devices; simply append the
# device names to MSP430DEVLIST (separated by whitespaces)
# MSP430DEVLIST := \
#     MSP430F5529 \
#     MSP430F5527 \
#     MSP430F6459 \
#     etc...

MSP430DEVLIST := MSP430F5529 MSP430F6779
...
MSP432DEVLIST := MSP432P401R
```

After updating the necessary variables, rebuild the TI-RTOS drivers as follows:

```
% cd <tirtos_install>
% ../<xdctools>/gmake -f tirtos.mak drivers
```

9.3 Rebuilding Individual Components

The MWare and TivaWare rebuilding mechanism is substantially different from the TI-RTOS rebuilding mechanism. See the documentation for these products for details.

Driver libraries in the versions of MWare and TivaWare distributed with TI-RTOS have been rebuilt. For details, see the TI-RTOS.README file in the top-level folder of the MWare and TivaWare components within the TI-RTOS installation.

Memory Usage with TI-RTOS

This chapter provides links to information about memory usage.

Topic	Page
10.1 Memory Footprint Reduction	119
10.2 Networking Stack Memory Usage	131

10.1 Memory Footprint Reduction

Many configuration parameters impact the size (both code and data) of a TI-RTOS application. This section discusses the approaches TI-RTOS takes to minimize the size of its examples. For a more detailed discussion on how to reduce the size of the kernel, please refer to the *SYS/BIOS User's Guide* ([SPRUEX3](#)) appendix on "Minimizing the Application Footprint."

The TI-RTOS examples are divided into the following types of examples:

- **Peripheral Examples.** These examples are designed to demonstrate the usage of a peripheral or feature. These examples are designed to have a small footprint and make use of many of the strategies described in this section.
- **Demo Examples.** The demo examples are "kitchen-sink" examples; that is, they use a wide variety of features. There is no overall design of the memory use strategy for these demos. Decisions were made to allow the program to fit into the available memory of the target device, while still showcasing multiple peripherals and features.
- **Empty Examples.** Two different "Empty" examples can be created with the New Project Wizard if you are using CCS. These examples are intended as a starting point for new development. The two different types of "Empty" projects are:
 - **Empty (Minimal) Project:** Disables kernel features and debug capabilities to minimize the footprint.
 - **Empty Project:** Enables more kernel features and debug capabilities at the cost of a larger footprint.


The footprint reduction approaches described in this section are generally not used in the "Empty" examples, but are used in the "Empty (Minimal)" examples. The exceptions are that the SysMin module and the custom BIOS library (with asserts and logging enabled) are used in the Empty examples. Any other configuration changes described here can be made to the Empty examples if needed.

The peripheral examples (available in TI Resource Explorer in CCS) are designed to have a small footprint. The UART examples are exceptions to this rule, because along with UART functionality they are intended to show various approaches for debugging an application.

The following configuration changes help reduce both the data and code footprint in the TI-RTOS peripheral examples. You may want to use these strategies in your own applications.

For most configuration changes, both the graphical (XGCONF) and script-based methods of modifying the configuration are shown. Use whichever method you prefer.


Non-Instrumented TI-RTOS drivers: You can use either an instrumented or non-instrumented TI-RTOS driver library. The instrumented library contains trace statements (Log_printN() calls) and assert checking (Assert_isTrue() calls). The non-instrumented library does not contain these statements. All the peripheral examples use the non-instrumented TI-RTOS driver library.

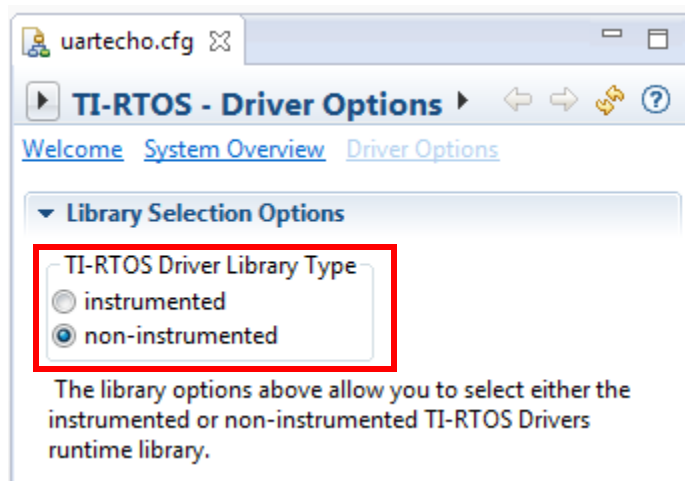

An example's *.cfg file contains statements like the following for the driver library:

```
var TIRTOS = xdc.useModule('ti.tirtos.TIRTOS');
TIRTOS.libType = TIRTOS.LibType_Instrumented;
```



BIOS Custom Library: The kernel comes with both instrumented and non-instrumented libraries. In addition, it can perform a custom build to include only functionality required by the application. The TI-RTOS peripheral examples use the custom build. They also disable the kernel's logging and assert checking. See the "Compiler and Linker Optimization" section of the *SYS/BIOS User's Guide* for details.

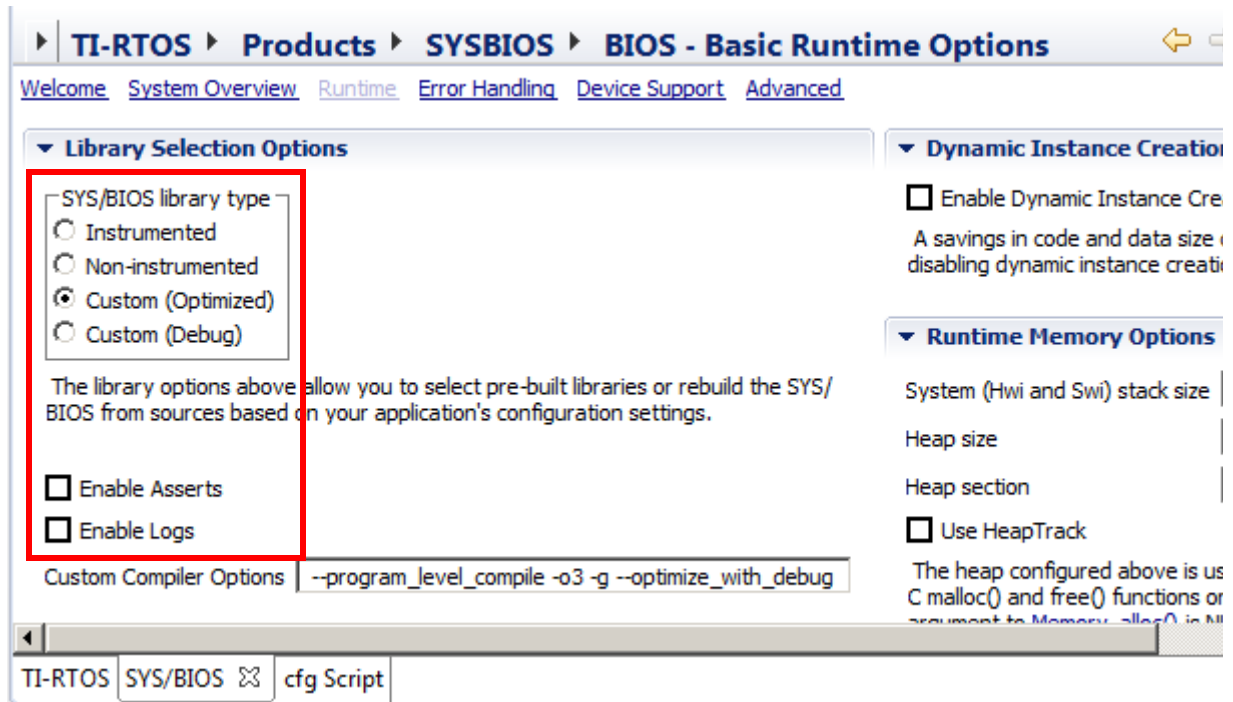

If you edit configuration scripts directly, these statements have the same effect as the XGCONF settings above:

```
var BIOS = xdc.useModule('ti.sysbios.BIOS');
BIOS.libType = BIOS.LibType_Custom;
BIOS.logsEnabled = false;
BIOS.assertsEnabled = false;
```

Minimal System Provider: The System module allows users to plug in different System Support Proxies. Each proxy has pros and cons. See [Section 3.2.1, Output with printf\(\)](#), page 3-29 for details about the available System module proxies. Most TI-RTOS peripheral examples use the smaller SysMin proxy, which uses an internal buffer to store System output. The size of the buffer is also reduced.

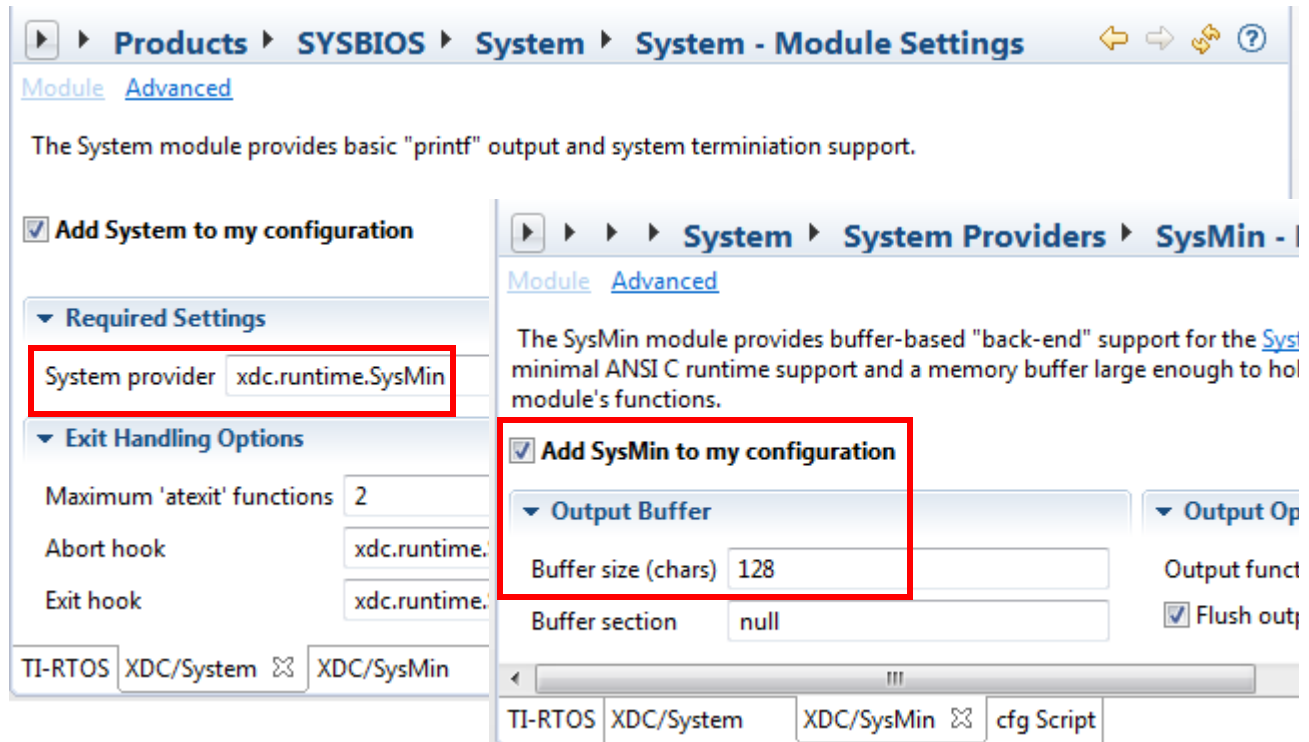

If you edit configuration scripts directly, these statements have the same effect as the XGCONF settings above:


```
var System = xdc.useModule('xdc.runtime.System');
var SysMin = xdc.useModule('xdc.runtime.SysMin');
System.SupportProxy = SysMin;
SysMin.bufSize = 128;
```

Note: The System output can be viewed in the RTOS Object Viewer (ROV) in CCS.

System Stack Size: The Hwi and Swi threads share a single System stack. Each device has a default System stack size, which is set by the Program.stack property. Several TI-RTOS examples (especially the MSP43x examples) do not use the default value. Instead, the Program.stack property is set in the example's .cfg file.

Note: The non-MSP43x examples do not reduce stack size as aggressively as the MSP43x examples. This is because the non-MSP43x example's source code (*.c and *.cfg) are generic and must run on several different devices.

To determine the best value for this property, each example was run with the default Program.stack setting. After an example ran under all conditions, the ROV in CCS was used to examine Hwi usage. The "Module" tab for Hwi objects shows the stack's peak usage. The example's Program.stack was set to a size higher than the peak but lower than the default. For example:

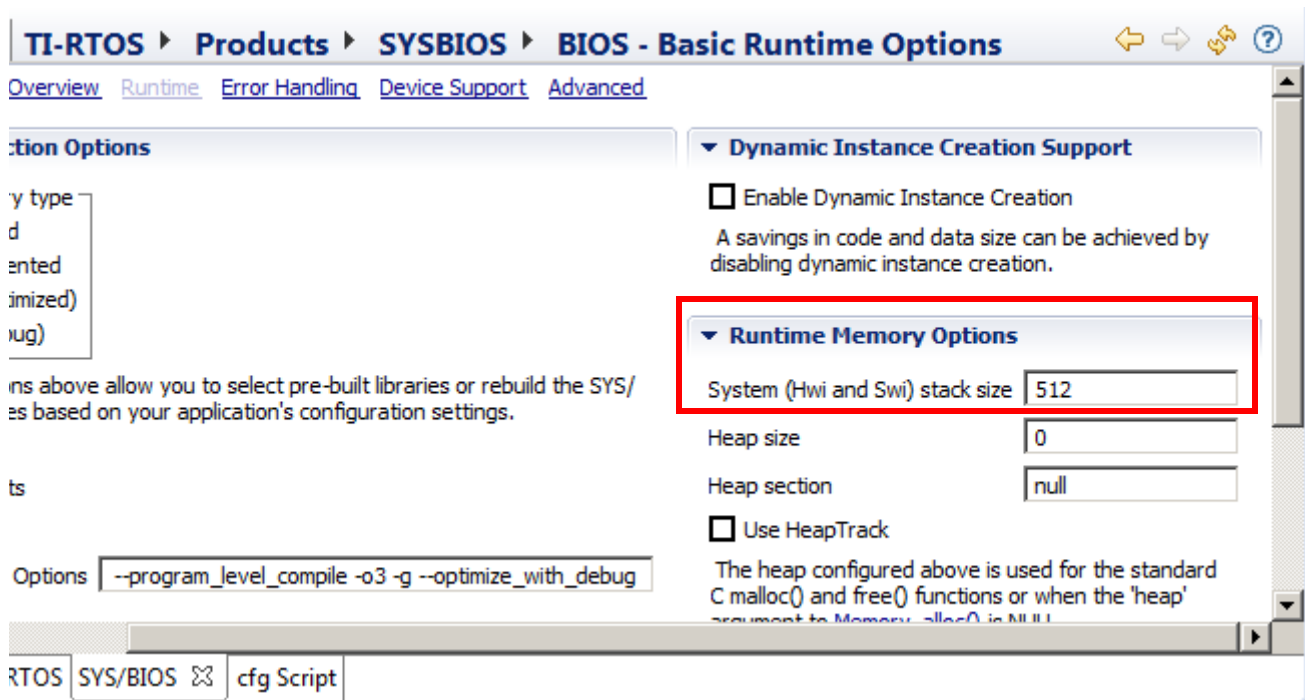


If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
Program.stack = 0x200;
```

Static Tasks: The majority of the examples statically create their Tasks in their *.cfg files. This reduces the code footprint because code is not needed for functions such Task_create().

To statically create a task, go to the **Instance** panel for configuring the Task module and click **Add**.

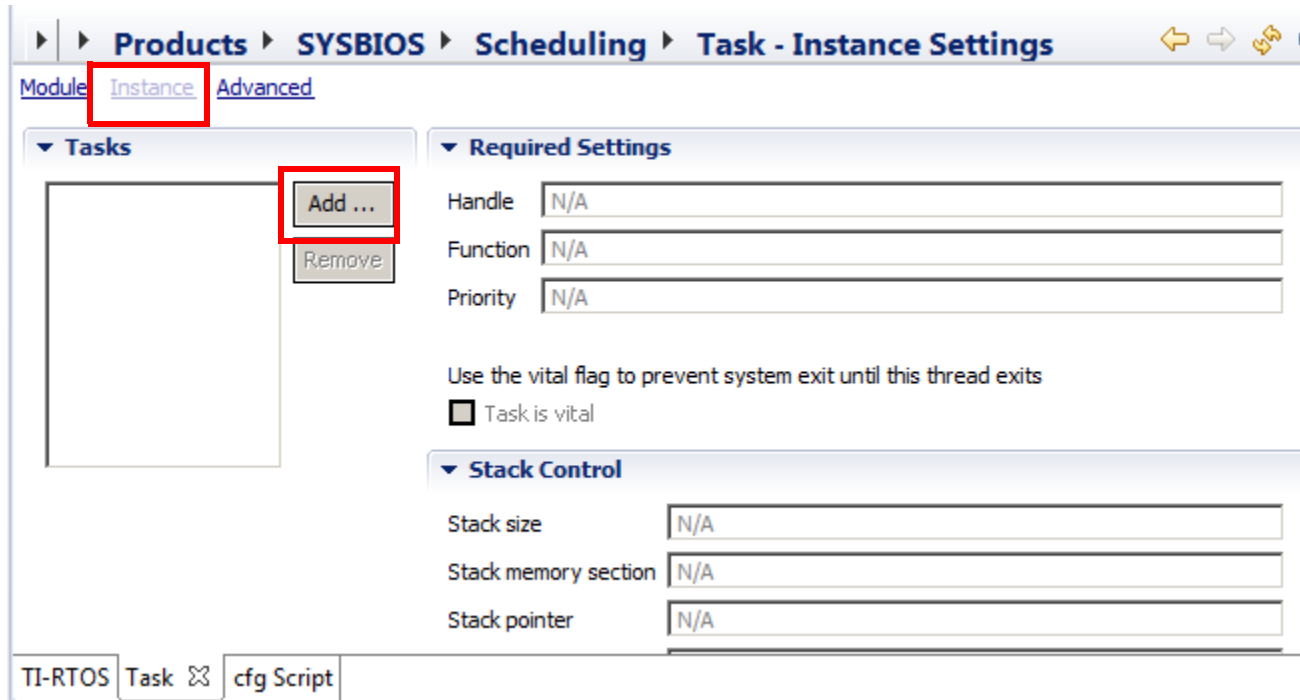


An example's *.cfg file contains statements like the following to statically create an object used by the example:

```
var taskParams = new Task.Params();
taskParams.instance.name = "taskFxn";
taskParams.stackSize = 0x300;
Program.global.task = Task.create("&taskFxn", task0Params);
```

Task Stack Size: Each Task thread in the application has its own stack. Each device has a default Task stack size. Many examples (especially the MSP43x examples) do not use the default value. Instead, the Task.stackSize property is set in the example's *.cfg file.

Note: The non-MSP43x examples do not reduce stack size as aggressively as the MSP43x examples. This is because the non-MSP43x example's source code (*.c and *.cfg) are generic and must run on several different devices.

To determine the best value for this property, each example was run with the default stackSize. After letting a example run under all conditions, the ROV in CCS was used to examine Task usage. The "Detailed" tab for Task objects shows the stack peak usage. The stackSize for each Task was set to a size higher than the peak but lower than the default. For example:

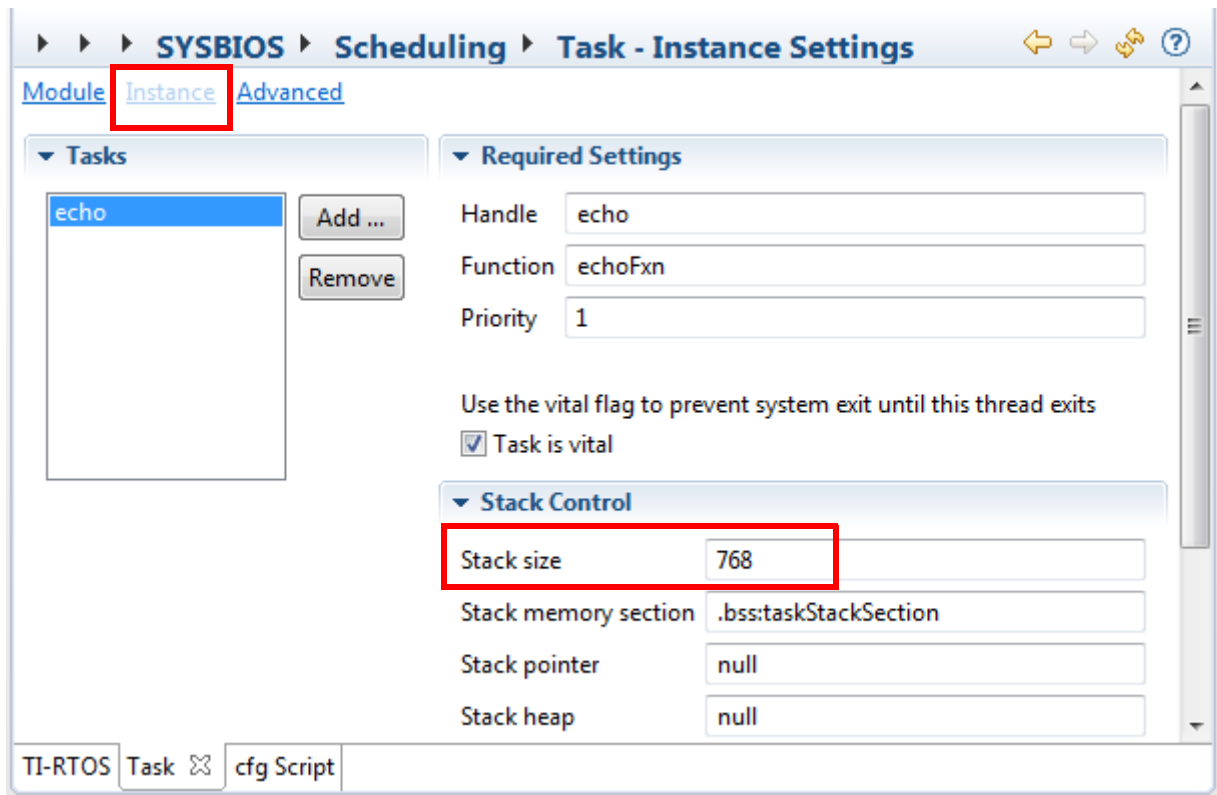


If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
taskParams.stackSize = 0x300;
```

Memory allocation: None of the TI-RTOS drivers allocate memory, except for the EMAC and USBMSCHFatFs drivers. The examples do not allocate memory either, except for the networking (wired and wireless) and USB examples. The examples statically create all kernel objects (such as Tasks and Semaphores) in the *.cfg file. This is done because run-time creation of kernel object allocates memory dynamically. Of course, for real applications, run-time object creation might be required.

Note that the networking stack allocates memory from a heap, so this approach cannot be used if the networking stack is used.

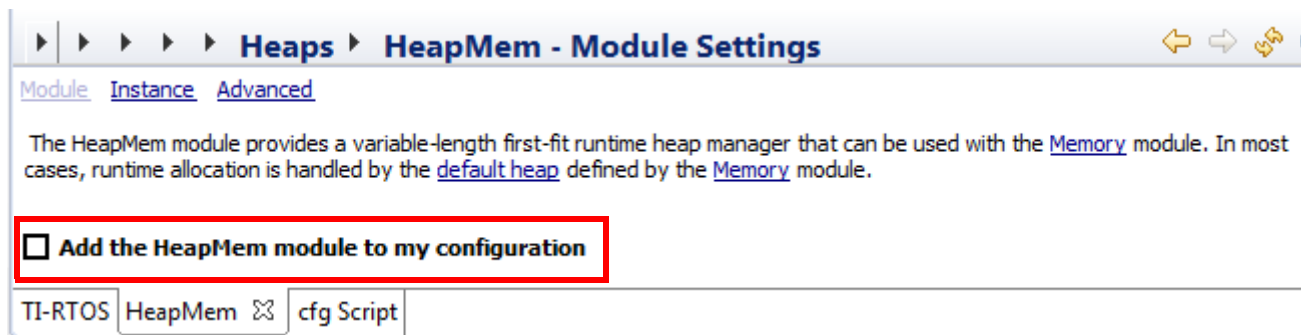


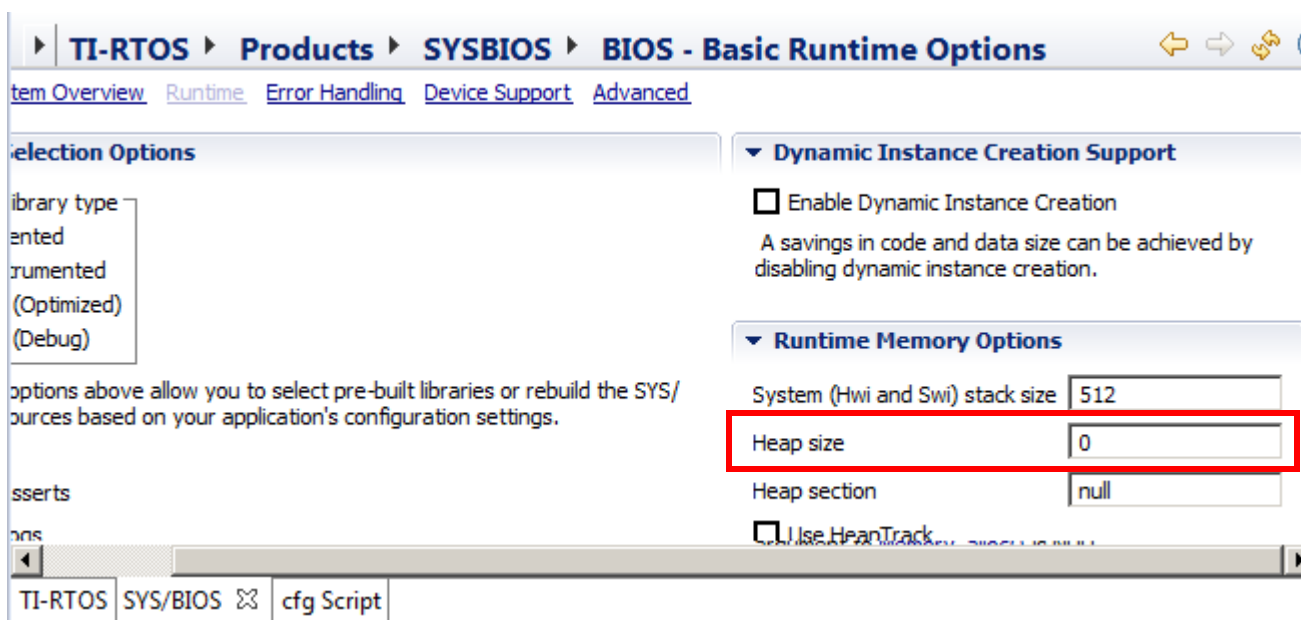
Heaps ▸ HeapMem - Module Settings

Module Instance Advanced

The HeapMem module provides a variable-length first-fit runtime heap manager that can be used with the [Memory](#) module. In most cases, runtime allocation is handled by the [default heap](#) defined by the [Memory](#) module.

☐ Add the HeapMem module to my configuration

TI-RTOS HeapMem  cfg Script



TI-RTOS ▸ Products ▸ SYSBIOS ▸ BIOS - Basic Runtime Options

Item Overview Runtime Error Handling Device Support Advanced

Selection Options

Library type
 Enabled
 Instrumented
 (Optimized)
 (Debug)

Options above allow you to select pre-built libraries or rebuild the SYS/BIOS sources based on your application's configuration settings.

Assertions

Dynamic Instance Creation Support

☐ Enable Dynamic Instance Creation

A savings in code and data size can be achieved by disabling dynamic instance creation.


Runtime Memory Options

System (Hwi and Swi) stack size 512

Heap size 0

Heap section null

☐ Use HeapTrack

TI-RTOS SYS/BIOS  cfg Script


If you edit configuration scripts directly, disable dynamic memory allocation by removing the following statement from an example's *.cfg file:

```
var HeapMem = xdc.useModule('ti.sysbios.heaps.HeapMem');
```

In addition, add the following statement to the example's *.cfg file:

```
BIOS.heapSize = 0;
```

No Idle Task: The kernel, by default, has an Idle task that runs if no other thread is running. The Idle task runs low-priority functions (for example, to check for stack overflows). For the MSP43x examples, the Idle task is not enabled. This allows the MSP43x to be placed in a power-saving mode.

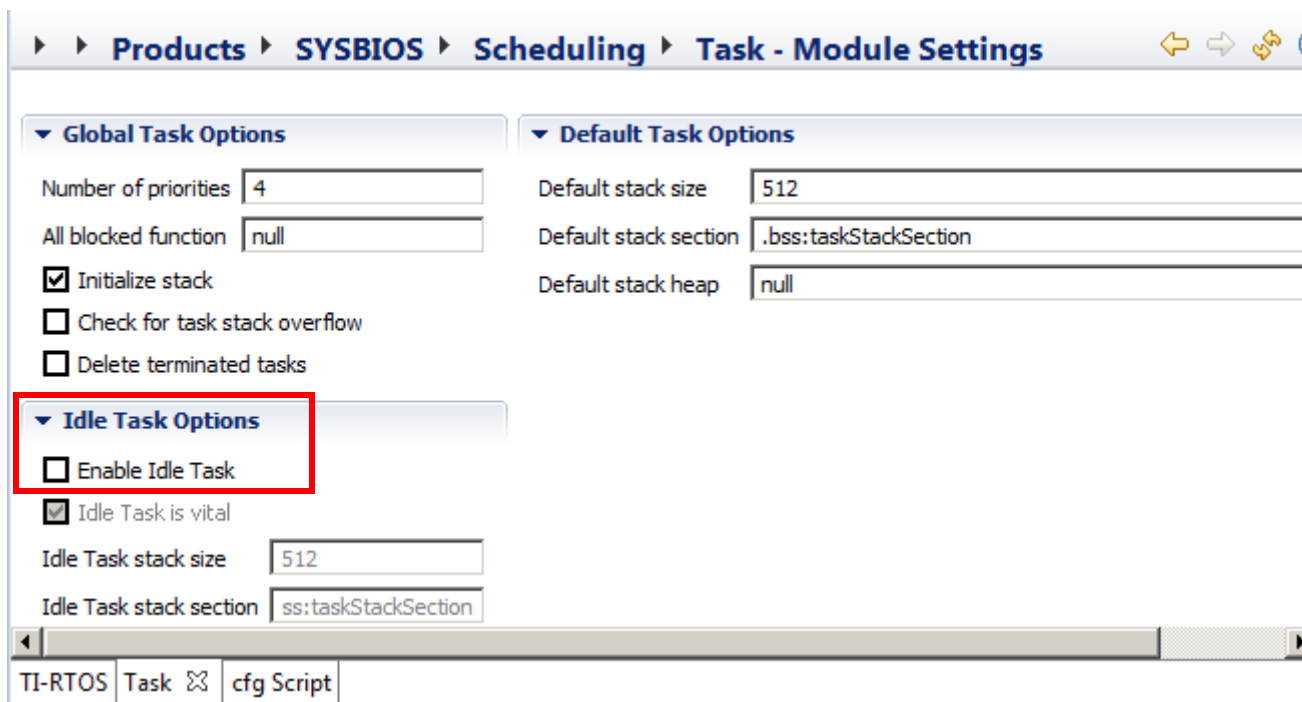


The screenshot shows the 'Task - Module Settings' window in the TI-RTOS configuration tool. The 'Idle Task Options' section is highlighted with a red box. The 'Enable Idle Task' checkbox is unchecked, while 'Idle Task is vital' is checked. Other settings include 'Number of priorities' set to 4, 'All blocked function' set to null, 'Default stack size' set to 512, 'Default stack section' set to .bss:taskStackSection, and 'Default stack heap' set to null.

If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
Task.enableIdleTask = false;
```

Stack Checking: The kernel, by default, verifies that the System stack and Tasks stacks have not overflowed. The System stack checks are performed in the Idle Task. The Task stack checks are performed at every context switch. The top of the stack is examined to make sure it has the correct "magic" value. Since a overflowed Task or System stack is show in ROV, the Task stack check was removed from the MSP43x examples to reduce the code footprint. See the *SYS/BIOS User's Guide* for details about these properties.

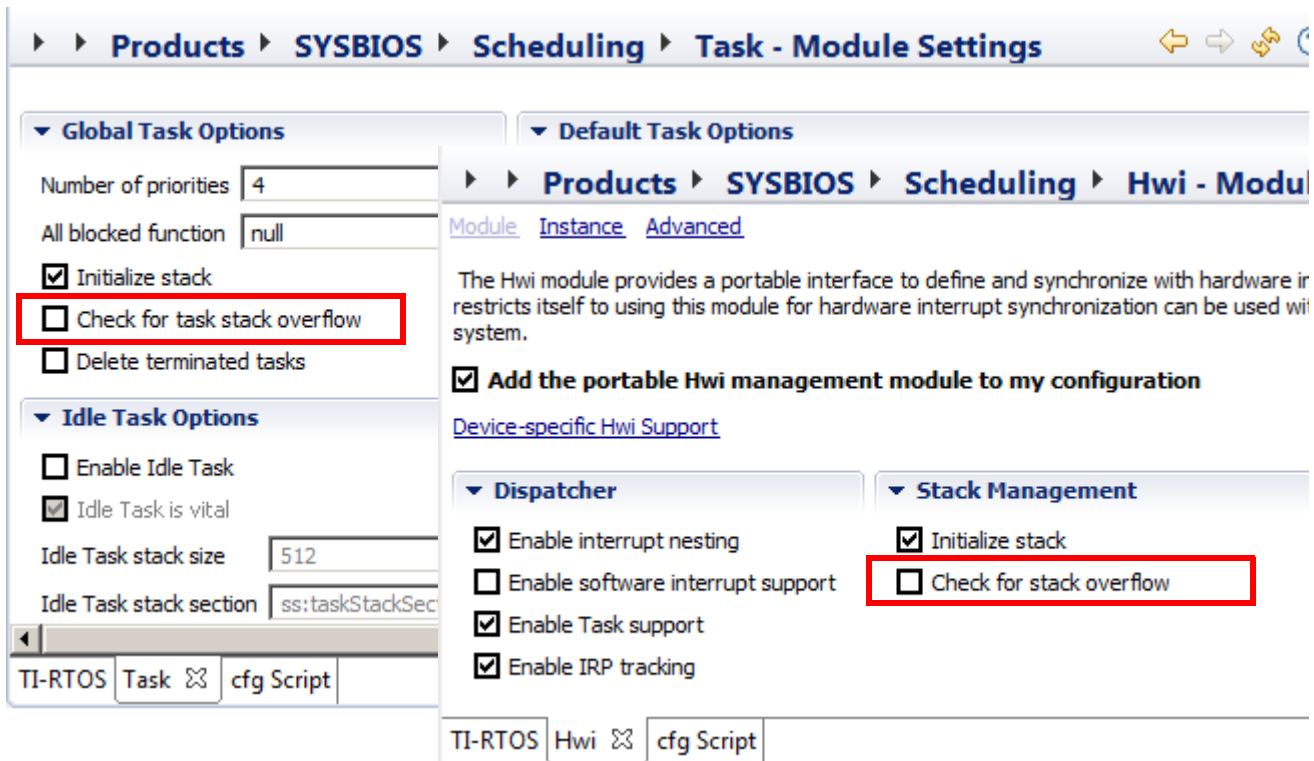


The screenshot shows the TI-RTOS configuration tool interface. The breadcrumb navigation at the top reads: Products > SYSBIOS > Scheduling > Task - Module Settings. The left pane shows 'Global Task Options' with the following settings: Number of priorities (4), All blocked function (null), ☒ Initialize stack, ☐ Check for task stack overflow (highlighted with a red box), ☐ Delete terminated tasks, and 'Idle Task Options' with ☐ Enable Idle Task, ☒ Idle Task is vital, Idle Task stack size (512), and Idle Task stack section (ss:taskStackSec). The right pane shows 'Default Task Options' with a breadcrumb: Products > SYSBIOS > Scheduling > Hwi - Module. It includes a description of the Hwi module, a checked checkbox for 'Add the portable Hwi management module to my configuration', and a link for 'Device-specific Hwi Support'. Below this are two sections: 'Dispatcher' with ☒ Enable interrupt nesting, ☐ Enable software interrupt support, ☒ Enable Task support, and ☒ Enable IRP tracking; and 'Stack Management' with ☒ Initialize stack and ☐ Check for stack overflow (highlighted with a red box). At the bottom, there are tabs for 'TI-RTOS', 'Task', and 'cfg Script' in the left pane, and 'TI-RTOS', 'Hwi', and 'cfg Script' in the right pane.

If you edit configuration scripts directly, these statements have the same effect as the XGCONF settings above:

```
Task.checkStackFlag = false;
Hwi.checkStackFlag = false;
```



Software interrupts (Swis) disabled: The kernel, by default, enables software interrupts. For examples that do not use Swis, this type of thread is disabled. See the *SYS/BIOS User's Guide* for details about Swis. Note the EMAC driver uses a Swi, so networking examples cannot use this trick.

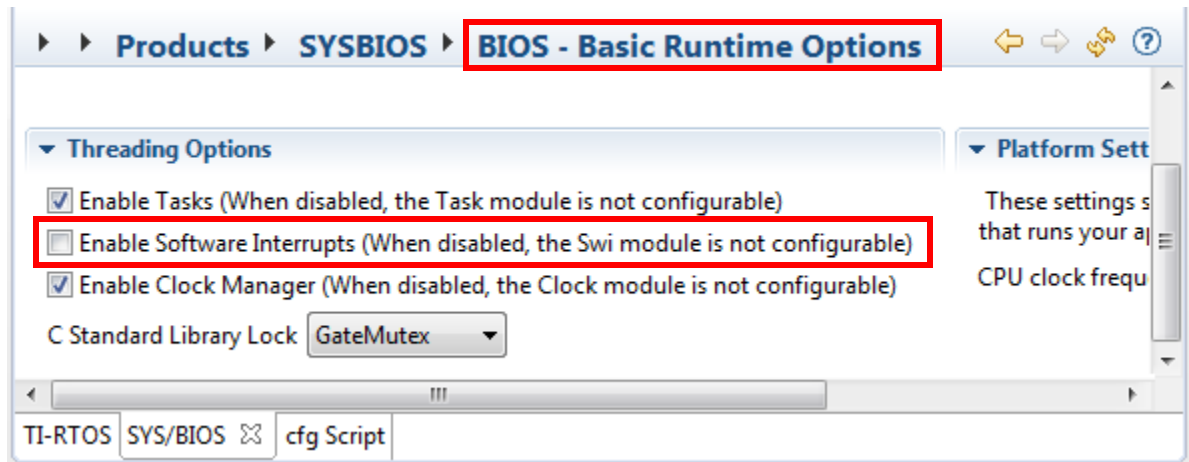

If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
BIOS.swiEnabled = false;
```

Number of Task Priorities: The kernel allows Tasks to have different priorities. See the *SYS/BIOS User's Guide* for details about Task priorities. The TI-RTOS examples lower the maximum number of Task priorities to 4.

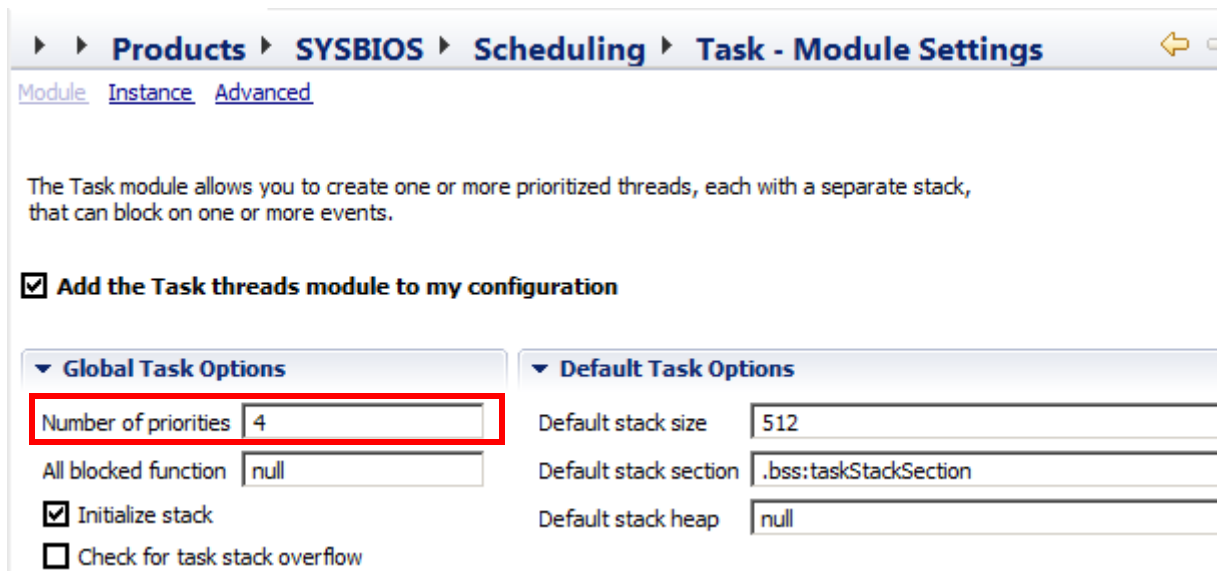

If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
Task.numPriorities = 4;
```

Number of atexit functions: The kernel allows System atexit() functions to be registered. See the Kernel Runtime APIs and Configuration (cdoc) online help for more about the xdc.runtime.System module's atexit() functions. The TI-RTOS examples lower the maximum number of System atexit functions to 2.

Products > SYSBIOS > System > System - Module Settings

Module: Advanced

The System module provides basic "printf" output and system termination support.

☒ Add System to my configuration

Required Settings

System provider: xdc.runtime.SysCallback

Exit Handling Options

Maximum 'atexit' functions: 2

Abort hook: xdc.runtime.System.abortStd

Exit hook: xdc.runtime.System.exitStd

Extended Format Options

System support: %L %S %F

TI-RTOS: XDC/System ☒ cfg Script

If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
System.maxAtexitHandlers = 2;
```

Kernel exception handling (for ARM): By default the kernel plugs in an exception handler to make debugging an exception easier. The exception handler can be removed to reduce code footprint. It is recommended that you leave the exception handler in place during development.

SYSBIOS > Target Specific Support > M3 (Ducati) > Hwi - Module Settings

☒ **Override**

The user can override the default exception handling behavior by providing their own function (ie '&myExHandler'):

Exception handler: null

By default, an exception handler corresponding to the "Enable full exception decoding" selection will be installed.

If set to 'null', low level code will simply loop forever when an exception occurs. Setting the handler to 'null' also results in the least amount of code and data memory being consumed.

No ROV exception information is available when a user exception handler is configured. Neither will any of the above "User exception ..." settings be functional.

of interrupts supported by the device, setting this parameter of interrupts ACTUALLY USED will result in less used than otherwise.


For applications that use very few interrupts, this can RAM memory savings.

TI-RTOS: M3/Hwi ☒ cfg Script

If you edit configuration scripts directly, these statements have the same effect as the XGCONF setting:

```
var m3Hwi = xdc.useModule('ti.sysbios.family.arm.m3.Hwi');
m3Hwi.excHandlerFunc = null;
```

Strings: Since no logging or asserts are enabled for the TI-RTOS examples, the strings associated with those facilities can be omitted. However, removing the strings for logging and asserts also removes additional strings. See the Kernel Runtime APIs and Configuration (cdoc) online help for more about the xdc.runtime.Text module's isLoaded property.

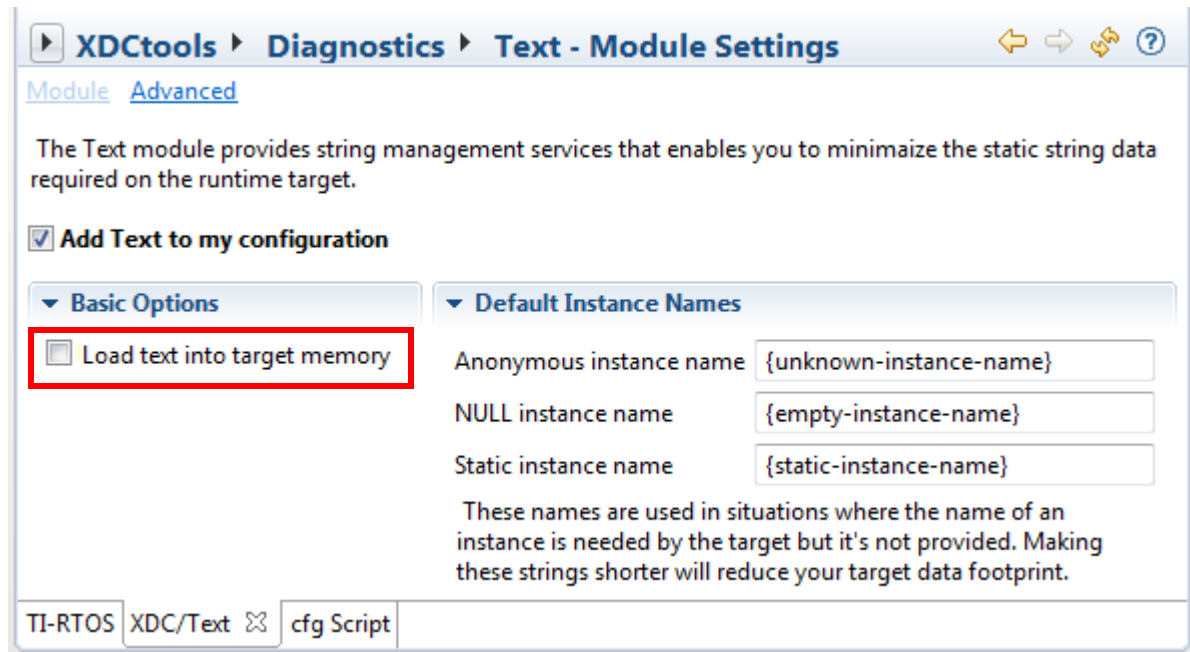

If you edit configuration scripts directly, this statement has the same effect as the XGCONF setting above:

```
Text.isLoaded = false;
```

10.2 Networking Stack Memory Usage

See [TI-RTOS Networking Stack Memory Usage](#) on the Texas Instruments Wiki for details about adjusting memory usage of the networking stack (NDK).

Revision History

Table A–1 lists the significant changes made in recent versions of this document.

Table A–1. Revision History

Revision	Chapter	Location	Additions/Modifications/Deletions
SPRUHD4I	Preface		Current software version number is v2.12.
	Overview	Section 1.9 and Chapter 6	Added TI-RTOS Network Services
	Board-Specific	Section 4.1	Support for MSP432 has been added.
	Drivers	Section 5.3 and Section 5.7	Added Camera driver and I ² S driver.
		Section 5.5	GPIO driver has been modified significantly.
SPRUHD4H	Preface		Current software version number is v2.11.
		Section 1.1 and Section 1.8.5	CCWare support is provided in TI-RTOS for SimpleLink Wireless MCUs.
	Instrumentation and Drivers	Section 2.4.2 and Section 5.2.1	Configuring instrumented or non-instrumented drivers has been moved from individual driver modules to the TIRTOS module.
	Debugging	Section 3.1.1	A section on debugging applications by stepping through TI-RTOS code has been added.
	Board-Specific	Section 4.1	Support for SimpleLink boards has been added.
	Drivers	Section 5.2.6 and Section 5.2.7	Information about driver implementations for SimpleLink devices has been added.
		Section 5.8	The PWM driver has been added.
		Section 5.12.5 and Section 5.12.6	Added information about configuring the UART driver to use DMA.
	Rebuilding	Section 9.1.4	Information about rebuilding the drivers with the debug profile has been added.

Table A–1. Revision History

Revision	Chapter	Location	Additions/Modifications/Deletions
SPRUHD4F	Preface		Current software version number is v2.00.
	About	Section 1.1	TI-RTOS now has separate installers for various device families. There is a separate <i>TI-RTOS Getting Started Guide</i> for each installer.
		Section 1.2	TI-RTOS has several components with TI-RTOS component names. For example, SYS/BIOS is also called the TI-RTOS Kernel.
	Instrumentation	Section 2.1	System Analyzer also includes the views available from the Tools > RTOS Analyzer menu.
		Section 2.2 and Section 2.3.3	The configuration properties for LoggingSetup have changed.
		Section 2.5	The menu commands and dialogs used to open System Analyzer views have changed.
	Board-Specific	Section 4.1	TI-RTOS examples have been added for the MSP-EXP430FR5969LP LaunchPad and EK_TM4C1294XL Evaluation Kit.
	Drivers	Section 5.2.8	EUSCI versions of the MSP430 driver have been added.
SPRUHD4E	Preface		Current software version number is v1.21.
	About	Section 1.1 and Section 4.1	Added MSP-EXP430F5529 Experimenter Board.
	Debugging	Section 3.1	ROV also available in IAR Embedded Workbench.
	Rebuilding	Section 9.1.3	Added section on building TI-RTOS for the GCC code generator.
	Memory Usage	Section 10.1	Two versions of the Empty example are now provided. The new one uses minimal memory. Also added removal of HeapMem enabling statement to description of how to disable dynamic memory allocation.
SPRUHD4D	Preface		Current software version number is v1.20.
	About	Section 1.1	Several new boards added to the table.
		Section 1.8.3	New section added for MSP430Ware.
		Section 1.11	Links added for MSP430Ware, MSP430 boards, and BoosterPacks.

Table A–1. Revision History

Revision	Chapter	Location	Additions/Modifications/Deletions
	Examples	Chapter 2	Details about individual examples moved to the readme files within the example projects. Other information previously in Chapter 2 moved to the <i>TI-RTOS Getting Started Guide</i> .
	Instrumentation	Section 2.3 to Section 2.3.3	New section added on converting an example to perform run-time uploading of instrumentation data.
	Boards	Section 4.1	Several new boards added to the table.
	Drivers	Section 5.2.8	New section added on Hwi objects and ISRs for MSP430 devices.
		Section 5.14.1.3	New section added on USB reference modules for MSP430.
		Section 5.17 to Section 5.17.1	WiFi driver can now be configured to support calling it from multiple threads.
	Utilities	--	The SysFlex module has been deprecated.
		Section 7.2 to Section 7.2.2	The UARTMon module has been added.
	Rebuilding	Section 9.1.1	The contents of tirtos.mak have changed.
		Section 9.1.2	New section added for building TI-RTOS for IAR.
		Section 9.2	New section added for rebuilding MSP430Ware libraries.
	Memory	Section 10.1	New section added to discuss ways to reduce the memory footprint.

Index

A

APIs
 common 43
 EMAC driver 51
 GPIO driver 55
 I2C driver 57
 SDSPI driver 72
 UART driver 81
 USB device and host modules 92
 USBMSCHFatFs driver 86
 Watchdog driver 94
assert handling 27
Available Products list 16

B

board.c files 35
build flow 33

C

C28x
 support 34
Camera driver 38, 49
CC3200-LAUNCHXL 34
ccxml file 36
CDC device 38
COM Port 105
components 9
Concerto 34
configuration
 build flow 33
configuro tool 33
controlSUITE 12
 other documentation 13

D

debugging 26
Demo examples 119
DK-TM4C123G 34
DK-TM4C129X 34
drivers 12, 38

E

EK_TM4C1294XL 34
EK-LM4F120XL 34
EKS-LM4F232 34
EK-TM4C123GXL 34
EMAC driver 38, 51
Empty example 119
Ethernet driver 38, 51
exception handling 27

F

F28M35H52C1 34
F28M36P63C2 34
FatFs driver 71, 86
flash drives 38, 86

G

GPIO driver 38, 53
GPIO pin
 configuration 35
GUI Composer 108

H

HID device 38

I

I2C driver 38, 57
I2S driver 38, 64
instrumentation 15
instrumented libraries 23
IPC 9, 11
 other documentation 11
 SPI driver for multicore applications 38

K

keyboard
 device 92
 host 92

L

LCD driver 38
 LEDs
 configuration 35
 linker command file 35
 LM4F120H5QR 34
 LM4F232H5QD 34
 Load logging 17
 Log module 23
 EMAC driver 52
 GPIO driver 56
 I2C driver 63
 UART driver 84
 USBMSCHFatFs driver 88
 viewing messages 24
 Watchdog driver 95, 99
 logging 17
 LoggingSetup module 16

M

M3 microcontroller 34
 memory reduction 119
 MessageQ 38
 mouse
 device 92, 93
 host 92
 MSC device 38
 MSC host 86
 MSP430F5529 34
 MSP430FR5969 34
 MSP432P401RLP 34
 MSP-EXP430F5529LP 34
 MSP-EXP430FR5969LP 34
 MSP-EXP432P401RLP 34
 MSPWare 9, 13
 multicore applications 38
 MWare 9, 10, 12
 other documentation 13

N

NDK 9, 11, 51
 other documentation 11
 non-instrumented libraries 23

P

Peripheral examples 119
 PIN driver 38
 printf() function 29
 Printf-style output 27, 29
 products directory 9
 PWM driver 38

R

rebuilding
 TI-RTOS 115
 ROV tool 25, 26, 29
 EMAC 52
 GPIO 56
 I2C 63
 SDSPI 72
 UART 84
 Watchdog driver 96
 WiFi driver 99
 RTOS Analyzer
 debugging with 24
 RTOS Object View (ROV) 26

S

SD cards 71
 SDSPI driver 38, 71
 serial devices 93
 simulator, debugging with 36
 SPI (SSI) bus 71
 SPI driver 38
 SPIMessageQTransport transport 38, 79
 static configuration 33
 StellarisWare 9
 SYS/BIOS 9, 10
 logging 17
 other documentation 10
 SysCallback module 29
 SysMin module 29
 configuration 30
 SysStd module 30
 System Analyzer 10, 15, 27
 System module 29
 configuration 30
 System_printf() function 29

T

Target Configuration File 36
 TI-RTOS 8
 TivaWare 13
 TM4C123GH6PGE 34
 TM4C123GH6PM 34
 TM4C1294NCPDT 34
 TM4C129XNCZAD 34
 TMDXDOCK28M36 34
 TMDXDOCKH52C1 34
 TMDXDOCKH52C1.c file 35

U

UART driver 38, 81
 UARTMon module 102
 UIA 9, 10, 15
 other documentation 10
 USB controller 86

USB Descriptor Tool 90, 91
USB driver 92
USBMSCHFatFs driver 38, 86

W

Watchdog driver 38, 94
APIs 94

WiFi driver 38

X

XDCtools 9, 14
build settings 33
other documentation 14

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as “components”) are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or “enhanced plastic” are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have not been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Mobile Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video & Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.