

# ***bq24022/7EVM***

***1-A Single-Chip Li-Ion and Li-Pol Charge Management IC  
with Autonomous USB-Port and AC-Adapter Supply  
Management Evaluation Module***

## ***User's Guide***



# Contents

|          |                                   |           |
|----------|-----------------------------------|-----------|
| <b>1</b> | <b>Introduction</b>               | <b>5</b>  |
| 1.1      | Background                        | 5         |
| 1.2      | Performance Specification Summary | 5         |
| <b>2</b> | <b>Test Summary</b>               | <b>5</b>  |
| 2.1      | Test Setup                        | 6         |
| 2.2      | Test Procedures                   | 6         |
| 2.3      | Alternative Test Procedure        | 7         |
| 2.4      | Ordering Information              | 8         |
| <b>3</b> | <b>Schematic</b>                  | <b>9</b>  |
| <b>4</b> | <b>Physical Layouts</b>           | <b>10</b> |
| <b>5</b> | <b>Bill of Materials</b>          | <b>12</b> |
| <b>6</b> | <b>References</b>                 | <b>12</b> |
|          | <b>Important Notices</b>          | <b>13</b> |

---

## List of Figures

|   |  |    |
|---|--|----|
| 1 | bq24022/7 Testing Setup .....          | 7  |
| 2 | bq24022/7 Schematic .....              | 9  |
| 3 | bq24022/7EVM Top Layer .....           | 10 |
| 4 | bq24022/7EVM Bottom Layer .....        | 10 |
| 5 | bq24022/7EVM Component Placement ..... | 11 |

## List of Tables

|   |   |    |
|---|---|----|
| 1 | Performance Specification Summary ..... | 5  |
| 2 | I/O and Jumper Connections .....        | 6  |
| 3 | Ordering Information .....              | 8  |
| 4 | Bill of Materials .....                 | 12 |

## ***bq24022/7 (bqTINY™-II) Evaluation Module***

### **1 Introduction**

This user's guide describes the bq24022/7 (bqTINY™-II) Evaluation Module. The EVM provides a convenient method for evaluating the performance of a charge management solution for portable applications using the bq24022/7 product family. A complete designed and tested charger is presented. The charger is designed to deliver up to 1 A of continuous charge current for single-cell Li-Ion or Li-Pol applications using a dc power supply. The charger is programmed from the factor to deliver 0.7 A of charging current.

#### **1.1 Background**

The bqTINY™-II series are highly integrated and flexible Li-Ion linear charge and system power management devices targeted at space limited charger applications. The bqTINY-II series offer integrated USB-port and ac-adaptor supply management with autonomous power-source selection, power FET and current sensor, high-accuracy current and voltage regulation, charge status, and charge termination, in a single monolithic device. The bqTINY-II automatically selects the USB-port or the ac-adaptor as the power source for the system. In the USB configuration, the host can select from the two preset charge rates of 100 mA and 500 mA. In the ac-adaptor configuration an external resistor sets the magnitude of the system or charge current. The bqTINY-II charges the battery in three phases: conditioning, constant current, and constant voltage. Charge is terminated based on minimum current. An internal charge timer provides a backup safety for charge termination. The bqTINY-II automatically restarts the charge if the battery voltage falls below an internal threshold. The bqTINY-II automatically enters sleep mode when both supplies are removed.

#### **1.2 Performance Specification Summary**

**Table 1. Performance Specification Summary**

| SPECIFICATION  | TEST CONDITIONS | MIN               | TYP | MAX | UNIT |
|--|-----------------|-------------------|-----|-----|------|
| Input DC voltage, $V_{I(DC)}$                        |                 | $V_{(REG)} + 0.5$ | 5   | 5.2 | V    |
| Battery charge current <sup>(1)</sup> , $I_{O(CHG)}$ |                 |                   | 0.7 | 1   | A    |
| Power dissipation                                    |                 |                   |     | 1.5 | W    |

<sup>(1)</sup> This input voltage maximum is a function of the maximum allowable power dissipation on the device. The current level is programmed for 0.7 A. If the programmed charge is changed, then the maximum input voltage needs to be adjusted.  
 $P_{MAX(IC)} = 1.5 \text{ W} = I_{CHG} (V_{(DC+)} - V_{(BAT+)})$ . The device has a maximum recommended operation of 6.5 VDC.

### **2 Test Summary**

This section shows the test setups used, and the tests performed, in evaluating the EVM. See the bq24022/27 datasheet ([SLUS549](#)) for complete details regarding the operation and specifications.

## Test Summary

### 2.1 Test Setup

The bq24022/7 EVM board requires a regulated 5-VDC, 1-A power source or a USB, 0.5-A port maximum), to provide input power and a single-cell Li-Ion or Li-Pol battery pack.

**CAUTION**  
If powered from an USB, 0.1-A port, make sure ISET2 is pulled low to program the board for the 100-mA charge. Skip any test steps that program the UUT to 0.5 A.

The test setup connections and jumper setting selections are configured for a stand-alone evaluation but can be changed to interface with external hardware such as a microcontroller.

**Table 2. I/O and Jumper Connections<sup>(1)</sup>**

| JACK                 | CONNECTION  |
|----------------------|---|
| J1-DC+               | Power supply positive connection, preset to 5 Vdc, 1.2-A current limit. Can also be powered by J2 (USB) if J1 power is absent.  |
| J1-DC-               | Power supply return connection, ground  |
| J2-USB plug          | USB 0.5-A port — source for charging when J1 source is absent.  |
| J5-BAT+              | Positive battery pack terminal  |
| J5-BAT-              | Negative battery pack terminal, BAT—is common with DC-  |
| J5- $\overline{CE}$  | NC - R4 is a pull down resistor, set to 20 k $\Omega$ , to enable charging. J5- $\overline{CE}$ can be used as an external control.   |
| J5-BAT-              | N/C, optional external use  |
| J3 (jumper)          | ISET2 program — 0.5 A (HIGH)   <b>0.1 A (LOW)</b>   |
| J4 (jumper)          | Power good Indication location — <b>LED</b> (EVM)   EXT   |
| J6 (jumper)          | BIAS power for EVM (jumper to active source) — <b>DC+</b>   USB   |
| J7 (jumper)          | STAT1 indication location — <b>LED</b> (EVM)   EXT  |
| J9 (jumper)          | STAT2 indication location — <b>LED</b> (EVM)   EXT  |
| J8-STAT1             | External monitor hardware if J7—EXT is jumpered (not jumpered from factory)   |
| J8-STAT2             | External monitor hardware if J9—EXT is jumpered (not jumpered from factory)   |
| J10- $\overline{PG}$ | External monitor hardware if J4—EXT is jumpered (not jumpered from factory)   |
| J10-ISET2            | External USB load control (TTL) — HIGH (500 mA)   LOW (100 mA) (remove jumper J3 when using J10-ISET2.<br><b>EVM set up for local control with jumper J3-0.1 A installed.</b> |

<sup>(1)</sup> Factory jumper selections are shown in BOLD

### 2.2 Test Procedures

Setup the evaluation board as described above, by making the necessary I/O connections and jumper selections. Prior to test and evaluation, it is important to verify that the maximum power dissipation on the device is not exceeded:  $P_{MAX} = 1.5 \text{ W}$ .

$$P_{MAX} = (V_{(DC+)} - V_{(BAT+)}) \times I_{(CHG)} \quad (1)$$

1. Turn on the power supply, which is preset to 5 VDC, and 1 A for the current limit setting.
2. The bq24022/7 enters preconditioning mode if the battery is below the  $V_{(LOWV)}$  threshold. In this mode, the bq24022/7 precharges the battery with a low current, typically

$$\frac{I_{O(CHG)}}{10} = \frac{0.7 \text{ A}}{10} = 70 \text{ mA} \quad (2)$$

until the battery voltage reaches the  $V_{(LOWV)}$  threshold or until the precharge timer expires. If the timer expires then the charge current is terminated and the bq24022/7 enters fault mode. Both LEDs turn off when in fault mode. Toggling input power or battery replacement resets fault mode. Note that there are several fault conditions. They are described in the data sheet (SLUS549).

3. Once the battery voltage is above the  $V_{(LOWV)}$  threshold, the battery enters fast charge mode. This EVM is programmed for 0.7 A of fast charging current.

- Once the battery reaches voltage regulation (4.2 V), the current tapers down as the battery reaches its full capacity.
- When the current reaches the taper termination threshold, the charge current terminates for the bq24027 and a taper timer is set for the bq24022 which allows approximately 30 minutes of additional charging time. If the charge current increases above the taper threshold for any reason, the taper timer is reset. If the current drops below the termination threshold, valid only for the bq24022, (design for detecting removal of battery,  $\approx I_{pgm}/140$ ) charging immediately terminates.
- After termination, if the battery discharges down to the recharge threshold, the charger starts fast charging.
- The same procedure may be performed using the USB 0.5-A plug source in place of the J1 power source. The precharge current is approximately 10% of the programmed fast charge. The fast charge current is either 0.1 A or 0.5 A depending on the ISET being low or high.

**CAUTION**  
If powered from an USB, 0.1-A port, make sure ISET2 is pulled low to program the board for the 100-mA charge.

An alternative method of testing the EVM is with a source meter, that can sink or source current. This can be adjusted to test each mode, in place of a battery.

Another alternative to view each mode, on a scope, is to connect a 1000- $\mu$ F or larger capacitor and a parallel 10-k $\Omega$  resistor on the output in place of a battery to observe the charging cycling.


## 2.3 Alternative Test Procedure

Below is a test procedure to verify charging states without the need for a battery or expensive test equipment.

### 2.3.1 Equipment

The procedure used to evaluate the EVM assembly with a few basic functions of the device is as follows:

- Power source: current limited 5-V lab supply with its current limit set to 1 A  $\pm$ 0.1 A
- Two fluke 75, equivalent or better.
- Load test board as shown in Figure 1.

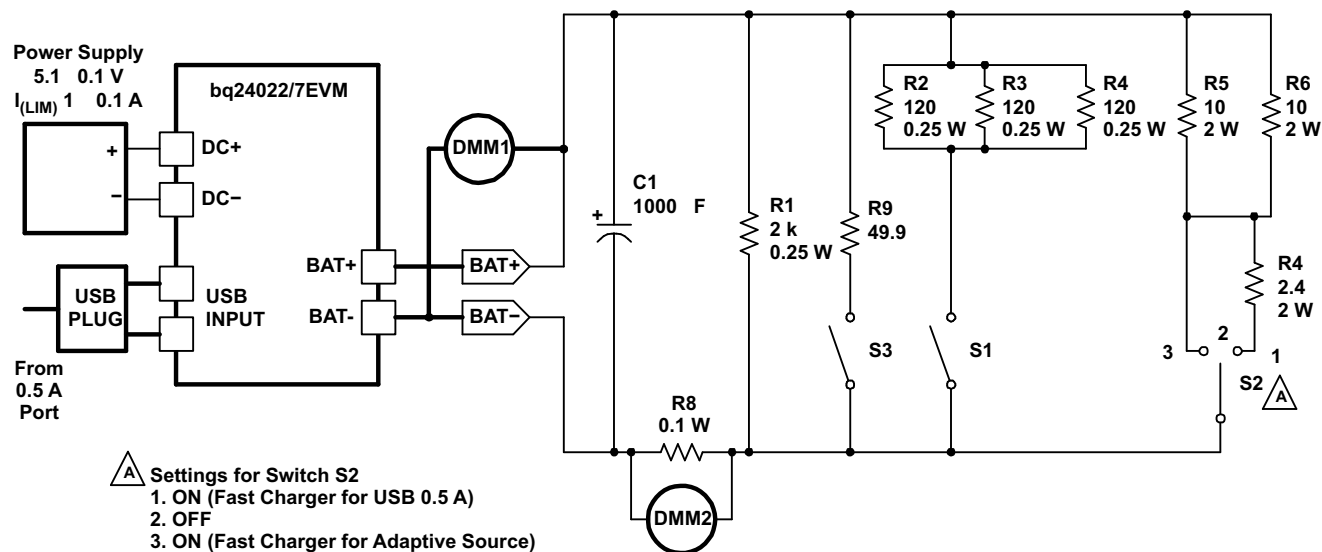

UDG-03044

NOTE: R5, R6, and R7 are 5% or better. All other resistors are 1% or better.

Figure 1. bq24022/7 Testing Setup

## Test Summary

### 2.3.2 Equipment Setup

1. Connect the load board to the BAT+ and BAT-. Set switches SW1 and SW3 to closed, and switch SW2 to off (center).
2. Connect a voltage meter, DMM1, to the BAT+/BAT- output to monitor the output voltage (range is 0 V to 5 V).
3. Set the lab supply for 5.1 V  $\pm$ 0.1 VDC, 1 A  $\pm$ 0.1 A current limit and then turn off supply. Connect DMM2 across R8 to monitor the current (R8 should be a 1% or better resistor if it is used for current measurements).
4. Shunt jumpers should be installed on J6-DC+, J7-LED, J9-LED, J3-0.5, and J4-LED.

#### CAUTION

**If USB port is a low power port (0.1 A) and the charger is set up to draw 0.5 A, then problems or damage may occur to the USB circuitry. Therefore, when powering from a 0.1-A port, the user must set J3 to 0.1 A, and replace steps 8 through 11 of the *Procedure* section with the following:**

1. Turn off J1 power source, set jumper to J6-USB, SW2-off, and close switches SW1 and SW3. Plug in USB power source, verify output voltage, BAT+, regulates between 2.5 and 2.9 VDC and both LEDs are lit.
2. Open switch SW1 and verify output voltage, VBAT+, regulates between 4.16 and 4.24 Vdc.

### 2.3.3 Procedure

1. Make sure *EQUIPMENT SETUP* steps are followed (SW1–closed, SW2 and SW3–Open, shunts installed as per step 4, test board connected, and power source set to 5.1 V  $\pm$ 0.1 Vdc). Turn on the power source.
2. Verify output voltage, BAT+, is between 2.5 Vdc to 2.95 Vdc, and the red LED (D1) and green LEDs (D2 and D3) are lit.
3. Short J5-2 to J1-1 ( $\overline{CE}$  to DC+) and verify that charging stops (DMM2 < 0.5 mV). Remove the short and verify output voltage, BAT+, is between 2.5 Vdc and 2.95 Vdc.
4. Close switch SW3 and open switch SW1. Verify LED (D2) is off and the output voltage, BAT+, regulates between 4.16 Vdc and 4.24 Vdc.
5. Close switch SW2 (to position 1  $\Omega$  - 5  $\Omega$ ) and verify output voltage, BAT+, is between 3.1 Vdc and 3.5 Vdc. Note: If output drops below 3 V and remains below 3 V, the input may be dropping below 4.9 V. Add input capacitance to the source, to keep the input in compliance.
6. Verify that the charging current is between 0.6 Amps and 0.8 Amps (DMM2 is between 60 mVdc and 80 mVdc).
7. Open switch SW3, set switch SW2 to off, and verify that the LEDs, D1 and D2, alternate being lit.
8. Turn off the J1 power source.
9. Set jumper to J6-USB, Close switch SW1. Plug in USB power source, verify output voltage, BAT+, regulates between 2.5 Vdc and 2.9 Vdc, and both LEDs are lit.
10. Close switch SW3 and open switch SW1, verify output voltage, VBAT+, regulates between 4.16 Vdc and 4.24 Vdc, and LED (D2) is off.
11. Turn off power and set jumper to J6-DC+. Set switch SW3 open and SW1 to closed. Remove the UUT from the test apparatus. Repeat setup and test procedures for other untested EVMs.

## 2.4 Ordering Information

**Table 3. Ordering Information**

| EVM Part Number | Additional Devices | Chemistry        | Pack Voltage   | Capacity |
|-----------------|--------------------|------------------|----------------|----------|
| bq24022/7EVM    | None               | Li-Ion / Li-Poly | 2.5 V to 4.2 V | Any      |





## 4 Physical Layouts

Figure 3 shows the top layer of the EVM. Figure 4 shows the bottom layer. Figure 5 shows the top assemble view.

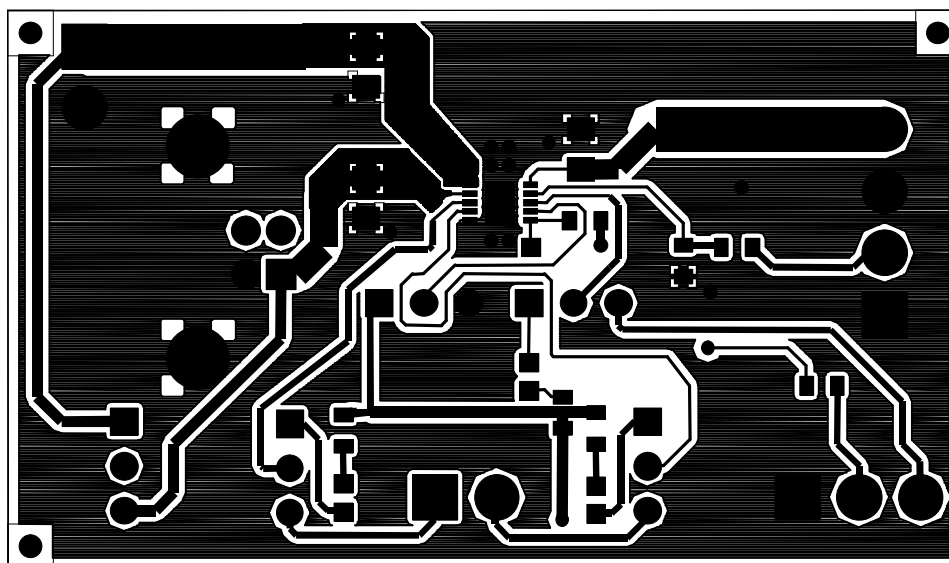


Figure 3. bq24022/7EVM Top Layer

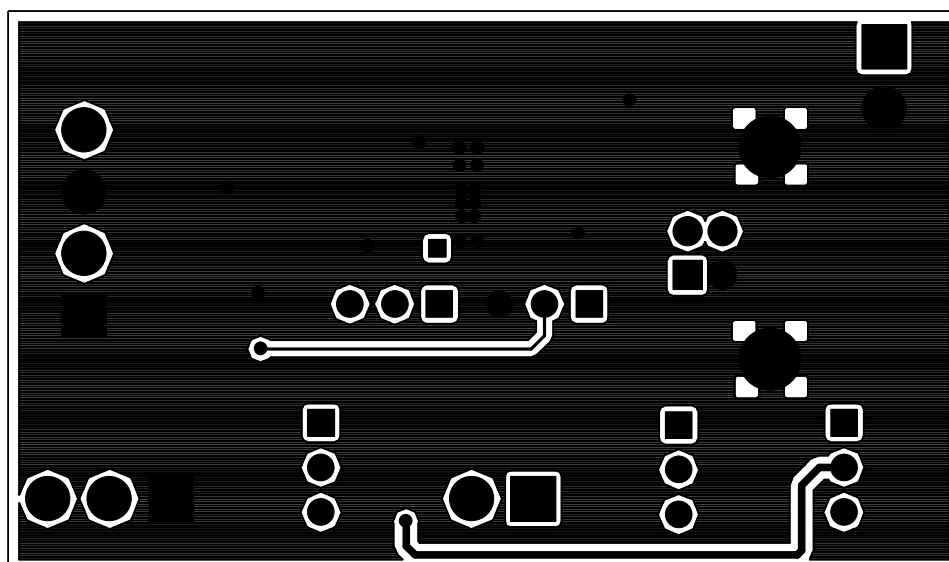
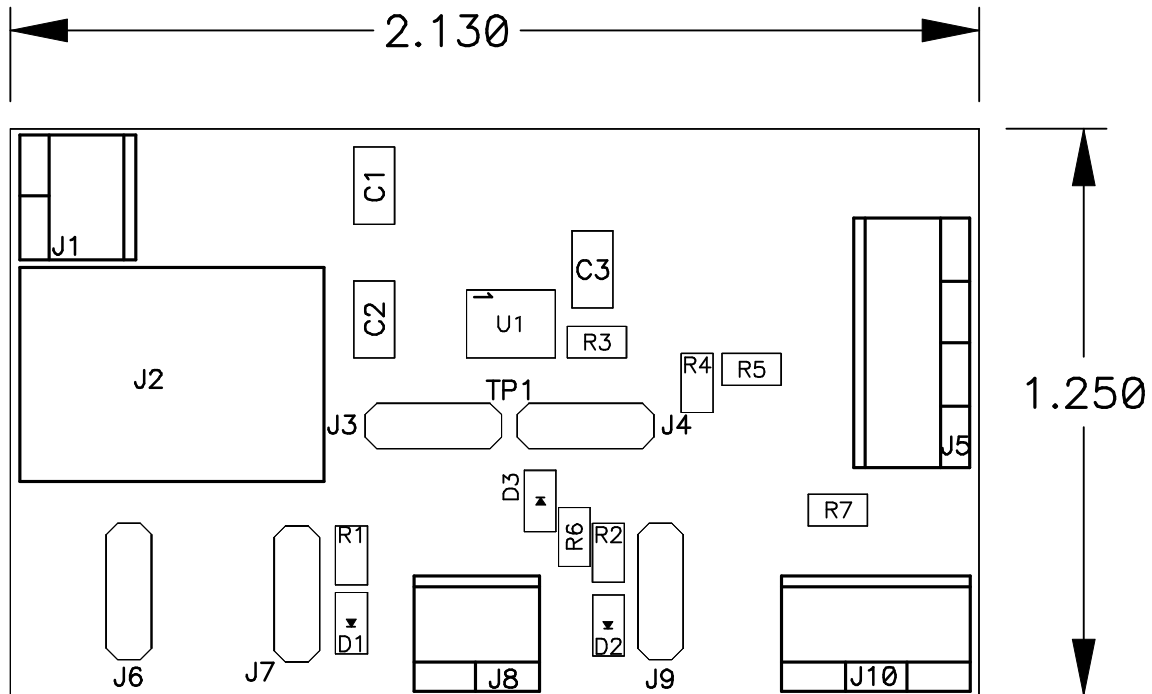


Figure 4. bq24022/7EVM Bottom Layer



**Figure 5. bq24022/7EVM Component Placement**

## 5 Bill of Materials

Table 4 lists the materials required for the bq24022/7EVM.

**Table 4. Bill of Materials<sup>(1)(2)(3)(4)</sup>**

| ITEM | -001<br>bq24022 | -002<br>bq24027 | REFERENCE<br>DESIGNATOR <sup>(5)</sup> | DESCRIPTION                                   | SIZE        | MANUFACTUR<br>E | PART NUMBER      |
|------|-----------------|-----------------|--|---|-------------|-----------------|------------------|
|      | COUNT           | COUNT           |  |   |             |                 |                  |
| 1    | 3               | 3               | C1, C2, C3                             | Capacitor, Ceramic, 1uF, 16-V, X7R            | 805         | Kemet           | C0805C105K4RACTU |
| 2    | 1               | 1               | D1                                     | Diode, LED, Red, 1.8-V, 20-mA, 20-mcd         | 603         | Liteon          | 160-1181-1-ND    |
| 3    | 2               | 2               | D2, D3                                 | Diode, LED, Green, 2.1-V, 20-mA, 6-mcd        | 603         | Liteon          | 160-1183-1-ND    |
| 4    | 2               | 2               | J1, J8                                 | Terminal Block, 2-pin, 6-A, 3.5mm             | 0.27 x 0.25 | OST             | ED1514           |
| 5    | 1               | 1               | J10                                    | Terminal Block, 3-pin, 6-A, 3.5mm             | 0.41 x 0.25 | OST             | ED1515           |
| 6    | 1               | 1               | J2                                     | Connector, USB Upstream (Type B)              | 0.47 x 0.67 | Molex           | 67068-1000       |
| 7    | 5               | 5               | J3, J4, J6, J7, J9                     | Header, 3-pin, 100mil spacing, (36-pin strip) | 0.100 x 3   | Sullins         | PTC36SAAN        |
| 8    | 1               | 1               | J5                                     | Terminal Block, 4-pin, 6-A, 3.5mm             | 0.55 x 0.25 | OST             | ED1516           |
| 9    | 3               | 3               | R1, R2, R6                             | Resistor, Chip, 1.5k-Ohms, 1/16-W, 1%         | 603         | Std             | Std              |
| 10   | 1               | 1               | R3                                     | Resistor, Chip, 1.13k-Ohms, 1/16-W, 1%        | 603         | Std             | Std              |
| 11   | 1               | 1               | R4                                     | Resistor, Chip, 20k-Ohms, 1/16-W, 1%          | 603         | Std             | Std              |
| 12   | 1               | 1               | R5                                     | Resistor, Chip, 0-Ohms, 1/16-W, 1%            | 603         | Std             | Std              |
| 13   | 1               | 1               | R7                                     | Resistor, Chip, 1k-Ohms, 1/16-W, 1%           | 603         | Std             | Std              |
| 14   | 1               | 0               | U1                                     | IC, Single Li -ION/Li-POLY, Charge Manager    | MLP10       | TI              | bq24022DRC       |
| 15   | 0               | 1               | U1                                     | IC, Single Li -ION/Li-POLY, Charge Manager    | MLP10       | TI              | bq24027DRC       |
| 16   | 5               | 5               | --                                     | Shunt, 100 mill, Black                        | 0.1         | 3M              | 929950-00        |
| 17   | 1               | 1               | --                                     | PCB, 2.13 In x 1.25 In x .31 In               |             | Any             | HPA004           |

- (1) These assemblies are ESD sensitive, ESD precautions must be observed.  
(2) These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.  
(3) These assemblies must comply with workmanship standards IPC-A-610 Class 2.  
(4) Install shunts on J6-DC+, J7-LED, J9-LED, J3-0.5, and J4-LED.  
(5) Reference designators marked with an asterisk ("\*\*") cannot be substituted. All other components can be substituted with equivalent MFG's components.

## 6 References

Single-Chip Li-Ion and Li-Pol Charger IC with Autonomous USB-Port and AC Adapter Supply Management (bqTINY™-II) bq24022/27 data sheet ([SLUS549](#))

## EVALUATION BOARD/KIT IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

**EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.**

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit [www.ti.com/esh](http://www.ti.com/esh).

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2006, Texas Instruments Incorporated

## EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of  $V_{REG} + 0.5\text{ V}$  to  $5.2\text{ V}$  and the output voltage range of  $0\text{ V}$  to  $4.2\text{ V}$ .

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than  $70^{\circ}\text{C}$ . The EVM is designed to operate properly with certain components above  $70^{\circ}\text{C}$  as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2006, Texas Instruments Incorporated

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

|                    |  |
|--------------------|--|
| Amplifiers         | <a href="http://amplifier.ti.com">amplifier.ti.com</a>             |
| Data Converters    | <a href="http://dataconverter.ti.com">dataconverter.ti.com</a>     |
| DSP                | <a href="http://dsp.ti.com">dsp.ti.com</a>                         |
| Interface          | <a href="http://interface.ti.com">interface.ti.com</a>             |
| Logic              | <a href="http://logic.ti.com">logic.ti.com</a>                     |
| Power Mgmt         | <a href="http://power.ti.com">power.ti.com</a>                     |
| Microcontrollers   | <a href="http://microcontroller.ti.com">microcontroller.ti.com</a> |
| RFID               | <a href="http://www.ti-rfid.com">www.ti-rfid.com</a>               |
| Low Power Wireless | <a href="http://www.ti.com/lpw">www.ti.com/lpw</a>                 |

### Applications

|                    |  |
|--------------------|--|
| Audio              | <a href="http://www.ti.com/audio">www.ti.com/audio</a>                   |
| Automotive         | <a href="http://www.ti.com/automotive">www.ti.com/automotive</a>         |
| Broadband          | <a href="http://www.ti.com/broadband">www.ti.com/broadband</a>           |
| Digital Control    | <a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a> |
| Military           | <a href="http://www.ti.com/military">www.ti.com/military</a>             |
| Optical Networking | <a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a> |
| Security           | <a href="http://www.ti.com/security">www.ti.com/security</a>             |
| Telephony          | <a href="http://www.ti.com/telephony">www.ti.com/telephony</a>           |
| Video & Imaging    | <a href="http://www.ti.com/video">www.ti.com/video</a>                   |
| Wireless           | <a href="http://www.ti.com/wireless">www.ti.com/wireless</a>             |

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2007, Texas Instruments Incorporated



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.