



Grove - RTC User Manual

Release date: 2015/9/23

Version: 1.0

Wiki: http://www.seeedstudio.com/wiki/index.php?title=Twig_-_RTC

Bazaar: <http://www.seeedstudio.com/depot/Grove-RTC-p-758.html>

Document Revision History

Revision	Date	Author	Description
1.0	Sep 23, 2015	Jiankai.li	Create file

Contents

Document Revision History	2
1. Introduction	2
2. Specification	3
3. Demonstration	4
3.1 With Arduino	4
3.2 With Raspberry Pi	6
4. Resources	11

Disclaimer

For physical injuries and possessions loss caused by those reasons which are not related to product quality, such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.

Under the supervision of Seeed Technology Inc., this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.

1. Introduction

The RTC module is based on the clock chip DS1307, which supports the I2C protocol. It utilizes a Lithium cell battery (CR1225). The clock/calendar provides seconds, minutes, hours, day, date, month, and year. The end of the month date is automatically adjusted for months with fewer than 31 days, including corrections for leap years. The clock operates in either the 24-hour or 12-hour format with AM/PM indicator. And it is valid up to 2100. In order to gain a robust performance, you must put a 3-Volt CR1225 lithium cell in the battery-holder. If you use the primary power only, the module may not work normally, because the crystal may not oscillate.

Previous Version: V0.9b

Note: The battery is not included.

2. Specification

- PCB Size: 2.0cm*4.0cm
- Interface: 2.0mm pitch pin header
- IO Structure: SCL,SDA,VCC,GND
- ROHS: YES
- VCC: 4.5~5.5V
- Logic High Level Input : $2.2 \sim VCC + 0.3 \text{ V}$
- Logic Low Level Input : $-0.3 \sim +0.8 \text{ V}$
- Battery Voltage: 2.0~3.5 V

3. Demonstration

3.1 With Arduino

The following sketch demonstrates a simple application of setting the time and reading it out.

- Connect the module to the I2C Interface of [Grove- Base Shield](#).
- Plug Grove- Base Shield into Arduino.
- Connect Arduino to PC via a USB cable.
- Download the library [File:RTC Library](#)
- Unzip it into the libraries file of Arduino IDE by the path: ..\arduino-1.0\libraries.
- Open the code directly by the path:File -> Example ->RTC->SetTimeAndDisplay.

```
#include <Wire.h>
#include "DS1307.h"

DS1307 clock;//define a object of DS1307 class
void setup()
{
    Serial.begin(9600);
    clock.begin();
    clock.fillByYMD(2013,1,19);//Jan 19, 2013
    clock.fillByHMS(15,28,30);//15:28 30"
    clock.fillDayOfWeek(SAT);//Saturday
    clock.setTime();//write time to the RTC chip
}
void loop()
{
    printTime();
}
/*Function: Display time on the serial monitor*/
void printTime()
{
    clock.getTime();
    Serial.print(clock.hour, DEC);
    Serial.print(":");
    Serial.print(clock.minute, DEC);
    Serial.print(":");
    Serial.print(clock.second, DEC);
    Serial.print(" ");
    Serial.print(clock.month, DEC);
```

```

Serial.print("/");
Serial.print(clock.dayOfMonth, DEC);
Serial.print("/");
Serial.print(clock.year+2000, DEC);
Serial.print(" ");
Serial.print(clock.dayOfMonth);
Serial.print("*");
switch (clock.dayOfWeek)// Friendly printout the weekday
{
    case MON:
        Serial.print("MON");
        break;
    case TUE:
        Serial.print("TUE");
        break;
    case WED:
        Serial.print("WED");
        break;
    case THU:
        Serial.print("THU");
        break;
    case FRI:
        Serial.print("FRI");
        break;
    case SAT:
        Serial.print("SAT");
        break;
    case SUN:
        Serial.print("SUN");
        break;
}
Serial.println(" ");
}

```


- Set the time. Put function arguments change to current date/time. The attention should be paid to the arguments format.

```

clock.fillByYMD(2013, 1, 19); //Jan 19, 2013
clock.fillByHMS(15, 28, 30); //15:28 30"
clock.fillDayOfWeek(SAT); //Saturday

```

- Upload the code.
- Open the serial monitor to see the result.

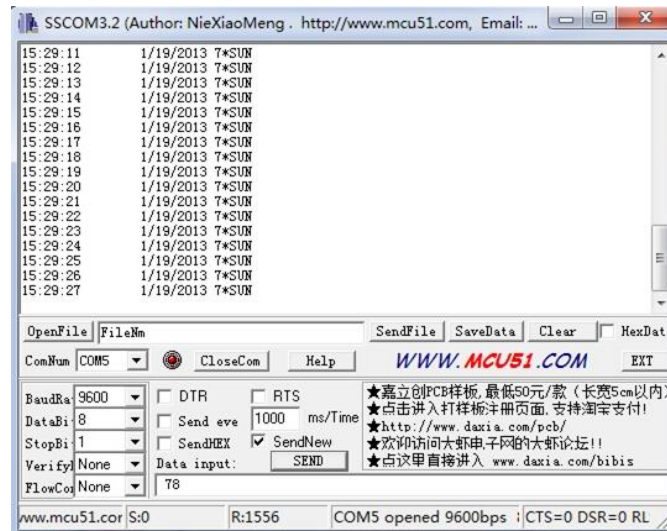

The output time is changing like the clock.

3.2 With Raspberry Pi

1. You should have got a raspberry pi and a grovepi or grovepi+.
2. You should have completed configuring the development environment, otherwise follow [here](#).
3. Connection.

- Plug the sensor to grovepi socket i2c-x(1~3) by using a grove cable.

4. Navigate to the demos' directory:

```
cd yourpath/GrovePi/Software/Python/
```

- To see the code

```
nano grove_i2c_rtc.py # "Ctrl+x" to exit #
import time
import grovepi

# Connect the Grove Real Time Clock to any I2C port eg. I2C-1
# Can be found at I2C address 0x68
# SCL, SDA, VCC, GND

while True:
    try:
        print grovepi.rtc_getTime()
        time.sleep(.5)

    except IOError:
        print "Error"
```

5. Run the demo.

```
sudo python grove_i2c_rtc.py
```

6. Result

[illegible]

7. Use this demo to show the time in common.

```
, ,
/*
 * Grove-RTC.py
 * Demo for Raspberry Pi
 *
 * Copyright (c) 2014 seeed technology inc.
 * Website      : www.seeed.cc
 * Author       : Lambor
 * Create Time  : Nov 2014
 * Change Log   :
 *
 * The MIT License (MIT)
 *
 * Permission is hereby granted, free of charge, to any person obtaining a copy
 * of this software and associated documentation files (the "Software"), to deal
 * in the Software without restriction, including without limitation the rights
 * to use, copy, modify, merge, publish, distribute, sublicense, and/or sell
 * copies of the Software, and to permit persons to whom the Software is
 * furnished to do so, subject to the following conditions:
 *
 * The above copyright notice and this permission notice shall be included in
 * all copies or substantial portions of the Software.
 *
 * THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR
 * IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY,
 * FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE
 * AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER
 * LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,
```

```

* OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN
* THE SOFTWARE.
*/
'''

#!/usr/bin/python
import time
import smbus

bus = smbus.SMBus(1)    # 0 = /dev/i2c-0 (port I2C0), 1 = /dev/i2c-1 (port I2C1)

class DS1307():
    def __init__(self):
        self.MON = 1
        self.TUE = 2
        self.WED = 3
        self.THU = 4
        self.FRI = 5
        self.SAT = 6
        self.SUN = 7
        self.DS1307_I2C_ADDRESS = 0x68

        print 'begin'

    def decToBcd(self, val):
        return ( (val/10*16) + (val%10) )

    def bcdToDec(self, val):
        return ( (val/16*10) + (val%16) )

    def begin(self, news):
        print news

    def startClock(self):
        bus.write_byte(self.DS1307_I2C_ADDRESS, 0x00)
        self.second = bus.read_byte(self.DS1307_I2C_ADDRESS) & 0x7f
        bus.write_byte_data(self.DS1307_I2C_ADDRESS, 0x00, self.second)

        print 'startClock..'

    def stopClock(self):
        bus.write_byte(self.DS1307_I2C_ADDRESS, 0x00)
        self.second = bus.read_byte(self.DS1307_I2C_ADDRESS) | 0x80
        bus.write_byte_data(self.DS1307_I2C_ADDRESS, 0x00, self.second)

```

```

    print 'stopClock..'

def setTime(self):
    data = [self.decToBcd(self.second), self.decToBcd(self.minute), \
            self.decToBcd(self.hour), self.decToBcd(self.dayOfWeek), \
            self.decToBcd(self.dayOfMonth), self.decToBcd(self.month), \
            self.decToBcd(self.year)]

    bus.write_byte(self.DS1307_I2C_ADDRESS, 0x00)
    bus.write_i2c_block_data(self.DS1307_I2C_ADDRESS, 0x00, data)

    print 'setTime..'

def getTime(self):
    bus.write_byte(self.DS1307_I2C_ADDRESS, 0x00)
    data = bus.read_i2c_block_data(self.DS1307_I2C_ADDRESS, 0x00)
    #A few of these need masks because certain bits are control bits
    self.second = self.bcdToDec(data[0] & 0x7f)
    self.minute = self.bcdToDec(data[1])
    self.hour = self.bcdToDec(data[2] & 0x3f) #Need to change this if 12 hour am/pm
    self.dayOfWeek = self.bcdToDec(data[3])
    self.dayOfMonth = self.bcdToDec(data[4])
    self.month = self.bcdToDec(data[5])
    self.year = self.bcdToDec(data[6])

    print 'getTime..'

def fillByHMS(self, _hour, _minute, _second):
    self.hour = _hour
    self.minute = _minute
    self.second = _second

    print 'fillByHMS..'

def fillByYMD(self, _year, _month, _day):
    self.year = _year - 2000
    self.month = _month;
    self.dayOfMonth = _day

    print 'fillByYMD..'

def fillDayOfWeek(self, _dow):
    self.dayOfWeek = _dow

```

```

    print 'fillDayOfWeek..'

if __name__ == "__main__":
    clock = DS1307()
    clock.fillByYMD(2015, 3, 5)
    clock.fillByHMS(12, 42, 30)
    clock.fillDayOfWeek(clock.THU)
    clock.setTime()
    while True:
        clock.getTime()
        print clock.hour, ":", clock.minute, ":", \
            clock.second, " ", clock.dayOfMonth, "/", \
            clock.month, "/", clock.year, " ", "weekday", \
            ":", clock.dayOfWeek
        time.sleep(1)

```

8. Create grove_rtc.py and copy codes above.

9. Run the code.

```
sudo python grove_rtc.py
```

10. Result



```

pi@raspberrypi: ~/software/Raspi_Grove/Grove_Adapter/Grove_RTC
pi@raspberrypi ~/software/Raspi_Grove/Grove_Adapter/Grove_RTC $ sudo python Grove_RTC.py
begin
fillByYMD..
fillByHMS..
fillDayOfWeek..
setTime..
getTime..
12 : 42 : 30   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 31   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 32   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 33   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 34   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 35   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 36   5 / 3 / 15   weekday : 4
getTime..
12 : 42 : 37   5 / 3 / 15   weekday : 4
getTime..

```

4. Resources

- [Real Time Clock Eagle File.zip](#)
- [github repository for RTC](#)
- [DS1307 datasheet](#)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.