



MSP430-169LCD development board **USER'S MANUAL**

Initial release, January 2013
Designed by OLIMEX Ltd, 2013



All boards produced by Olimex LTD are ROHS compliant

Disclaimer

© 2013 Olimex Ltd. Olimex®, logo and combinations thereof, are registered trademarks of Olimex Ltd. Other product names may be trademarks of others and the rights belong to their respective owners.

The information in this document is provided in connection with Olimex products. No license, express or implied or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Olimex products.

The Hardware project is released under closed source terms. You will have to provide a link to the original creator of the project <http://www.olimex.com> on any documentation or website. You may also modify the files, but you must then release them as well under the same terms. Credit can be attributed through a link to the creator website: <http://www.olimex.com>

The software is released under GPL.

It is possible that the pictures in this manual differ from the latest revision of the board.

The product described in this document is subject to continuous development and improvements. All particulars of the product and its use contained in this document are given by OLIMEX in good faith. However all warranties implied or expressed including but not limited to implied warranties of merchantability or fitness for purpose are excluded. This document is intended only to assist the reader in the use of the product. OLIMEX Ltd. shall not be liable for any loss or damage arising from the use of any information in this document or any error or omission in such information or any incorrect use of the product.

This evaluation board/kit is intended for use for engineering development, demonstration, or evaluation purposes only and is not considered by OLIMEX to be a finished end-product fit for general consumer use. Persons handling the product must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards.

Olimex currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. Olimex assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

THERE IS NO WARRANTY FOR THE DESIGN MATERIALS AND THE COMPONENTS USED TO CREATE MS430-169LCD. THEY ARE CONSIDERED SUITABLE ONLY FOR MSP430-169LCD.

Table of Contents

Disclaimer.....	2
CHAPTER 1 OVERVIEW.....	5
1.1 Introduction to the chapter.....	5
1.2 Features.....	5
1.3 Organization.....	5
CHAPTER 2 SETTING UP THE MSP430-169LCD BOARD.....	7
2.1 Introduction to the chapter.....	7
2.2 Electrostatic warning.....	7
2.3 Requirements.....	7
2.4 Powering the board.....	8
2.5 Prebuilt software.....	8
CHAPTER 3 MSP430-169LCD BOARD DESCRIPTION.....	9
3.1 Introduction to the chapter.....	9
3.2 Layout (top view).....	9
3.3 Layout (bottom view).....	10
CHAPTER 4 THE MSP430F169 MICROCONTROLLER.....	11
4.1 Introduction to the chapter.....	11
4.2 The microcontroller.....	11
CHAPTER 5 CONTROL CIRCUITY.....	13
5.1 Introduction to the chapter.....	13
5.2 Reset.....	13
5.3 Clocks.....	13
CHAPTER 6 HARDWARE.....	14
6.1 Introduction to the chapter.....	14
6.2 JTAG connector.....	14
6.3 EXT1.....	14
6.4 EXT2.....	15
6.5 SD/MMC slot.....	16
6.6 Jumper description.....	17
6.7 LCD Display.....	17
6.8 Additional hardware components.....	17
CHAPTER 7 MEMORY AND BLOCK DIAGRAM.....	18
7.1 Introduction to the chapter.....	18
7.2 Memory organization.....	19
CHAPTER 8 SCHEMATICS.....	20

<u>8.1 Introduction to the chapter.....</u>	<u>20</u>
<u>8.2 Eagle schematic.....</u>	<u>20</u>
<u>CHAPTER 9 REVISION HISTORY.....</u>	<u>22</u>
<u>9.1 Introduction to the chapter.....</u>	<u>22</u>
<u>9.2 Document revision.....</u>	<u>22</u>
<u>9.3 Web page of your device.....</u>	<u>22</u>

CHAPTER 1 | OVERVIEW

1.1 Introduction to the chapter

Thank you for choosing the MSP430-169LCD development board from Olimex! This document provides a User's Guide for the Olimex MSP430-169LCD development board. As an overview, this chapter gives the scope of this document and lists the board's features. The document's organization is then detailed.

The MSP430-169LCD development board enables code development of applications running on the MSP430F169 microcontroller, manufactured by Texas Instruments.

1.2 Features

- MCU: MSP430F169 with 60KB Program Flash, 256 Bytes Data Flash, 2 KB RAM
- NOKIA 3310 LCD 84x48 pixels black and white
- Joystick with 4 directions and push button function
- SD/MMC card connector
- Two LEDs: status and power
- RESET switch
- JTAG connector
- 32768 Hz crystal oscillator
- 8 MHz crystal oscillator
- Power supply voltage regulator and filtering capacitors
- Extension headers for all uC pins
- PCB: FR-4, 1.5 mm (0.062"), red soldermask, white silkscreen component print
- Dimensions 67 x 66 mm (2.65 x 2.6")

1.3 Organization

Each section in this document covers a separate topic, organized as follow:

- Chapter 1 is an overview of the board usage and features
- Chapter 2 provides a guide for quickly setting up the board
- Chapter 3 contains the general board diagram and layout
- Chapter 4 describes the component that is the heart of the board: the MSP430F169

microcontroller

- Chapter 5 is an explanation of the control circuitry associated with the microcontroller to reset. Also shows the clocks on the board
- Chapter 6 covers the connector pinout, peripherals and jumper description
- Chapter 7 shows the processor diagram and memory map
- Chapter 8 provides the schematics
- Chapter 9 contains the revision history

CHAPTER 2 | SETTING UP THE MSP430-169LCD BOARD

2.1 Introduction to the chapter

This section helps you set up the MSP430-169LCD development board for the first time.

Please consider first the electrostatic warning to avoid damaging the board, then discover the hardware and software required to operate the board.

The procedure to power up the board is given, and a description of the default board behavior is detailed.

2.2 Electrostatic warning

MSP430-169LCD is shipped in a protective anti-static package. The board must not be exposed to high electrostatic potentials. A grounding strap or similar protective device should be worn when handling the board. Avoid touching the component pins or any other metallic element.

2.3 Requirements

In order to set up the MSP430-169LCD, the following items are required:

- A source of power – the board can be powered through JTAG connector; or through the EXT1 connector.

Note: The board works very nice as an extension to the Olimex board MSP430-easyWEB rev3 by connecting directly to its EXT connectors.

- Programmer supporting 14 pin JTAG interface and the used microcontroller MSP430F169.

All our MSP programmers are recommended with MSP430-169LCD:

- Olimex MSP430-JTAG-TINY-V2 – small emulator/programmer ideal for beginners:
<https://www.olimex.com/Products/MSP430/JTAG/MSP430-JTAG-TINY-V2/>

- Olimex MSP430-JTAG-ISO-MK2 – our best MSP430 emulator/programmer (featuring display, SD card and 3 modes of operation):
<https://www.olimex.com/Products/MSP430/JTAG/MSP430-JTAG-ISO-MK2/>

- Olimex MSP430-JTAG-RF – the first wireless MSP430 emulator/programmer:
<https://www.olimex.com/Products/MSP430/JTAG/MSP430-JTAG-RF/>

Also, a host-based software toolchain is required in order to program/debug the MSP430-169LCD board. There are also a number of ready IDEs available like IAR Embedded Workbench, Rowley CrossWorks, Code Composer Studio, etc.

We also provide our own flash programming software which can be distributed free. You can find it at the device web page.

2.4 Powering the board

There are two options for powering the board:

Either set the jumpers P_IN closed, P_OUT open so you can power from JTAG connector

OR use EXT1 connector for powering up (if you have MSP430-EasyWeb3 you can just mount MSP430-169LCD on it)

On powering the board the PWR LED, LED1 and the display should turn on.

2.5 Prebuilt software


On powering the board the PWR LED should turn on. The LCD should show 3 lines of text and the ability to control the selector marker between them. On pressing the joystick over our test of choice it should be conducted.

CHAPTER 3 | MSP430-169LCD BOARD DESCRIPTION


3.1 Introduction to the chapter

Here you get acquainted with the main parts of the board. Note the names used on the board differ from the names used to describe them. For the actual names check the MSP430-169LCD board itself.

3.2 Layout (top view)

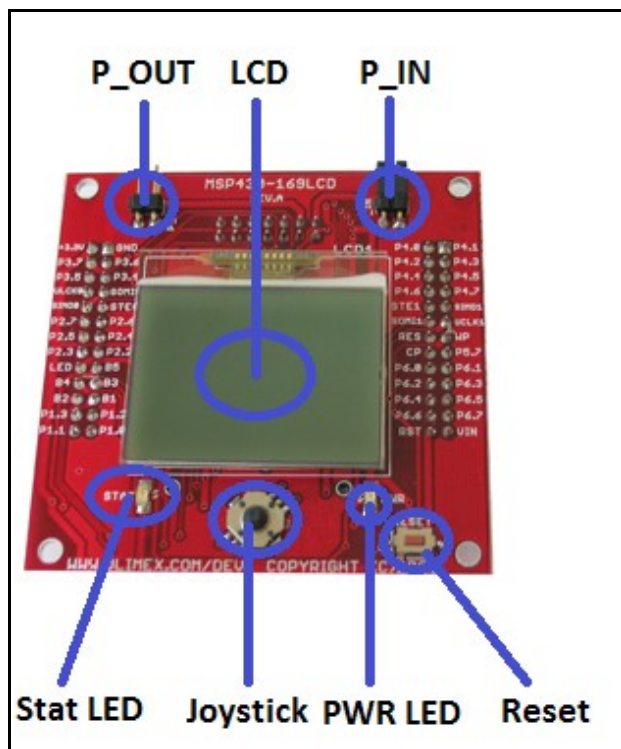

3.3 Layout (bottom view)

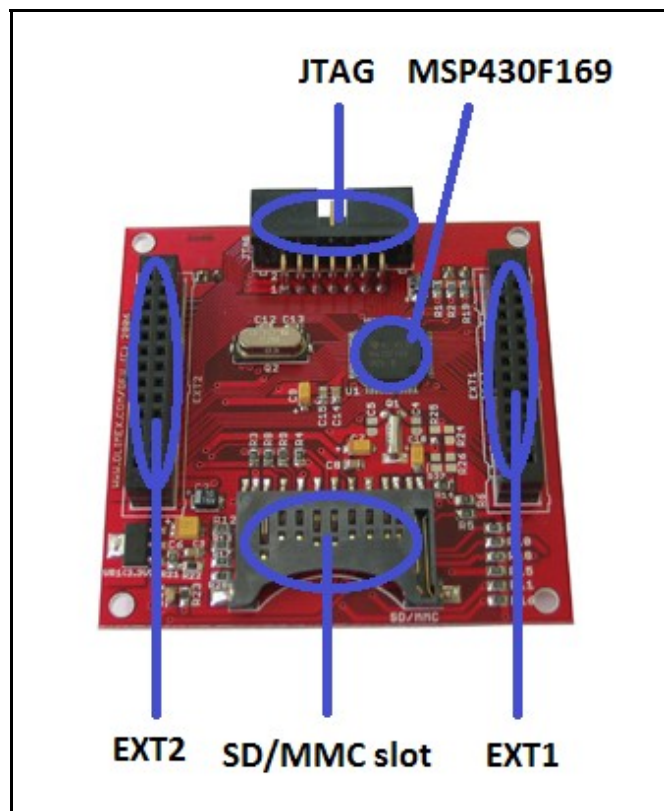

CHAPTER 4 | THE MSP430F169 MICROCONTROLLER

4.1 Introduction to the chapter

In this chapter is located the information about the heart of MSP430-169LCD – its microcontroller. The information is a modified version of the datasheet provided by its manufacturers.

4.2 The microcontroller

Features:

- Low Supply-Voltage Range: 1.8 V to 3.6 V
- Ultralow Power Consumption:
 - Active Mode: 330 μ A at 1 MHz, 2.2 V
 - Standby Mode: 1.1 μ A
 - Off Mode (RAM Retention): 0.2 μ A
- Five Power-Saving Modes
- Wake-Up From Standby Mode in Less Than 6 μ s
- 16-Bit RISC Architecture, 125-ns Instruction Cycle Time
- Three-Channel Internal DMA
- 12-Bit Analog-to-Digital (A/D) Converter With Internal Reference, Sample-and-Hold, and Autoscan Feature
- Dual 12-Bit Digital-to-Analog (D/A) Converters With Synchronization
- 16-Bit Timer_A With Three Capture/Compare Registers
- 16-Bit Timer_B With Three or Seven Capture/Compare-With-Shadow Registers
- On-Chip Comparator
- Serial Communication Interface (USART0), Functions as Asynchronous UART or Synchronous SPI or I2C™ Interface
- Serial Communication Interface (USART1), Functions as Asynchronous UART or Synchronous SPI Interface
- Supply Voltage Supervisor/Monitor With Programmable Level Detection
- Brownout Detector
- Bootstrap Loader
- Serial Onboard Programming, No External Programming Voltage Needed, Programmable Code Protection by Security Fuse
- Family Members Include

MSP430F169
60KB+256B Flash Memory,
2KB RAM

Literature Number SLAU049

For comprehensive information on the microcontroller visit the Texas Instruments web page for a datasheet.

At the moment of writing the microcontroller datasheet can be found at the following link:

<http://www.ti.com/lit/ds/symlink/msp430f169.pdf>

CHAPTER 5 | CONTROL CIRCUITY

5.1 Introduction to the chapter

Here you can find information about reset circuit, power circuit and quartz crystal locations.

5.2 Reset

MSP430-169LCD reset circuit includes MSP430F169 pin 58 (RST/NMI) and a RESET button. The reset can be found also at the EXT2.

5.3 Clocks

Real time clock (RTC) 32 768Hz Q1 is connected to pins 8 and 9 of the processor.

8 MHz quartz crystal Q2 is found at pins 52 and 53 of the processor.

CHAPTER 6 | HARDWARE


6.1 Introduction to the chapter

In this chapter are presented the connectors that can be found on the board all together with their pinout. Proto area is shown. Jumpers functions are described. Notes and info on specific peripherals are presented. Notes regarding the interfaces are given.

6.2 JTAG connector

The 14 pin JTAG connector provides the interface for JTAG programming/debugging. The plastic connector is situated at the bottom of the board. The pinout can be found in the table below.

JTAG Connector			
Pin #	Signal Name	Pin #	Signal Name
1	TDO	8	Not connected
2	P_IN/NC*	9	GND
3	TDI	10	Not connected
4	NC/P_OUT*	11	#RST
5	TMS	12	Not connected
6	Not connected	13	Not connected
7	TCK	14	Not connected

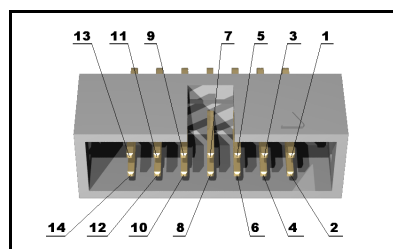

*Depending on the jumper **P_OUT/P_IN** position

6.3 EXT1

The EXT1 and EXT2 headers are female headers at the bottom of the board mouted for easier access to the processor's signals. They also can be used to mount the MSP430-169LCD on MSP430-EASYWEB-3 (<https://www.olimex.com/Products/MSP430/Starter/MSP430-EASYWEB-3/>). The signal table may be found below:

Pin #	Signal Name	Pin#	Signal Name
1	GND	2	+3.3V
3	P3.6	4	P3.7
5	P3.4	6	P3.5
7	SOMI0	8	ULCK0
9	STE0	10	SIM00
11	P2.6	12	P2.7
13	P2.4	14	P2.5
15	P2.2	16	P2.3
17	B5	18	LED
19	B3	20	B4
21	B1	22	B2
23	P1.2	24	P1.3
25	P1.0	26	P1.1

6.4 EXT2


For your convenience the pads are named individually near each of them.

Pin #	Signal Name	Pin#	Signal Name
1	P4.1	2	P4.0
3	P4.3	4	P4.2
5	P4.5	6	P4.4
7	P4.7	8	P4.6
9	SIM01	10	STE1
11	UCLK1	12	SOMI1

Pin #	Signal Name	Pin#	Signal Name
13	WP	14	RES
15	P5.7	16	CP
17	P6.1	18	P6.0
19	P6.3	20	P6.2
21	P6.5	22	P6.4
23	P6.7	24	P6.6
25	RST	26	Vin

6.5 SD/MMC slot

Pin #	Signal Name
1	STE1
2	SIM01
3	GND
4	3.3V
5	UCLK1
6	GND
7	SOMI1
8	Via 100k to 3.3V
9	Via 100k to 3.3V
10	WP
11	NC
12	NC

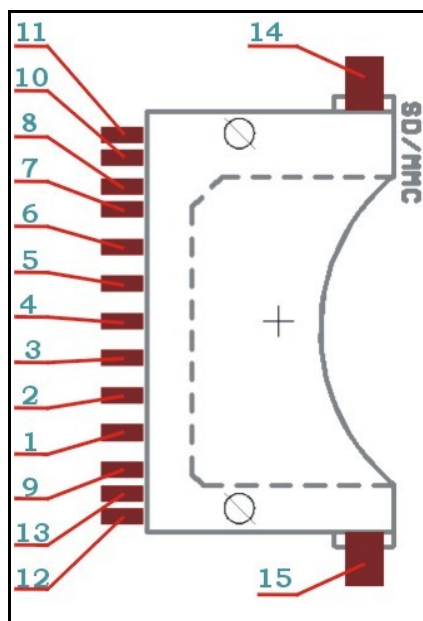

Pin #	Signal Name
13	CP
14	Via 10k to 3.3V
15	Via 10k to 3.3V

6.6 Jumper description

P_OUT/P_IN

This jumper controls power on pins 2 and 4 of the JTAG connector. When in P_OUT is closed 3.3V can be measured at pin 4.

Check the schematic for more info.

Default position is P_OUT – closed, P_IN - open.

6.7 LCD Display

Nokia 3310 display – 84x48 pixels (30x22mm).

6.8 Additional hardware components


The components below are mounted on MSP430-169LCD but are not discussed above. They are listed here for completeness:

STAT + power-on LED
Joystick J1

CHAPTER 7 | MEMORY AND BLOCK DIAGRAM

7.1 Introduction to the chapter

At the right side of the page is located the block diagram of the processor and on the next page you can find a memory map for this family of processors. It is strongly recommended to refer to the original datasheet released by Texas Instruments for ones of higher quality.

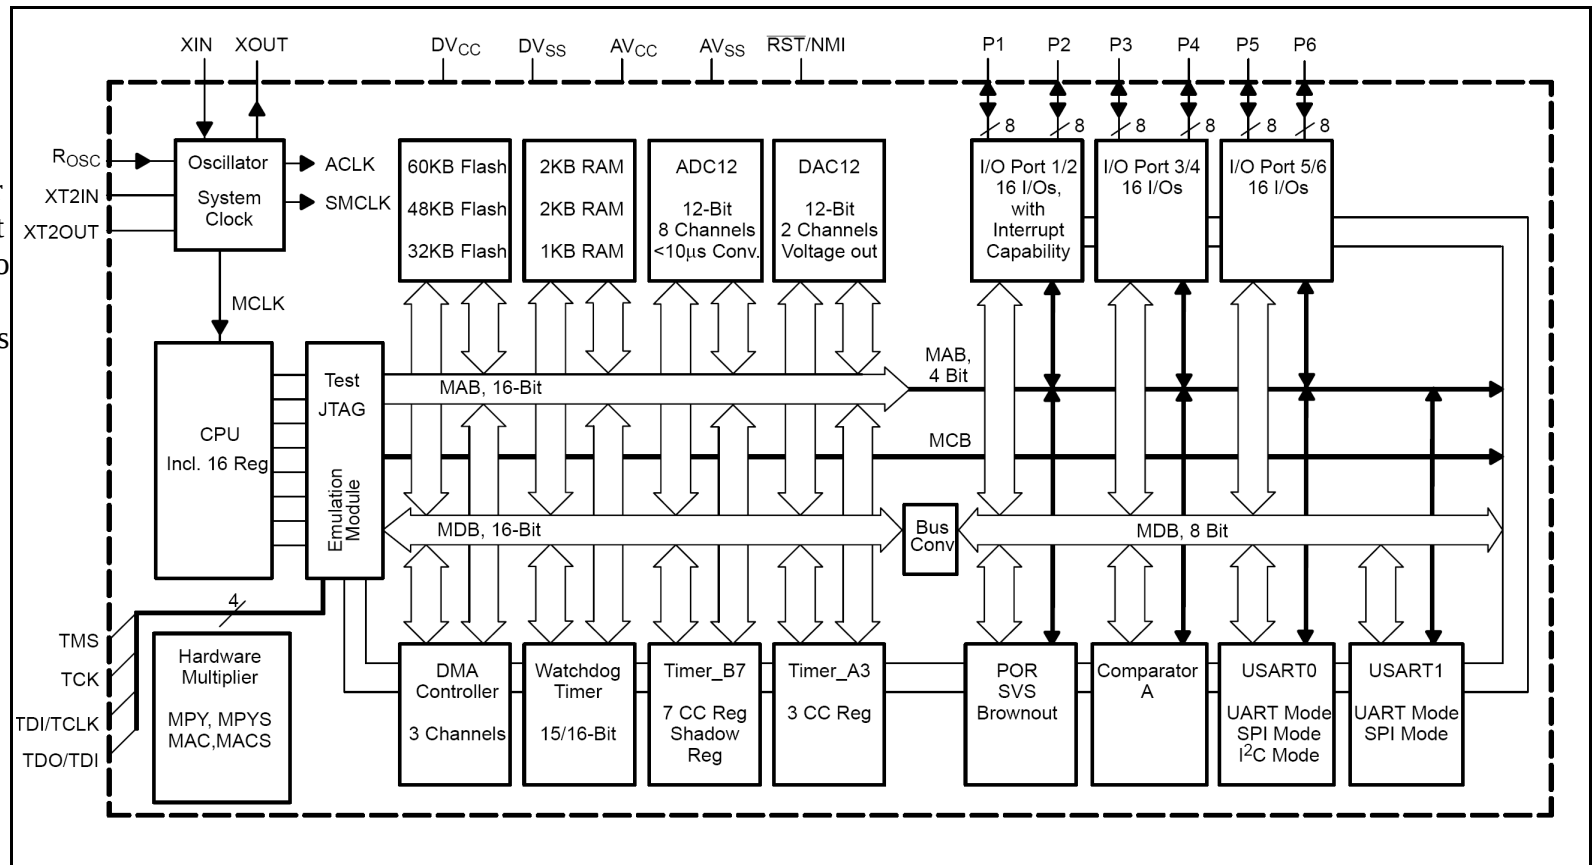

7.2 Memory organization

The interrupt vectors and the power-up starting address are located in the address range 0FFFFh to 0FFE0h. The vector contains the 16-bit address of the appropriate interrupt-handler instruction sequence.

INTERRUPT SOURCE	INTERRUPT FLAG	SYSTEM INTERRUPT	WORD ADDRESS	PRIORITY
Power-up External Reset Watchdog Flash memory	WDTIFG KEYV (see Note 1)	Reset	0FFFEh	15, highest
NMI Oscillator Fault Flash memory access violation	NMIIFG (see Notes 1 and 3) OFIFG (see Notes 1 and 3) ACCVIFG (see Notes 1 and 3)	(Non)maskable (Non)maskable (Non)maskable	0FFFCh	14
Timer_B7 (see Note 5)	TBCCR0 CCIFG (see Note 2)	Maskable	0FFFAh	13
Timer_B7 (see Note 5)	TBCCR1 to TBCCR6 CCIFGs, TBIFG (see Notes 1 and 2)	Maskable	0FFF8h	12
Comparator_A	CAIFG	Maskable	0FFF6h	11
Watchdog timer	WDTIFG	Maskable	0FFF4h	10
USART0 receive	URXIFG0	Maskable	0FFF2h	9
USART0 transmit I ² C transmit/receive/others	UTXIFG0 I2CIFG (see Note 4)	Maskable	0FFF0h	8
ADC12	ADC12IFG (see Notes 1 and 2)	Maskable	0FFEEh	7
Timer_A3	TACCR0 CCIFG (see Note 2)	Maskable	0FFEC h	6
Timer_A3	TACCR1 and TACCR2 CCIFGs, TAIFG (see Notes 1 and 2)	Maskable	0FFEAh	5
I/O port P1 (eight flags)	P1IFG.0 to P1IFG.7 (see Notes 1 and 2)	Maskable	0FFE8h	4
USART1 receive	URXIFG1	Maskable	0FFE6h	3
USART1 transmit	UTXIFG1	Maskable	0FFE4h	2
I/O port P2 (eight flags)	P2IFG.0 to P2IFG.7 (see Notes 1 and 2)	Maskable	0FFE2h	1
DAC12 DMA	DAC12_0IFG, DAC12_1IFG DMA0IFG, DMA1IFG, DMA2IFG (see Notes 1 and 2)	Maskable	0FFE0h	0, lowest

- NOTES: 1. Multiple source flags
2. Interrupt flags are located in the module.
3. (Non)maskable: the individual interrupt-enable bit can disable an interrupt event, but the general-interrupt enable cannot disable it.
4. I²C interrupt flags located in the module
5. Timer_B7 in MSP430F16x/161x family has 7 CCRs; Timer_B3 in MSP430F15x family has 3 CCRs; in Timer_B3 there are only interrupt flags TBCCR0, 1 and 2 CCIFGs and the interrupt-enable bits TBCCR0, 1 and 2 CCIEs.

CHAPTER 8 | SCHEMATICS

8.1 Introduction to the chapter


In this chapter is located the schematic describing logically MSP430-169LCD.

8.2 Eagle schematic

MSP430-169LCD schematic is visible for reference here. You can also find it with higher quality on the web page for MSP430-169LCD at our site:

<https://www.olimex.com/Products/MSP430/Starter/MSP430-169LCD/>. It is located in HARDWARE section.

The EAGLE schematic is situated on the next page for quicker reference.

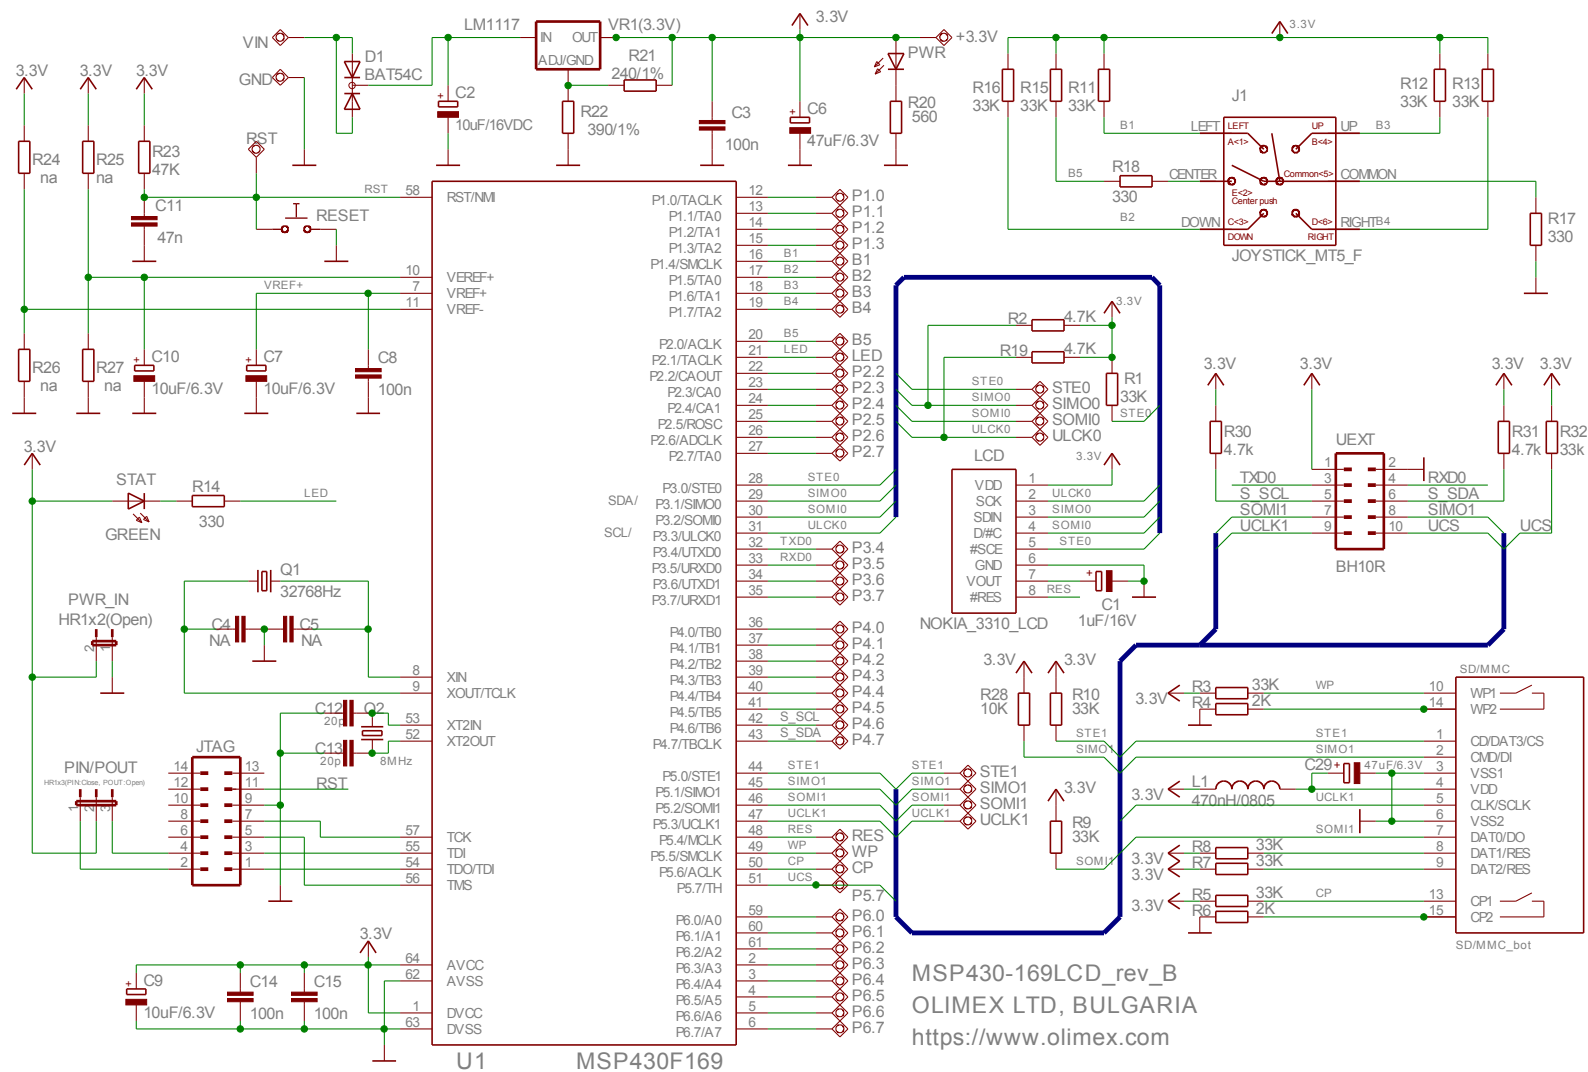

CHAPTER 9 | REVISION HISTORY

9.1 Introduction to the chapter

In this chapter you will find the current and the previous version of the document you are reading. Also the web-page for your device is listed. Be sure to check it after a purchase for the latest available updates and examples.

9.2 Document revision

Revision	Changes	Modified Pages
A	Initial Creation	All

9.3 Web page of your device

The web page you can visit for more info on your device is <https://www.olimex.com/Products/MSP430/Starter/MSP430-169LCD/>. There you can find more info and some examples.

ORDER CODES:

MSP430-169LCD - completely assembled and tested

MSP430-JTAG-ISO – emulator/debugger with 1000VDC isolation

MSP430-JTAG-TINY - mini emulator/programmer USB<->JTAG 14p

MSP430-JTAG-RF – wireless emulator/programmer USB<->JTAG 14p

How to order?

You can order directly from our web shop or from any of our distributors.

Check our webpage <https://www.olimex.com/> for more info. For the full list of distributors visit <https://www.olimex.com/Distributors/>.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.