



MICROCHIP

MCP39F501
Power Monitor PICtail™
Evaluation Board
User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, flexPWR, JukeBlox, KEELOQ, KEELOQ logo, Kleer, LANCheck, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC³² logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

The Embedded Control Solutions Company and mTouch are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, ECAN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, KleerNet, KleerNet logo, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, RightTouch logo, REAL ICE, SQI, Serial Quad I/O, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2014, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-63276-535-2

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949 ==

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC[®] MCUs and dsPIC[®] DSCs, KEELOQ[®] code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Object of Declaration: MCP39F501 Power Monitor PICtail™ Evaluation Board

EU Declaration of Conformity


This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not intended to be a finished appliance, nor is it intended for incorporation into finished appliances that are made commercially available as single functional units to end users. This development/evaluation tool complies with EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA


Derek Carlson
VP Development Tools

16-July-2013
Date

MCP39F501 Power Monitor PICtail™ Evaluation Board User's Guide

NOTES:



MCP39F501 POWER MONITOR PICTAIL™ EVALUATION BOARD USER'S GUIDE

Table of Contents

| | |
|--|-----------|
| Preface | 3 |
| Introduction..... | 3 |
| Document Layout | 3 |
| Conventions Used in this Guide | 4 |
| Recommended Reading..... | 5 |
| The Microchip Web Site | 5 |
| Customer Support | 5 |
| Document Revision History | 5 |
| Chapter 1. Product Overview | |
| 1.1 Introduction | 7 |
| 1.2 What the MCP39F501 Power Monitor PICtail™ Evaluation Board Kit Includes | 8 |
| Chapter 2. Installation and Operation | |
| 2.1 Getting Started | 9 |
| Chapter 3. Hardware | |
| 3.1 Input and Analog Front End | 12 |
| 3.2 Low-Cost Power Supply Circuit | 13 |
| Appendix A. Schematic and Layouts | |
| A.1 Introduction | 15 |
| A.2 Schematics and PCB Layout | 15 |
| A.3 Board – Schematic 1 | 16 |
| A.4 Board – Schematic 2 | 17 |
| A.5 Board – Assembly Top | 18 |
| A.6 Board – Top Silk | 19 |
| A.7 Board – Top Copper and Silk | 20 |
| A.8 Board – Top Copper | 21 |
| A.9 Board – Bottom Copper | 22 |
| Appendix B. Bill of Materials | |
| Worldwide Sales and Service | 26 |

MCP39F501 Power Monitor PICtail™ Evaluation Board User's Guide

NOTES:



MCP39F501 POWER MONITOR PICTAIL™ EVALUATION BOARD USER'S GUIDE

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXXXXA”, where “XXXXXXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP39F501 Power Monitor PICTail™ Evaluation Board. Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP39F501 Power Monitor PICTail™ Evaluation Board as a development board for the MCP39F501 device. The manual layout is as follows:

- **Chapter 1. “Product Overview”** – Provides important information about the MCP39F501 Power Monitor PICTail™ Evaluation Board.
- **Chapter 2. “Installation and Operation”** – Provides important information on using the MCP39F501 Power Monitor PICTail™ Evaluation Board including a getting started section that describes wiring the line and load connections.
- **Chapter 3. “Hardware”** – Includes details on the function blocks of the power monitor including the analog front end design, and power supply design.
- **Appendix A. “Schematic and Layouts”** – Shows the schematic and layout diagrams
- **Appendix B. “Bill of Materials (BOM)”** – Lists the parts used to build the MCP39F501 Power Monitor PICTail™ Evaluation Board.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

| Description | Represents | Examples |
|--|---|---|
| Arial font: | | |
| Italic characters | Referenced books | <i>MPLAB® IDE User's Guide</i> |
| | Emphasized text | ...is the <i>only</i> compiler... |
| Initial caps | A window | the Output window |
| | A dialog | the Settings dialog |
| | A menu selection | select Enable Programmer |
| Quotes | A field name in a window or dialog | "Save project before build" |
| Underlined, italic text with right angle bracket | A menu path | <u><i>File>Save</i></u> |
| Bold characters | A dialog button | Click OK |
| | A tab | Click the Power tab |
| N'Rnnnn | A number in verilog format, where N is the total number of digits, R is the radix and n is a digit. | 4'b0010, 2'hF1 |
| Text in angle brackets < > | A key on the keyboard | Press <Enter>, <F1> |
| Courier New font: | | |
| Plain Courier New | Sample source code | #define START |
| | Filenames | autoexec.bat |
| | File paths | c:\mcc18\h |
| | Keywords | _asm, _endasm, static |
| | Command-line options | -Opa+, -Opa- |
| | Bit values | 0, 1 |
| | Constants | 0xFF, 'A' |
| Italic Courier New | A variable argument | <i>file.o</i> , where <i>file</i> can be any valid filename |
| Square brackets [] | Optional arguments | mcc18 [options] <i>file</i> [options] |
| Curly brackets and pipe character: { } | Choice of mutually exclusive arguments; an OR selection | errorlevel {0 1} |
| Ellipses... | Replaces repeated text | var_name [, var_name...] |
| | Represents code supplied by user | void main (void) { ... } |

RECOMMENDED READING

This user's guide describes how to use MCP39F501 Power Monitor PICtail™ Evaluation Board. Another useful documents is listed below. The following Microchip document is available and recommended as a supplemental reference resource.

MCP39F501 Data Sheet – “Single-Phase Power-Monitoring IC with Calculation and Event Detection” (DS20005256)

This data sheet provides detailed information regarding the MCP39F501 device.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:
<http://www.microchip.com/support>.

DOCUMENT REVISION HISTORY

Revision A (August 2014)

- Initial Release of this Document.

MCP39F501 Power Monitor PICtail™ Evaluation Board User's Guide

NOTES:

Chapter 1. Product Overview

1.1 INTRODUCTION

The MCP39F501 Power Monitor PICTail™ Evaluation Board provides the option of a fully functional single-phase power monitor, along with a development platform. This low-cost design does not use any transformers and requires few external components. The device calculates active power, reactive power, RMS current, RMS voltage, power factor, line frequency and other typical power quantities as defined in the MCP39F501 data sheet.

The *MCP39F501 Power Monitor Utility* software is used to calibrate and monitor the system, and can be used to create custom calibration setups. For some accuracy requirements, only a single point calibration may be needed.

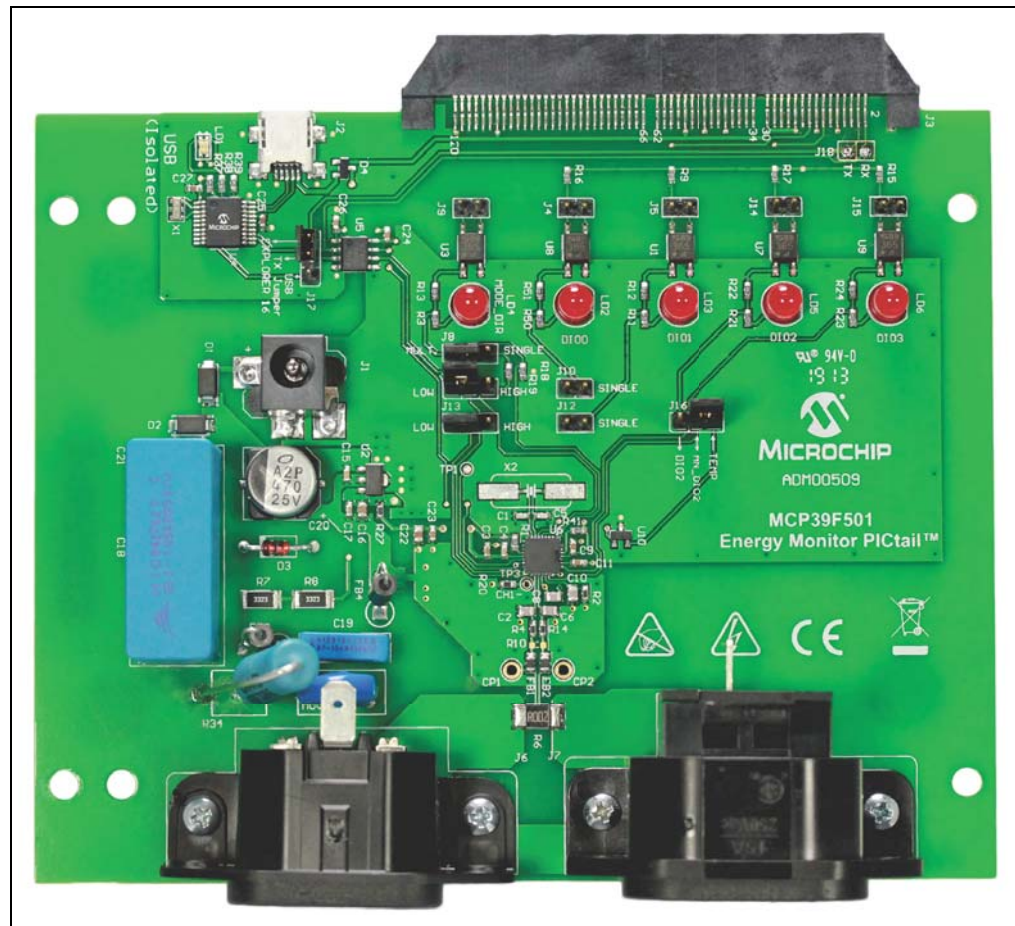


FIGURE 1-1: MCP39F501 Power Monitor PICTail™ Evaluation Board.

1.2 WHAT THE MCP39F501 POWER MONITOR PICTAIL™ EVALUATION BOARD KIT INCLUDES

This MCP39F501 Power Monitor PICtail™ Evaluation Board kit includes:

- MCP39F501 Power Monitor PICtail™ Evaluation Board and Case (ADM00509)
- Line Cable
- Load Cable
- USB Cable
- Important Information Sheet

Chapter 2. Installation and Operation

2.1 GETTING STARTED

To use the MCP39F501 Power Monitor PICTail™ Evaluation Board, follow the steps described below. The meter design uses a 5A load for nominal current and a maximum current (I_{MAX}) of 15A. It is not recommended to draw more than 15A through the AC plugs mounted on the Printed Circuit Board (PCB).

To get started, follow the next steps.

2.1.1 Step 1: Wiring connections

Figure 2-1 identifies the line and load connections of the MCP39F501 Power Monitor PICTail™ Evaluation Board.

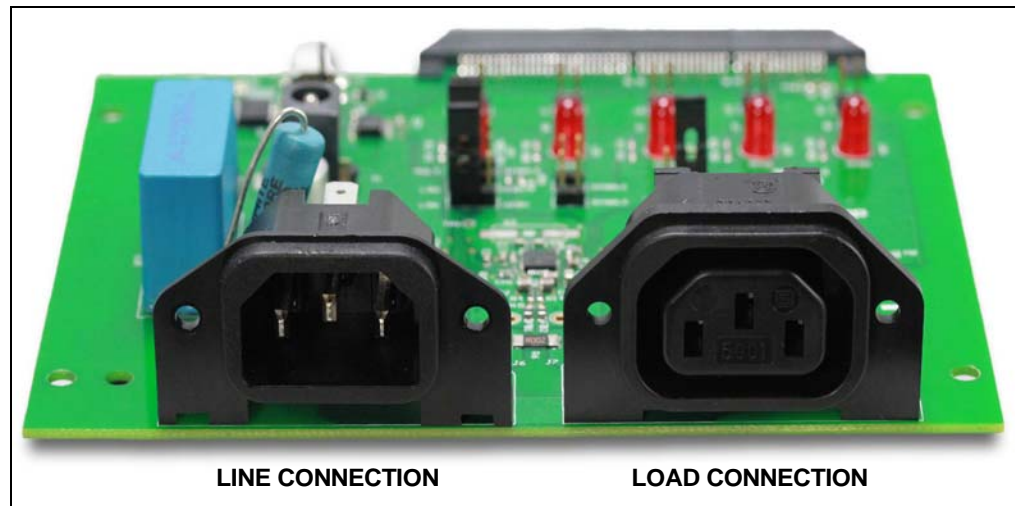


FIGURE 2-1: Connecting the MCP39F501 Power Monitor PICTail™ Evaluation Board.

2.1.2 Step 2: Connect the Line Cable to the Meter and plug into appropriate power plug

The meter will turn on when the line connection has between 90V to 230V.

2.1.3 Step 3: Connect the USB cable to a PC with the installed “MCP39F501 Power Monitor Utility” software

Select the correct COMM port and the following message should appear:

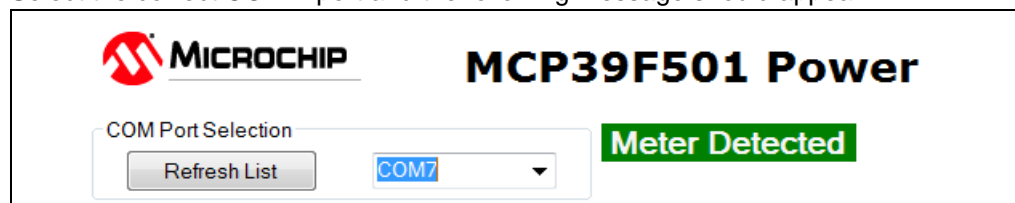


FIGURE 2-2: Successful Connection Between PC and Evaluation Board.

MCP39F501 Power Monitor PICtail™ Evaluation Board User's Guide

NOTES:

Chapter 3. Hardware

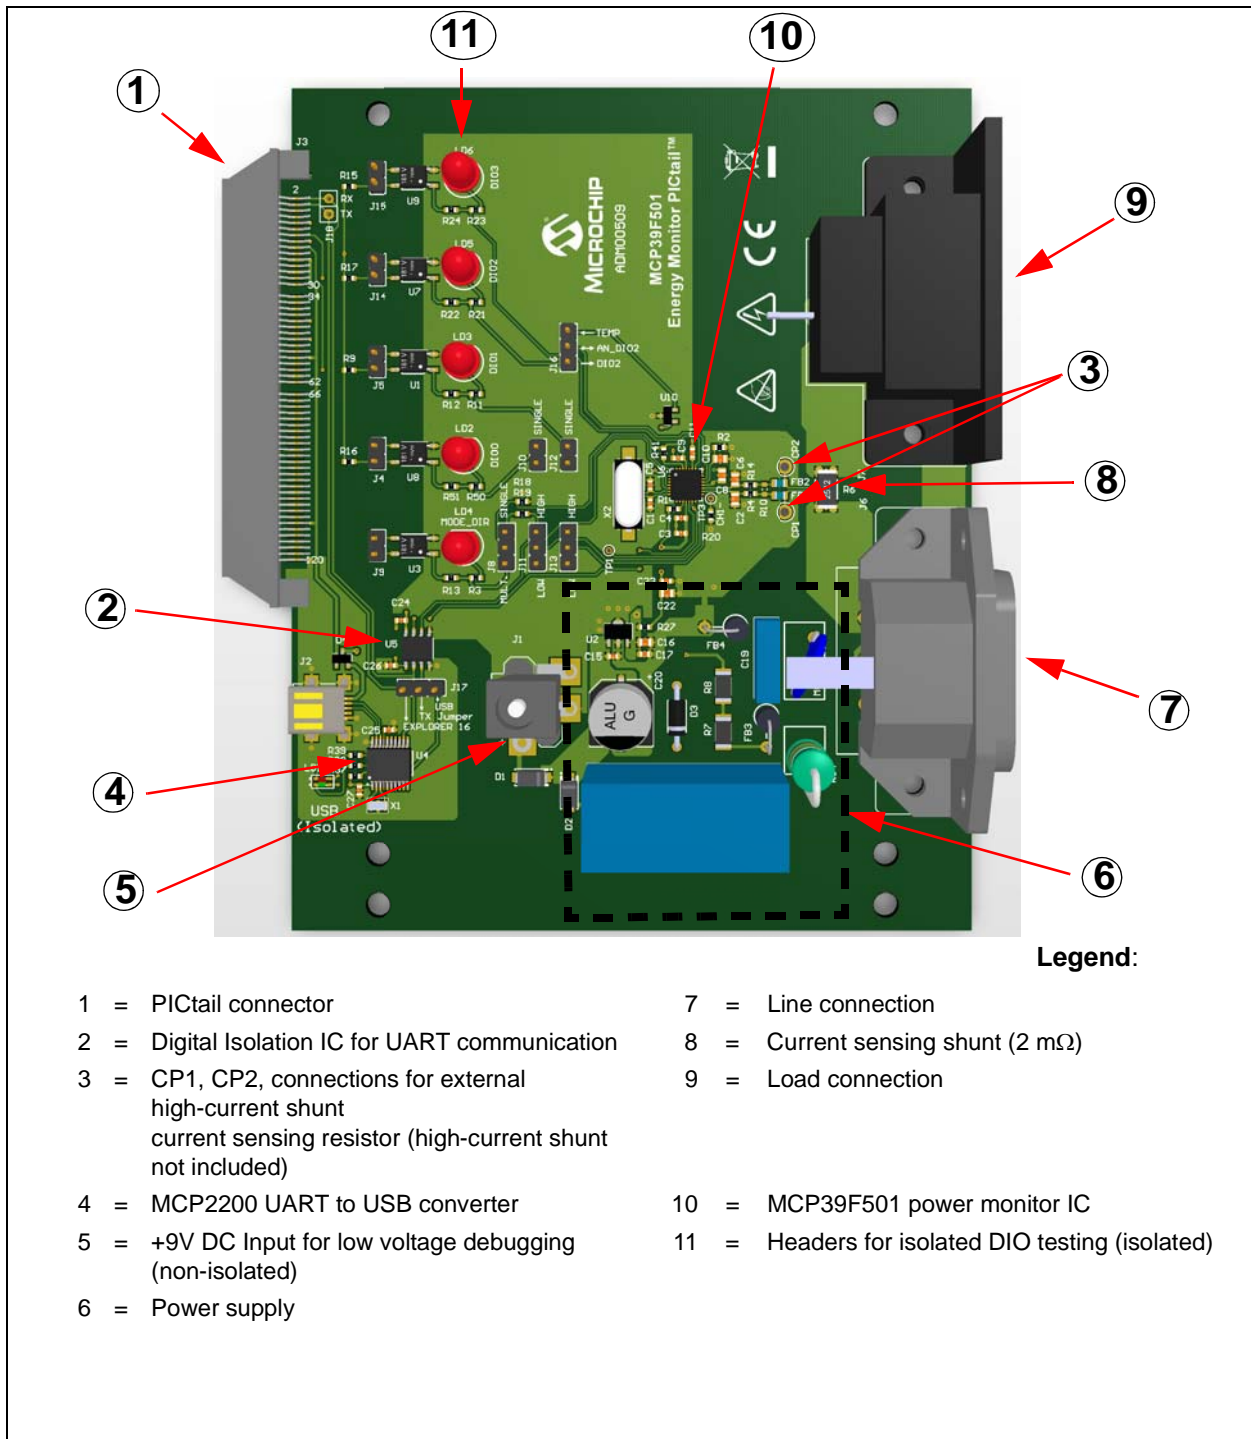


FIGURE 3-1: Top View – Hardware Components.

3.1 INPUT AND ANALOG FRONT END

The MCP39F501 Power Monitor PICtail™ Evaluation Board comes populated with components designed for 90V to 230V line voltage. The neutral side of the phase goes through a 2 mΩ shunt connected directly to the MCP39F501 for current measurement. The line side of the phase goes through a 1000:1 voltage divider and into the device for voltage measurement.

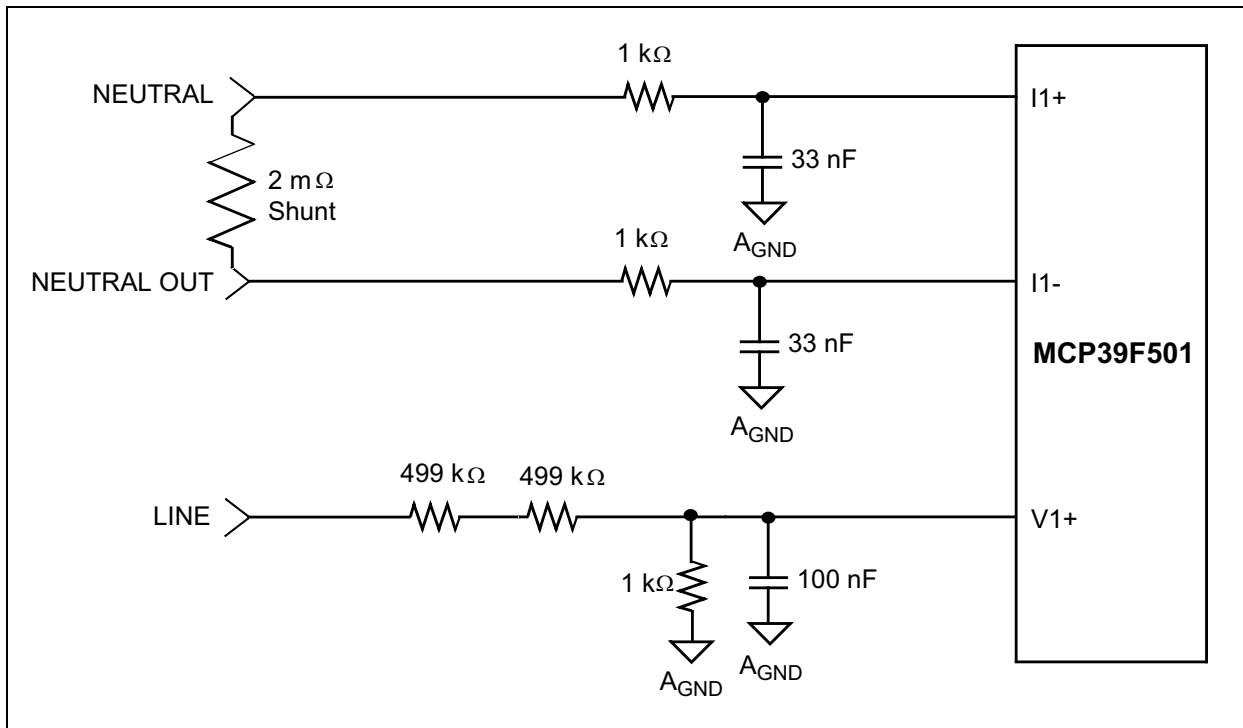


FIGURE 3-2: Analog Front End Circuitry.

Note: All of the analog circuitry associated with this part of the circuit is connected to the analog ground plane, AGND. Similar grounding and layout approaches should be used in all MCP39F501 applications. For complete schematic and PCB layout information, see [Appendix A. “Schematic and Layouts”](#) and [Appendix B. “Bill of Materials \(BOM\)”](#).

3.2 LOW-COST POWER SUPPLY CIRCUIT

The low-cost power supply circuit for the MCP39F501 Power Monitor PICtail™ Evaluation Board uses a capacitively divided half-wave rectified signal, and a +3.3V voltage regulator.

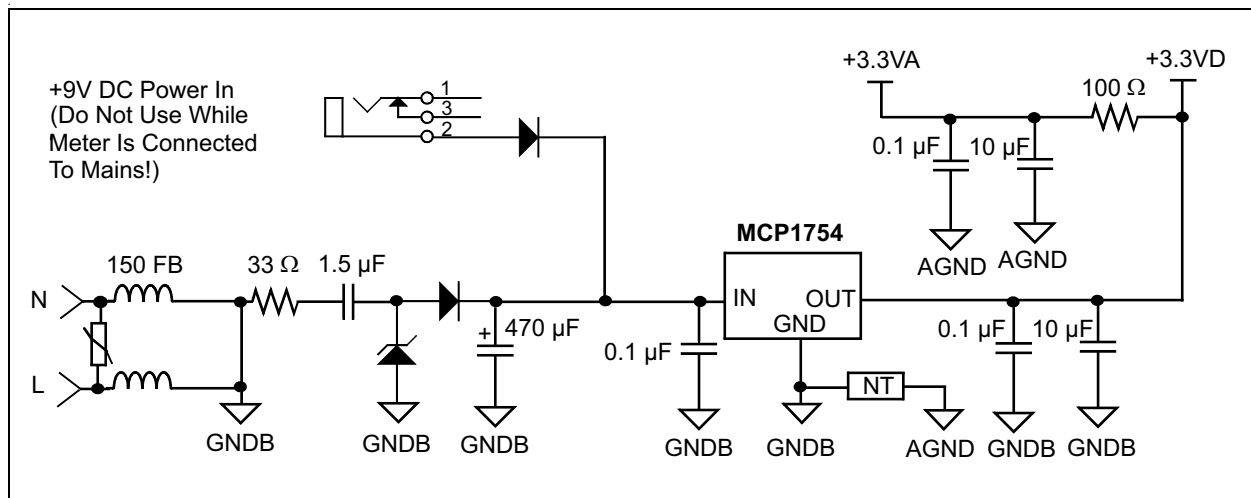


FIGURE 3-3: Low-Cost Power Supply Circuit.

MCP39F501 Power Monitor PICtail™ Evaluation Board User's Guide

NOTES:

Appendix A. Schematic and Layouts

A.1 INTRODUCTION

This appendix contains the following schematics and layouts for of the MCP39F501 Power Monitor PICtail™ Evaluation Board:

- Board – Schematic 1
- Board – Schematic 2
- Board – Assembly Top
- Board – Top Silk
- Board – Top Copper and Silk
- Board – Top Copper
- Board – Bottom Copper

A.2 SCHEMATICS AND PCB LAYOUT

The layer order is shown in [Figure A-1](#).


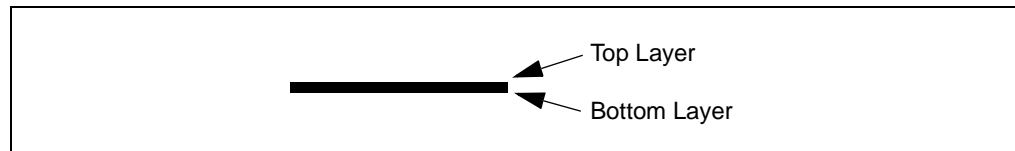



FIGURE A-1: Layer Order.

A.3 BOARD – SCHEMATIC 1

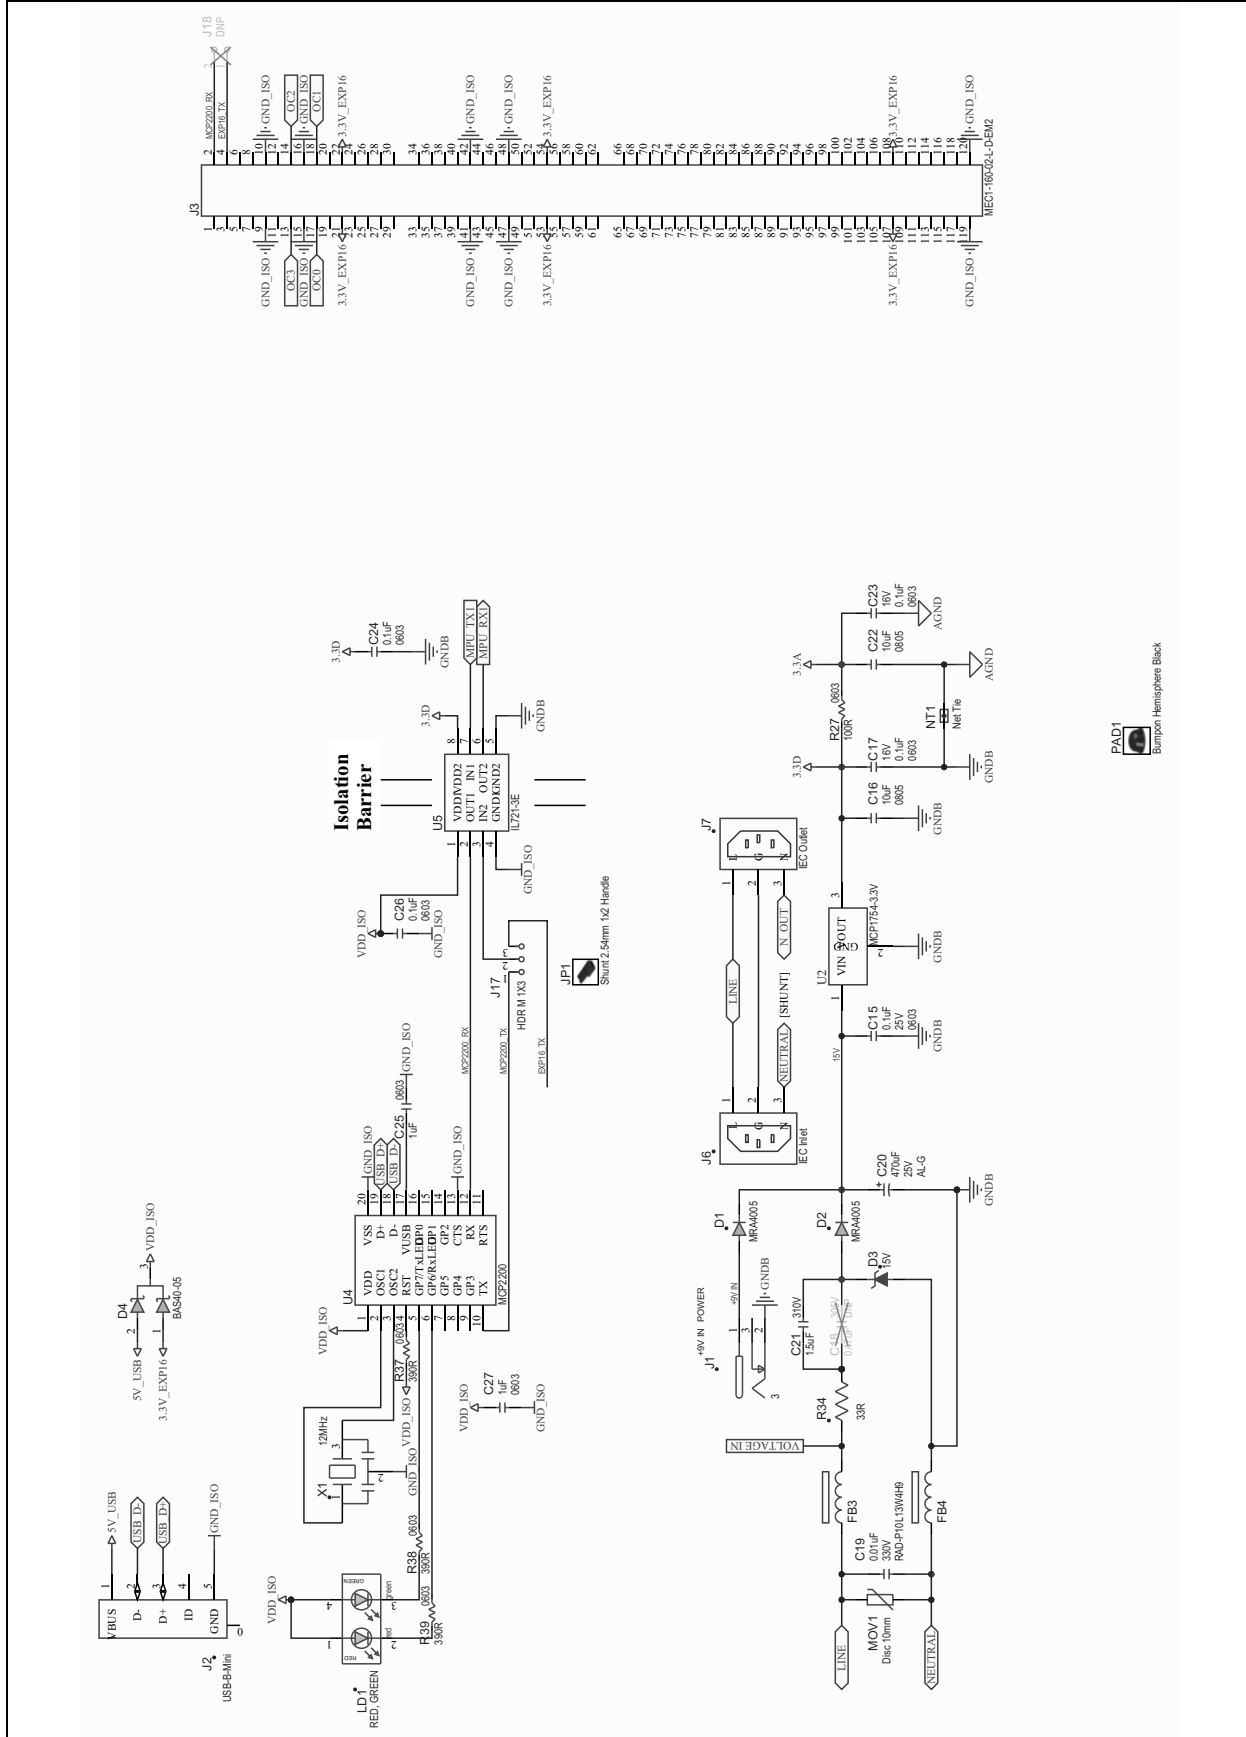


PAD1
Bampon Hemisphere Black


A.4 BOARD – SCHEMATIC 2

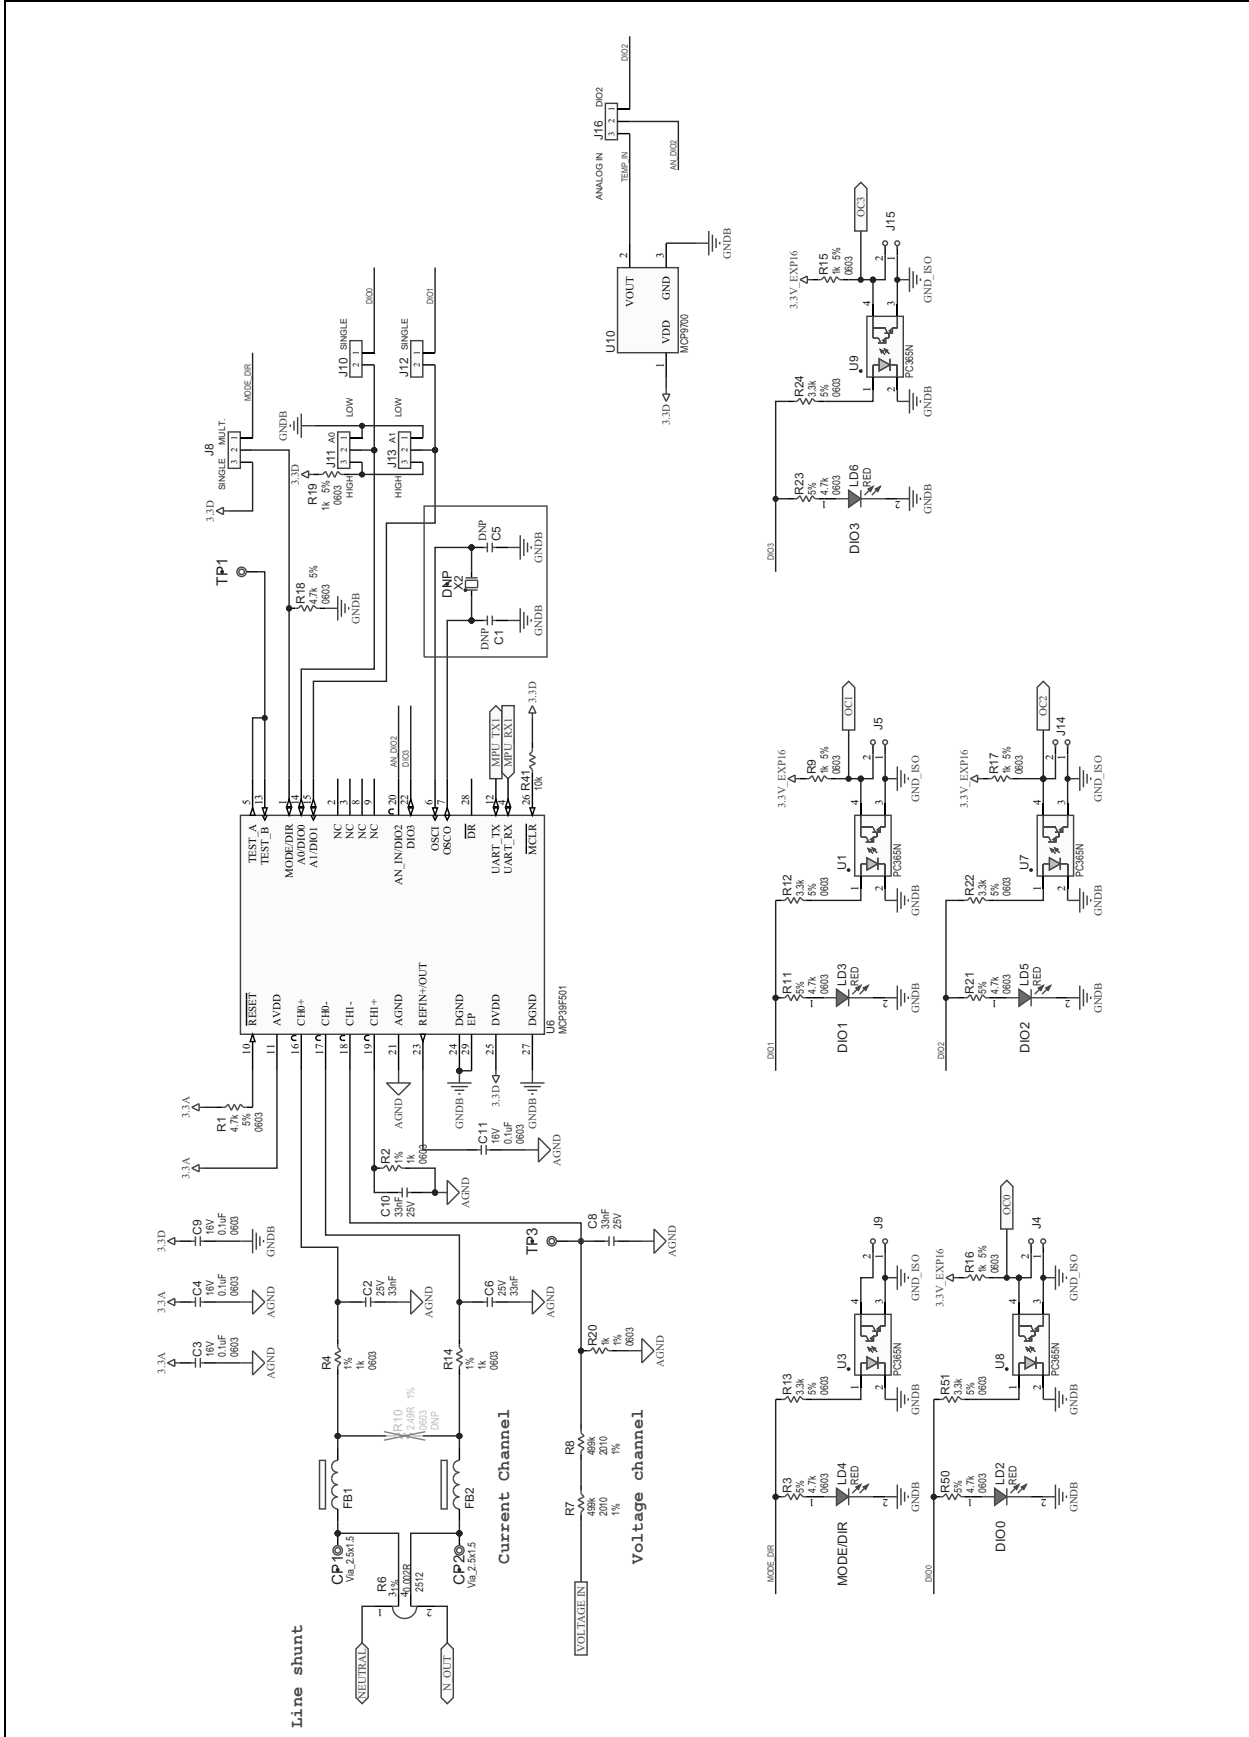


A.5 BOARD – ASSEMBLY TOP

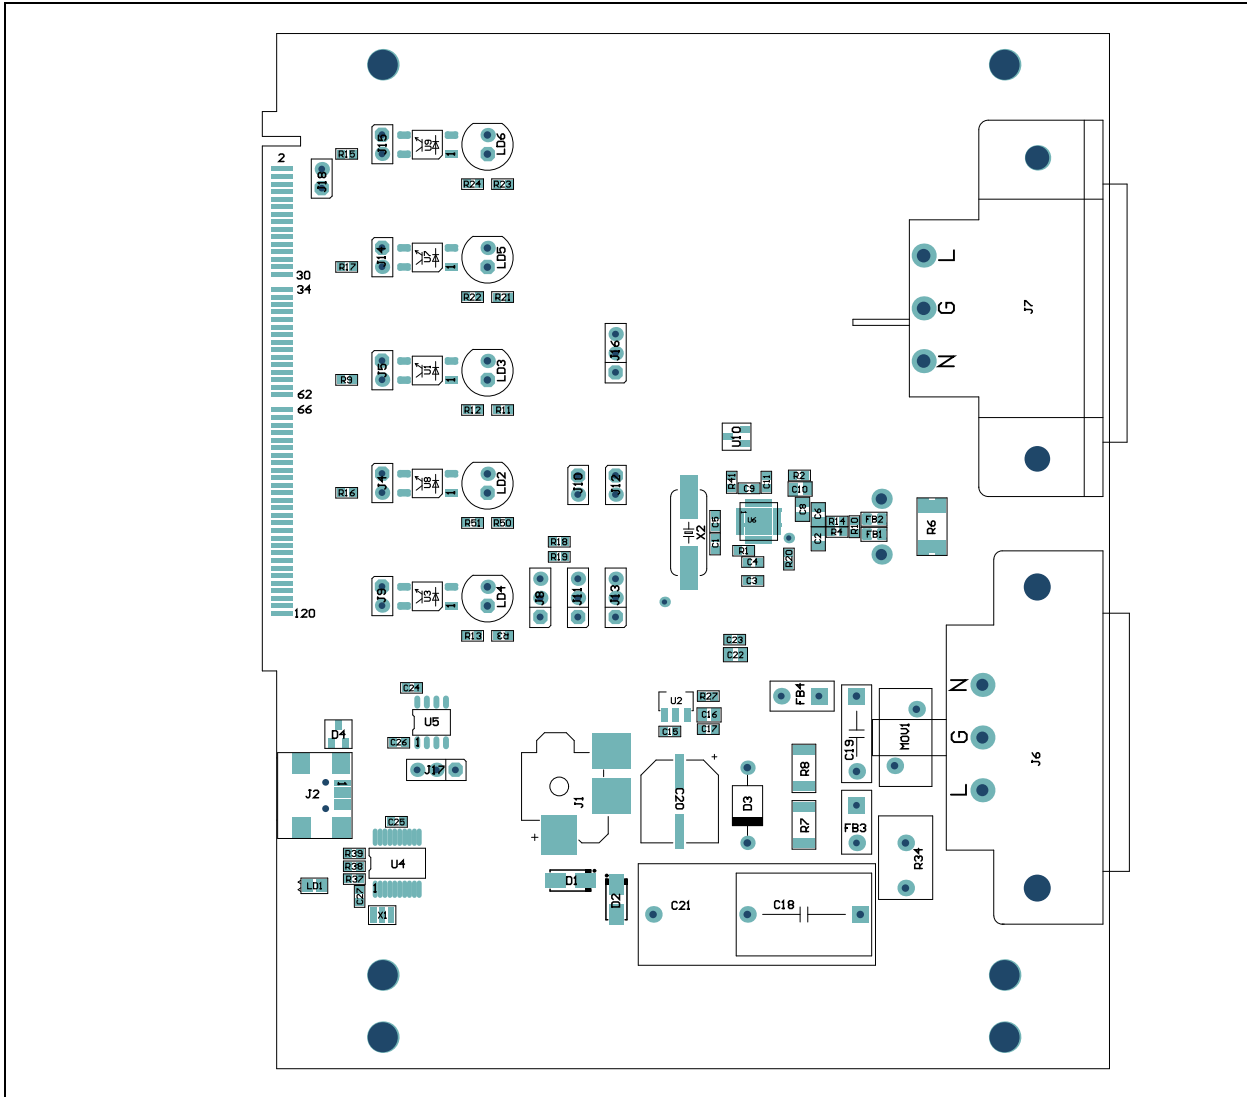


A.6 BOARD – TOP SILK

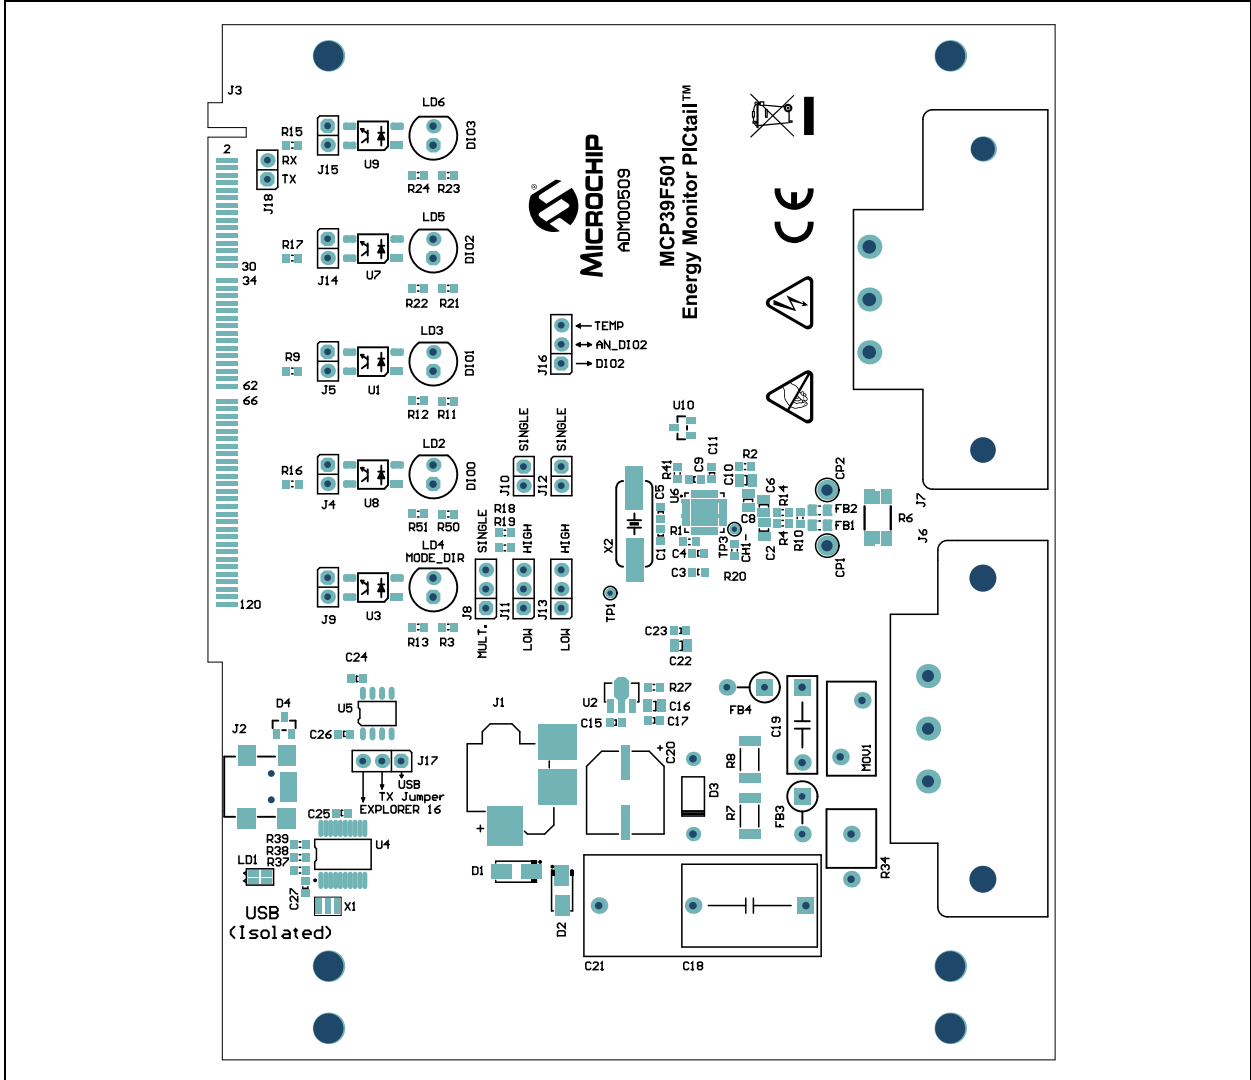

A.8 BOARD – TOP COPPER

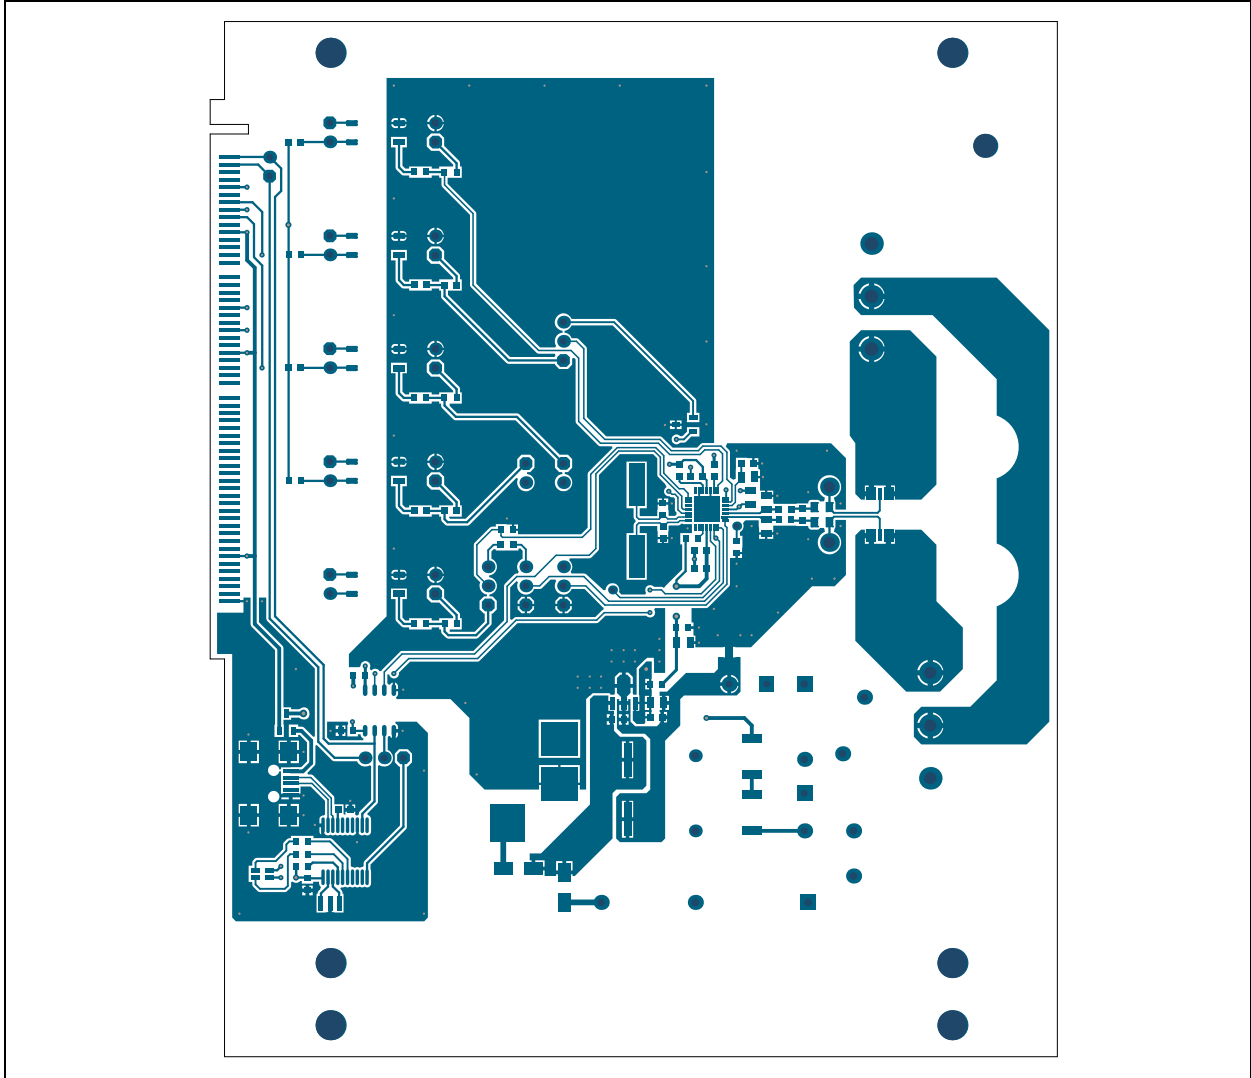

A.9 BOARD – BOTTOM COPPER

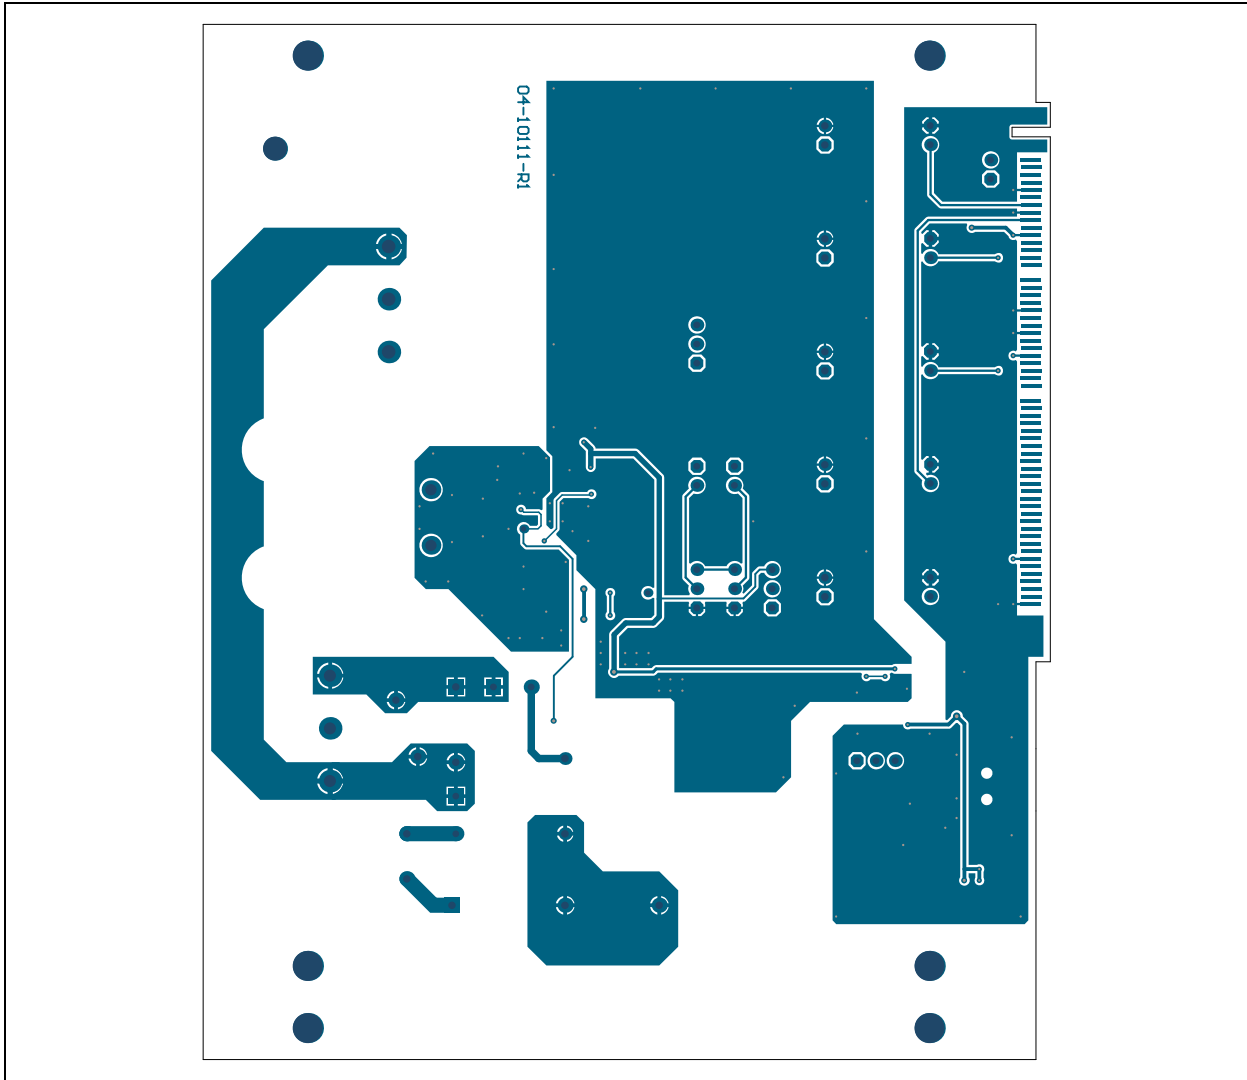

Appendix B. Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM)

| Qty | Reference | Description | Manufacturer | Part Number |
|-----|---|---|--------------------------|--------------------|
| 2 | C1, C5 | Cap. ceramic 18 pF 50V 5% NP0 SMD 0603 - DO NOT POPULATE | Panasonic® - ECG | ECJ-1VC1H180J |
| 1 | C15 | Cap. ceramic 0.1 µF 25V 5% X7R SMD 0603 | AVX Corporation | 06033C104JAT2A |
| 2 | C16, C22 | Cap. ceramic 10 µF 10V 20% Y5V SMD 0805 | TDK Corporation | C2012Y5V1A106Z |
| 0 | C18 | Cap. film 0.47 µF 305V 20% RAD P15L18W11H18.5 - DO NOT POPULATE | EPCOS AG | B32932A3474M |
| 1 | C19 | Cap. film 0.01 µF 330V 20% RAD P10L13W4H9 | EPCOS AG | B32911A3103M |
| 4 | C2, C6, C8, C10 | Cap. ceramic 33 nF 25V 5% C0G, NP0 SMD 0805 | TDK Corporation | C2012C0G1E333J |
| 1 | C20 | Cap. alum. 470 µF 25V 20% SMD G | Nichicon Corporation | UWT1E471MNL1GS |
| 1 | C21 | Cap. film 1.5 µF 310V 20% RAD P27.5L31.5W13.5H23 | EPCOS AG | B32924A2155M |
| 2 | C25, C27 | Cap. ceramic 1 µF 10V 20% X7R SMD 0603 | TDK Corporation | C1608X7R1A105M |
| 8 | C3, C4, C9, C11, C17, C23, C24, C26 | Cap. ceramic 0.1 µF 16V 10% X7R 0603 | TDK Corporation | C1608X7R1C104K |
| 2 | D1, D2 | Diode rect. MRA4005 1.1V 1A 600V DO-214AC_SMA | ON Semiconductor® | MRA4005T3G |
| 1 | D3 | Diode zener 1N4744A 15V 1W DO-41 | Fairchild Semiconductor® | 1N4744A |
| 1 | D4 | Diode Sctky. Arr. bas. 40-05 1V 200 mA 40V SOT-23-3 | Vishay | BAS40-05-V-GS08 |
| 4 | Fasten J6 & J7 to PCB at four locations | Machine screw pan Phillips 6-32 | B&F™ Fasteners Supply | NY PMS 632 0038 PH |
| 4 | Fasten J6 & J7 to PCB at four locations | Hex nut 5/16" nylon 6-32 | B&F™ Fasteners Supply | NY HN 632 |
| 2 | FB1, FB2 | Ferrite 800 mA 0.15R SMD 0805 | Laird Technologies® | LI0805H151R-10 |
| 2 | FB3, FB4 | Ferrite 7A 0.01R RAD P5L5.3D3.8 | Panasonic® - ECG | EXC-ELSR35S |
| 1 | Included in Box at time of packing | USB a male to mini USB B 5 pin cable - 3 foot (distributor Katerno.com) | Katerno.com | 10UM-02103BK |
| 1 | Included in Box at time of packing | 6 foot 16 AWG universal power cord (IEC320C13 to NEMA 5-15P) | Katerno.com | 25545_c2g |

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM) (CONTINUED)

| Qty | Reference | Description | Manufacturer | Part Number |
|-----|------------------------------------|--|-----------------------------------|---------------------|
| 1 | Included in Box at time of packing | 1 foot 18 AWG monitor power adapter cord (NEMA 5-15R to IEC320C14) | Katerno.com | 03147_c2g |
| 1 | J1 | Conn. jack power jack 2.5 mm | CUI Inc. | PJ-006B-SMT |
| 0 | J18 | Conn. header-2.54 male 1x2 th. vert. - DO NOT POPULATE | FCI | 77311-118-02LF |
| 1 | J2 | Conn. USB mini USB-B female SMD R/A | Hirose Electric Co., Ltd. | UX60-MB-5ST |
| 1 | J3 | Conn. edge mini edge card MEC1-EM 1mm female 2x60 SMD R/A | Samtec, Inc. | MEC1-160-02-L-D-EM2 |
| 7 | J4, J5, J9, J10, J12, J14, J15 | Conn. header-2.54 male 1x2 th. vert. | FCI | 77311-118-02LF |
| 1 | J6 | Conn. IEC 250V 15A Inlet th. R/A | SCHURTER Inc. | GSP1.9103.1 |
| 1 | J7 | Conn. IEC 250V 15A Outlet th. R/A | SCHURTER Inc. | 6182.0033 |
| 5 | J8, J11, J13, J16, J17 | Conn. header-2.54 male 1x3 th. vert. | FCI | 68000-103HLF |
| 1 | JP1 | Mech. hw. jumper 2.54 mm 1x2 handle gold | TE Connectivity, Ltd. | 881545-2 |
| 1 | LD1 | Diode LED bi. red, green 1.95V, 2.1V 30 mA 0805 | Kingbright Corp. | APHBM2012SURKCGKC |
| 5 | LD2, LD3, LD4, LD5, LD6 | Diode LED red 1.65V 30 mA RAD T-1_3/4 | Kingbright Corp. | WP7113LSRD |
| 1 | Meter Enclosure | Clear acrylic enclosure | Tech-Demos.com | 072612 R6 |
| 1 | MOV1 | Resistor varistor mo. 420V 45J disc 10 mm | EPCOS AG | S10K420 |
| 4 | PAD1 | Mech. hw. rubber pad Bumpon Hemisphere 0.44" x 0.20" Black | 3M | SJ-5003 (BLACK) |
| 7 | R1, R3, R11, R18, R21, R23, R50 | Resistor tkf. 4.7k 5% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3GEYJ472V |
| 0 | R10 | Resistor tkf. 2.49R 1% 1/10W SMD 0603 - DO NOT POPULATE | Vishay | CRCW06032R49FKEA |
| 5 | R12, R13, R22, R24, R51 | Resistor tkf. 3.3k 5% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3GEYJ332V |
| 4 | R2, R4, R14, R20 | Resistor tkf. 1k 1% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3EKF1001V |
| 1 | R27 | Res. tkf. 100R 1% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3EKF1000V |
| 1 | R34 | Res. 33 ohm 5W 1% AXIAL | Ohmite [®] Manufacturing | 45F33RE |
| 3 | R37, R38, R39 | Res. tkf. 390R 5% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3GEYJ391V |
| 1 | R41 | Res. tkf. 10k 5% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3GEYJ103V |
| 1 | R6 | Res. shunt MF 0.002R 1% 2W 2512 | Stackpole Electronics, Inc. | CSNL2512FT2L00 |
| 2 | R7, R8 | Res. 499K ohm 3/4W 1% 2010 SMD | Vishay Dale | CRCW2010499KFKEF |
| 5 | R9, R15, R16, R17, R19 | Resistor tkf. 1k 5% 1/10W SMD 0603 | Panasonic - ECG | ERJ-3GEYJ102V |
| 5 | U1, U3, U7, U8, U9 | IC photo PC365N 4-SMD | Sharp Microelectronics | PC365NJ0000F |

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM) (CONTINUED)

| Qty | Reference | Description | Manufacturer | Part Number |
|-----|-----------|--|--------------------------------|---------------------------|
| 1 | U10 | Microchip Analog Temperature Sensor MCP9700 SOT-23-3 | Microchip Technology Inc. | MCP9700T-E/TT |
| 1 | U2 | Microchip Analog LDO MCP1754ST-3302E/MB SOT-89-3 | Microchip Technology Inc. | MCP1754ST-3302E/MB |
| 1 | U4 | Microchip int. USB MCP2200 SSOP-20 | Microchip Technology Inc. | MCP2200-I/SS |
| 1 | U5 | IC isolator IL721-3E SOIC-8 | NVE Corp./Isolation Products | IL721-3E |
| 1 | U6 | MCP39F501 QFN-28 | Microchip Technology Inc. | MCP39F501-E/MQ |
| 1 | X1 | Resonator 12MHz 0.1% SMD CSTCE-G | Murata Manufacturing Co., Ltd. | CSTCE12M0G15L99-R0 |
| 1 | X2 | Crystal 4MHz 18pF SMD HC49/US - DO NOT POPULATE | Abracon® Corporation | ABLS-4.000MHZ-B4-T |

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



MICROCHIP

Worldwide Sales and Service

AMERICAS

Corporate Office

2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta

Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX

Tel: 512-257-3370

Boston

Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago

Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland

Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas

Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Novi, MI
Tel: 248-848-4000

Houston, TX

Tel: 281-894-5983

Indianapolis

Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453

Los Angeles

Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

New York, NY

Tel: 631-435-6000

San Jose, CA

Tel: 408-735-9110

Canada - Toronto

Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2943-5100
Fax: 852-2401-3431

Australia - Sydney

Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8569-7000
Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing

Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Hangzhou

Tel: 86-571-8792-8115
Fax: 86-571-8792-8116

China - Hong Kong SAR

Tel: 852-2943-5100
Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8864-2200
Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Xiamen

Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai

Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi

Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-3019-1500

Japan - Osaka

Tel: 81-6-6152-7160
Fax: 81-6-6152-9310

Japan - Tokyo

Tel: 81-3-6880-3770
Fax: 81-3-6880-3771

Korea - Daegu

Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-5778-366
Fax: 886-3-5770-955

Taiwan - Kaohsiung

Tel: 886-7-213-7830

Taiwan - Taipei

Tel: 886-2-2508-8600
Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Dusseldorf

Tel: 49-2129-3766400

Germany - Munich

Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Pforzheim

Tel: 49-7231-424750

Italy - Milan

Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Venice

Tel: 39-049-7625286

Netherlands - Drunen

Tel: 31-416-690399
Fax: 31-416-690340

Poland - Warsaw

Tel: 48-22-3325737

Spain - Madrid

Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Stockholm

Tel: 46-8-5090-4654

UK - Wokingham

Tel: 44-118-921-5800
Fax: 44-118-921-5820

03/25/14



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.