74LV123

Dual retriggerable monostable multivibrator with reset

Rev. 8 — 4 March 2016

Product data sheet

1. General description

The 74LV123 is a low-voltage Si-gate CMOS device and is pin and function compatible with the 74HC123; 74HCT123. It is a dual retriggerable monostable multivibrator which uses three methods to control the output pulse width:

- 1. The basic pulse time is programmed by the selection of an external resistor (R_{EXT}) and capacitor (C_{EXT}). These are normally connected as shown in <u>Figure 9</u>.
- 2. Once triggered, the basic output pulse width may be extended by retriggering the gated active LOW-going edge input (nA) or the active HIGH-going edge input (nB). By repeating this process, the output pulse period (nQ = HIGH, nQ = LOW) can be made as long as desired (see Figure 12).
- 3. Alternatively, an output delay can be terminated at any time by a LOW-going edge on input nRD, which also inhibits the triggering (see Figure 13).

Schmitt-trigger action in the $n\overline{A}$ and nB inputs makes the circuit highly tolerant of slower input rise and fall times.

2. Features and benefits

- Optimized for low-voltage applications: 1.0 V to 5.5 V
- Accepts TTL input levels between V_{CC} = 2.7 V and V_{CC} = 3.6 V
- Typical output ground bounce: < 0.8 V at V_{CC} = 3.3 V and T_{amb} = 25 °C
- Typical HIGH-level output voltage (V_{OH}) undershoot: > 2 V at V_{CC} = 3.3 V and T_{amb} = 25 °C
- DC triggered from active HIGH or active LOW inputs
- Retriggerable for very long pulses up to 100 % duty factor
- Direct reset terminates output pulses
- Schmitt-trigger action on all inputs except for the reset input




Dual retriggerable monostable multivibrator with reset

3. Ordering information


Table 1. Ordering information

Type number	Package								
	Temperature range Name Description								
74LV123D	−40 °C to +125 °C	SO16	plastic small outline package; 16 leads; body width 3.9 mm	SOT109-1					
74LV123DB	-40 °C to +125 °C	SSOP16	plastic shrink small outline package; 16 leads; body width 5.3 mm	SOT338-1					
74LV123PW	-40 °C to +125 °C	TSSOP16	plastic thin shrink small outline package; 16 leads; body width 4.4 mm	SOT403-1					
74LV123BQ	-40 °C to +125 °C	DHVQFN16	plastic dual in-line compatible thermal enhanced very thin quad flat package; no leads; 16 terminals; body $2.5 \times 3.5 \times 0.85$ mm	SOT763-1					


4. Functional diagram

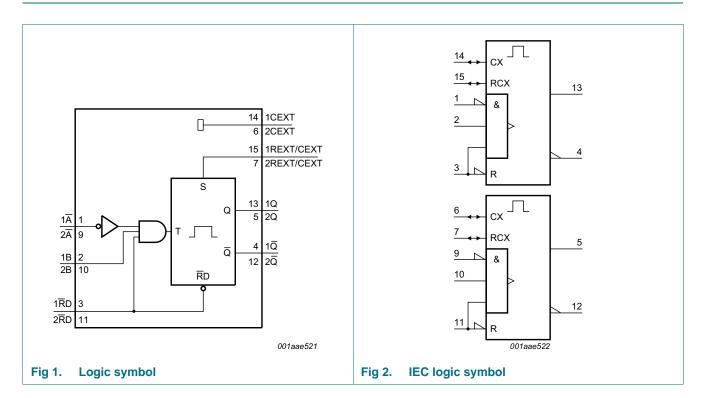

Dual retriggerable monostable multivibrator with reset

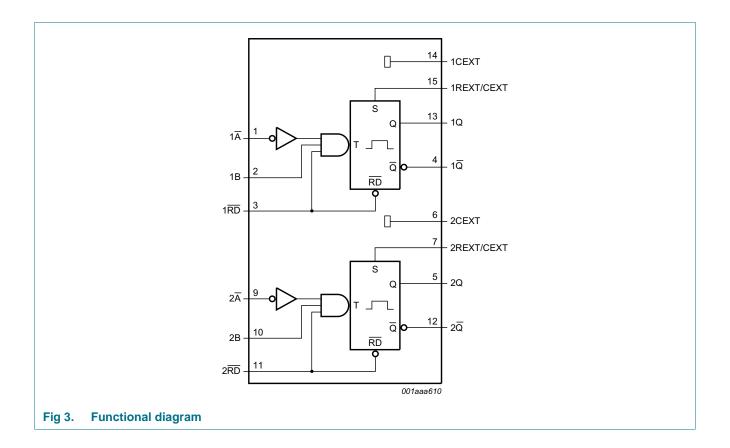


Dual retriggerable monostable multivibrator with reset

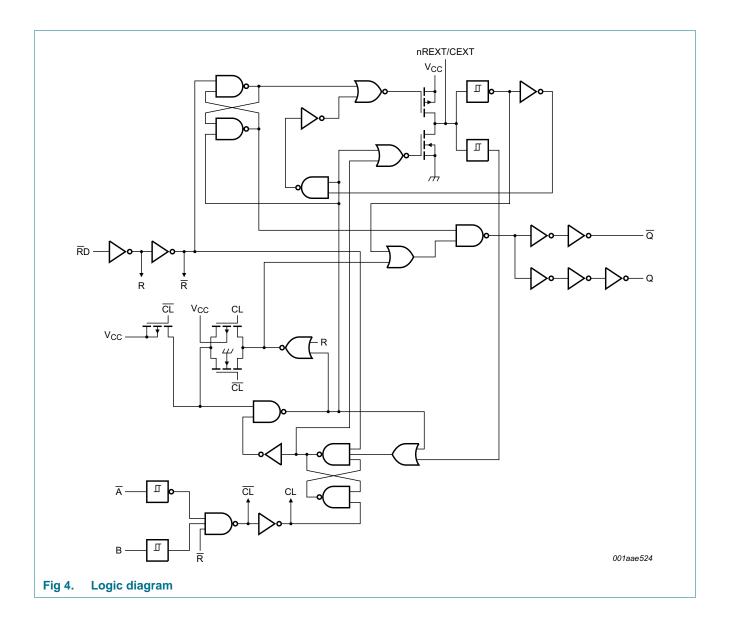

Dual retriggerable monostable multivibrator with reset

5. Pinning information

5.1 Pinning

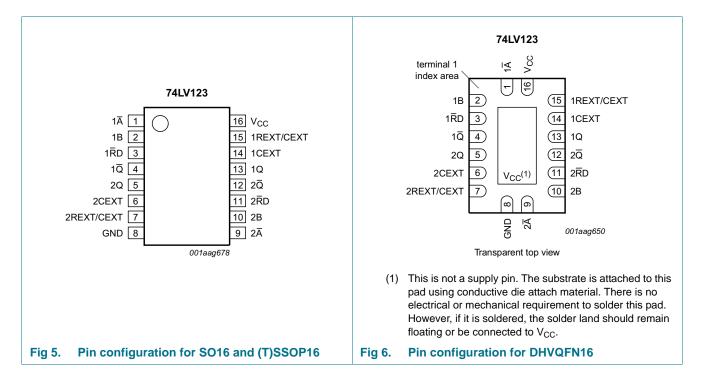

5.2 Pin description

Table 2. Pin description

Symbol	Pin	Description
1Ā	1	negative-edge triggered input 1
1B	2	positive-edge triggered input 1
1RD	3	direct reset LOW and positive-edge triggered input 1
1Q	4	active LOW output 1
2Q	5	active HIGH output 2
2CEXT	6	external capacitor connection 2
2REXT/CEXT	7	external resistor and capacitor connection 2
GND	8	ground (0 V)
2Ā	9	negative-edge triggered input 2
2B	10	positive-edge triggered input 2
2RD	11	direct reset LOW and positive-edge triggered input 2
2Q	12	active LOW output 2
1Q	13	active HIGH output 1
1CEXT	14	external capacitor connection 1
1REXT/CEXT	15	external resistor and capacitor connection 1
V _{CC}	16	supply voltage

Dual retriggerable monostable multivibrator with reset

6. Functional description

Table 3. Function table[1]

			Output	Output		
nRD	nĀ	nB	nQ	nQ		
L	X	X	L	Н		
X	Н	X	<u>[2]</u>	H[2]		
Χ	X	L	<u>[2]</u>	H[2]		
Н	L	\uparrow	Л	T		
Н	\	Н	Л	T		
\uparrow	L	Н	Л	T		

[1]	H = HIGH voltage	level:

L = LOW voltage level;

X = don't care;

↑ = LOW-to-HIGH transition;

 \downarrow = HIGH-to-LOW transition;

 \prod = one HIGH level output pulse

= one LOW level output pulse

[2] If the monostable multivibrator was triggered before this condition was established, the pulse will continue as programmed.

Dual retriggerable monostable multivibrator with reset

7. Limiting values

Table 4. Limiting values

In accordance with the Absolute Maximum Rating System (IEC 60134). Voltages are referenced to GND (ground = 0 V).

Symbol	Parameter	Conditions		Min	Max	Unit
V _{CC}	supply voltage			-0.5	+7	V
I _{IK}	input clamping current	$V_{I} < -0.5 \text{ V or } V_{I} > V_{CC} + 0.5 \text{ V}$	[1]	-	±20	mA
I _{OK}	output clamping current	$V_{O} < -0.5 \text{ V or } V_{O} > V_{CC} + 0.5 \text{ V}$	[1]	-	±50	mA
lo	output current	except for pins nREXT/CEXT; $V_O = -0.5 \text{ V to } (V_{CC} + 0.5 \text{ V})$	[1]	-	±25	mA
I _{CC}	supply current			-	+50	mA
I _{GND}	ground current			-50	-	mA
T _{stg}	storage temperature			-65	+150	°C
P _{tot}	total power dissipation	$T_{amb} = -40 ^{\circ}\text{C} \text{ to } +125 ^{\circ}\text{C}$				
		SO16 package	[2]	-	500	mW
		SSOP16 package	[3]	-	500	mW
		TSSOP16 package	[3]	-	500	mW
		DHVQFN16 package	<u>[4]</u>	-	500	mW

^[1] The input and output voltage ratings may be exceeded if the input and output current ratings are observed.

8. Recommended operating conditions

Table 5. Recommended operating conditions

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
V _{CC}	supply voltage	[1]	1.0	3.3	5.5	V
VI	input voltage		0	-	V _{CC}	V
Vo	output voltage		0	-	V _{CC}	V
T _{amb}	ambient temperature	in free air	-40	+25	+125	°C
Δt/ΔV	input transition rise and fall rate	$V_{CC} = 1.0 \text{ V to } 2.0 \text{ V}$ [2]	-	-	500	ns/V
		V _{CC} = 2.0 V to 2.7 V	-	-	200	ns/V
		V _{CC} = 2.7 V to 3.6 V	-	-	100	ns/V
		V _{CC} = 3.6 V to 5.5 V	-	-	50	ns/V

^[1] The 74LV123 is guaranteed to function down to V_{CC} = 1.0 V (input levels GND or V_{CC}); Section 9 "Static characteristics" are guaranteed from V_{CC} = 1.2 V to V_{CC} = 5.5 V.

^[2] For SO16 package: P_{tot} derates linearly with 8 mW/K above 70 °C.

^[3] For SSOP16 and TSSOP16 packages: P_{tot} derates linearly with 5.5 mW/K above 60 °C.

^[4] For DHVQFN16 package: Ptot derates linearly with 4.5 mW/K above 60 °C.

^[2] Except for Schmitt-trigger inputs $n\overline{A}$ and nB.

Dual retriggerable monostable multivibrator with reset

9. Static characteristics

Table 6. Static characteristics

At recommended operating conditions; voltages are referenced to GND (ground = 0 V).

Symbol	Parameter	Conditions	Min	Typ[1]	Max	Unit
T _{amb} = -	40 °C to +85 °C					
V _{IH}	HIGH-level input voltage	V _{CC} = 1.2 V	0.9	-	-	V
		V _{CC} = 2.0 V	1.4	-	-	V
		V _{CC} = 2.7 V to 3.6 V	2.0	-	-	V
		V _{CC} = 4.5 V to 5.5 V	$0.7 \times V_{CC}$	-	-	V
V _{IL}	LOW-level input voltage	V _{CC} = 1.2 V	-	-	0.3	V
		V _{CC} = 2.0 V	-	-	0.6	V
		V _{CC} = 2.7 V to 3.6 V	-	-	0.8	V
		V _{CC} = 4.5 V to 5.5 V	-	-	$0.3 \times V_{CC}$	V
V _{OH}	HIGH-level output voltage	$V_I = V_{IH}$ or V_{IL}				
		$I_O = -100 \mu A; V_{CC} = 1.2 V$	-	1.2	-	V
		$I_{O} = -100 \mu A; V_{CC} = 2.0 V$	1.8	2.0	-	V
		$I_{O} = -100 \mu A; V_{CC} = 2.7 V$	2.5	2.7	-	V
		$I_{O} = -100 \mu A; V_{CC} = 3.0 V$	2.8	3.0	-	V
		$I_{O} = -100 \mu A; V_{CC} = 4.5 V$	4.3	4.5	-	V
		$I_{O} = -6 \text{ mA}; V_{CC} = 3.0 \text{ V}$	2.40	2.82	-	V
		$I_{O} = -12 \text{ mA}; V_{CC} = 4.5 \text{ V}$	3.60	4.20	-	V
V _{OL}	LOW-level output voltage	$V_I = V_{IH}$ or V_{IL}				
		I _O = 100 μA; V _{CC} = 1.2 V	-	0	-	V
		I _O = 100 μA; V _{CC} = 2.0 V	-	0	0.2	V
		I _O = 100 μA; V _{CC} = 2.7 V	-	0	0.2	V
		I _O = 100 μA; V _{CC} = 3.0 V	-	0	0.2	V
		I _O = 100 μA; V _{CC} = 4.5 V	-	0	0.2	V
		I _O = 6 mA; V _{CC} = 3.0 V	-	0.25	0.40	V
		I _O = 12 mA; V _{CC} = 4.5 V	-	0.35	0.55	V
I _I	input leakage current	$V_I = V_{CC}$ or GND; $V_{CC} = 5.5 \text{ V}$	-	-	1.0	μΑ
I _{CC}	supply current	$V_I = V_{CC}$ or GND; $I_O = 0$ A; $V_{CC} = 5.5$ V	-	-	20.0	μΑ
ΔI_{CC}	additional supply current	$V_{I} = V_{CC} - 0.6 \text{ V}; V_{CC} = 2.7 \text{ V to } 3.6 \text{ V}$	-	-	500	μΑ
Cı	input capacitance		-	3.5	-	pF

Dual retriggerable monostable multivibrator with reset

Table 6. Static characteristics ...continued
At recommended operating conditions; voltages are referenced to GND (ground = 0 V).

Symbol	Parameter	Conditions	Min	Typ[1]	Max	Unit
T _{amb} = -	40 °C to +125 °C					
V _{IH}	HIGH-level input voltage	V _{CC} = 1.2 V	0.9	-	-	V
		V _{CC} = 2.0 V	1.4	-	-	V
		V _{CC} = 2.7 V to 3.6 V	2.0	-	-	V
		V _{CC} = 4.5 V to 5.5 V	$0.7 \times V_{CC}$	-	-	V
V _{IL}	LOW-level input voltage	V _{CC} = 1.2 V	-	-	0.3	V
		V _{CC} = 2.0 V	-	-	0.6	V
		V _{CC} = 2.7 V to 3.6 V	-	-	0.8	V
		V _{CC} = 4.5 V to 5.5 V	-	-	$0.3 \times V_{CC}$	V
V _{OH}	HIGH-level output voltage	$V_I = V_{IH}$ or V_{IL}				
		$I_{O} = -100 \mu A; V_{CC} = 1.2 V$	-	-	-	V
		$I_{O} = -100 \mu A; V_{CC} = 2.0 V$	1.8	-	-	V
		$I_{O} = -100 \mu A; V_{CC} = 2.7 V$	2.5	-	-	V
		$I_{O} = -100 \mu A; V_{CC} = 3.0 V$	2.8	-	-	V
		$I_{O} = -100 \mu A; V_{CC} = 4.5 V$	4.3	-	-	V
		$I_{O} = -6 \text{ mA}; V_{CC} = 3.0 \text{ V}$	2.2	-	-	V
		$I_{O} = -12 \text{ mA}; V_{CC} = 4.5 \text{ V}$	3.5	-	-	V
V _{OL}	LOW-level output voltage	$V_I = V_{IH}$ or V_{IL}				
		I _O = 100 μA; V _{CC} = 1.2 V	-	-	-	V
		I _O = 100 μA; V _{CC} = 2.0 V	-	-	0.2	V
		I _O = 100 μA; V _{CC} = 2.7 V	-	-	0.2	V
		I _O = 100 μA; V _{CC} = 3.0 V	-	-	0.2	V
		I _O = 100 μA; V _{CC} = 4.5 V	-	-	0.2	V
		I _O = 6 mA; V _{CC} = 3.0 V	-	-	0.5	V
		I_{O} = 12 mA; V_{CC} = 4.5 V	-	-	0.65	V
I _I	input leakage current	$V_I = V_{CC}$ or GND; $V_{CC} = 5.5 \text{ V}$	-	-	1.0	μΑ
I _{CC}	supply current	$V_I = V_{CC}$ or GND; $I_O = 0$ A; $V_{CC} = 5.5$ V	-	-	160	μΑ
ΔI_{CC}	additional supply current	$V_{I} = V_{CC} - 0.6 \text{ V}; V_{CC} = 2.7 \text{ V to } 3.6 \text{ V}$	-	-	850	μΑ

^[1] All typical values are measured at T_{amb} = 25 °C.

Dual retriggerable monostable multivibrator with reset

10. Dynamic characteristics

Table 7. Dynamic characteristics

GND = 0 V; $t_f = t_f \le 2.5$ ns; for test circuit see <u>Figure 8</u>.

Symbol	Parameter Conditions		-4	-40 °C to +85 °C			-40 °C to +125 °C	
			Min	Typ[1]	Max	Min	Max	
Propaga	tion delay; see	Figure 7						
t _{pd} pr	propagation	nRD, nA and nB to nQ	[2]					
	delay	V _{CC} = 1.2 V	-	120	-	-	-	ns
		V _{CC} = 2.0 V	-	40	76	-	92	ns
		V _{CC} = 2.7 V	-	30	56	-	68	ns
		V _{CC} = 3.0 V to 3.6 V	-	25	48	-	57	ns
		V _{CC} = 4.5 V to 5.5 V	-	18	40	-	46	ns
		nRD to nQ (reset)	[2]					
		V _{CC} = 1.2 V	-	100	-	-	-	ns
		V _{CC} = 2.0 V	-	30	57	-	68	ns
		V _{CC} = 2.7 V	-	23	43	-	51	ns
		V _{CC} = 3.0 V to 3.6 V	-	20	38	-	45	ns
		V _{CC} = 4.5 V to 5.5 V	-	14	31	-	36	ns
Inputs n	A, nB and nRD;	see Figure 7						
t _W	pulse width	$n\overline{A} = LOW$						
		V _{CC} = 2.0 V	30	5	-	40	-	ns
		V _{CC} = 2.7 V	25	3.5	-	30	-	ns
		V _{CC} = 3.0 V to 3.6 V	20	3.0	-	25	-	ns
		V _{CC} = 4.5 V to 5.5 V	15	2.5	-	20	-	ns
		nB = HIGH						
		V _{CC} = 2.0 V	30	13	-	40	-	ns
		V _{CC} = 2.7 V	25	8	-	30	-	ns
		$V_{CC} = 3.0 \text{ V to } 3.6 \text{ V}$	20	7	-	25	-	ns
		V _{CC} = 4.5 V to 5.5 V	15	5	-	20	-	ns
		$\overline{NRD} = LOW$; see Figure 13						
		V _{CC} = 2.0 V	35	6	-	45	-	ns
		V _{CC} = 2.7 V	30	5	-	40	-	ns
		$V_{CC} = 3.0 \text{ V to } 3.6 \text{ V}$	25	4	-	30	-	ns
		V _{CC} = 4.5 V to 5.5 V	20	3	-	25	-	ns
t _{rtrig}	retrigger time	nB to nA; see Figure 12						
		V _{CC} = 2.0 V	-	70	-	-	-	ns
		V _{CC} = 2.7 V	-	55	-	-	-	ns
		$V_{CC} = 3.0 \text{ V to } 3.6 \text{ V}$	-	45	-	-	-	ns
		V _{CC} = 4.5 V to 5.5 V	-	40	-	-	-	ns

Dual retriggerable monostable multivibrator with reset

Table 7. Dynamic characteristics ...continued GND = 0 V; $t_r = t_f \le 2.5$ ns; for test circuit see <u>Figure 8</u>.

Symbol	Parameter	Conditions		-40 °C to +85 °C			–40 °C to	Unit	
			N	/lin	Typ[1]	Max	Min	Max	
Outputs	; nQ = LOW and	nQ = HIGH, see <u>Figure 7</u>							
t _W	pulse width	C_{EXT} = 100 nF; R_{EXT} = 10 k Ω							
		V _{CC} = 2.0 V		-	470	-	-	-	ns
		V _{CC} = 2.7 V		-	460	-	-	-	ns
		V _{CC} = 3.0 V to 3.6 V		-	450	-	-	-	ns
		V _{CC} = 4.5 V to 5.5 V		-	430	-	-	-	ns
		$C_{EXT} = 0 \text{ pF}; R_{EXT} = 5 \text{ k}\Omega$							
		V _{CC} = 2.0 V		-	100	-	-	-	ns
		V _{CC} = 2.7 V		-	90	-	-	-	ns
		V _{CC} = 3.0 V to 3.6 V		-	80	-	-	-	ns
		V _{CC} = 4.5 V to 5.5 V		-	70	-	-	-	ns
External	components								
R _{EXT}	external resistance	see Figure 11	[3]						
		V _{CC} = 1.2 V		10	-	1000	-	-	kΩ
		V _{CC} = 2.0 V		5	-	1000	-	-	kΩ
		V _{CC} = 2.7 V		3	-	1000	-	-	kΩ
		V _{CC} = 3.0 V to 3.6 V		2	-	1000	-	-	kΩ
		V _{CC} = 4.5 V to 5.5 V		2	-	1000	-	-	kΩ
C _{EXT}	external capacitance	see Figure 11	[3] [4]						
		V _{CC} = 1.2 V		-	-	-	-	-	рF
		V _{CC} = 2.0 V		-	-	-	-	-	рF
		V _{CC} = 2.7 V		-	-	-	-	-	рF
		$V_{CC} = 3.0 \text{ V to } 3.6 \text{ V}$		-	-	-	-	-	pF
		$V_{CC} = 4.5 \text{ V to } 5.5 \text{ V}$		-	-	-	-	-	pF
Dynamic	power dissipati	on			1	1	1	1	1
C _{PD}	power dissipation capacitance	$V_{CC} = 3.3 \text{ V}; V_I = \text{GND to } V_{CC}$	[5]	-	60	-	-	-	pF

- [1] All typical values are measured at T_{amb} = 25 °C and nominal supply values (V_{CC} = 3.3 V and 5.0 V).
- [2] t_{pd} is the same as t_{PLH} and t_{PHL} ; C_{EXT} = 0 pF; R_{EXT} = 5 k Ω .
- [3] For other R_{EXT} and C_{EXT} combinations see Figure 11 and Section 12.1.1 "Basic timing".
- [4] C_{EXT} has no limits.
- [5] C_{PD} is used to determine the dynamic power dissipation (P_D in μ W).

 $P_D = C_{PD} \times V_{CC}^2 \times f_i \times N + \Sigma (C_L \times V_{CC}^2 \times f_o) \text{ where:}$

 f_i = input frequency in MHz;

f_o = output frequency in MHz;

C_L = output load capacitance in pF;

V_{CC} = supply voltage in V;

N = number of inputs switching;

 $\Sigma(C_L \times V_{CC}^2 \times f_o)$ = sum of the outputs.

Dual retriggerable monostable multivibrator with reset

11. Waveforms


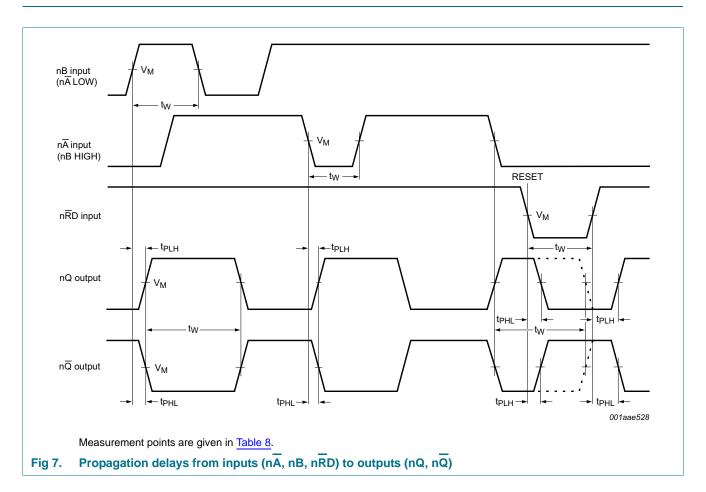


Table 8. Measurement points

Vcc	V_{M}
≥ 2.7 V	1.5 V
< 2.7 V	0.5 × V _{CC}

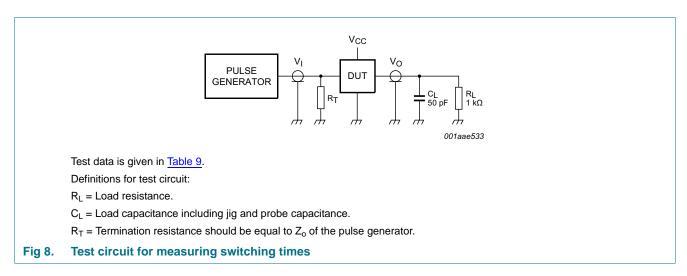

Dual retriggerable monostable multivibrator with reset

Table 9. Test data


Supply voltage	Input	Input		Load	
V _{CC}	V _I	t _r , t _f	CL	R _L	
< 2.7 V	V _{CC}	≤ 2.5 ns	50 pF	1 kΩ	t _{PHL} , t _{PLH}
2.7 V to 3.6 V	2.7 V	≤ 2.5 ns	50 pF	1 kΩ	t _{PHL} , t _{PLH}
≥ 4.5 V	V _{CC}	≤ 2.5 ns	50 pF	1 kΩ	t _{PHL} , t _{PLH}

12. Application information

12.1 Timing components

12.1.1 Basic timing

The basic output pulse width is essentially determined by the values of the external timing components R_{EXT} and C_{EXT} .

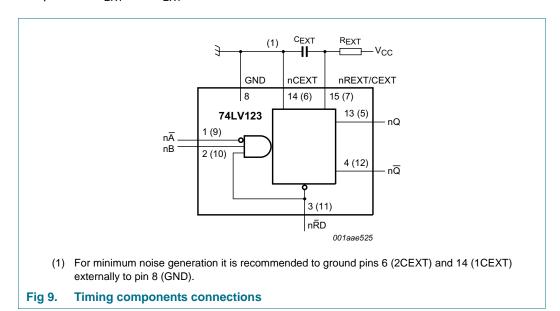

If $C_{EXT} > 10$ nF, the following formula is valid: $t_W = K \times R_{EXT} \times C_{EXT}$ (typ.) where:

 t_W = output pulse width in ns


 R_{EXT} = external resistor in $k\Omega$

C_{EXT} = external capacitor in pF

K = constant: this is 0.45 for $V_{CC} = 5.0 \text{ V}$ and 0.48 for $V_{CC} = 2.0 \text{ V}$ (see Figure 10)

The inherent test jig and pin capacitance at pin 15 and pin 7 (nREXT/CEXT) is approximately 7 pF.

Dual retriggerable monostable multivibrator with reset

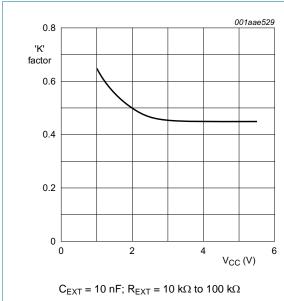

 t_{W} (ns) t_{W} (ns) t_{W} (ns) t_{W} (ns) t_{W} t_{W}

Fig 10. Typical 'K' factor as a function of V_{CC}

Fig 11. Typical output pulse width as a function of the external capacitance values

12.1.2 Retrigger timing

The time to retrigger the monostable multivibrator depends on the values of R_{EXT} and C_{EXT} . The output pulse width will only be extended when the time between the active going edges of the trigger pulses meets the minimum retrigger time. If $C_{\text{EXT}} > 10$ pF, the next formula for the set-up time of a retrigger pulse is valid:

at
$$V_{CC}$$
 = 5.0 V: t_{rtrig} = 30 + 0.19 $R_{EXT} \times C_{EXT}^{0.9}$ + 13 × $R_{EXT1.05}$ (typ.)


at
$$V_{CC} = 3.0 \text{ V: } t_{rtrig} = 41 + 0.15 R_{EXT} \times C_{EXT}^{0.9} \times 1 \times R_{EXT} \text{ (typ.)}$$

where:

 t_{rtrig} = retrigger time in ns


C_{EXT} = external capacitor in pF

 R_{EXT} = external resistor in $k\Omega$

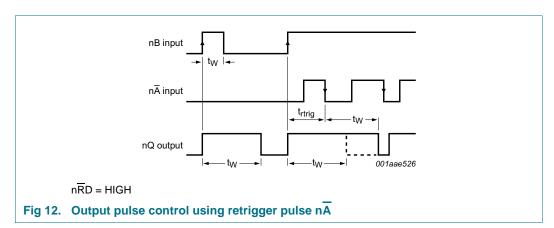

Dual retriggerable monostable multivibrator with reset

12.1.3 Reset timing

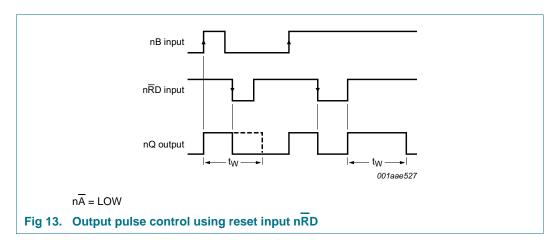


12.2 Power considerations

12.2.1 Power-up

When the monostable multivibrator is powered-up, it may produce an output pulse with a pulse width defined by the values of R_{EXT} and C_{EXT} . This output pulse can be eliminated using the RC circuit on pin $n\overline{RD}$ shown in Figure 14.

12.2.2 Power-down

A large capacitor (C_{EXT}) may cause problems when powering-down the monostable due to the energy stored in this capacitor. When a system containing this device is powered-down or a rapid decrease of V_{CC} to zero occurs, the monostable may sustain damage, due to the capacitor discharging through the input protection diodes. To avoid this possibility, connect a damping diode D_{EXT} (preferably a germanium or Schottky type diode) able to withstand large current surges - see Figure 14.

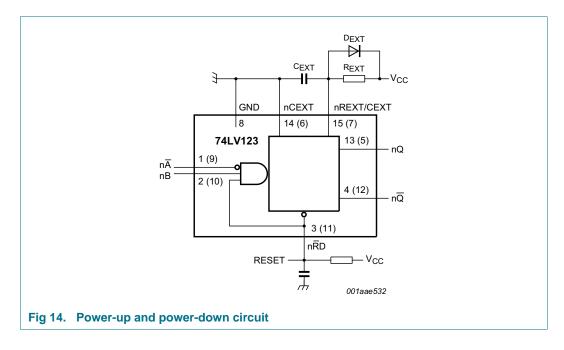


74LV123

Dual retriggerable monostable multivibrator with reset

13. Package outline

SO16: plastic small outline package; 16 leads; body width 3.9 mm

SOT109-1

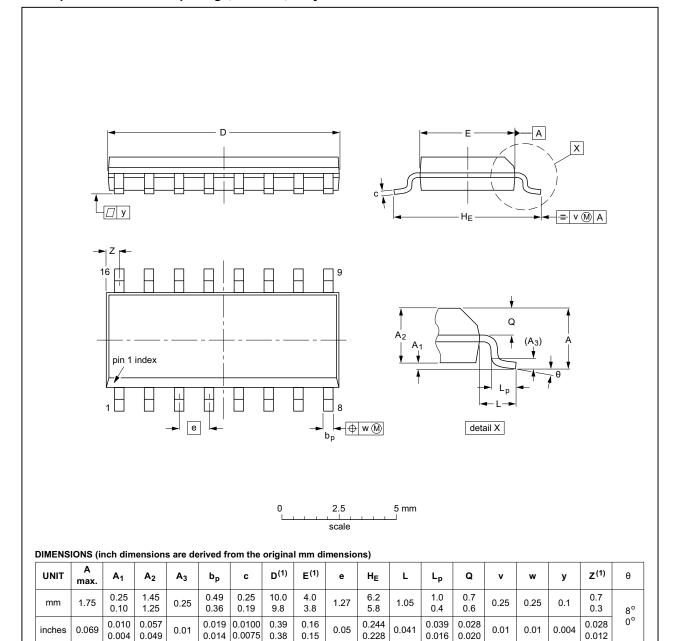

Note

1. Plastic or metal protrusions of 0.15 mm (0.006 inch) maximum per side are not included.

OUTLINE		REFER	EUROPEAN	ISSUE DATE			
VERSION	IEC	JEDEC	JEITA		PROJECTION	ISSUE DATE	
SOT109-1	076E07	MS-012				99-12-27 03-02-19	

Fig 15. Package outline SOT109-1 (SO16)

LV123 All information provided in this document is subject to legal disclaimers.


© Nexperia B.V. 2017. All rights reserve

74LV123 **Nexperia**

Dual retriggerable monostable multivibrator with reset

SSOP16: plastic shrink small outline package; 16 leads; body width 5.3 mm

SOT338-1

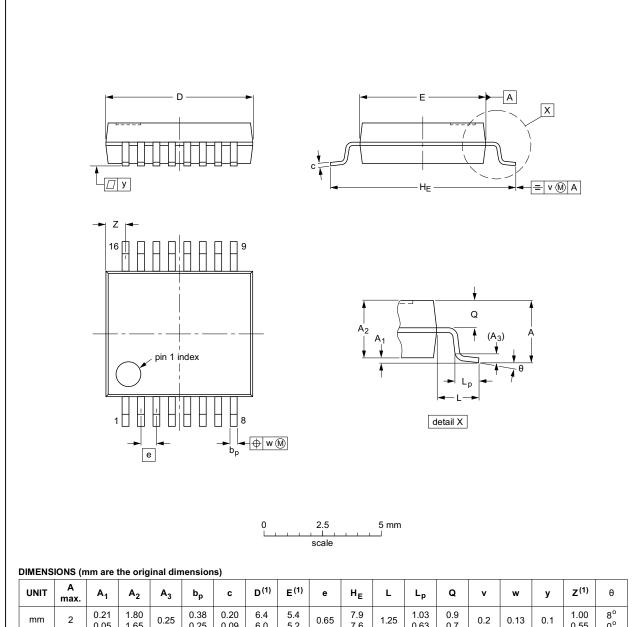

UNIT	A max.	A ₁	A ₂	A ₃	b _p	U	D ⁽¹⁾	E ⁽¹⁾	е	HE	L	Lp	Q	>	w	у	Z ⁽¹⁾	θ
mm	2	0.21 0.05	1.80 1.65	0.25	0.38 0.25	0.20 0.09	6.4 6.0	5.4 5.2	0.65	7.9 7.6	1.25	1.03 0.63	0.9 0.7	0.2	0.13	0.1	1.00 0.55	8° 0°

Note

1. Plastic or metal protrusions of 0.25 mm maximum per side are not included.

		REFERENCES							
IEC	JEDEC	JEITA		PROJECTION	ISSUE DATE				
	MO-150				99-12-27 03-02-19				
	IEC								


Fig 16. Package outline SOT338-1 (SSOP16)

All information provided in this document is subject to legal disclaimers.

Dual retriggerable monostable multivibrator with reset

TSSOP16: plastic thin shrink small outline package; 16 leads; body width 4.4 mm

SOT403-1

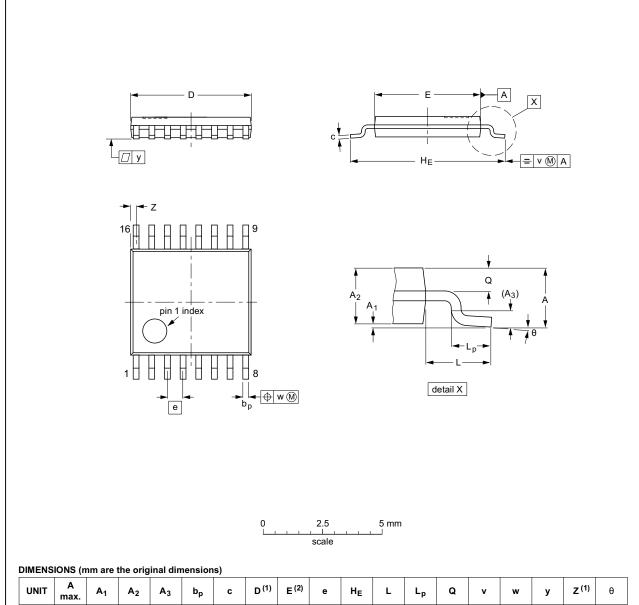

UNI	Г A max	. A ₁	A ₂	A ₃	bp	C	D ⁽¹⁾	E (2)	е	HE	L	Lp	Q	v	w	у	Z ⁽¹⁾	θ
mm	1.1	0.15 0.05	0.95 0.80	0.25	0.30 0.19	0.2 0.1	5.1 4.9	4.5 4.3	0.65	6.6 6.2	1	0.75 0.50	0.4 0.3	0.2	0.13	0.1	0.40 0.06	8° 0°

Notes

- 1. Plastic or metal protrusions of 0.15 mm maximum per side are not included.
- 2. Plastic interlead protrusions of 0.25 mm maximum per side are not included.

OUTLINE		REFER	EUROPEAN	ISSUE DATE				
VERSION	IEC	JEDEC	JEITA		PROJECTION	ISSUE DATE		
SOT403-1		MO-153				-99-12-27 03-02-18		
SOT403-1		MO-153				<u> </u>		

Fig 17. Package outline SOT403-1 (TSSOP16)

4LV123

All information provided in this document is subject to legal disclaimers.

18 of 23

Dual retriggerable monostable multivibrator with reset

DHVQFN16: plastic dual in-line compatible thermal enhanced very thin quad flat package; no leads; 16 terminals; body 2.5 x 3.5 x 0.85 mm SOT763-1

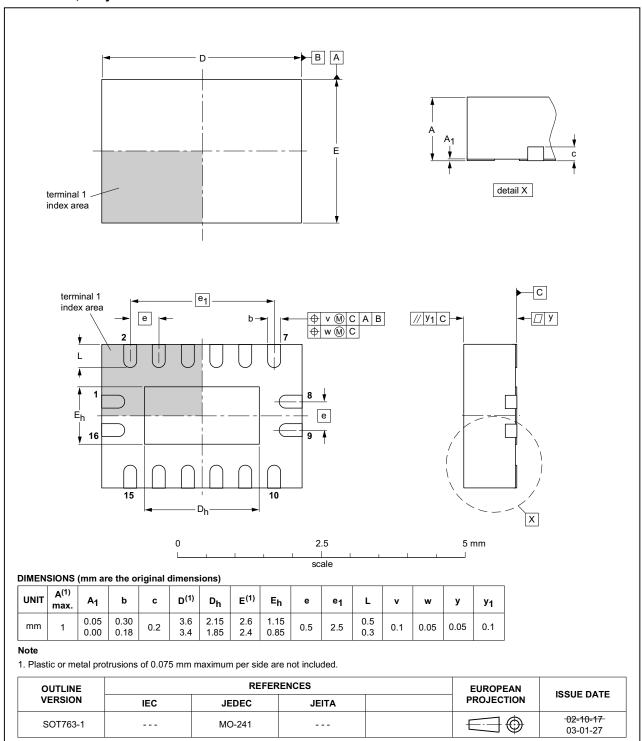


Fig 18. Package outline SOT763-1 (DHVQFN16)

LV123 All information provided in this document is subject to legal disclaimers.

© Nexperia B.V. 2017. All rights reserve

Dual retriggerable monostable multivibrator with reset

14. Abbreviations

Table 10. Abbreviations

Acronym	Description
CMOS	Complementary Metal Oxide Semiconductor
DUT	Device Under Test

15. Revision history

Table 11. Revision history

Document ID	Release date	Data sheet status	Change notice	Supersedes
74LV123 v.8	20160304	Product data sheet	-	74LV123 v.7
Modifications:	Type number	ers 74LV123N (SOT38-4) re	moved.	
74LV123 v.7	20111212	Product data sheet	-	74LV123 v.6
Modifications:	Legal pages	s updated.		
74LV123 v.6	20110826	Product data sheet	-	74LV123 v.5
74LV123 v.5	20071108	Product data sheet	-	74LV123 v.4
74LV123 v.4	20070919	Product specification	-	74LV123 v.3
74LV123 v.3	20030313	Product specification	-	74LV123 v.2
74LV123 v.2	19980420	Product specification	-	74LV123 v.1
74LV123 v.1	19970204	Product specification	-	-

Dual retriggerable monostable multivibrator with reset

16. Legal information

16.1 Data sheet status

Document status[1][2]	Product status[3]	Definition
Objective [short] data sheet	Development	This document contains data from the objective specification for product development.
Preliminary [short] data sheet	Qualification	This document contains data from the preliminary specification.
Product [short] data sheet	Production	This document contains the product specification.

- [1] Please consult the most recently issued document before initiating or completing a design.
- [2] The term 'short data sheet' is explained in section "Definitions"
- [3] The product status of device(s) described in this document may have changed since this document was published and may differ in case of multiple devices. The latest product status information is available on the Internet at URL http://www.nexperia.com.

16.2 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. Nexperia does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

Short data sheet — A short data sheet is an extract from a full data sheet with the same product type number(s) and title. A short data sheet is intended for quick reference only and should not be relied upon to contain detailed and full information. For detailed and full information see the relevant full data sheet, which is available on request via the local Nexperia sales office. In case of any inconsistency or conflict with the short data sheet, the full data sheet shall prevail.

Product specification — The information and data provided in a Product data sheet shall define the specification of the product as agreed between Nexperia and its customer, unless Nexperia and customer have explicitly agreed otherwise in writing. In no event however, shall an agreement be valid in which the Nexperia product is deemed to offer functions and qualities beyond those described in the Product data sheet.

16.3 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, Nexperia does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. Nexperia takes no responsibility for the content in this document if provided by an information source outside of Nexperia.

In no event shall Nexperia be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, Nexperia's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of Nexperia.

Right to make changes — Nexperia reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — Nexperia products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of a Nexperia product can reasonably be expected to result in personal injury, death or severe property or environmental damage. Nexperia and its suppliers accept no liability for inclusion and/or use of Nexperia products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk

Applications — Applications that are described herein for any of these products are for illustrative purposes only. Nexperia makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using Nexperia products, and Nexperia accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the Nexperia product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

Nexperia does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using Nexperia products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). Nexperia does not accept any liability in this respect.

Limiting values — Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and (proper) operation of the device at these or any other conditions above those given in the Recommended operating conditions section (if present) or the Characteristics sections of this document is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

Terms and conditions of commercial sale — Nexperia products are sold subject to the general terms and conditions of commercial sale, as published at http://www.nexperia.com/profile/terms, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. Nexperia hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of Nexperia products by customer.

No offer to sell or license — Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

74LV123

All information provided in this document is subject to legal disclaimers.

© Nexperia B.V. 2017. All rights reserved

74LV123 **Nexperia**

Dual retriggerable monostable multivibrator with reset

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Non-automotive qualified products — Unless this data sheet expressly states that this specific Nexperia product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. Nexperia accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without Nexperia's warranty of the

product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond Nexperia's specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies Nexperia for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond Nexperia's standard warranty and Nexperia's product specifications.

Translations — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

16.4 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

17. Contact information

For more information, please visit: http://www.nexperia.com

For sales office addresses, please send an email to: salesaddresses@nexperia.com

Dual retriggerable monostable multivibrator with reset

18. Contents

1	General description	1
2	Features and benefits	1
3	Ordering information	2
4	Functional diagram	2
5	Pinning information	5
5.1	Pinning	
5.2	Pin description	5
6	Functional description	6
7	Limiting values	7
8	Recommended operating conditions	7
9	Static characteristics	8
10	Dynamic characteristics	10
11	Waveforms	12
12	Application information	13
12.1	Timing components	13
12.1.1	Basic timing	13
12.1.2	Retrigger timing	14
12.1.3		15
12.2	Power considerations	15
12.2.1		15
12.2.2	Power-down	15
13	Package outline	16
14	Abbreviations	20
15	Revision history	20
16	Legal information	21
16.1	Data sheet status	21
16.2	Definitions	21
16.3	Disclaimers	21
16.4	Trademarks	22
17	Contact information	22
12	Contents	23

[©] Nexperia B.V. 2017. All rights reserved



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов:
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: <u>org@eplast1.ru</u>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.