

KAI-02150

1920 (H) x 1080 (V) Interline CCD Image Sensor

Description

The KAI-02150 Image Sensor is a 1080p (1920 × 1080) CCD in a 2/3" optical format. Based on the TRUESENSE 5.5-micron Interline Transfer CCD Platform, the sensor features broad dynamic range, excellent imaging performance, and a flexible readout architecture that enables use of 1, 2, or 4 outputs for full resolution readout up to 64 frames per second. A vertical overflow drain structure suppresses image blooming and enables electronic shuttering for precise exposure control.

Table 1. GENERAL SPECIFICATIONS

| Parameter | Typical Value |
|--|--|
| Architecture | Interline CCD, Progressive Scan |
| Total Number of Pixels | 2004 (H) × 1144 (V) |
| Number of Effective Pixels | 1960 (H) × 1120 (V) |
| Number of Active Pixels | 1920 (H) × 1080 (V) |
| Pixel Size | 5.5 μm (H) × 5.5 μm (V) |
| Active Image Size | 10.56 mm (H) × 5.94 mm (V) 12.1 mm (Diagonal), 2/3" Optical Format |
| Aspect Ratio | 16:9 |
| Number of Outputs | 1, 2, or 4 |
| Charge Capacity | 20,000 electrons |
| Output Sensitivity | 34 μV/e ⁻ |
| Quantum Efficiency Pan (-ABA, -PBA) R, G, B (-FBA, -QBA) R, G, B (-CBA, -PBA) | 44% 31%, 37%, 38% 29%, 37%, 39% |
| Base ISO KAI-02150-ABA KAI-02150-FBA KAI-02150-CBA KAI-02150-PBA | 330 170 150 330 |
| Read Noise (f = 40 MHz) | 12 e ⁻ rms |
| Dark Current Photodiode/VCCD | 7/100 e ⁻ /s |
| Dark Current Doubling Temp Photodiode/VCCD | 7°C/9°C |
| Dynamic Range | 64 dB |
| Charge Transfer Efficiency | 0.999999 |
| Blooming Suppression | > 300 X |
| Smear | -100 dB |
| Image Lag | < 10 electrons |
| Maximum Pixel Clock Speed | 40 MHz |
| Maximum Frame Rate Quad/Dual/Single Output | 64/33/17 fps |
| Package | 68 Pin PGA 64 Pin CLCC |
| Cover Glass | AR Coated, 2-Sides or Clear Glass |

NOTE: All Parameters are specified at T = 40°C unless otherwise noted.



ON Semiconductor®

www.onsemi.com

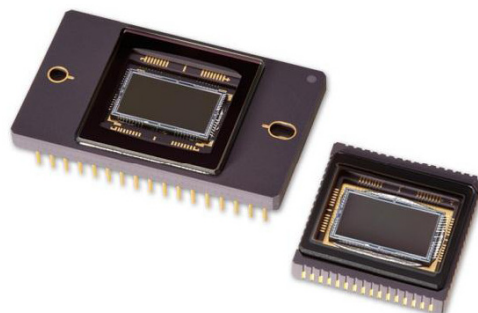


Figure 1. KAI-02150 Interline CCD Image Sensor

Features

- Bayer Color Pattern, TRUESENSE Sparse Color Filter Pattern, and Monochrome Configurations
- Progressive Scan Readout
- Flexible Readout Architecture
- High Frame Rate
- High Sensitivity
- Low Noise Architecture
- Excellent Smear Performance
- Package Pin Reserved for Device Identification

Applications

- Industrial Imaging
- Medical Imaging
- Security

ORDERING INFORMATION

See detailed ordering and shipping information on page 2 of this data sheet.

KAI-02150

The sensor is available with the TRUESENSE Sparse Color Filter Pattern, a technology which provides a 2x improvement in light sensitivity compared to a standard color Bayer part.

The sensor shares common PGA pin-out and electrical configurations with other devices based on the TRUESENSE 5.5 micron Interline Transfer CCD Platform, allowing a single camera design to support multiple members of this sensor family.

ORDERING INFORMATION

Standard Devices

See full datasheet for ordering information associated with devices no longer recommended for new designs.

Table 2. ORDERING INFORMATION – STANDARD DEVICES

| Part Number | Description | Marking Code |
|-----------------------|---|--|
| KAI-02150-AAA-JP-BA | Monochrome, No Microlens, PGA Package, Taped Clear Cover Glass, No Coatings, Standard Grade. | KAI-02150-AAA Serial Number |
| KAI-02150-AAA-JP-AE | Monochrome, No Microlens, PGA Package, Taped Clear Cover Glass, No Coatings, Engineering Grade. | |
| KAI-02150-ABA-JD-BA | Monochrome, Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | KAI-02150-ABA Serial Number |
| KAI-02150-ABA-JD-AE | Monochrome, Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-ABA-JP-BA | Monochrome, Telecentric Microlens, PGA Package, Taped Clear Cover Glass, No Coatings, Standard Grade. | |
| KAI-02150-ABA-JP-AE | Monochrome, Telecentric Microlens, PGA Package, Taped Clear Cover Glass, No Coatings, Engineering Grade. | |
| KAI-02150-ABA-FD-BA | Monochrome, Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | |
| KAI-02150-ABA-FD-AE | Monochrome, Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-FBA-JD-BA | Gen2 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | KAI-02150-FBA Serial Number |
| KAI-02150-FBA-JD-AE | Gen2 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-FBA-FD-BA | Gen2 Color (Bayer RGB), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | |
| KAI-02150-FBA-FD-AE | Gen2 Color (Bayer RGB), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-FBA-JB-B2 | Gen2 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2. | KAI-02150-FBA Serial Number V _{AB} = xx.x |
| KAI-02150-FBA-JB-AE | Gen2 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Engineering Grade. | |
| KAI-02150-FBA-JB-B2-T | Gen2 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2, Packed in Trays. | |
| KAI-02150-QBA-JD-BA | Gen2 Color (TRUESENSE Sparse CFA), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | KAI-02150-QBA Serial Number |
| KAI-02150-QBA-JD-AE | Gen2 Color (TRUESENSE Sparse CFA), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-QBA-FD-BA | Gen2 Color (TRUESENSE Sparse CFA), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | |
| KAI-02150-QBA-FD-AE | Gen2 Color (TRUESENSE Sparse CFA), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |

See the ON Semiconductor *Device Nomenclature* document (TND310/D) for a full description of the naming convention used for image sensors. For reference documentation, including information on evaluation kits, please visit our web site at www.onsemi.com.

KAI-02150

Not Recommended for New Designs

Table 3. ORDERING INFORMATION – NOT RECOMMENDED FOR NEW DESIGNS

| Part Number | Description | Marking Code |
|-----------------------|---|--|
| KAI-02150-CBA-JD-BA | Gen1 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | KAI-02150-CBA Serial Number |
| KAI-02150-CBA-JD-AE | Gen1 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-CBA-FD-BA | Gen1 Color (Bayer RGB), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | |
| KAI-02150-CBA-FD-AE | Gen1 Color (Bayer RGB), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-CBA-JB-B2 | Gen1 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2. | KAI-02150-CBA Serial Number V _{AB} = xx.x |
| KAI-02150-CBA-JB-AE | Gen1 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Engineering Grade. | |
| KAI-02150-CBA-JB-B2-T | Gen1 Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2, Packed in Trays. | |
| KAI-02150-PBA-JD-BA | Gen1 Color (TRUESENSE Sparse CFA), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | KAI-02150-PBA Serial Number |
| KAI-02150-PBA-JD-AE | Gen1 Color (TRUESENSE Sparse CFA), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |
| KAI-02150-PBA-FD-BA | Gen1 Color (TRUESENSE Sparse CFA), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Standard Grade. | |
| KAI-02150-PBA-FD-AE | Gen1 Color (TRUESENSE Sparse CFA), Telecentric Microlens, CLCC Package, Sealed Clear Cover Glass with AR Coating (Both Sides), Engineering Grade. | |

DEVICE DESCRIPTION

Architecture

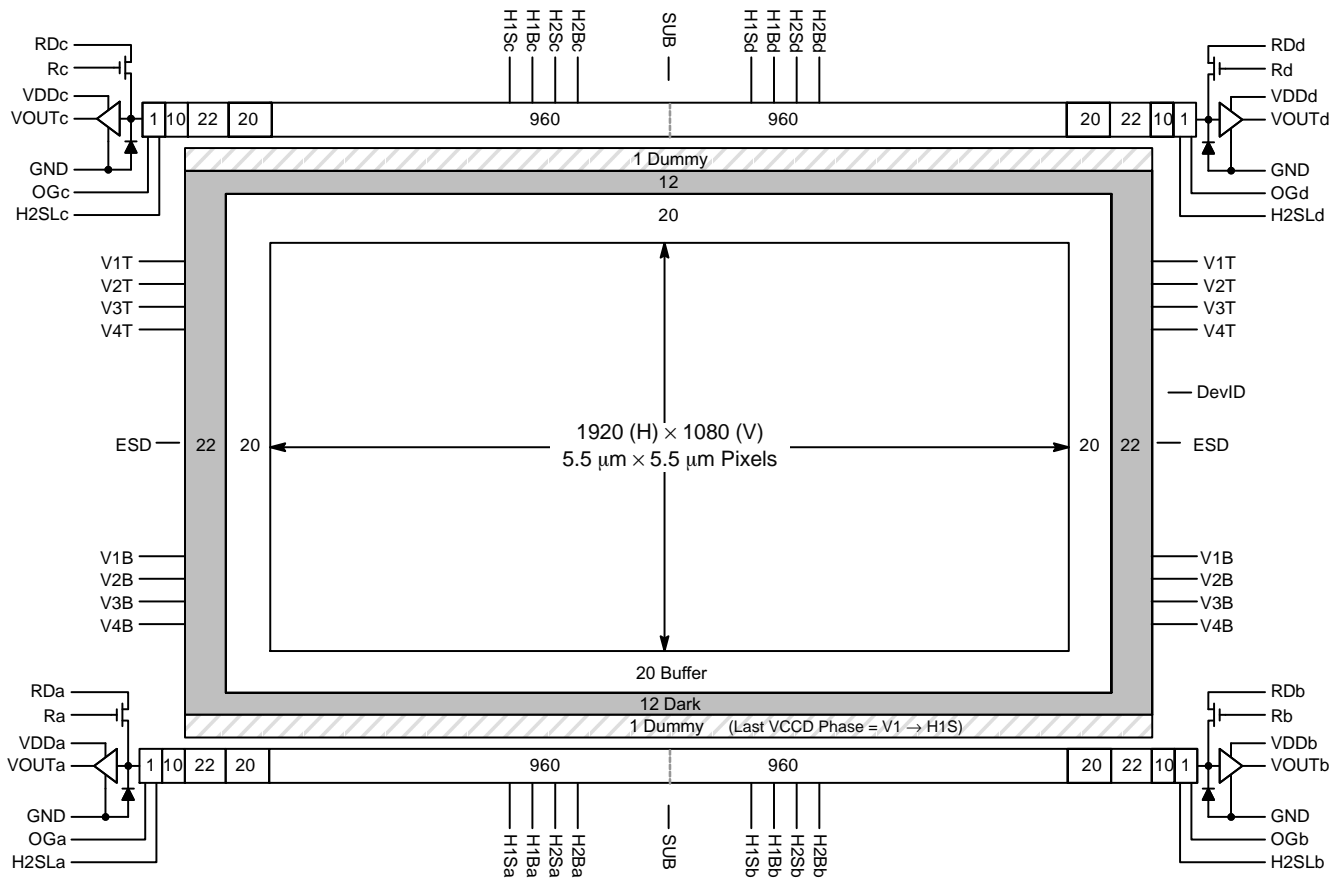


Figure 2. Block Diagram

Dark Reference Pixels

There are 12 dark reference rows at the top and 12 dark rows at the bottom of the image sensor. The dark rows are not entirely dark and so should not be used for a dark reference level. Use the 22 dark columns on the left or right side of the image sensor as a dark reference.

Under normal circumstances use only the center 20 columns of the 22 column dark reference due to potential light leakage.

Dummy Pixels

Within each horizontal shift register there are 11 leading additional shift phases. These pixels are designated as dummy pixels and should not be used to determine a dark reference level.

In addition, there is one dummy row of pixels at the top and bottom of the image.

Active Buffer Pixels

20 unshielded pixels adjacent to any leading or trailing dark reference regions are classified as active buffer pixels.

These pixels are light sensitive but are not tested for defects and non-uniformities.

Image Acquisition

An electronic representation of an image is formed when incident photons falling on the sensor plane create electron-hole pairs within the individual silicon photodiodes. These photoelectrons are collected locally by the formation of potential wells at each photosite. Below photodiode saturation, the number of photoelectrons collected at each pixel is linearly dependent upon light level and exposure time and non-linearly dependent on wavelength. When the photodiodes charge capacity is reached, excess electrons are discharged into the substrate to prevent blooming.

ESD Protection

Adherence to the power-up and power-down sequence is critical. Failure to follow the proper power-up and power-down sequences may cause damage to the sensor. See Power-Up and Power-Down Sequence section.

KAI-02150

Bayer Color Filter Pattern

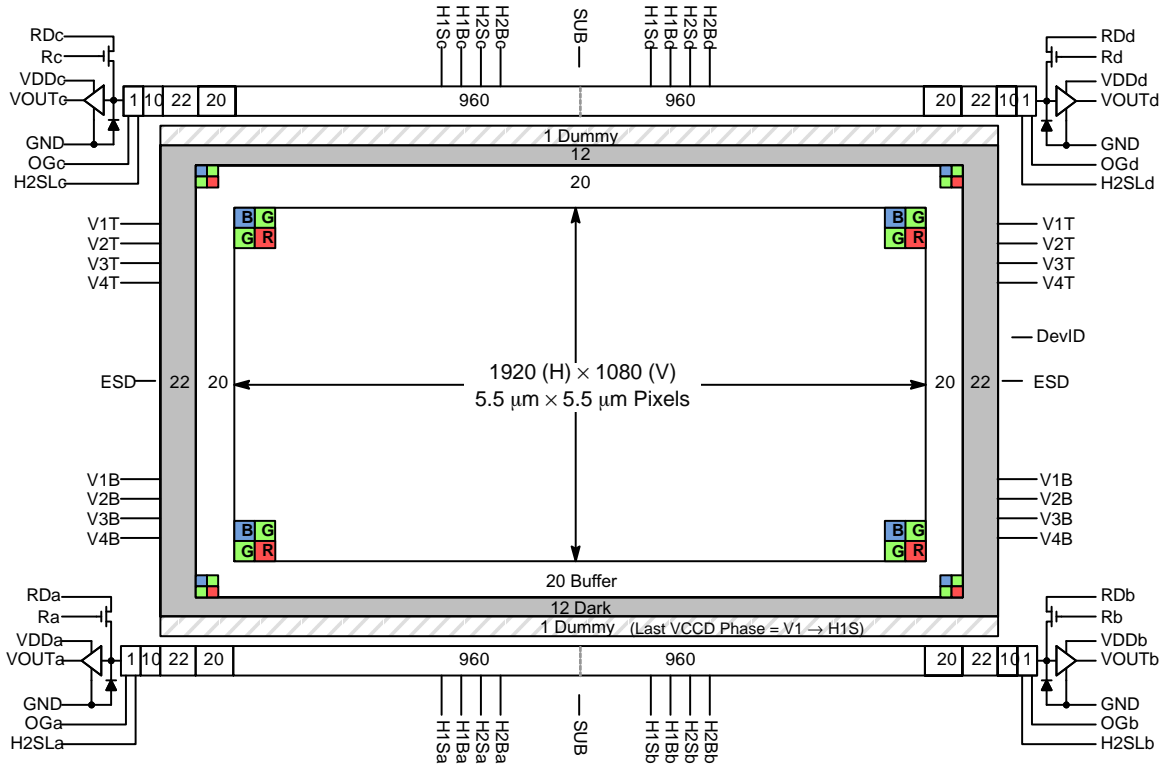


Figure 3. Bayer Color Filter Pattern

TRUESENSE Sparse Color Filter Pattern

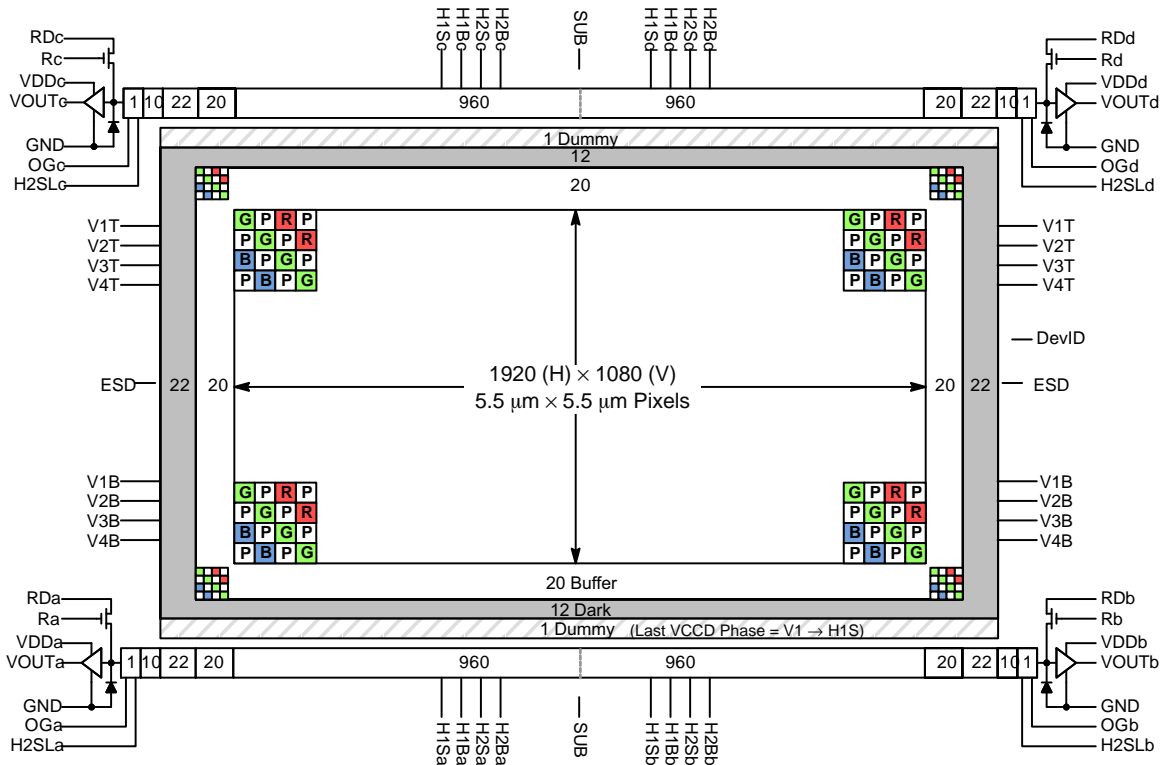


Figure 4. TRUESENSE Sparse Color Filter Pattern

Physical Description

Pin Grid Array Pin Description



Figure 5. PGA Package Pin Designations – Top View

Table 4. PGA PACKAGE PIN DESCRIPTION

| Pin | Name | Description |
|-----|-------------------|--|
| 1 | V3B | Vertical CCD Clock, Phase 3, Bottom |
| 3 | V1B | Vertical CCD Clock, Phase 1, Bottom |
| 4 | V4B | Vertical CCD Clock, Phase 4, Bottom |
| 5 | VDDa | Output Amplifier Supply, Quadrant a |
| 6 | V2B | Vertical CCD Clock, Phase 2, Bottom |
| 7 | GND | Ground |
| 8 | VOU _{Ta} | Video Output, Quadrant a |
| 9 | Ra | Reset Gate, Quadrant a |
| 10 | RDa | Reset Drain, Quadrant a |
| 11 | H2SLa | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant a |
| 12 | OGa | Output Gate, Quadrant a |
| 13 | H1Ba | Horizontal CCD Clock, Phase 1, Barrier, Quadrant a |
| 14 | H2Ba | Horizontal CCD Clock, Phase 2, Barrier, Quadrant a |
| 15 | H2Sa | Horizontal CCD Clock, Phase 2, Storage, Quadrant a |
| 16 | H1Sa | Horizontal CCD Clock, Phase 1, Storage, Quadrant a |
| 17 | N/C | No Connect |
| 18 | SUB | Substrate |
| 19 | H2Sb | Horizontal CCD Clock, Phase 2, Storage, Quadrant b |
| 20 | H1Sb | Horizontal CCD Clock, Phase 1, Storage, Quadrant b |
| 21 | H1Bb | Horizontal CCD Clock, Phase 1, Barrier, Quadrant b |
| 22 | H2Bb | Horizontal CCD Clock, Phase 2, Barrier, Quadrant b |
| 23 | H2SLb | Horizontal CCD Clock, Phase 1, Storage, Last Phase, Quadrant b |
| 24 | OGb | Output Gate, Quadrant b |

KAI-02150

Table 4. PGA PACKAGE PIN DESCRIPTION (continued)

| Pin | Name | Description |
|-----|-------|--|
| 25 | Rb | Reset Gate, Quadrant b |
| 26 | RDb | Reset Drain, Quadrant b |
| 27 | GND | Ground |
| 28 | VOUtb | Video Output, Quadrant b |
| 29 | VDDb | Output Amplifier Supply, Quadrant b |
| 30 | V2B | Vertical CCD Clock, Phase 2, Bottom |
| 31 | V1B | Vertical CCD Clock, Phase 1, Bottom |
| 32 | V4B | Vertical CCD Clock, Phase 4, Bottom |
| 33 | V3B | Vertical CCD Clock, Phase 3, Bottom |
| 34 | ESD | ESD Protection Disable |
| 35 | V3T | Vertical CCD Clock, Phase 3, Top |
| 36 | DevID | Device Identification |
| 37 | V1T | Vertical CCD Clock, Phase 1, Top |
| 38 | V4T | Vertical CCD Clock, Phase 4, Top |
| 39 | VDDd | Output Amplifier Supply, Quadrant d |
| 40 | V2T | Vertical CCD Clock, Phase 2, Top |
| 41 | GND | Ground |
| 42 | VOUtd | Video Output, Quadrant d |
| 43 | Rd | Reset Gate, Quadrant d |
| 44 | RDd | Reset Drain, Quadrant d |
| 45 | H2SLd | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant d |
| 46 | OGd | Output Gate, Quadrant d |
| 47 | H1Bd | Horizontal CCD Clock, Phase 1, Barrier, Quadrant d |
| 48 | H2Bd | Horizontal CCD Clock, Phase 2, Barrier, Quadrant d |
| 49 | H2Sd | Horizontal CCD Clock, Phase 2, Storage, Quadrant d |
| 50 | H1Sd | Horizontal CCD Clock, Phase 1, Storage, Quadrant d |
| 51 | N/C | No Connect |
| 52 | SUB | Substrate |
| 53 | H2Sc | Horizontal CCD Clock, Phase 2, Storage, Quadrant c |
| 54 | H1Sc | Horizontal CCD Clock, Phase 1, Storage, Quadrant c |
| 55 | H1Bc | Horizontal CCD Clock, Phase 1, Barrier, Quadrant c |
| 56 | H2Bc | Horizontal CCD Clock, Phase 2, Barrier, Quadrant c |
| 57 | H2SLc | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant c |
| 58 | OGc | Output Gate, Quadrant c |
| 59 | Rc | Reset Gate, Quadrant c |
| 60 | RDc | Reset Drain, Quadrant c |
| 61 | GND | Ground |
| 62 | VOUtc | Video Output, Quadrant c |
| 63 | VDDc | Output Amplifier Supply, Quadrant c |
| 64 | V2T | Vertical CCD Clock, Phase 2, Top |
| 65 | V1T | Vertical CCD Clock, Phase 1, Top |
| 66 | V4T | Vertical CCD Clock, Phase 4, Top |
| 67 | V3T | Vertical CCD Clock, Phase 3, Top |
| 68 | ESD | EDS Protection Disable |

1. Liked named pins are internally connected and should have a common drive signal.
2. N/C pins (17, 51) should be left floating.

KAI-02150

Ceramic Leadless Chip Carrier Pin Description



Figure 6. CLCC Package Pin Designations – Top View

Table 5. CLCC PACKAGE PIN DESCRIPTION

| Pin | Name | Description |
|-----|-------|--|
| 1 | RDa | Reset Drain, Quadrant a |
| 2 | Ra | Reset Gate, Quadrant a |
| 3 | OGa | Output Gate, Quadrant a |
| 4 | H2SLa | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant a |
| 5 | H2Ba | Horizontal CCD Clock, Phase 2, Barrier, Quadrant a |
| 6 | H1Ba | Horizontal CCD Clock, Phase 1, Barrier, Quadrant a |
| 7 | H1Sa | Horizontal CCD Clock, Phase 1, Storage, Quadrant a |
| 8 | H2Sa | Horizontal CCD Clock, Phase 2, Storage, Quadrant a |
| 9 | SUB | Substrate |
| 10 | H2Sb | Horizontal CCD Clock, Phase 2, Storage, Quadrant b |
| 11 | H1Sb | Horizontal CCD Clock, Phase 1, Storage, Quadrant b |
| 12 | H1Bb | Horizontal CCD Clock, Phase 1, Barrier, Quadrant b |
| 13 | H2Bb | Horizontal CCD Clock, Phase 2, Barrier, Quadrant b |
| 14 | H2SLb | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant b |
| 15 | OGb | Output Gate, Quadrant b |
| 16 | Rb | Reset Gate, Quadrant b |
| 17 | RDd | Reset Drain, Quadrant b |
| 18 | GND | Ground |
| 19 | VOUTb | Video Output, Quadrant b |

KAI-02150

Table 5. CLCC PACKAGE PIN DESCRIPTION (continued)

| Pin | Name | Description |
|-----|-------|--|
| 20 | VDDb | Output Amplifier Supply, Quadrant b |
| 21 | V2B | Vertical CCD Clock, Phase 2, Bottom |
| 22 | V1B | Vertical CCD Clock, Phase 1, Bottom |
| 23 | V4B | Vertical CCD Clock, Phase 4, Bottom |
| 24 | V3B | Vertical CCD Clock, Phase 3, Bottom |
| 25 | DevID | Device Identification |
| 26 | V3T | Vertical CCD Clock, Phase 3, Top |
| 27 | V4T | Vertical CCD Clock, Phase 4, Top |
| 28 | V1T | Vertical CCD Clock, Phase 1, Top |
| 29 | V2T | Vertical CCD Clock, Phase 2, Top |
| 30 | VDDd | Output Amplifier Supply, Quadrant d |
| 31 | VOUtd | Video Output, Quadrant d |
| 32 | GND | Ground |
| 33 | RDd | Reset Drain, Quadrant d |
| 34 | Rd | Reset Gate, Quadrant d |
| 35 | OGd | Output Gate, Quadrant d |
| 36 | H2SLd | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant d |
| 37 | H2Bd | Horizontal CCD Clock, Phase 2, Barrier, Quadrant d |
| 38 | H1Bd | Horizontal CCD Clock, Phase 1, Barrier, Quadrant d |
| 39 | H1Sd | Horizontal CCD Clock, Phase 1, Storage, Quadrant d |
| 40 | H2Sd | Horizontal CCD Clock, Phase 2, Storage, Quadrant d |
| 41 | SUB | Substrate |
| 42 | H2Sc | Horizontal CCD Clock, Phase 2, Storage, Quadrant c |
| 43 | H1Sc | Horizontal CCD Clock, Phase 1, Storage, Quadrant c |
| 44 | H1Bc | Horizontal CCD Clock, Phase 1, Barrier, Quadrant c |
| 45 | H2Bc | Horizontal CCD Clock, Phase 2, Barrier, Quadrant c |
| 46 | H2SLc | Horizontal CCD Clock, Phase 2, Storage, Last Phase, Quadrant c |
| 47 | OGc | Output Gate, Quadrant c |
| 48 | Rc | Reset Gate, Quadrant c |
| 49 | RDc | Reset Drain, Quadrant c |
| 50 | GND | Ground |
| 51 | VOUtc | Video Output, Quadrant c |
| 52 | VDDc | Output Amplifier Supply, Quadrant c |
| 53 | V2T | Vertical CCD Clock, Phase 2, Top |
| 54 | V1T | Vertical CCD Clock, Phase 1, Top |
| 55 | V4T | Vertical CCD Clock, Phase 4, Top |
| 56 | V3T | Vertical CCD Clock, Phase 3, Top |
| 57 | ESD | ESD Protection Disable |
| 58 | V3B | Vertical CCD Clock, Phase 3, Bottom |
| 59 | V4B | Vertical CCD Clock, Phase 4, Bottom |
| 60 | V1B | Vertical CCD Clock, Phase 1, Bottom |
| 61 | V2B | Vertical CCD Clock, Phase 2, Bottom |
| 62 | VDDa | Output Amplifier Supply, Quadrant a |
| 63 | VOUta | Video Output, Quadrant a |
| 64 | GND | Ground |

1. Liked named pins are internally connected and should have a common drive signal.

IMAGING PERFORMANCE

Typical Operational Conditions

Unless otherwise noted, the Imaging Performance Specifications are measured using the following conditions.

Table 6. TYPICAL OPERATIONAL CONDITIONS

| Description | Condition | Notes |
|--------------|--|-------|
| Light Source | Continuous Red, Green and Blue LED Illumination. | 1 |
| Operation | Nominal Operating Voltages and Timing. | |

1. For monochrome sensor, only green LED used.

Specifications

Table 7. PERFORMANCE SPECIFICATIONS

| Description | Symbol | Min. | Nom. | Max. | Unit | Sampling Plan | Temperature Tested at (°C) |
|--|---------------------|----------|----------|------|-------------|---------------|----------------------------|
| ALL CONFIGURATIONS | | | | | | | |
| Dark Field Global Non-Uniformity | DSNU | – | – | 2.0 | mVpp | Die | 27, 40 |
| Bright Field Global Non-Uniformity (Note 1) | | – | 2.0 | 5.0 | % rms | Die | 27, 40 |
| Bright Field Global Peak to Peak Non-Uniformity (Note 1) | PRNU | – | 5.0 | 15.0 | % pp | Die | 27, 40 |
| Bright Field Center Non-Uniformity (Note 1) | | – | 1.0 | 2.0 | % rms | Die | 27, 40 |
| Maximum Photoresponse Non-Linearity (Note 2) | NL | – | 2 | – | % | Design | |
| Maximum Gain Difference between Outputs (Note 2) | ΔG | – | 10 | – | % | Design | |
| Maximum Signal Error due to Non-Linearity Differences (Note 2) | ΔNL | – | 1 | – | % | Design | |
| Horizontal CCD Charge Capacity | H_{Ne} | – | 55 | – | ke^- | Design | |
| Vertical CCD Charge Capacity | V_{Ne} | – | 45 | – | ke^- | Design | |
| Photodiode Charge Capacity (Note 3) | P_{Ne} | – | 20 | – | ke^- | Die | 27, 40 |
| Horizontal CCD Charge Transfer Efficiency | HCTTE | 0.999995 | 0.999999 | – | | Die | |
| Vertical CCD Charge Transfer Efficiency | VCTE | 0.999995 | 0.999999 | – | | Die | |
| Photodiode Dark Current | I_{PD} | – | 7 | 70 | e/p/s | Die | 40 |
| Vertical CCD Dark Current | I_{VD} | – | 100 | 300 | e/p/s | Die | 40 |
| Image Lag | Lag | – | – | 10 | e^- | Design | |
| Anti-Blooming Factor | X_{AB} | 300 | – | – | | Design | |
| Vertical Smear | Smr | – | –100 | – | dB | Design | |
| Read Noise (Note 4) | n_{e-T} | – | 12 | – | e^- rms | Design | |
| Dynamic Range (Notes 4, 5) | DR | – | 64 | – | dB | Design | |
| Output Amplifier DC Offset | V_{ODC} | – | 9.4 | – | V | Die | 27, 40 |
| Output Amplifier Bandwidth (Note 6) | f_{-3db} | – | 250 | – | MHz | Die | |
| Output Amplifier Impedance | R_{OUT} | – | 127 | – | Ω | Die | 27, 40 |
| Output Amplifier Sensitivity | $\Delta V/\Delta N$ | – | 34 | – | $\mu V/e^-$ | Design | |

KAI-02150

Table 7. PERFORMANCE SPECIFICATIONS (continued)

| Description | Symbol | Min. | Nom. | Max. | Unit | Sampling Plan | Temperature Tested at (°C) |
|-------------|--------|------|------|------|------|---------------|----------------------------|
|-------------|--------|------|------|------|------|---------------|----------------------------|

KAI-02150-ABA, KAI-02150-QBA AND KAI-02150-PBA CONFIGURATIONS (Note 7)

| | | | | | | | |
|------------------------------------|-------------------|---|-----|---|----|--------|--|
| Peak Quantum Efficiency | QE _{MAX} | – | 44 | – | % | Design | |
| Peak Quantum Efficiency Wavelength | λ _{QE} | – | 480 | – | nm | Design | |

KAI-02150-FBA AND KAI-02150-QBA GEN2 COLOR CONFIGURATIONS WITH MAR GLASS

| | | | | | | | |
|--|-------------------|-------------|-------------------|-------------|----|--------|--|
| Peak Quantum Efficiency Blue Green Red | QE _{MAX} | – – – | 38 37 31 | – – – | % | Design | |
| Peak Quantum Efficiency Wavelength Blue Green Red | λ _{QE} | – – – | 460 530 605 | – – – | nm | Design | |

KAI-02150-FBA GEN2 COLOR CONFIGURATIONS WITH CLEAR GLASS

| | | | | | | | |
|--|-------------------|-------------|-------------------|-------------|----|--------|--|
| Peak Quantum Efficiency Blue Green Red | QE _{MAX} | – – – | 35 34 29 | – – – | % | Design | |
| Peak Quantum Efficiency Wavelength Blue Green Red | λ _{QE} | – – – | 460 530 605 | – – – | nm | Design | |

KAI-02150-CBA AND KAI-02150-PBA GEN1 COLOR CONFIGURATIONS WITH MAR GLASS (Note 7)

| | | | | | | | |
|--|-------------------|-------------|-------------------|-------------|----|--------|--|
| Peak Quantum Efficiency Blue Green Red | QE _{MAX} | – – – | 39 37 29 | – – – | % | Design | |
| Peak Quantum Efficiency Wavelength Blue Green Red | λ _{QE} | – – – | 470 540 620 | – – – | nm | Design | |

KAI-02150-CBA GEN1 COLOR CONFIGURATION WITH CLEAR GLASS (Note 7)

| | | | | | | | |
|--|-------------------|-------------|-------------------|-------------|----|--------|--|
| Peak Quantum Efficiency Blue Green Red | QE _{MAX} | – – – | 36 34 27 | – – – | % | Design | |
| Peak Quantum Efficiency Wavelength Blue Green Red | λ _{QE} | – – – | 470 540 620 | – – – | nm | Design | |

1. Per color.
2. Value is over the range of 10% to 90% of photodiode saturation.
3. The operating value of the substrate voltage, V_{AB}, will be marked on the shipping container for each device. The value of V_{AB} is set such that the photodiode charge capacity is 680 mV.
4. At 40 MHz.
5. Uses 20LOG (P_{Ne} / n_{e-T}).
6. Assumes 5 pF load.
7. This color filter set configuration (Gen1) is not recommended for new designs.

TYPICAL PERFORMANCE CURVES

Quantum Efficiency

Monochrome with Microlens



NOTE: The PGA and CLCC versions have different quantum efficiencies due to differences in the cover glass transmission. See Figure 35: Cover Glass Transmission for more details.

Figure 7. Monochrome with Microlens Quantum Efficiency

Monochrome without Microlens

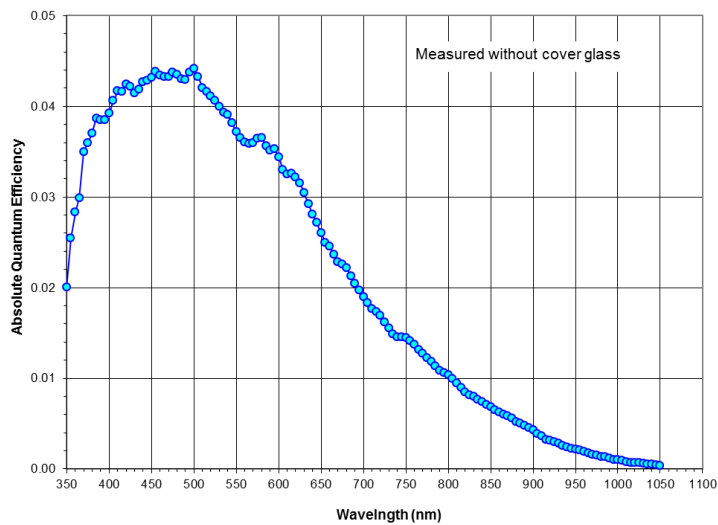


Figure 8. Monochrome without Microlens Quantum Efficiency

Color (Bayer RGB) with Microlens and MAR Cover Glass (Gen2 and Gen1 CFA)



Figure 9. MAR Glass Color (Bayer) with Microlens Quantum Efficiency

Color (Bayer RGB) with Microlens and Clear Cover Glass (Gen2 and Gen1 CFA)

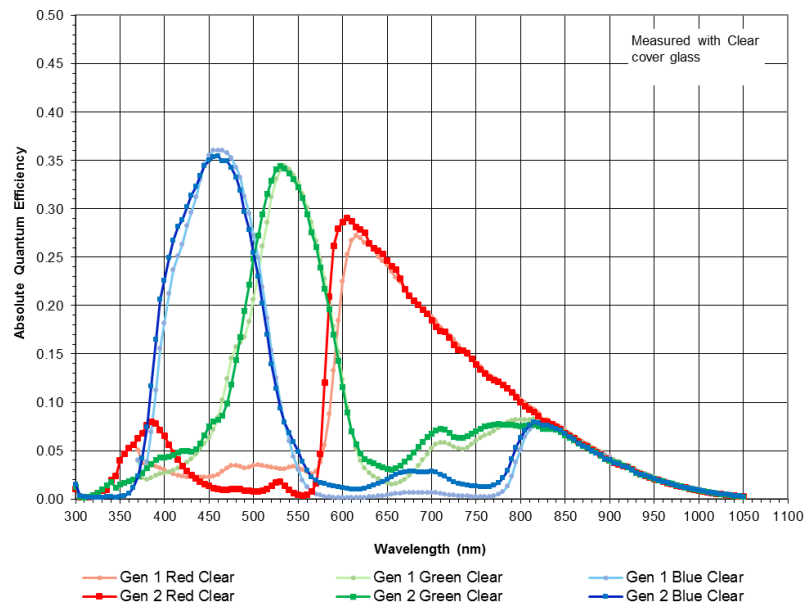


Figure 10. Clear Glass Color (Bayer) with Microlens Quantum Efficiency

Color (TRUESENSE Sparse CFA) with Microlens (Gen2 and Gen1 CFA)



Figure 11. Color (TRUESENSE Sparse CFA) with Microlens Quantum Efficiency

Angular Quantum Efficiency

For the curves marked “Horizontal”, the incident light angle is varied in a plane parallel to the HCCD. For the curves marked “Vertical”, the incident light angle is varied in a plane parallel to the VCCD.

Monochrome with Microlens

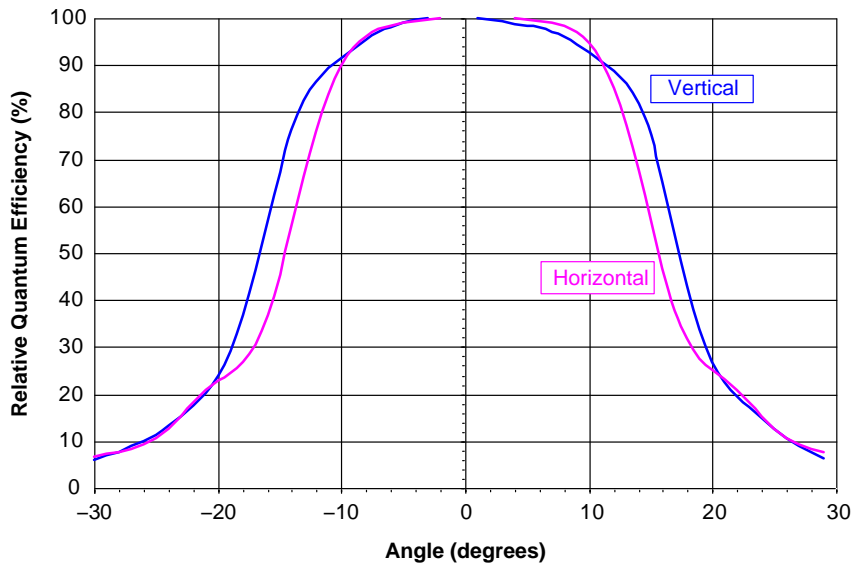


Figure 12. Monochrome with Microlens Angular Quantum Efficiency

Dark Current vs. Temperature



Figure 13. Dark Current vs. Temperature

Power-Estimated

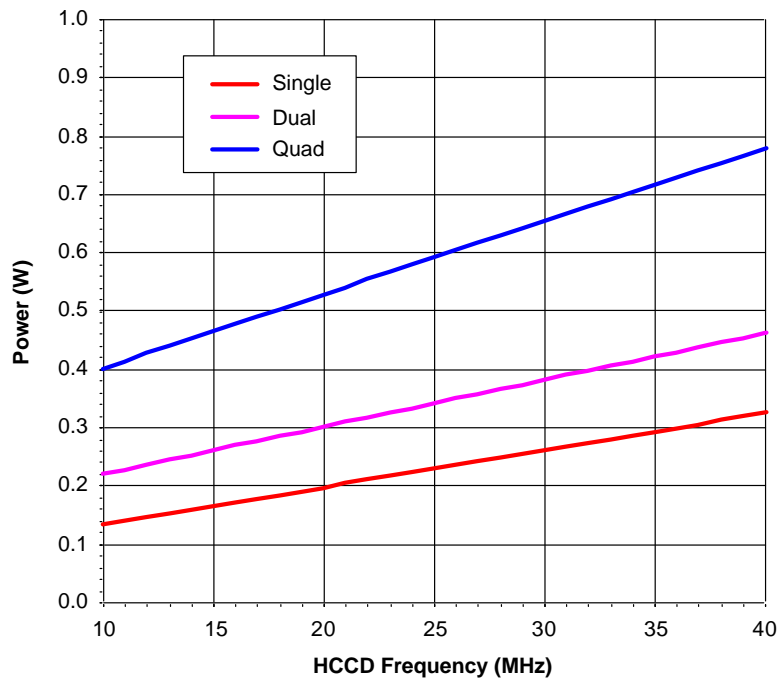


Figure 14. Power

Frame Rates



Figure 15. Frame Rates

KAI-02150

DEFECT DEFINITIONS

Table 8. OPERATION CONDITIONS FOR DEFECT TESTING AT 40°C

| Description | Condition | Notes |
|-----------------------------|---|-------|
| Operational Mode | Two Outputs, Using VOUTa and VOUTc, Continuous Readout | |
| HCCD Clock Frequency | 10 MHz | |
| Pixels per Line | 2,160 | 1 |
| Lines per Frame | 672 | 2 |
| Line Time | 218.9 μ s | |
| Frame Time | 147.1 ms | |
| Photodiode Integration Time | Mode A: PD_Tint = Frame Time = 147.1 ms, No Electronic Shutter Used Mode B: PD_Tint = 33 ms, Electronic Shutter Used | |
| VCCD Integration Time | 125.2 ms | 3 |
| Temperature | 40°C | |
| Light Source | Continuous Red, Green and Blue LED Illumination | 4 |
| Operation | Nominal Operating Voltages and Timing | |

1. Horizontal overclocking used.
2. Vertical overclocking used.
3. VCCD Integration Time = 572 lines \times Line Time, which is the total time a pixel will spend in the VCCD registers.
4. For monochrome sensor, only the green LED is used.

Table 9. DEFECT DEFINITIONS FOR TESTING AT 40°C

| Description | Definition | Standard Grade | Grade 2 | Notes |
|---|--|----------------|---------|-------|
| Major Dark Field Defective Bright Pixel | PD_Tint = Mode A \rightarrow Defect \geq 51 mV or PD_Tint = Mode B \rightarrow Defect \geq 12 mV | 20 | 20 | 1 |
| Major Bright Field Defective Dark Pixel | Defect \geq 12% | 20 | 20 | 1 |
| Minor Dark Field Defective Bright Pixel | PD_Tint = Mode A \rightarrow Defect \geq 26 mV or PD_Tint = Mode B \rightarrow Defect \geq 6 mV | 200 | 200 | |
| Cluster Defect (Standard Grade) | A group of 2 to 10 contiguous major defective pixels, but no more than 2 adjacent defect horizontally. | 8 | N/A | 2 |
| Cluster Defect (Grade 2) | A group of 2 to 10 contiguous major defective pixels. | N/A | 10 | 2 |
| Column Defect | A group of more than 10 contiguous major defective pixels along a single column. | 0 | 0 | 2 |

1. For the color device (KAI-02150-FBA, KAI-02150-CBA, KAI-02150-QBA, or KAI-02150-PBA), a bright field defective pixel deviates by 12% with respect to pixels of the same color.
2. Column and cluster defects are separated by no less than two (2) good pixels in any direction (excluding single pixel defects).

KAI-02150

Table 10. OPERATION CONDITIONS FOR DEFECT TESTING AT 27°C

| Description | Condition | Notes |
|---------------------------------------|--|-------|
| Operational Mode | Two Outputs, Using VOUTa and VOUTc, Continuous Readout | |
| HCCD Clock Frequency | 20 MHz | |
| Pixels per Line | 2,160 | 1 |
| Lines per Frame | 672 | 2 |
| Line Time | 109.8 μ s | |
| Frame Time | 73.8 ms | |
| Photodiode Integration Time (PD_Tint) | Mode A: PD_Tint = Frame Time = 73.8 ms, No Electronic Shutter Used Mode B: PD_Tint = 33 ms, Electronic Shutter Used | |
| VCCD Integration Time | 62.8 ms | 3 |
| Temperature | 27°C | |
| Light Source | Continuous Red, Green and Blue LED Illumination | 4 |
| Operation | Nominal Operating Voltages and Timing | |

1. Horizontal overclocking used.
2. Vertical overclocking used.
3. VCCD Integration Time = 572 lines \times Line Time, which is the total time a pixel will spend in the VCCD registers.
4. For monochrome sensor, only the green LED is used.

Table 11. DEFECT DEFINITIONS FOR TESTING AT 40°C

| Description | Definition | Standard Grade | Grade 2 | Notes |
|---|--|----------------|---------|-------|
| Major Dark Field Defective Bright Pixel | PD_Tint = Mode A \rightarrow Defect \geq 8 mV or PD_Tint = Mode B \rightarrow Defect \geq 4 mV | 20 | 20 | 1 |
| Major Bright Field Defective Dark Pixel | Defect \geq 12% | 20 | 20 | 1 |
| Cluster Defect (Standard Grade) | A group of 2 to 10 contiguous major defective pixels, but no more than 2 adjacent defect horizontally. | 8 | N/A | 2 |
| Cluster Defect (Grade 2) | A group of 2 to 10 contiguous major defective pixels. | N/A | 10 | 2 |
| Column Defect | A group of more than 10 contiguous major defective pixels along a single column. | 0 | 0 | 2 |

1. For the color device (KAI-02150-FBA, KAI-02150-CBA, KAI-02150-QBA, or KAI-02150-PBA), a bright field defective pixel deviates by 12% with respect to pixels of the same color.
2. Column and cluster defects are separated by no less than two (2) good pixels in any direction (excluding single pixel defects).

Defect Map

The defect map supplied with each sensor is based upon testing at an ambient (27°C) temperature. Minor point defects are not included in the defect map. All defective

pixels are reference to pixel 1, 1 in the defect maps. See Figure 16: Regions of Interest for the location of pixel 1, 1.

TEST DEFINITIONS

Test Regions of Interest

Image Area ROI: Pixel (1, 1) to Pixel (1960, 1120)
 Active Area ROI: Pixel (21, 21) to Pixel (1940, 1100)
 Center ROI: Pixel (931, 511) to Pixel (1030, 610)

Only the Active Area ROI pixels are used for performance and defect tests.

Overclocking

The test system timing is configured such that the sensor is overclocked in both the vertical and horizontal directions. See Figure 16 for a pictorial representation of the regions of interest.



Figure 16. Regions of Interest

Tests

Dark Field Global Non-Uniformity

This test is performed under dark field conditions. The sensor is partitioned into 144 sub regions of interest, each of which is 120 by 120 pixels in size. See Figure 17: Test Sub Regions of Interest. The average signal level of each of the 144 sub regions of interest is calculated. The signal level of each of the sub regions of interest is calculated using the following formula:

$$\text{Signal of ROI}[i] = (\text{ROI Average in Counts} - \text{Horizontal Overclock Average in Counts}) \cdot \text{mV per Count}$$

Units : mVpp (millivolts Peak to Peak)

Where i = 1 to 144. During this calculation on the 144 sub regions of interest, the maximum and minimum signal levels are found. The dark field global uniformity is then calculated as the maximum signal found minus the minimum signal level found.

Global Non-Uniformity

This test is performed with the imager illuminated to a level such that the output is at 70% of saturation (approximately 476 mV). Prior to this test being performed the substrate

voltage has been set such that the charge capacity of the sensor is 680 mV. Global non-uniformity is defined as

$$\text{Global Non-Uniformity} = 100 \cdot \left(\frac{\text{Active Area Standard Deviation}}{\text{Active Area Signal}} \right)$$

Units : % rms

Active Area Signal = Active Area Average – Dark Column Average

Global Peak to Peak Non-Uniformity

This test is performed with the imager illuminated to a level such that the output is at 70% of saturation (approximately 476 mV). Prior to this test being performed the substrate voltage has been set such that the charge capacity of the sensor is 680 mV. The sensor is partitioned into 144 sub regions of interest, each of which is 120 by 120 pixels in size. See Figure 17: Test Sub Regions of Interest. The average signal level of each of the 144 sub regions of interest (ROI) is calculated. The signal level of each of the sub regions of interest is calculated using the following formula:

$$\text{Signal of ROI}[i] = (\text{ROI Average in Counts} - \text{Horizontal Overclock Average in Counts}) \cdot \text{mV per Count}$$

Where $i = 1$ to 144. During this calculation on the 144 sub regions of interest, the maximum and minimum signal levels are found. The global peak to peak uniformity is then calculated as:

$$\text{Global Uniformity} = 100 \cdot \left(\frac{\text{Max. Signal} - \text{Min. Signal}}{\text{Active Area Signal}} \right)$$

Units : % pp

Center Non-Uniformity

This test is performed with the imager illuminated to a level such that the output is at 70% of saturation (approximately 476 mV). Prior to this test being performed the substrate voltage has been set such that the charge capacity of the sensor is 680 mV. Defects are excluded for the calculation of this test. This test is performed on the center 100 by 100 pixels of the sensor. Center uniformity is defined as:

$$\text{Center ROI Uniformity} = 100 \cdot \left(\frac{\text{Center ROI Standard Deviation}}{\text{Center ROI Signal}} \right)$$

Units : % rms

Center ROI Signal = Center ROI Average – Dark Column Average

Dark Field Defect Test

This test is performed under dark field conditions. The sensor is partitioned into 144 sub regions of interest, each of which is 120 by 120 pixels in size. In each region of interest, the median value of all pixels is found. For each region of interest, a pixel is marked defective if it is greater than or equal to the median value of that region of interest plus the defect threshold specified in the “Defect Definitions” section.

Bright Field Defect Test

This test is performed with the imager illuminated to a level such that the output is at approximately 476 mV.

Prior to this test being performed the substrate voltage has been set such that the charge capacity of the sensor is 680 mV. The average signal level of all active pixels is found. The bright and dark thresholds are set as:

$$\text{Dark Defect Threshold} = \text{Active Area Signal} \cdot \text{Threshold}$$

$$\text{Bright Defect Threshold} = \text{Active Area Signal} \cdot \text{Threshold}$$

The sensor is then partitioned into 144 sub regions of interest, each of which is 120 by 120 pixels in size. In each region of interest, the average value of all pixels is found. For each region of interest, a pixel is marked defective if it is greater than or equal to the median value of that region of interest plus the bright threshold specified or if it is less than or equal to the median value of that region of interest minus the dark threshold specified.

Example for major bright field defective pixels:

- Average value of all active pixels is found to be 476 mV.
- Dark defect threshold: $476 \text{ mV} \cdot 12 \% = 57 \text{ mV}$.
- Bright defect threshold: $476 \text{ mV} \cdot 12 \% = 57 \text{ mV}$.
- Region of interest #1 selected. This region of interest is pixels 21, 21 to pixels 140, 140.
 - ♦ Median of this region of interest is found to be 470 mV.
 - ♦ Any pixel in this region of interest that is $\geq (470 + 57 \text{ mV})$ 527 mV in intensity will be marked defective.
 - ♦ Any pixel in this region of interest that is $\leq (470 - 57 \text{ mV})$ 413 mV in intensity will be marked defective.
- All remaining 144 sub regions of interest are analyzed for defective pixels in the same manner.

Test Sub Regions of Interest

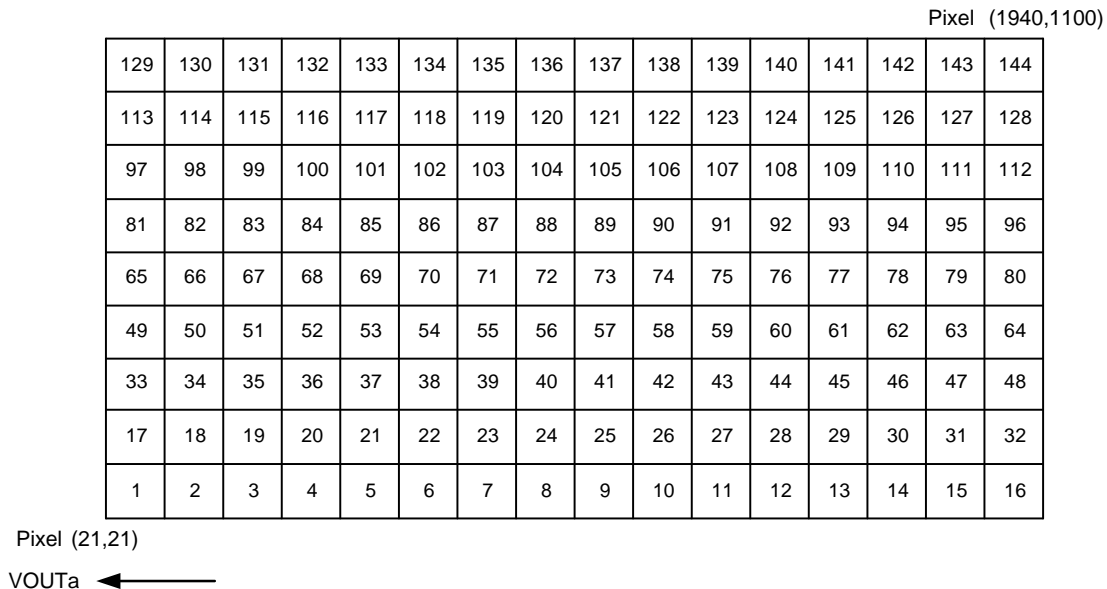


Figure 17. Test Sub Regions of Interest

OPERATION

Absolute Maximum Ratings

Absolute maximum rating is defined as a level or condition that should not be exceeded at any time per the

description. If the level or the condition is exceeded, the device will be degraded and may be damaged. Operation at these values will reduce MTTF.

Table 12. ABSOLUTE MAXIMUM RATINGS

| Description | Symbol | Minimum | Maximum | Unit | Notes |
|-----------------------|------------------|---------|---------|------|-------|
| Operating Temperature | T _{OP} | -50 | 70 | °C | 1 |
| Humidity | RH | 5 | 90 | % | 2 |
| Output Bias Current | I _{OUT} | - | 60 | mA | 3 |
| Off-Chip Load | C _L | - | 10 | pF | |

Stresses exceeding those listed in the Maximum Ratings table may damage the device. If any of these limits are exceeded, device functionality should not be assumed, damage may occur and reliability may be affected.

- Noise performance will degrade at higher temperatures.
- T = 25°C. Excessive humidity will degrade MTTF.
- Total for all outputs. Maximum current is -15 mA for each output. Avoid shorting output pins to ground or any low impedance source during operation. Amplifier bandwidth increases at higher current and lower load capacitance at the expense of reduced gain (sensitivity).

Table 13. ABSOLUTE MAXIMUM VOLTAGE RATINGS BETWEEN PINS AND GROUND

| Description | Minimum | Maximum | Unit | Notes |
|--|-----------|------------|------|-------|
| VDD _α , VOUT _α | -0.4 | 17.5 | V | 1 |
| RD _α | -0.4 | 15.5 | V | 1 |
| V1B, V1T | ESD - 0.4 | ESD + 24.0 | V | |
| V2B, V2T, V3B, V3T, V4B, V4T | ESD - 0.4 | ESD + 14.0 | V | |
| H1S _α , H1B _α , H2S _α , H2B _α , H2SL _α , R _α , OG _α | ESD - 0.4 | ESD + 14.0 | V | 1 |
| ESD | -10.0 | 0.0 | V | |
| SUB | -0.4 | 40.0 | V | 2 |

- α denotes a, b, c or d.
- Refer to Application Note *Using Interline CCD Image Sensors in High Intensity Visible Lighting Conditions*

Power-Up and Power-Down Sequence

Adherence to the power-up and power-down sequence is critical. Failure to follow the proper power-up and power-down sequences may cause damage to the sensor.



Notes:

1. Activate all other biases when ESD is stable and SUB is above 3 V.
2. Do not pulse the electronic shutter until ESD is stable.
3. VDD cannot be +15 V when SUB is 0 V.
4. The image sensor can be protected from an accidental improper ESD voltage by current limiting the SUB current to less than 10 mA. SUB and VDD must always be greater than GND. ESD must always be less than GND. Placing diodes between SUB, VDD, ESD and ground will protect the sensor from accidental overshoots of SUB, VDD and ESD during power on and power off. See the figure below.

Figure 18. Power-Up and Power-Down Sequence

The VCCD clock waveform must not have a negative overshoot more than 0.4 V below the ESD voltage.



Figure 19. VCCD Clock Waveform

Example of external diode protection for SUB, VDD and ESD. α denotes a, b, c or d.

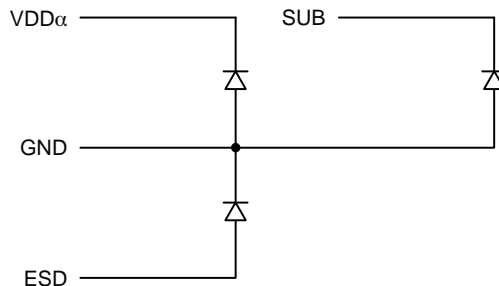


Figure 20. Example of External Diode Protection

DC Bias Operating Conditions

Table 14. DC BIAS OPERATING CONDITIONS

| Description | Pins | Symbol | Min. | Nom. | Max. | Unit | Max. DC Current | Notes |
|-------------------------|--------------|------------------|------|-----------------|------------------|------|-----------------|---------|
| Reset Drain | RD α | RD | 11.8 | 12.0 | 12.2 | V | 10 μ A | 1 |
| Output Gate | OG α | OG | -2.2 | -2.0 | -1.8 | V | 10 μ A | 1 |
| Output Amplifier Supply | VDD α | V _{DD} | 14.5 | 15.0 | 15.5 | V | 11.0 mA | 1, 2 |
| Ground | GND | GND | 0.0 | 0.0 | 0.0 | V | -1.0 mA | |
| Substrate | SUB | V _{SUB} | 5.0 | V _{AB} | V _{DD} | V | 50 μ A | 3, 8 |
| ESD Protection Disable | ESD | ESD | -9.5 | -9.0 | V _{x_L} | V | 50 μ A | 6, 7, 9 |
| Output Bias Current | VOU α | I _{OUT} | -3.0 | -7.0 | -10.0 | mA | - | 1, 4, 5 |

1. α denotes a, b, c or d.
2. The maximum DC current is for one output. $I_{DD} = I_{OUT} + I_{SS}$. See Figure 21.
3. The operating value of the substrate voltage, V_{AB} , will be marked on the shipping container for each device. The value of V_{AB} is set such that the photodiode charge capacity is the nominal P_{Ne} (see Specifications).
4. An output load sink must be applied to each VOUT pin to activate each output amplifier.
5. Nominal value required for 40 MHz operation per output. May be reduced for slower data rates and lower noise.
6. Adherence to the power-up and power-down sequence is critical. See Power Up and Power Down Sequence section.
7. ESD maximum value must be less than or equal to $V1_L + 0.4$ V and $V2_L + 0.4$ V.
8. Refer to Application Note *Using Interline CCD Image Sensors in High Intensity Visible Lighting Conditions*.
9. Where Vx_L is the level set for V1_L, V2_L, V3_L, or V4_L in the application.

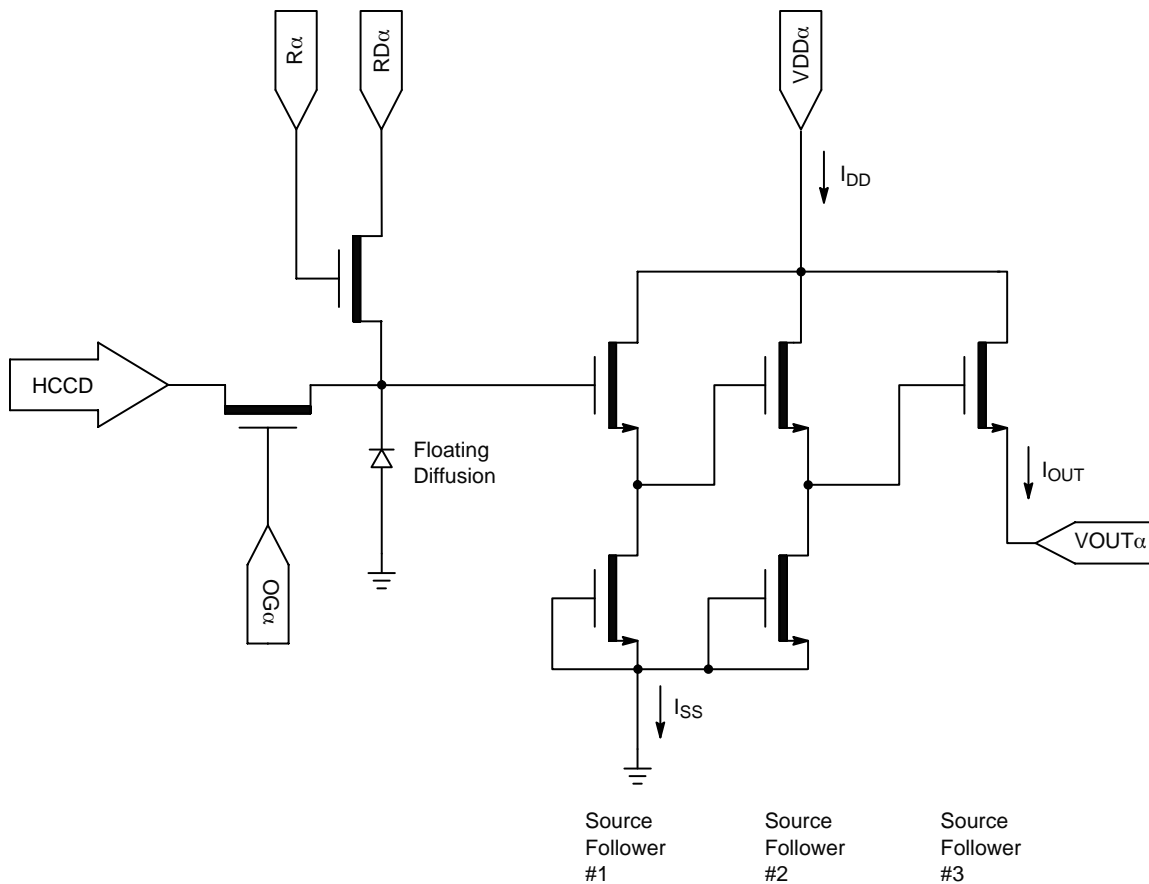


Figure 21. Output Amplifier

AC Operating Conditions

Table 15. CLOCK LEVELS

| Description | Pins (Note 1) | Symbol | Level | Min. | Nom. | Max. | Unit | Capacitance (Note 2) |
|--|------------------|-----------------|-----------|------------------|------|-----------------|------|-------------------------|
| Vertical CCD Clock, Phase 1 | V1B, V1T | V1_L | Low | -8.2 | -8.0 | -7.8 | V | 12 nF (Note 6) |
| | | V1_M | Mid | -0.2 | 0.0 | 0.2 | | |
| | | V1_H | High | 11.5 | 12.0 | 12.5 | | |
| Vertical CCD Clock, Phase 2 | V2B, V2T | V2_L | Low | -8.2 | -8.0 | -7.8 | V | 12 nF (Note 6) |
| | | V2_H | High | -0.2 | 0.0 | 0.2 | | |
| Vertical CCD Clock, Phase 3 | V3B, V3T | V3_L | Low | -8.2 | -8.0 | -7.8 | V | 12 nF (Note 6) |
| | | V3_H | High | -0.2 | 0.0 | 0.2 | | |
| Vertical CCD Clock, Phase 4 | V4B, V4T | V4_L | Low | -8.2 | -8.0 | -7.8 | V | 12 nF (Note 6) |
| | | V4_H | High | -0.2 | 0.0 | 0.2 | | |
| Horizontal CCD Clock, Phase 1 Storage | H1S α | H1S_L | Low | -5.2 (Note 7) | -4.0 | -3.8 | V | 170 pF (Note 6) |
| | | H1S_A | Amplitude | 3.8 | 4.0 | 5.2 (Note 7) | | |
| Horizontal CCD Clock, Phase 1 Barrier | H1B α | H1B_L | Low | -5.2 (Note 7) | -4.0 | -3.8 | V | 110 pF (Note 6) |
| | | H1B_A | Amplitude | 3.8 | 4.0 | 5.2 (Note 7) | | |
| Horizontal CCD Clock, Phase 2 Storage | H2S α | H2S_L | Low | -5.2 (Note 7) | -4.0 | -3.8 | V | 170 pF (Note 6) |
| | | H2S_A | Amplitude | 3.8 | 4.0 | 5.2 (Note 7) | | |
| Horizontal CCD Clock, Phase 2 Barrier | H2B α | H2B_L | Low | -5.2 (Note 7) | -4.0 | -3.8 | V | 110 pF (Note 6) |
| | | H2B_A | Amplitude | 3.8 | 4.0 | 5.2 (Note 7) | | |
| Horizontal CCD Clock, Phase 2 Last Phase (Note 3) | H2SL α | H2SL_L | Low | -5.2 | -5.0 | -4.8 | V | 20 pF (Note 6) |
| | | H2SL_A | Amplitude | 4.8 | 5.0 | 5.2 | | |
| Reset Gate | R α | R_L (Note 4) | Low | -3.5 | -2.0 | -1.5 | V | 16 pF (Note 6) |
| | | R_H | High | 2.5 | 3.0 | 4.0 | | |
| Electronic Shutter (Note 5) | SUB | VES | High | 29.0 | 30.0 | 40.0 | V | 800 pF (Note 6) |

- α denotes a, b, c or d.
- Capacitance is total for all like named pins.
- Use separate clock driver for improved speed performance.
- Reset low should be set to -3 V for signal levels greater than 40,000 electrons.
- Refer to Application Note *Using Interline CCD Image Sensors in High Intensity Visible Lighting Conditions*.
- Capacitance values are estimated.
- If the minimum horizontal clock low level is used (-5.2 V), then the maximum horizontal clock amplitude should be used (5.2 V amplitude) to create a -5.2 V to 0.0 V clock. If a 5 V clock driver is used, the horizontal low level should be set to -5.0 V and the high level should be a set to 0.0 V.

KAI-02150

The figure below shows the DC bias (VSUB) and AC clock (VES) applied to the SUB pin. Both the DC bias and AC clock are referenced to ground.



Figure 22. DC Bias and AC Clock Applied to the SUB Pin

Device Identification

The device identification pin (DevID) may be used to determine which Truesense Imaging 5.5 micron pixel interline CCD sensor is being used.

Table 16.

| Description | Pins | Symbol | Min. | Nom. | Max. | Unit | Max. DC Current | Notes |
|-----------------------|-------|--------|--------|--------|--------|----------|-----------------|---------|
| Device Identification | DevID | DevID | 49,000 | 55,000 | 61,000 | Ω | 50 μ A | 1, 2, 3 |

1. Nominal value subject to verification and/or change during release of preliminary specifications.
2. If the Device Identification is not used, it may be left disconnected.
3. After Device Identification resistance has been read during camera initialization, it is recommended that the circuit be disabled to prevent localized heating of the sensor due to current flow through the R_DeviceID resistor.

Recommended Circuit

Note that V1 must be a different value than V2.

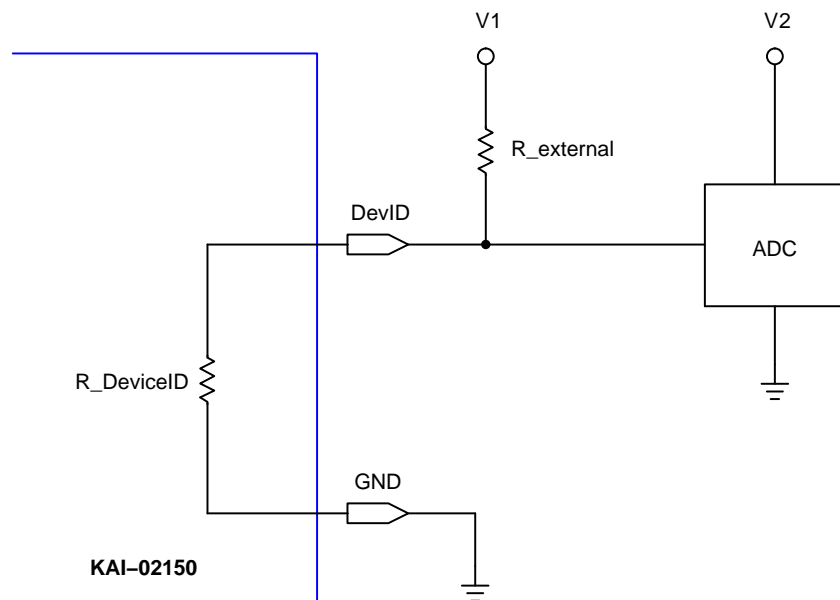


Figure 23. Device Identification Recommended Circuit

TIMING

Table 17. REQUIREMENTS AND CHARACTERISTICS

| Description | Symbol | Min. | Nom. | Max. | Unit | Notes |
|------------------------|------------------|------|------|------|---------------|---------------------|
| Photodiode Transfer | t_{PD} | 1.0 | – | – | μs | |
| VCCD Leading Pedestal | t_{3P} | 4.0 | – | – | μs | |
| VCCD Trailing Pedestal | t_{3D} | 4.0 | – | – | μs | |
| VCCD Transfer Delay | t_D | 1.0 | – | – | μs | |
| VCCD Transfer | t_V | 1.0 | – | – | μs | |
| VCCD Clock Cross-Over | V_{VCR} | 75 | – | 100 | % | |
| VCCD Rise, Fall Times | t_{VR}, t_{VF} | 5 | – | 10 | % | 2, 3 |
| HCCD Delay | t_{HS} | 0.2 | – | – | μs | |
| HCCD Transfer | t_e | 25.0 | – | – | ns | |
| Shutter Transfer | t_{SUB} | 1.0 | – | – | μs | |
| Shutter Delay | t_{HD} | 1.0 | – | – | μs | |
| Reset Pulse | t_R | 2.5 | – | – | ns | |
| Reset – Video Delay | t_{RV} | – | 2.2 | – | ns | |
| H2SL – Video Delay | t_{HV} | – | 3.1 | – | ns | |
| Line Time | t_{LINE} | 27.0 | – | – | μs | Dual HCCD Readout |
| | | 52.1 | – | – | μs | Single HCCD Readout |
| Frame Time | t_{FRAME} | 15.5 | – | – | ms | Quad HCCD Readout |
| | | 31.0 | – | – | ms | Dual HCCD Readout |
| | | 59.6 | – | – | ms | Single HCCD Readout |

1. Refer to timing diagrams as shown in Figure 24, Figure 25, Figure 26, Figure 27 and Figure 28.
2. Refer to Figure 28: VCCD Clock Edge Alignment.
3. Relative to the pulse width.

Timing Diagrams

The timing sequence for the clocked device pins may be represented as one of seven patterns (P1–P7) as shown in the table below. The patterns are defined in Figure 24 and

Figure 25. Contact Truesense Imaging Application Engineering for other readout modes.

Table 18. TIMING DIAGRAMS

| Device Pin | Quad Readout | Dual Readout VOUTa, VOUTb | Dual Readout VOUTa, VOUTc | Single Readout VOUTa |
|---------------|--------------|------------------------------|------------------------------|-------------------------|
| V1T | P1T | P1B | P1T | P1B |
| V2T | P2T | P4B | P2T | P4B |
| V3T | P3T | P3B | P3T | P3B |
| V4T | P4T | P2B | P4T | P2B |
| V1B | | P1B | | |
| V2B | | P2B | | |
| V3B | | P3B | | |
| V4B | | P4B | | |
| H1Sa | | P5 | | |
| H1Ba | | P5 | | |
| H2Sa (Note 2) | | P6 | | |
| H2Ba | | P6 | | |

Table 18. TIMING DIAGRAMS (continued)

| Device Pin | Quad Readout | Dual Readout VOUTa, VOUTb | Dual Readout VOUTa, VOUTc | Single Readout VOUTa |
|---------------|--------------|------------------------------|------------------------------|-----------------------------|
| Ra | P7 | | | |
| H1Sb | P5 | | P5 | |
| H1Bb | P5 | | P6 | |
| H2Sb (Note 2) | P6 | | P6 | |
| H2Bb | P6 | | P5 | |
| Rb | P7 | | P7 (Note 1) or Off (Note 3) | P7 (Note 1) or Off (Note 3) |
| H1Sc | P5 | P5 (Note 1) or Off (Note 3) | P5 | P5 (Note 1) or Off (Note 3) |
| H1Bc | P5 | P5 (Note 1) or Off (Note 3) | P5 | P5 (Note 1) or Off (Note 3) |
| H2Sc (Note 2) | P6 | P6 (Note 1) or Off (Note 3) | P6 | P6 (Note 1) or Off (Note 3) |
| H2Bc | P6 | P6 (Note 1) or Off (Note 3) | P6 | P6 (Note 1) or Off (Note 3) |
| Rc | P7 | P7 (Note 1) or Off (Note 3) | P7 | P7 (Note 1) or Off (Note 3) |
| H1Sd | P5 | P5 (Note 1) or Off (Note 3) | P5 | P5 (Note 1) or Off (Note 3) |
| H1Bd | P5 | P5 (Note 1) or Off (Note 3) | P6 | P5 (Note 1) or Off (Note 3) |
| H2Sd (Note 2) | P6 | P6 (Note 1) or Off (Note 3) | P6 | P6 (Note 1) or Off (Note 3) |
| H2Bd | P6 | P6 (Note 1) or Off (Note 3) | P5 | P6 (Note 1) or Off (Note 3) |
| Rd | P7 | P7 (Note 1) or Off (Note 3) | P7 (Note 1) or Off (Note 3) | P7 (Note 1) or Off (Note 3) |

| | | | | |
|---------------------------|------|------|------|------|
| #Lines/Frame (Minimum) | 572 | 1144 | 572 | 1144 |
| #Pixels/Line (Minimum) | 1013 | | 2026 | |

1. For optimal performance of the sensor. May be clocked at a lower frequency. If clocked at a lower frequency, the frequency selected should be a multiple of the frequency used on the a and b register.
2. H2SLx follows the same pattern as H2Sx For optimal speed performance, use a separate clock driver.
3. Off = +5 V. Note that there may be operating conditions (high temperature and/or very bright light sources) that will cause blooming from the unused c/d register into the image area.

Photodiode Transfer Timing

A row of charge is transferred to the HCCD on the falling edge of V1 as indicated in the P1 pattern below. Using this timing sequence, the leading dummy row or line is combined with the first dark row in the HCCD. The “Last Line” is dependent on readout mode – either 572 or 1144 minimum counts required. It is important to note that, in

general, the rising edge of a vertical clock (patterns P1–P4) should be coincident or slightly leading a falling edge at the same time interval. This is particularly true at the point where P1 returns from the high (3rd level) state to the mid-state when P4 transitions from the low state to the high state.



Figure 24. Photodiode Transfer Timing

Line and Pixel Timing

Each row of charge is transferred to the output, as illustrated below, on the falling edge of H2SL (indicated as

P6 pattern). The number of pixels in a row is dependent on readout mode – either 1013 or 2026 minimum counts required.



Figure 25. Line and Pixel Timing

Pixel Timing Detail



Figure 26. Pixel Timing Detail

Frame/Electronic Shutter Timing

The SUB pin may be optionally clocked to provide electronic shuttering capability as shown below. The

resulting photodiode integration time is defined from the falling edge of SUB to the falling edge of V1 (P1 pattern).



Figure 27. Frame/Electronic Shutter Timing

VCCD Clock Edge Alignment

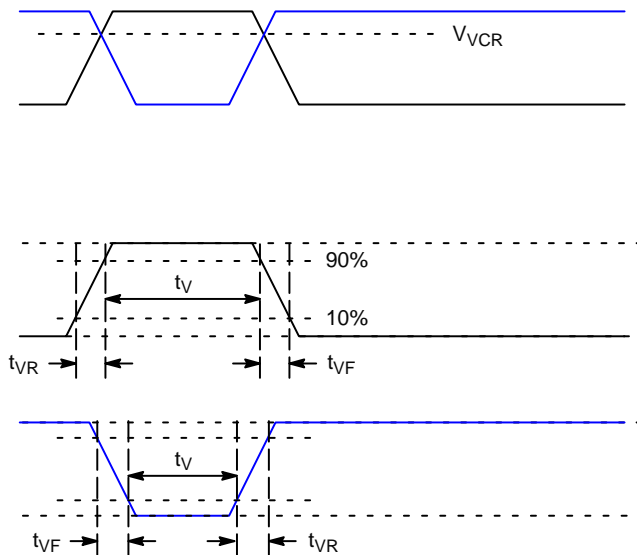


Figure 28. VCCD Clock Edge Alignment

Line and Pixel Timing – Vertical Binning by 2



Figure 29. Line and Pixel Timing – Vertical Binning by 2

STORAGE AND HANDLING

Table 19. STORAGE CONDITIONS

| Description | Symbol | Minimum | Maximum | Unit | Notes |
|---------------------|-----------------|---------|---------|------|-------|
| Storage Temperature | T _{ST} | -40 | 80 | °C | 1 |
| Humidity | RH | 5 | 90 | % | 2 |

1. Long-term storage toward the maximum temperature will accelerate color filter degradation.
2. T = 25°C. Excessive humidity will degrade MTTF.

For information on ESD and cover glass care and cleanliness, please download the *Image Sensor Handling and Best Practices* Application Note (AN52561/D) from www.onsemi.com.

For information on environmental exposure, please download the *Using Interline CCD Image Sensors in High Intensity Lighting Conditions* Application Note (AND9183/D) from www.onsemi.com.

For information on soldering recommendations, please download the *Soldering and Mounting Techniques Reference Manual* (SOLDERRM/D) from www.onsemi.com.

For quality and reliability information, please download the *Quality & Reliability Handbook* (HBD851/D) from www.onsemi.com.

For information on device numbering and ordering codes, please download the *Device Nomenclature* technical note (TND310/D) from www.onsemi.com.

For information on Standard terms and Conditions of Sale, please download [Terms and Conditions](http://www.onsemi.com) from www.onsemi.com.

MECHANICAL INFORMATION

PGA Completed Assembly



Notes:

1. See Ordering Information for marking code.
2. No materials to interfere with clearance through guide holes.
3. The center of the active image is nominally at the center of the package.
4. Die rotation < 0.5 degrees.
5. Glass rotation < 1.5 degrees with respect to package outer edges for all sealed configurations.
6. Internal traces may be exposed on sides of package. Do not allow metal to contact sides of ceramic package.
7. Recommended mounting screws: 1.6 × 0.35 mm (ISO Standard); 0-80 (Unified Fine Thread Standard).
8. Units: millimeters.

Figure 30. PGA Completed Assembly

CLCC Completed Assembly




Notes:

1. See Ordering Information for marking code.
2. Die rotation < 0.5 degrees.
3. Units: millimeters.

Figure 31. CLCC Completed Assembly

KAI-02150

PGA MAR Cover Glass

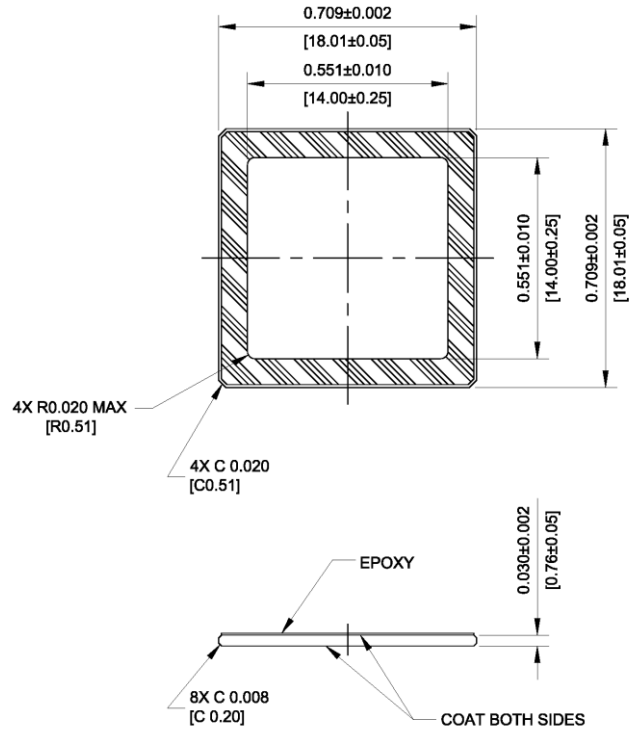

Notes:

1. Dust/Scratch Count – 12 micron maximum
2. Units: IN [MM]
3. Reflectance Specification
 - a. 420 nm to 435 nm < 2.0%
 - b. 435 nm to 630 nm < 0.8%
 - c. 630 nm to 680 nm < 2.0%

Figure 32. PGA MAR Cover Glass

KAI-02150

CLCC MAR Cover Glass




Notes:

1. Dust/Scratch Count – 12 micron maximum
2. Units: millimeter
3. Reflectance Specification
 - a. 420 nm to 435 nm < 2.0%
 - b. 435 nm to 630 nm < 0.8%
 - c. 630 nm to 680 nm < 2.0%

Figure 33. CLCC MAR Cover Glass

PGA Clear Cover Glass

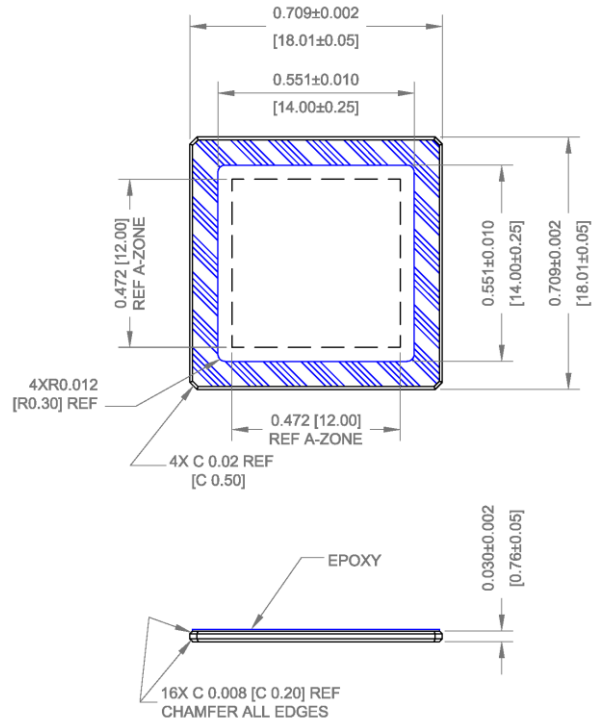


Notes:

1. Dust/Scratch Count – 12 micron maximum
2. Units: IN

Figure 34. PGA Clear Cover Glass

Cover Glass Transmission

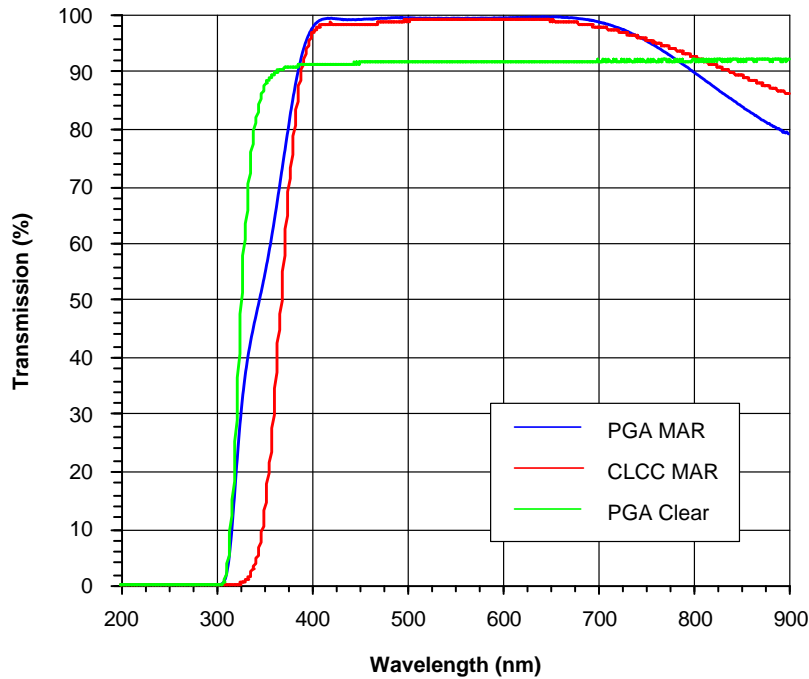

NOTE: PGA and CLCC MAR transmission data differ due to in-spec differences from glass vendor.

Figure 35. Cover Glass Transmission

SHIPPING CONFIGURATION

Cover Glass Protective Tape

Cover glass protective tape, as shown in Figure 36, is utilized to help ensure the cleanliness of the cover glass during transportation and camera manufacturing. This protective tape is not intended to be optically correct, and

should be removed prior to any image testing. The protective tape should be removed in an ionized air stream to prevent static build-up and the attraction of particles. The following part numbers will have the protective tape applied:

Table 20.

| Part Number | Description |
|-----------------------|---|
| KAI-02150-CBA-JB-B2 | Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2 |
| KAI-02150-CBA-JB-AE | Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Engineering Grade |
| KAI-02150-CBA-JB-B2-T | Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2, Packed in Trays |

Table 21.

| Criteria | Description |
|--------------|---|
| Placement | Per the drawing. The lid tape shall not overhang the edge of the package or mounting holes. The lid tape always overhangs the top of the glass (chamfers not included). |
| Tab Location | The tape tab is located near pin 68. |
| Scratches | The tape application equipment will make slight scratches on the lid tape. This is allowed. |



Figure 36. Cover Glass Protective Tape

KAI-02150

Tray Packing

The following part numbers are packed in bricks of 6 trays, each tray containing 32 image sensors, for a total of

192 image sensors per brick. The minimum order and multiple quantities for this configuration are 192 image sensors.

Table 22.

| Part Number | Description |
|-----------------------|---|
| KAI-02150-CBA-JB-B2-T | Color (Bayer RGB), Telecentric Microlens, PGA Package, Sealed Clear Cover Glass (No Coatings), Grade 2, Packed in Trays |

Tray Configuration

Pin-Up View



Figure 37. Tray Pin-Up View

Pin-Down View



Figure 38. Tray Pin-Down View

KAI-02150

Brick Configuration

Bricks consist of 6 full trays and 1 empty tray. Each tray contains 32 image sensors. There are a total of 192 image

sensors in the brick. The ID label is applied to the top of the brick. Tray 1 is at the bottom of the brick and the empty tray is at the top of the brick.



Figure 39. Brick

The Brick ID is Encoded in the Bar Code.



Figure 40. Brick ID Label

Brick in Vacuum Sealed Bag



Figure 41. Sealed Brick

Shipping Container

Brick Loaded in Shipping Container



Figure 42. Brick Loaded in Shipping Container

Open Shipping Container with Parts List

The parts list (see Figure 46) details information for each sensor in the brick. The parts list includes the serial number, tray and location, and VAB value for each sensor.



Figure 43. Open Shipping Container with Parts List

Sealed Shipping Container

The Brick Label (see Figure 45) is applied to both ends of the shipping container.



Figure 44. Sealed Shipping Container

Brick Label



Figure 45. Brick Label

Parts List

The parts list details information for each sensor in the brick. The parts list includes the serial number, tray and location, and VAB value for each sensor. Additionally, the VAB value and serial number are encoded in the bar code.



Figure 46. Parts List

ON Semiconductor and the  are registered trademarks of Semiconductor Components Industries, LLC (SCILLC) or its subsidiaries in the United States and/or other countries. SCILLC owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of SCILLC's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. SCILLC reserves the right to make changes without further notice to any products herein. SCILLC makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does SCILLC assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. "Typical" parameters which may be provided in SCILLC data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. SCILLC does not convey any license under its patent rights nor the rights of others. SCILLC products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the SCILLC product could create a situation where personal injury or death may occur. Should Buyer purchase or use SCILLC products for any such unintended or unauthorized application, Buyer shall indemnify and hold SCILLC and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that SCILLC was negligent regarding the design or manufacture of the part. SCILLC is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

PUBLICATION ORDERING INFORMATION

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor
P.O. Box 5163, Denver, Colorado 80217 USA
Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada
Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada
Email: orderlit@onsemi.com

N. American Technical Support: 800-282-9855 Toll Free
USA/Canada
Europe, Middle East and Africa Technical Support:
Phone: 421 33 790 2910
Japan Customer Focus Center
Phone: 81-3-5817-1050

ON Semiconductor Website: www.onsemi.com
Order Literature: <http://www.onsemi.com/orderlit>
For additional information, please contact your local
Sales Representative



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.