


# Photologic® Slotted Optical Switch

## OPB930 and OPB940 (L and W Series)



### Features:

- Choice of aperture size
- Choice of output configurations
- Choice of opaque or IR transmissive shell
- Choice of pins (L) or wires (W)
- 0.125" (3.18 mm) slot width
- 0.320" (8.128 mm) lead spacing for PCBoard (side mounting)
- Data rates to 250 kBaud

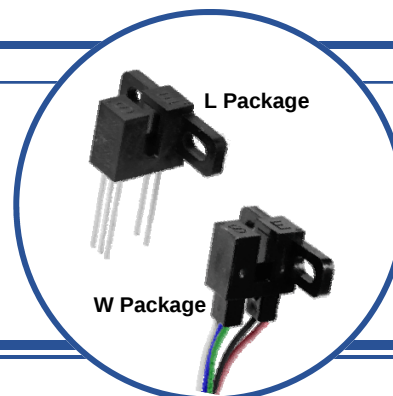

### Description:

The **OPB930** and **OPB940** series of Photologic® photo integrated circuit switches provide optimum flexibility for the design engineer. Building from a standard housing with a 0.125" (3.18 mm) wide slot, a user can specify the type and polarity of TTL output, discrete shell material, aperture width and either 0.350" (8.9 mm) long pins (**L Series**) or 24" (610 mm) AWG, UL listed wire leads (**W Series**).

All housings are made from an opaque grade of injection-molded plastic that minimizes the assembly's sensitivity to both visible and near-infrared ambient radiation. Discrete shells (exposed on the parallel faces inside the device throat) are either IR transmissive plastic (for applications where aperture contamination may occur) or opaque plastic (for maximum protection against ambient light).


Electrical output can be specified as either TTL Totem Pole or TTL Open Collector, either of which can be supplied with buffer or inverter output polarity. All devices have the added stability of a built-in hysteresis amplifier.

Custom electrical, wire and cabling and connectors are available. Contact your local representative or OPTEK for more information.

### Applications:

- Mechanical switch replacement
- Speed indication (tachometer)
- Mechanical limit indication

### Part Number Guide — OPB930 and OPB940 Series

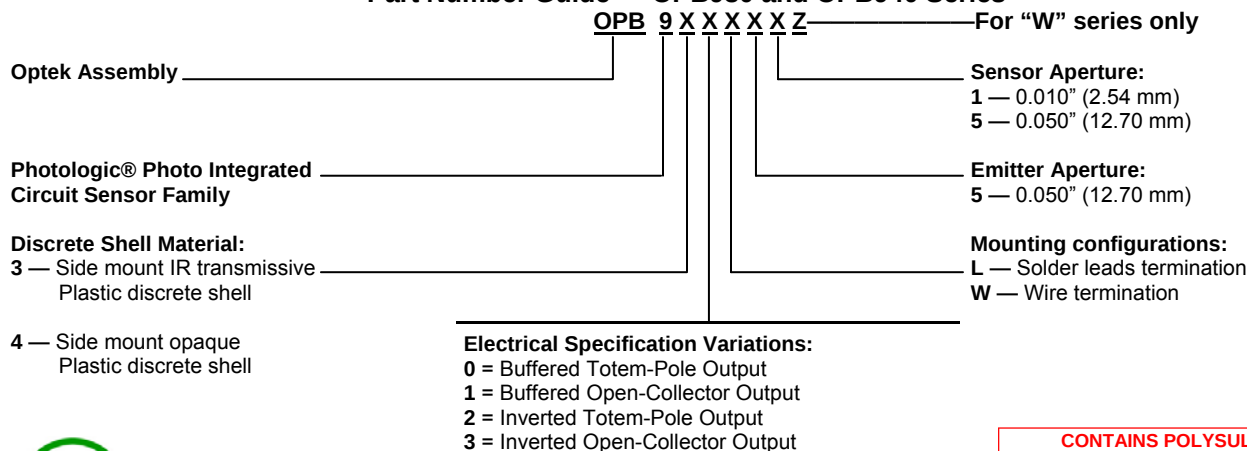


RoHS


OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.

**CONTAINS POLYSULFONE**  
To avoid stress cracking, we suggest using ND Industries' **Vibra-Tite** for thread-locking. **Vibra-Tite** evaporates fast without causing structural failure in OPTEK's molded plastics.


**OPB930, OPB940 Buffered Totem-Pole**

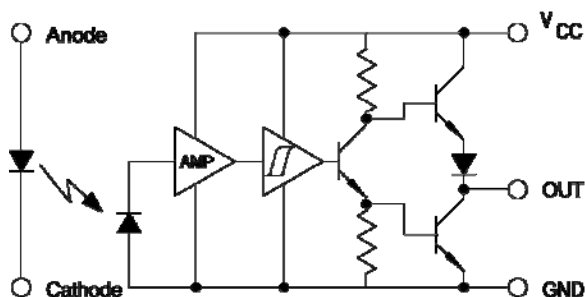


**OPB931, OPB941 Buffered Open-Collector**

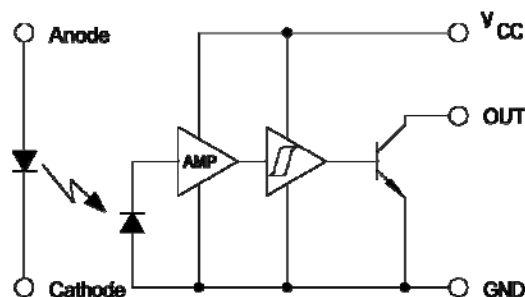

**OPB932, OPB942 Inverted Totem-Pole**

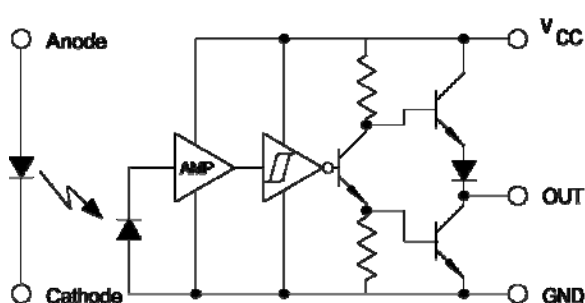

**OPB933 & OPB943 Inverted Open-Collector**

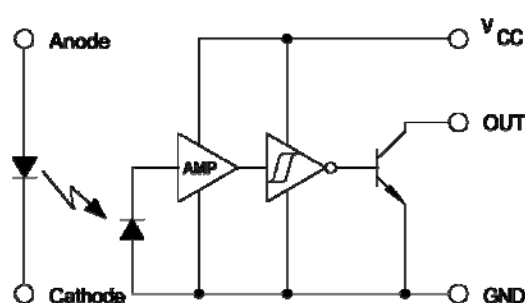

**Absolute Maximum Ratings** ( $T_A=25^\circ\text{C}$  unless otherwise noted)

|                                                                                                            |                                            |
|------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| Supply Voltage, $V_{CC}$ (not to exceed 3 seconds)                                                         | 10 V                                       |
| Operating Temperature Range                                                                                | $-40^\circ\text{C}$ to $+70^\circ\text{C}$ |
| Storage Temperature Range                                                                                  | $-40^\circ\text{C}$ to $+85^\circ\text{C}$ |
| Lead Soldering Temperature [1/16 inch (1.6mm) from the case for 5 sec. with soldering iron] <sup>(1)</sup> | $260^\circ\text{C}$                        |

**Input Infrared LED**

|                                                     |        |
|-----------------------------------------------------|--------|
| Input Diode Power Dissipation <sup>(2)</sup>        | 100 mW |
| Output Photologic® Power Dissipation <sup>(3)</sup> | 200 mW |
| Total Device Power Dissipation <sup>(4)</sup>       | 300 mW |

**Output Photologic®**

|                                                |       |
|------------------------------------------------|-------|
| Voltage at Output Lead (Open Collector Output) | 35 V  |
| Diode Forward DC Current                       | 40 mA |
| Diode Reverse DC Voltage                       | 2 V   |



**Notes:**

- (1) RMA flux is recommended. Duration can be extended to 10 seconds maximum when flow soldering.
- (2) Derate linearly 2.22 mW/ $^\circ\text{C}$  above  $25^\circ$ .
- (3) Derate linearly 4.44 mW/ $^\circ\text{C}$  above  $25^\circ$ .
- (4) Derate linearly 6.66 mW/ $^\circ\text{C}$  above  $25^\circ$ .
- (5) OPB930L/OPB940L series devices are terminated with 0.020" square leads designed for PCBoard mounting.
- (6) Methanol and isopropanol are recommended as cleaning agents. Plastic housing is soluble in chlorinated hydrocarbons and ketones.
- (7) All parameters tested using pulse technique.

OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.

# Photologic® Slotted Optical Switch

## OPB930 and OPB940 (L and W Series)

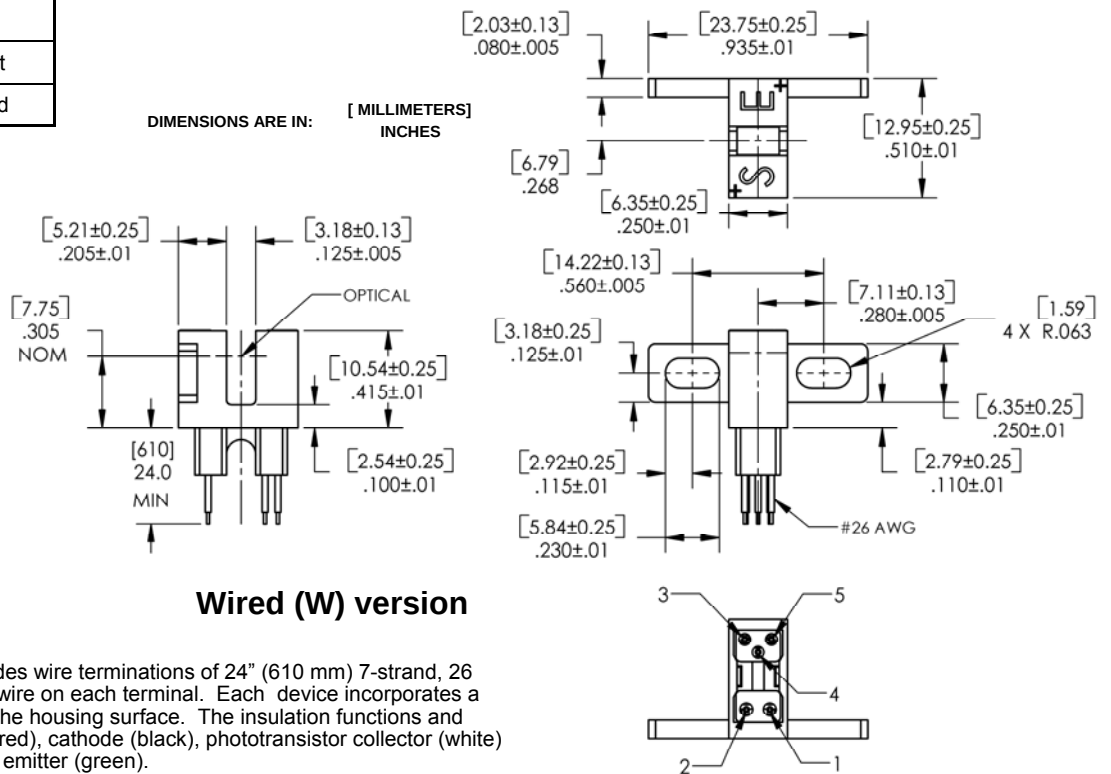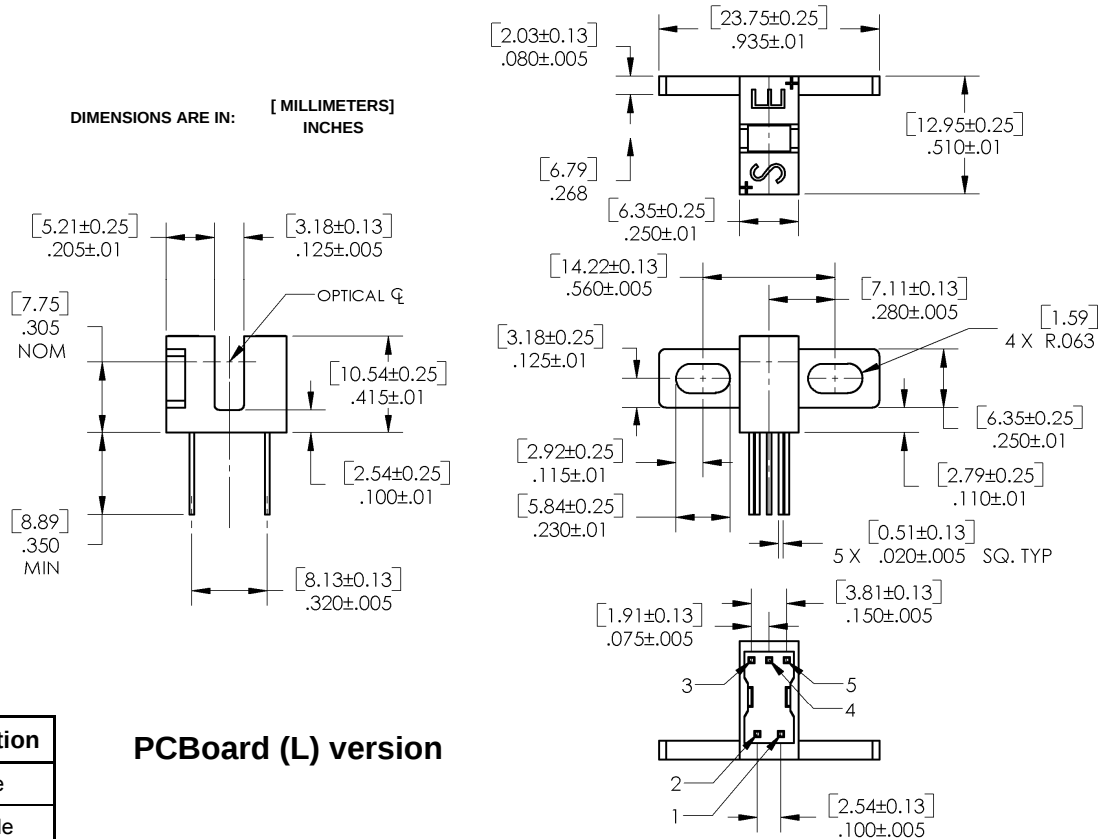

OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.

**Electrical Characteristics** ( $T_A = 25^\circ\text{C}$  unless otherwise noted)

| SYMBOL | PARAMETER | MIN | TYP | MAX | UNITS | TEST CONDITIONS |
|--------|-----------|-----|-----|-----|-------|-----------------|
|--------|-----------|-----|-----|-----|-------|-----------------|

**Input Diode**

|       |                 |   |   |     |               |                       |
|-------|-----------------|---|---|-----|---------------|-----------------------|
| $V_F$ | Forward Voltage | - | - | 1.7 | V             | $I_F = 20 \text{ mA}$ |
| $I_R$ | Reverse Current | - | - | 100 | $\mu\text{A}$ | $V_R = 2.0 \text{ V}$ |





**Output Photologic® Sensor**

|                  |                                                              |      |     |      |               |                                                                                 |
|------------------|--------------------------------------------------------------|------|-----|------|---------------|---------------------------------------------------------------------------------|
| $V_{CC}$         | Operating D.C. Supply Voltage                                | 4.75 | -   | 5.25 | V             | -                                                                               |
| $I_{CCL}$        | Low Level Supply Current:<br>Totem Pole & Open-Collector     | -    | -   | 15   | mA            | $V_{CC} = 5.25, I_F = 0 \text{ mA}^{(1)}$                                       |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | -    | -   | 15   | mA            | $V_{CC} = 5.25, I_F = 15 \text{ mA}$                                            |
| $I_{CCH}$        | High Level Supply Current:<br>Totem Pole & Open-Collector    | -    | -   | 15   | mA            | $V_{CC} = 5.25, I_F = 15 \text{ mA}$                                            |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | -    | -   | 15   | mA            | $V_{CC} = 5.25, I_F = 0 \text{ mA}^{(1)}$                                       |
| $V_{OL}$         | Low Level Output Voltage:<br>Totem Pole & Open-Collector     | -    | -   | 0.4  | V             | $V_{CC} = 4.75, I_{OL} = 12.8 \text{ mA}, I_F = 0 \text{ mA}^{(1)}$             |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | -    | -   | 0.4  | V             | $V_{CC} = 4.75, I_{OL} = 12.8 \text{ mA}, I_F = 15 \text{ mA}$                  |
| $V_{OH}$         | High Level Output Voltage:<br>Totem-Pole & Open-Collector    | 2.4  | -   | -    | V             | $V_{CC} = 4.75, I_{OH} = -800 \mu\text{A}, I_F = 15 \text{ mA}$                 |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | 2.4  | -   | -    | V             | $V_{CC} = 4.75, I_{OH} = -800 \mu\text{A}, I_F = 0 \text{ mA}^{(1)}$            |
| $I_{OH}$         | High Level Output Current:<br>Totem Pole & Open-Collector    | -    | -   | 100  | $\mu\text{A}$ | $V_{CC} = 4.75, V_{OH} = 30 \text{ V}, I_F = 15 \text{ mA},$                    |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | -    | -   | 100  | $\mu\text{A}$ | $V_{CC} = 4.75, V_{OH} = 30 \text{ V}, I_F = 0 \text{ mA}^{(1)}$                |
| $I_F(+)$         | LED Positive-Going Threshold Current                         | -    | -   | 15   | mA            | $V_{CC} = 5.0 \text{ V}$                                                        |
| $I_F(+), I_F(-)$ | Hysteresis                                                   | -    | 2.0 | -    | V             | $V_{CC} = 5.0 \text{ V}$                                                        |
| $I_{OS}$         | Short Circuit Output Current:<br>Totem Pole & Open-Collector | -15  | -   | -60  | mA            | $V_{CC} = 5.25 \text{ V}, I_F = 15 \text{ mA}, \text{Output} = \text{GND}$      |
|                  | Inverted Totem-Pole &<br>Inverted Open-Collector             | -15  | -   | -60  | mA            | $V_{CC} = 5.25 \text{ V}, I_F = 0 \text{ mA}^{(1)}, \text{Output} = \text{GND}$ |
| $t_r, t_f$       | Output Rise Time, Output Fall Time                           | -    | 70  | -    | ns            | $V_{CC} = 5 \text{ V}, I_F = 0 \text{ or } 15 \text{ mA}$                       |
| $T_{PLH}$        | Propagation Delay Low-High                                   | -    | 5.0 | -    | $\mu\text{s}$ | $R_L = 8\text{TTL loads (Totem Pole)}$                                          |
| $T_{PHL}$        | Propagation Delay High-Low                                   | -    | 5.0 | -    | $\mu\text{s}$ | $R_L = 360 \Omega \text{ (Open-Collector)}$                                     |

**Notes:**


- (1) Normal application would be with light source blocked, simulated by  $I_F = 0 \text{ mA}$ .
- (2) All parameters are tested using pulse techniques.

OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.

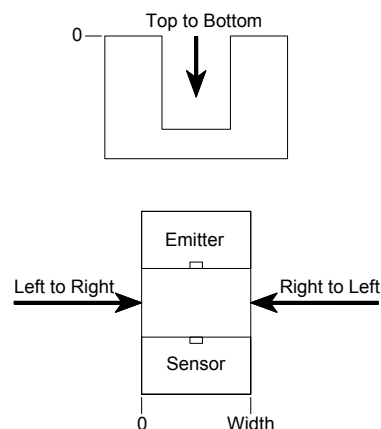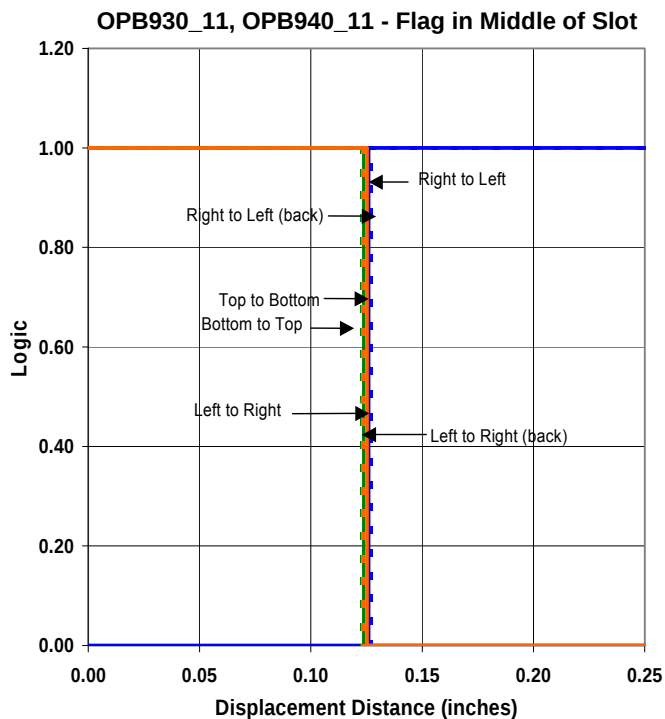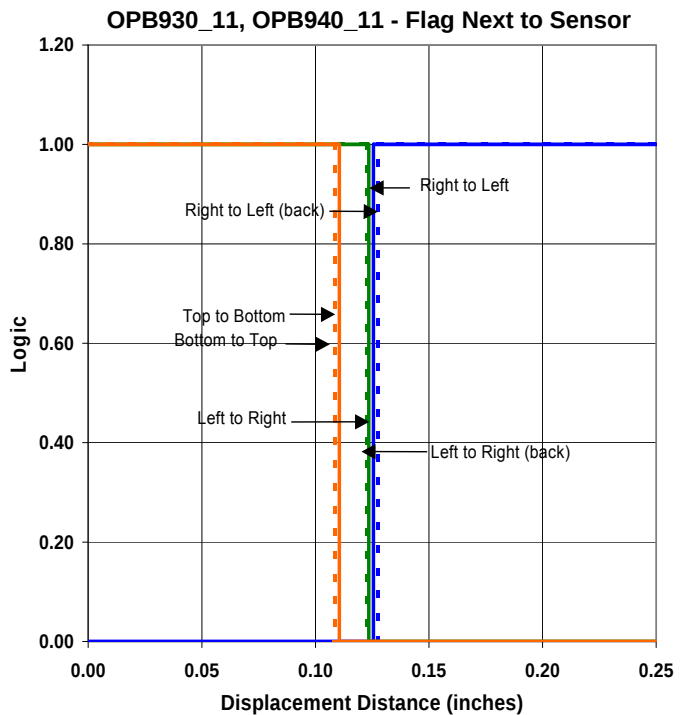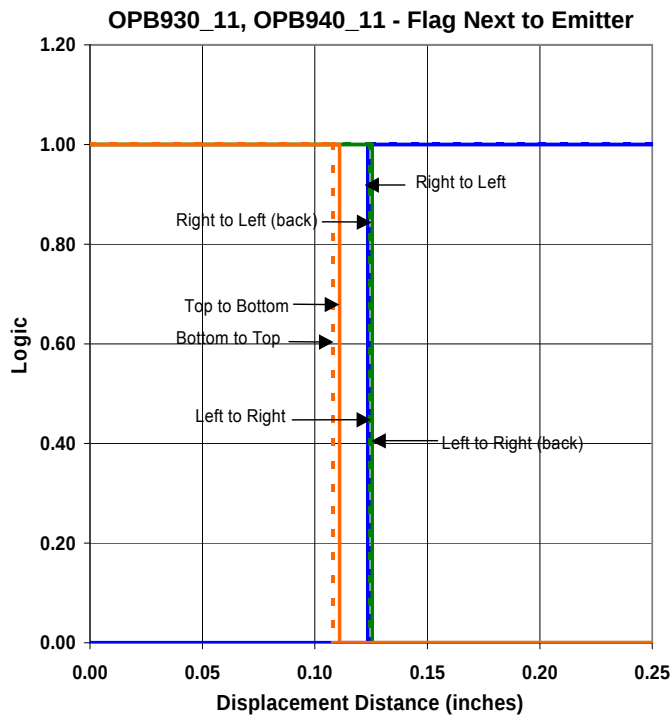


OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.



OPB930\_51, OPB940\_51 - Flag Next to Emitter

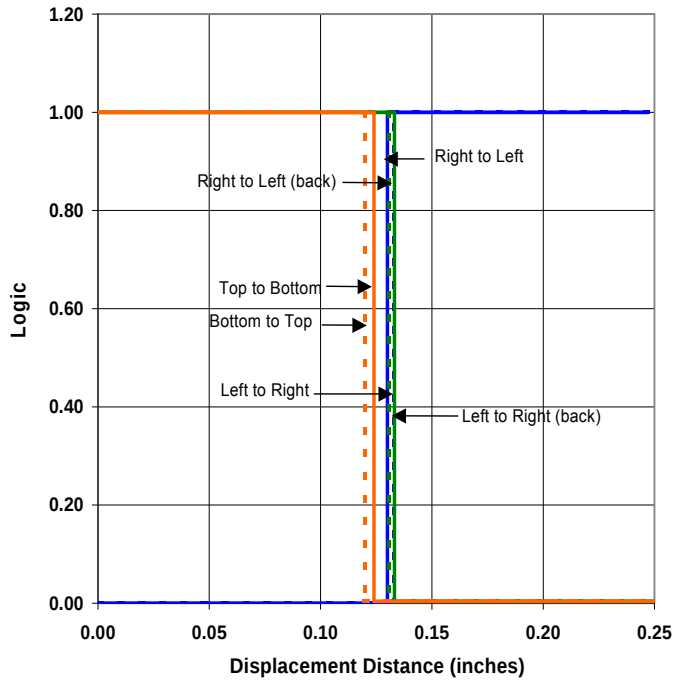





OPB930\_51, OPB940\_51 - Flag Next to Sensor

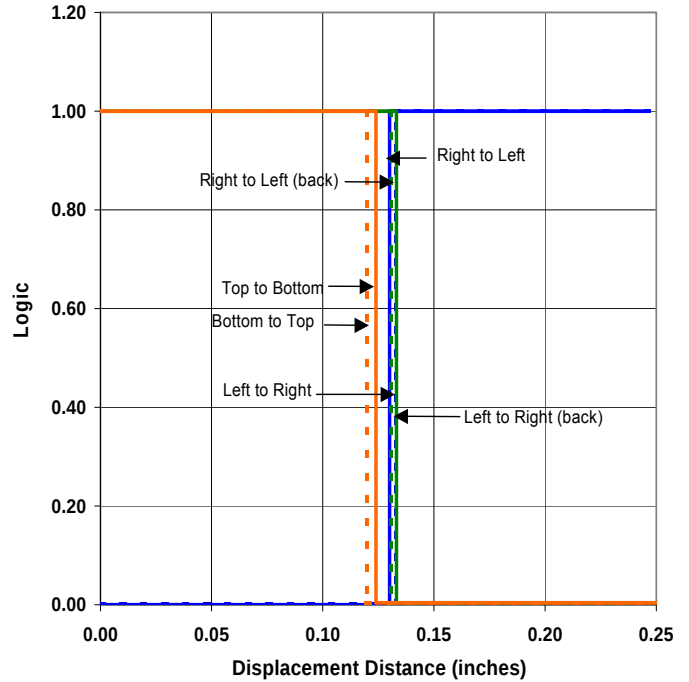

OPB930\_51, OPB940\_51 - Flag in Middle of Slot

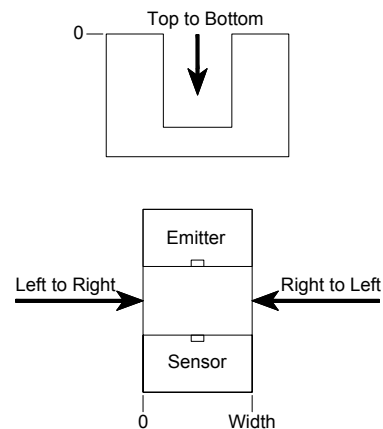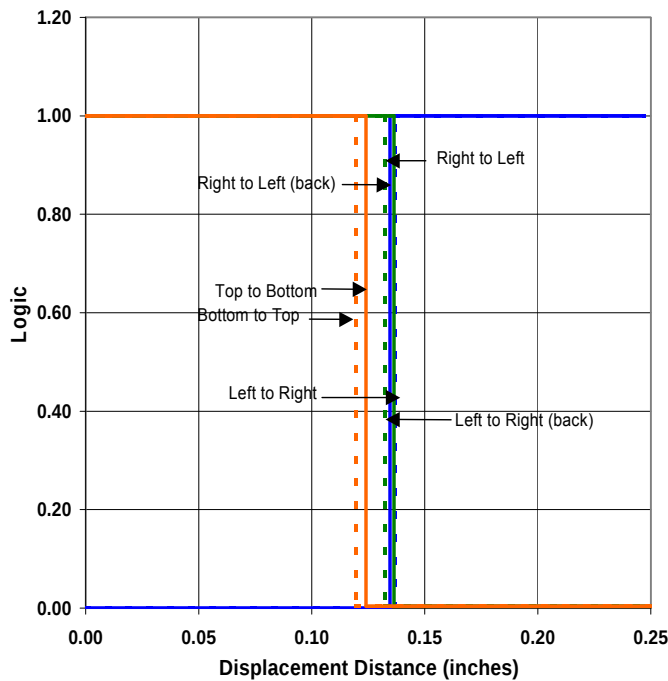

OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.

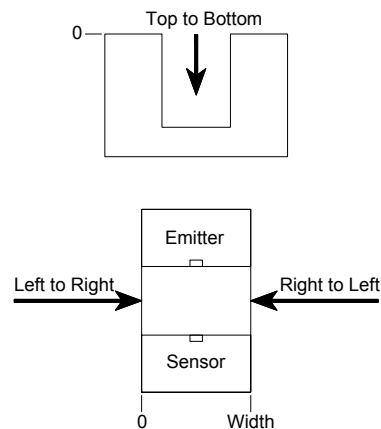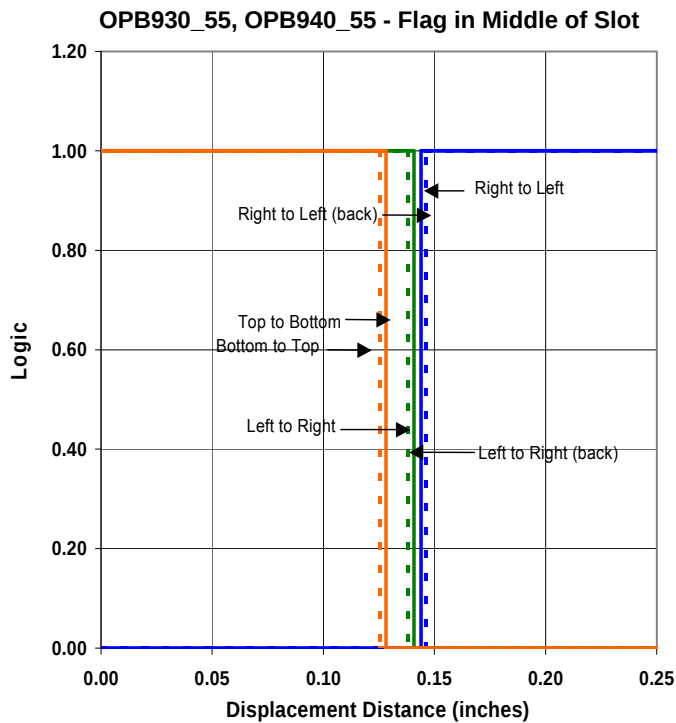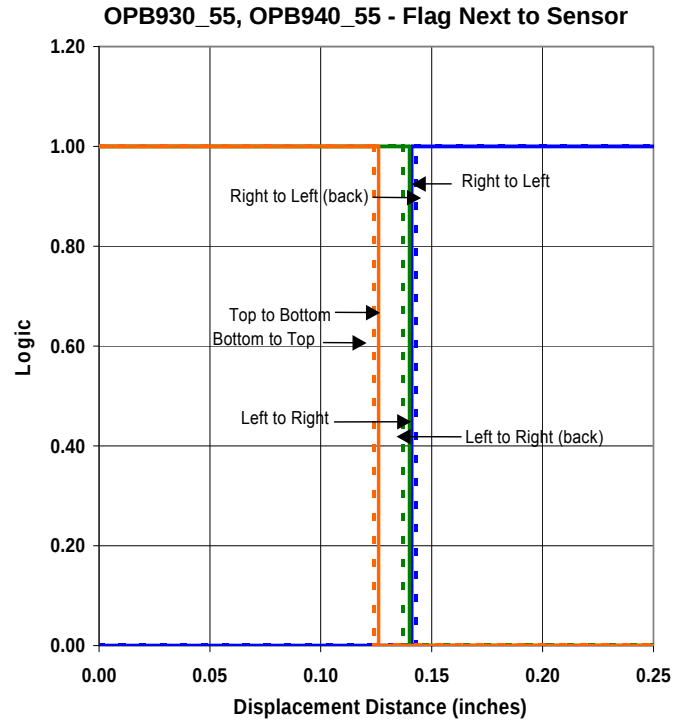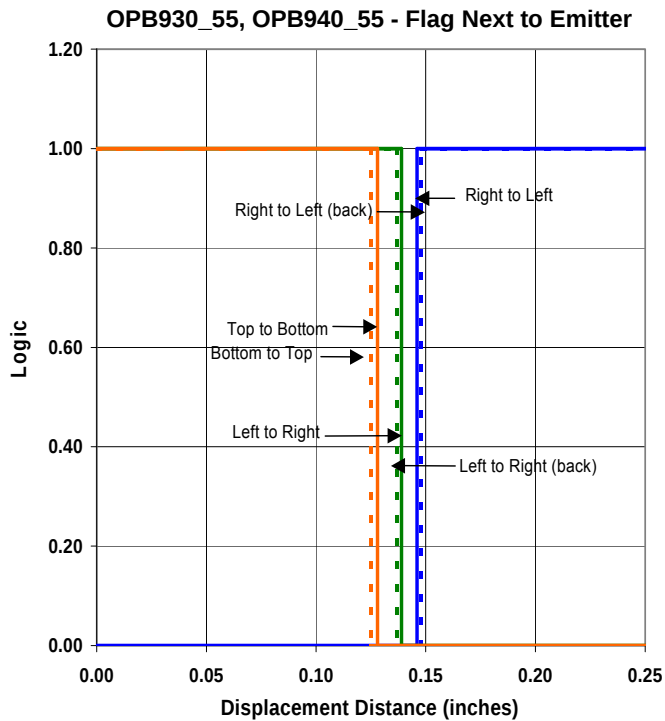

OPTEK reserves the right to make changes at any time in order to improve design and to supply the best product possible.




Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.

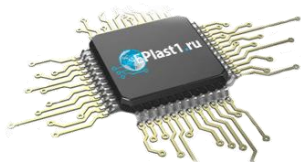

#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.