

The World Leader in High-Performance Signal Processing Solutions



iSensor[®]

ADIS16240 Evaluation Tool Overview




Mark Looney
iSensor[®] Application Engineer
September 7, 2009



iSensor[®] *The Simple Solution for Sensor Integration*


Evaluation Tool Overview

1. **Evaluation/Interface Board (ADIS16240/PCBZ) for simpler connection to an existing processor/system PCB.**
 - ◆ These boards provide a simple connector translation that enables user to bypass BGA soldering. The 2mm pitch connectors are easy to interface with 1mm ribbon cable or solder to.
 - ◆ Part number for ordering: **ADIS16240/PCBZ**
2. **Evaluation System (ADISUSBZ) for those that prefer a simple PC interface**
 - ◆ This system provides a simple USB interface, along with a simple Graphical User Interface (GUI) package, for evaluating most of the ADIS16240 functions and performance.
 - ◆ Supports approximately 150-200SPS sample rate.
 - ◆ This system is not a development kit that comes with PC development tools, source code and software support.
 - ◆ Part number for ordering: **ADISUSBZ**

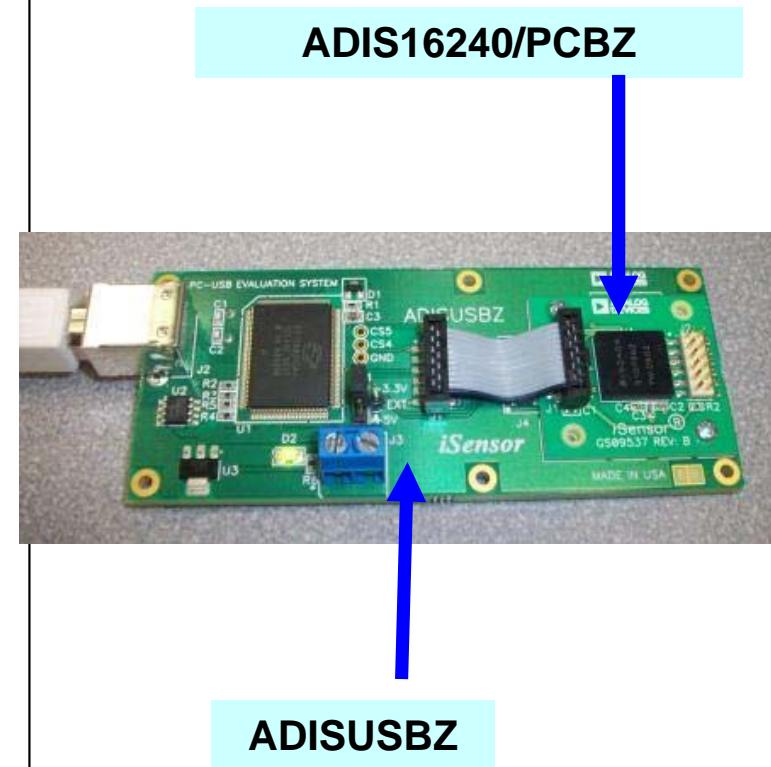


iSensor[®] The Simple Solution for Sensor Integration


Hooking up to the ADIS16240/PCBZ

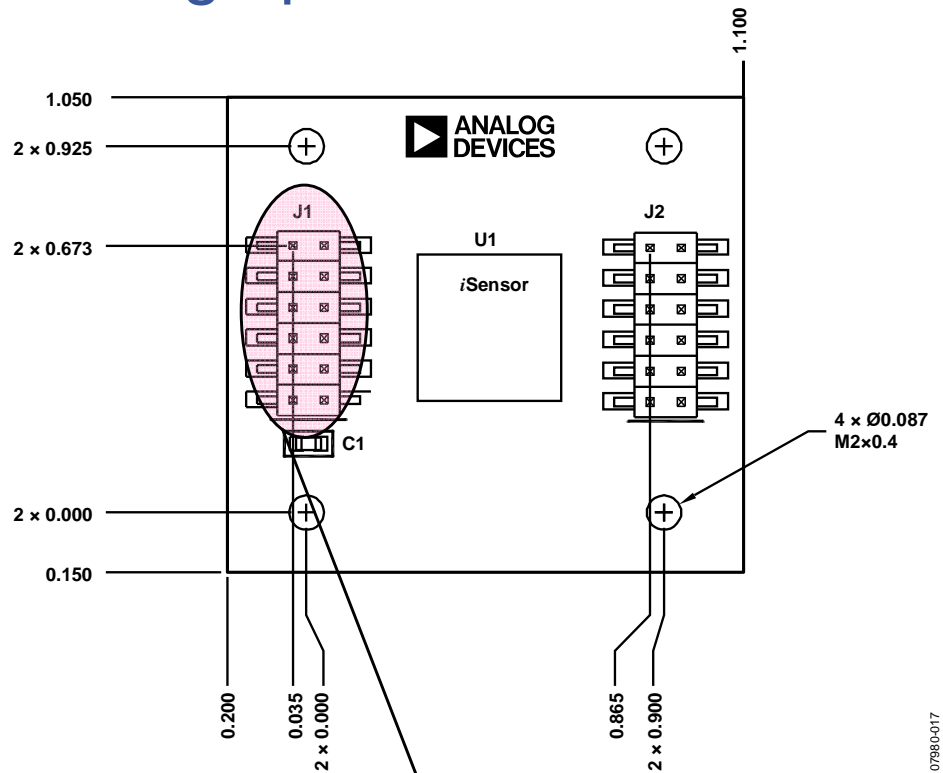

Master Processor Connection

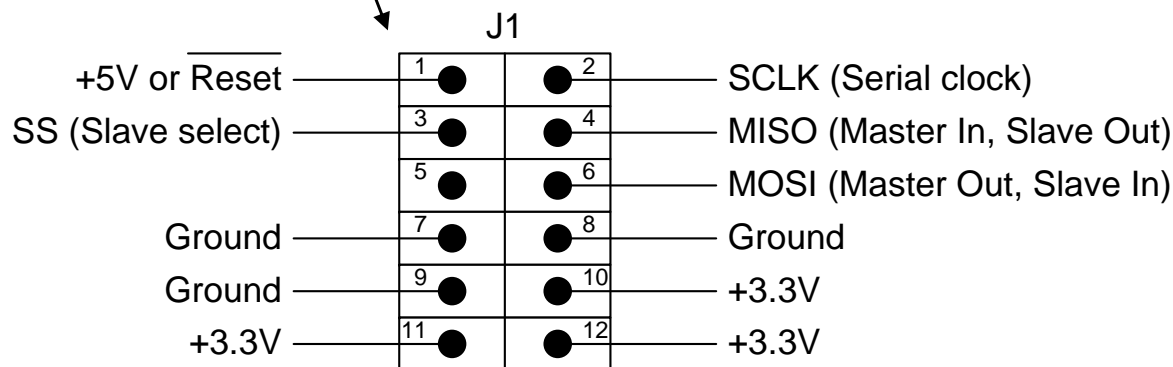

J1 Ribbon Cable Interface Parts

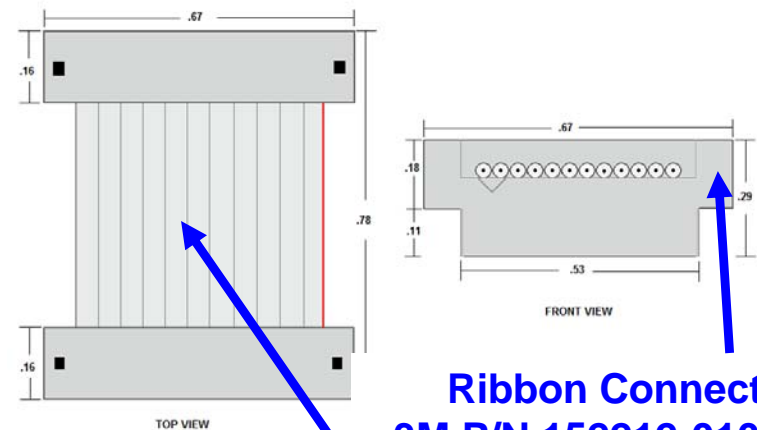

Ribbon Connector
3M P/N 152212-0100-GB

Ribbon Cable
3M P/N 3625/12 (100m)

ADISUSBZ uses the following cable assembly from Samtec:

ASP-140062-01


iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

The ADIS16240 demonstration software can be found at

www.analog.com/isensor-evaluation

1. Click on “Evaluation Software Downloads”
2. Click on 240ES.zip and save it to a temporary directory
3. Open it and double click on setup.exe.


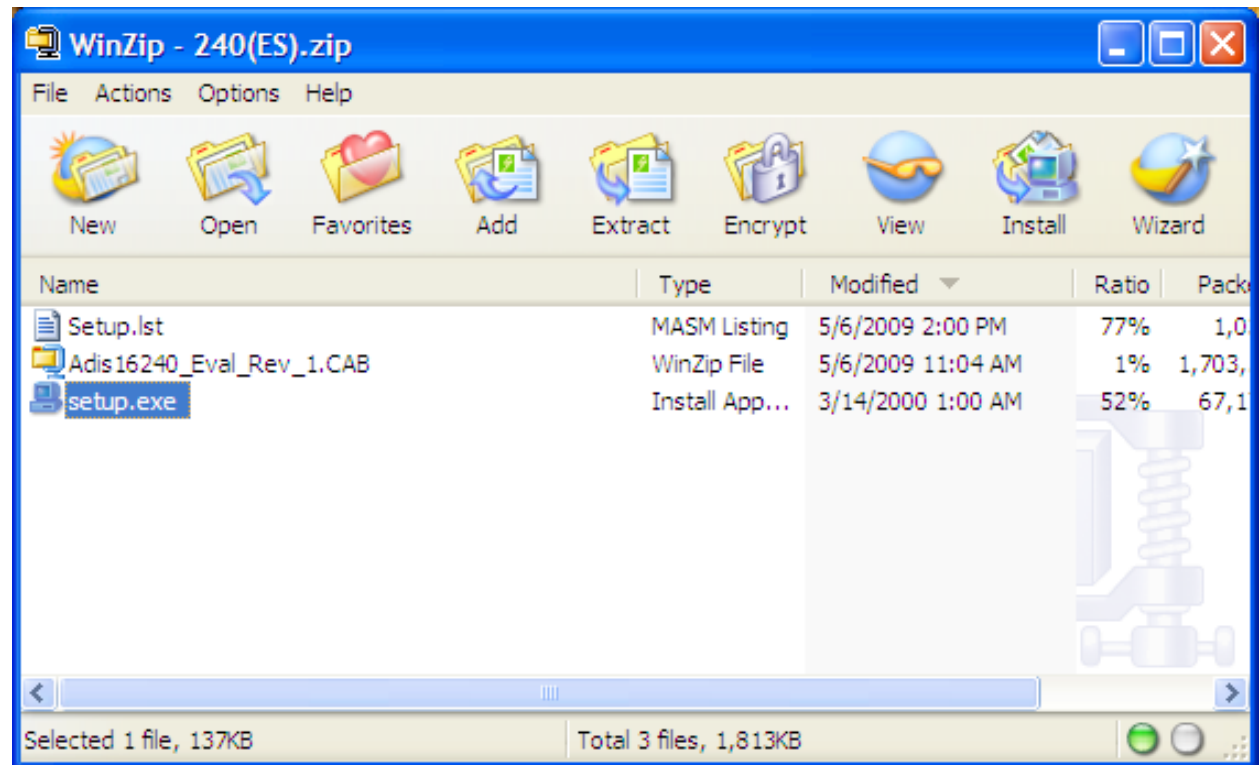


iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

4. Click OK on next screen
5. Click here to start installation

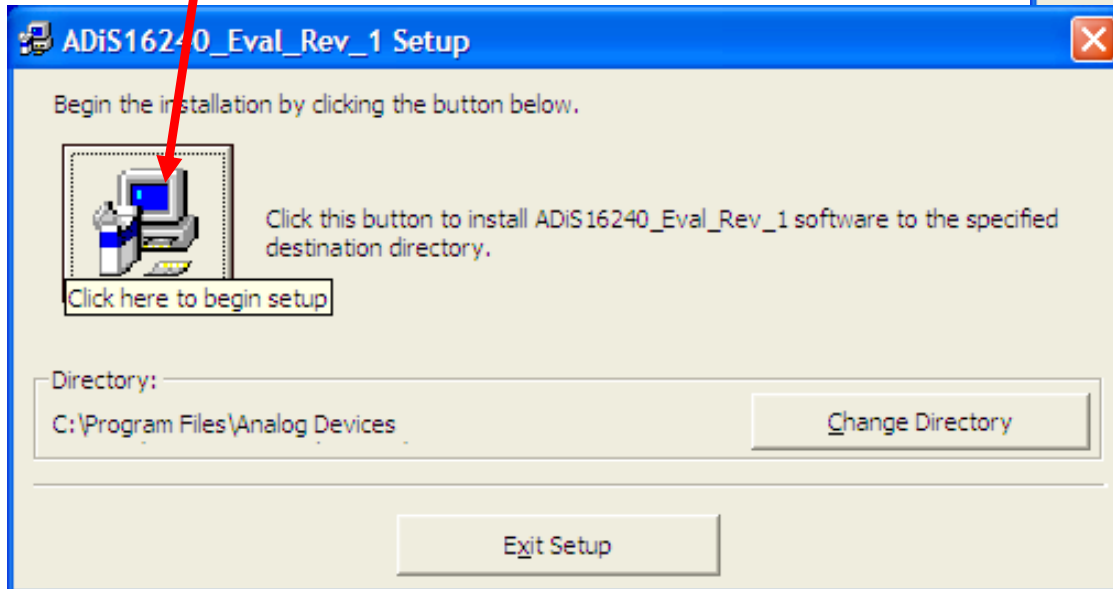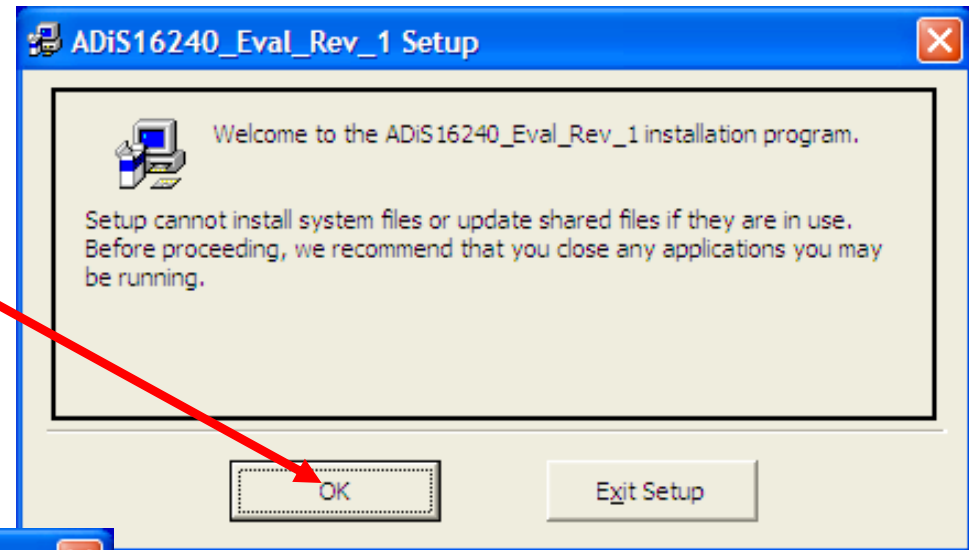

iSensor® The Simple Solution for Sensor Integration




ADIS16240 Demonstration Software Installation

Installation Steps (continued)

6. Click Continue

7. If this message comes up, click on "No"

8. Click OK

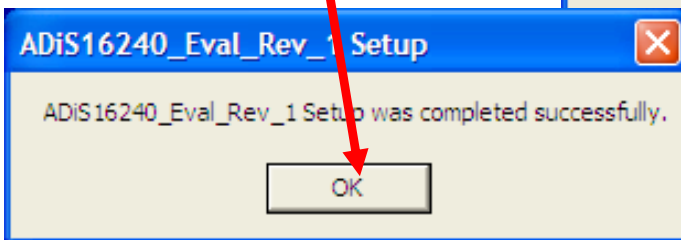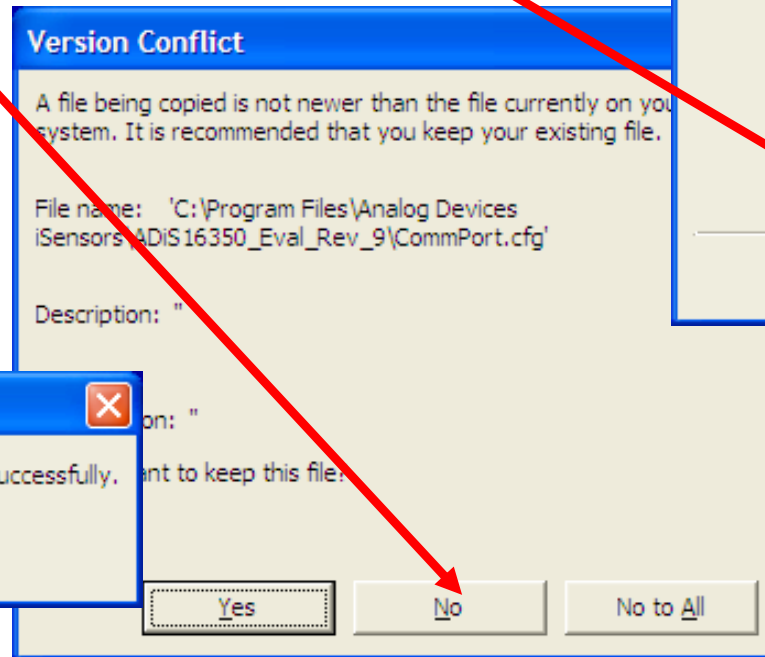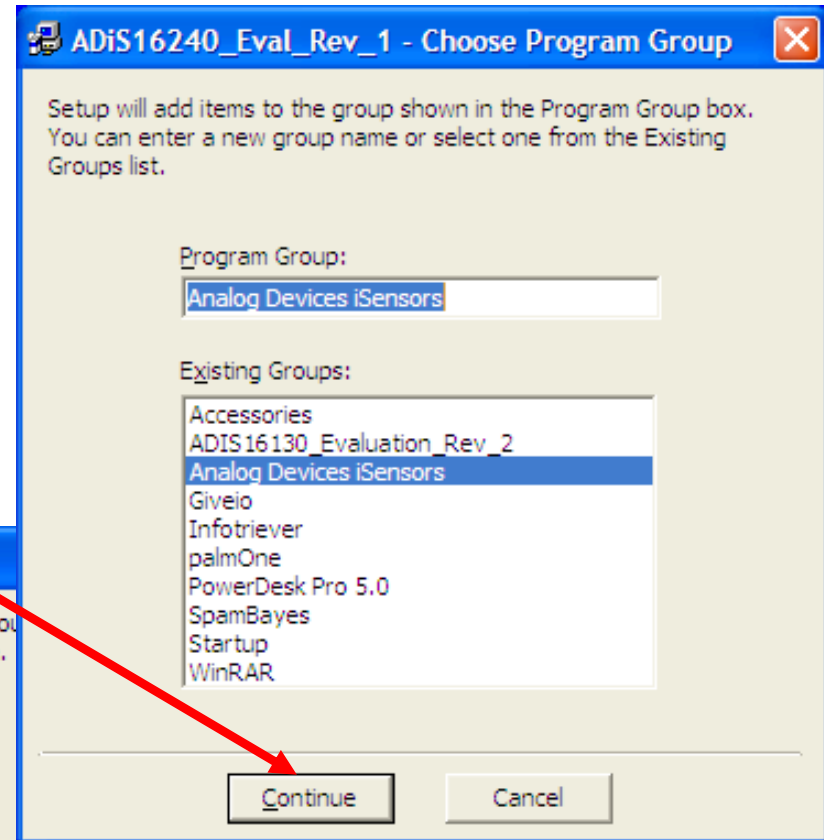

iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

9. Open the newly created directory and double-click onto “giveio.exe”

10. Click “Install,” then “I Agree”

The screenshot displays three overlapping windows from a Windows XP environment:


- Visual basic runtimes (SP2) installation:** A dialog box with a blue title bar. The main text reads: "Welcome to the INF-Tool Setup demo program which will install 2 files in the <Windows>\INF-Test directory on your computer." Below this, it says: "Please close any programs you have running, then click 'Install' to continue with the Setup program." At the bottom, there are "Install" and "Close" buttons. A red arrow points from the instruction "Click 'Install,'" to the "Install" button.
- License agreement:** A dialog box with a blue title bar. It contains a form with fields for: "[Name of your application]", "Author : [YOUR NAME]", "Version #.# from mm/dd/yyyy", "Web : Your Website", "email : Your email", and "Note : for each package, you may select an individual Licence template via the 'Options' window of Step #8." Below the form is the text: "END-USER LICENSE AGREEMENT FOR THIS SOFTWARE Important - read carefully:" and "To continue with this installation, you must agree to all terms of this license agreement". At the bottom are "I agree" and "Cancel" buttons. A red arrow points from the instruction "then 'I Agree'" to the "I agree" button.
- Windows Explorer:** A window showing the directory "C:\Program Files\Analog Devices iSensors\ADIS16240_Eval_Rev_1". The file list includes: "Adis16240_Eval_Rev_1.exe" (316 KB Application), "Comport.cfg" (1 KB Microsoft Office Ou...), "GIVEIO.EXE" (82 KB Application), "ST6UNST.000" (4 KB 000 File), "ST6UNST.001" (4 KB 001 File), and "ST6UNST.LOG" (4 KB Text Document). The "GIVEIO.EXE" file is selected. A red arrow points from the instruction "double-click onto 'giveio.exe'" to the "GIVEIO.EXE" file. The "Details" pane for "GIVEIO.EXE" shows: "Application", "Date Modified: Tuesday, October 02, 2001, 12:46 PM", and "Size: 81.1 KB".

iSensor® The Simple Solution for Sensor Integration


ADIS16240 Demonstration Software Installation

Installation Steps (continued)

11. Click “yes”

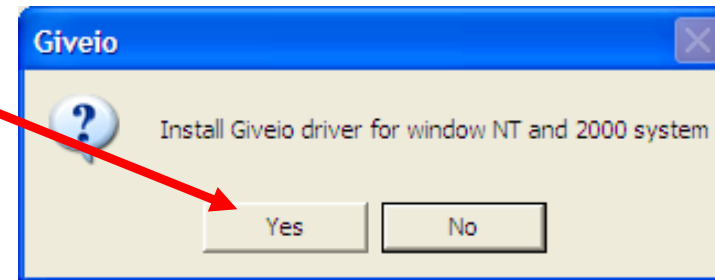

12. Giveio Driver complete

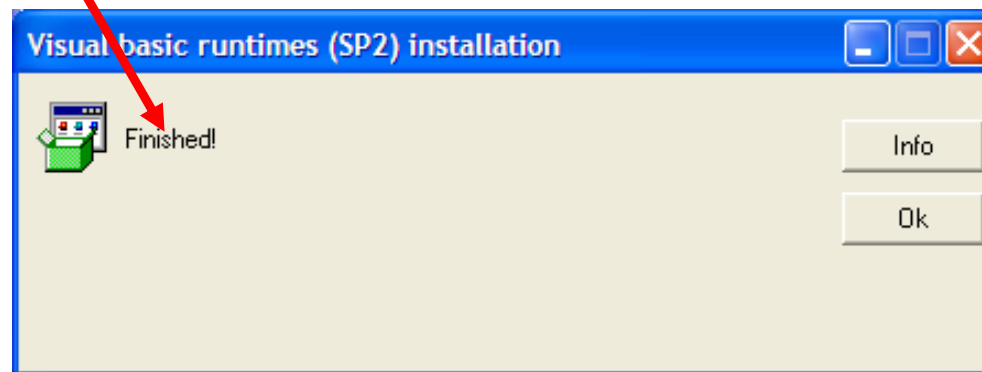

iSensor[®] The Simple Solution for Sensor Integration


ADIS16240 Installation on ADISUSBZ

Installation Steps (continued)


13. Install 240/PCBZ on ADISUSBZ

14. Plug in USB cable


1. Secure 240/PCBZ w/ 2mm screws

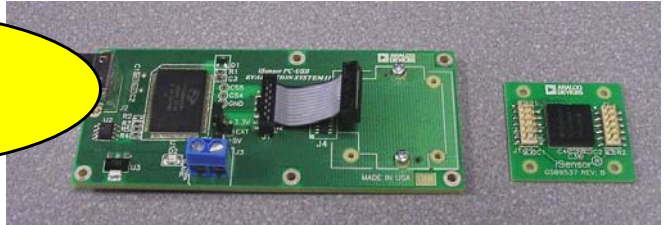



2. Connect ribbon cable

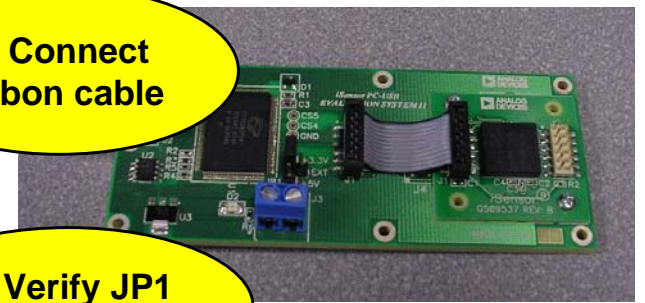

3. Verify JP1 set to +3.3V

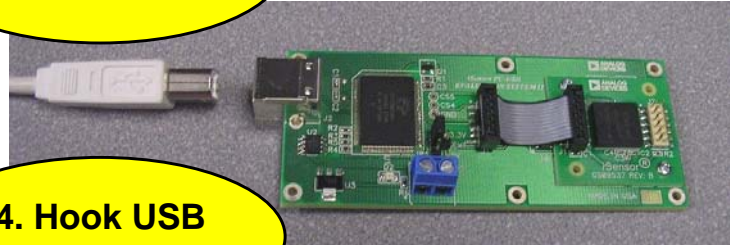

4. Hook USB cable up

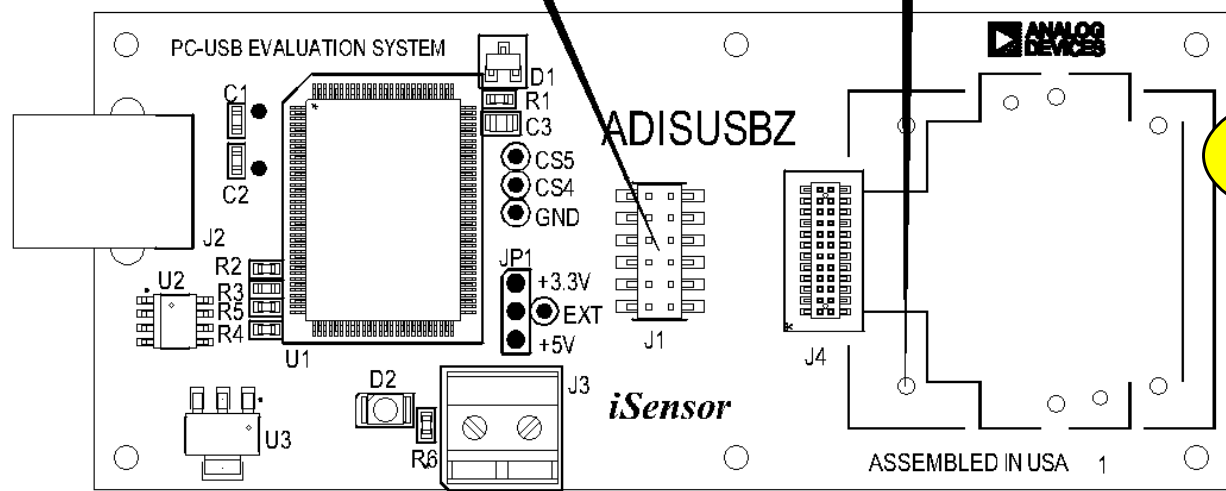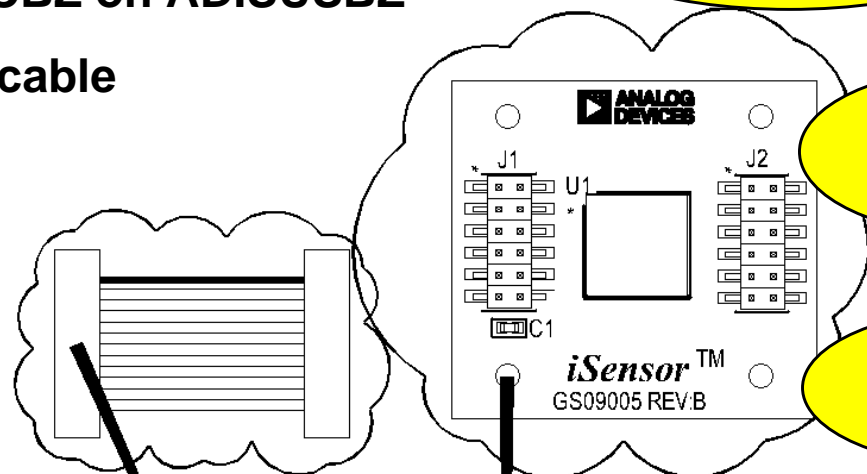



iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

15. USB Driver screen will pop-up
Click “Next” to start this process

16. Then click on
“Continue Anyway”

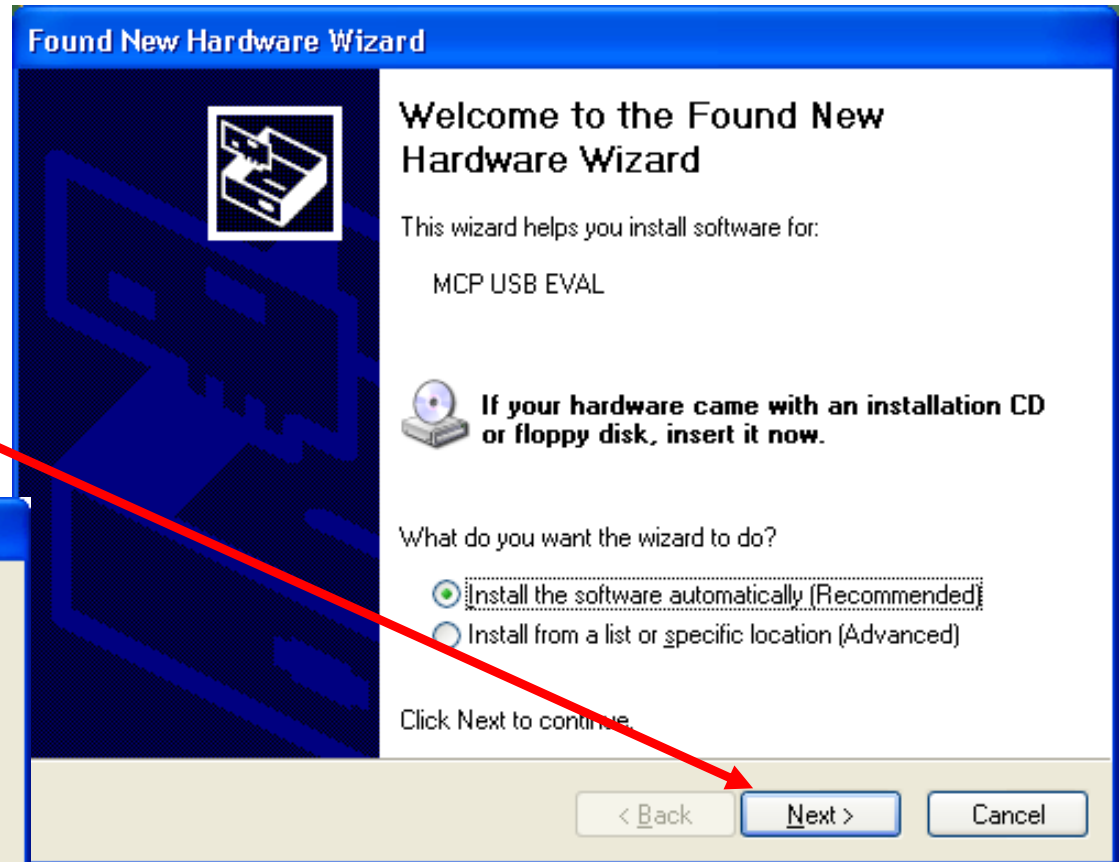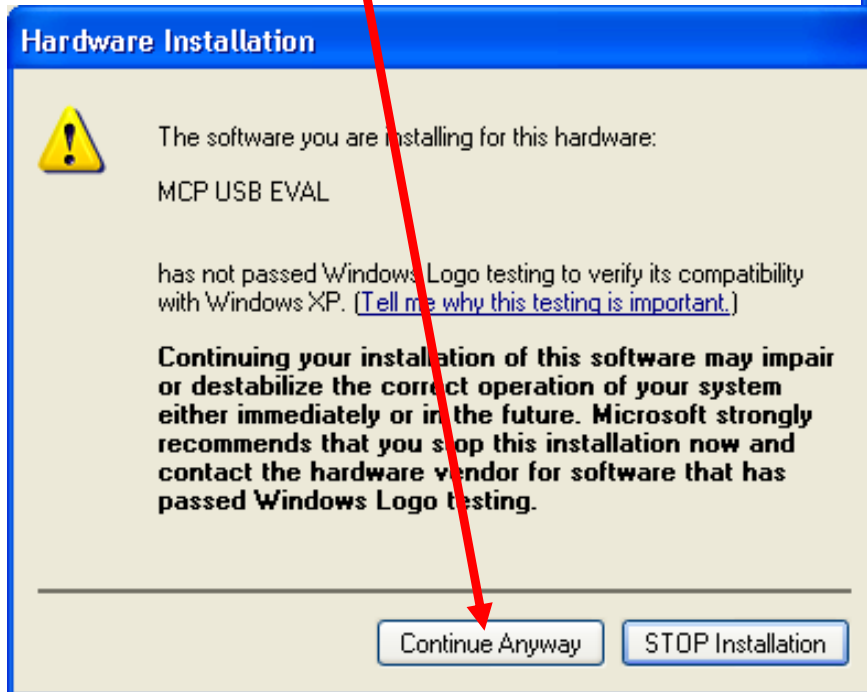

This process will repeat for a second driver file. Just follow the instructions and allow it to go through one more time. After completing this, then the devices is ready for test.

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Screen

The screenshot shows the ADIS16240 Evaluation Software interface. The window title is "Analog Devices ADIS16240 Evaluation Software Rev 3". The menu bar includes "Interface", "Device Configuration", "Datalog", "Registers", and "Exit".

1 The "Interface" menu is highlighted.

2 The "Output Registers" section is visible, showing various sensor outputs like SUPPLY_OUT (V), XACCL_OUT (g), YACCL_OUT (g), ZACCL_OUT (g), AUX_ADC (V), TEMP_OUT (C), X_PEAK_OUT (g), Y_PEAK_OUT (g), Z_PEAK_OUT (g), and XYZ_PEAK_OUT (g). A "Read" button is present.

3 The "Device Configuration" menu is highlighted.

4 The "Loop" checkbox is checked, and the "Loop Delay msec" is set to 5.

5 The "Date/Time" section shows "Read Date" as 2/12/09 and "Read Time" as 16:11. A "Sync to PC time" button is highlighted.

6 The "Event Capture" section shows "Events Capt." as 0, with "Show Buffer" and "Clear Capt." buttons.

The "Data Plot" area shows a graph with "Sample" 555 and "Value (g)" 5595. The x-axis is labeled "Sample Number" and ranges from 0 to 350. The y-axis is labeled "Scale(g)" and ranges from -7 to 7.

The "Status Register" section shows various status indicators, all of which are "OK".

1. Click on "Interface" and select USB, then OK when the pop-up window shows the USB device is connected.
2. Click to enable different accelerometer axes (x,y,z)
3. Device configuration options. Turn on peak tracking (MSC_CTRL option), adjust sample rate, etc.
4. Start on-screen log
5. Sync ADIS16240's time to the current PC time.
6. Capture, Click on Config button and see next page

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

ADIS16240 Event Trigger Configuration

Step #1 - Configure Capture Parameters (CAPT_CFG) 0023

Pre-Trigger Length Equals This Value Times 1/16 of Capt. Buff. Length: 2

Capt_Buff Length: 128

Update CAPT_CFG Register

Step #2 - Set Trigger Source (ALM_CTRL) 3230

Data Source - Buffer #1: X_Acc

Data Source - Buffer #2: Y_Acc

Alarm I/O Line: OutPut Disabled, Active LOW, DIO0

Update ALM_CTRL Register

Step #3 - Set Trigger Levels and Polarity (TRIG_MAG) 804E 804E

ALM_MAG1 Polarity: Greater Than

ALM_MAG1 Trigger Level: 4.0092

ALM_MAG2 Polarity: Greater Than

ALM_MAG2 Trigger Level: 4.0092

Update TRIG_MAG1/2 Registers

Trigger Configuration Example:

Step 1 - Set Pre-trigger to zero then set Capt_Buff Length to 1024 and press the update Capt_CFG Register button

Step 2 - Set Data Source # 1 to Xacc and select Trigger #1 button. Press the Update ALM_CTRL Register button

Step 3 - Set Trigger Level to 12 then set Polarity to greater than. Press the Update TRIG_MAG 1/2 Registers button

Update Flash

1. Set number of captures vs. capture length and pre-capture length. Remember to click on the update button!
2. Set trigger source. Suggest both triggers. Remember to click on the Update button!
3. Set trigger levels and polarity, then hit the Update button.
4. Updating the flash makes the changes non-volatile.
5. Click on the red X to close and return to the main menu

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Output Registers

SUPPLY_OUT (V)	3.314	Graph
XACCL_OUT (g)	-0.154	<input checked="" type="checkbox"/>
YACCL_OUT (g)	-1.285	<input checked="" type="checkbox"/>
ZACCL_OUT (g)	0.000	<input checked="" type="checkbox"/>
AUX_ADC (V)	-0.751	
TEMP_OUT (C)	24.951	
X_PEAK_OUT (g)	0.000	
Y_PEAK_OUT (g)	0.000	
Z_PEAK_OUT (g)	0.000	
XYZ_PEAK_OUT (g)	0.000	

Reset Pk

Loop STOP

Loop Delay msec 5

Status Register

Power Supply Low	OK
Power Supply High	OK
Buffer Write Error	OK
SPI Error	Alarm
Alarm1 Set	Alarm
Alarm2 Set	Alarm
Buffer Full	OK
Self Test Fail	OK
Checksum Error	OK

Data Plot

Sample 0

Value (g) 3225

Scale(g) 7

Sample Number 0 85 175 260

Event Capture

Events Capt. 7

Show Buffer Clear Capt.

Self Test

OFF ON

Date/Time

Click on Run and start tapping ADISUSBZ on the desk, then click stop, then "Show Buffer"

Note that the event counter is increasing with each time the ADISUSBZ tap exceeds the pre-set shock level

iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation



1. Place the mouse pointer over different spikes to see the Event header in the upper right hand corner change.
2. Slider bar in lower left hand corner will move event log as desired.



◆ CONTACTS:

- **MARKETING:** Bob Scannell, 1-336-605-4031
- **APPLICATIONS ENGINEER:** Mark Looney, 1-336-605-4139

MORE INFORMATION:

- www.analog.com/isensor
- **New Brochure:** *i*Sensor Motion Sensor Products
 - ◆ BR067755-2.5-4/08(A)
- **CD's with Product Info and Eval SW**



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.