



User Guide

MP5416 Evaluation Kit (EVKT-5416)

Table of Contents

Overview	2
Introduction	2
Kit Contents.....	2
Features and Benefits	3
Kit Specifications	3
Section 1. Hardware Specifications	4
1.1 Personal Computer Requirements	4
1.2 EV5416-R-00D Specifications	4
1.3 EVKT-USBI2C-02 Specifications	4
Section 2. Software Requirements	5
2.1 Software Installation Procedure	5
Section 3. Evaluation Kit Test Set-up	6
3.1 Hardware Setup	6
3.2 Powering up the evaluation board (EVB)	6
3.3 Software Set-Up	6
3.4 Device Programming Instructions	9
3.5 Troubleshooting Tips.....	13
Section 4. Ordering Information	15

Overview

Introduction

The EVKT-5416 is an evaluation kit for the MP5416, a complete power management IC, which integrates four high-efficiency, step-down, DC/DC converters, five low dropout regulators, and flexible system configurations via the I2C. The kit allows for quick evaluation of the PMIC and offers one-time programming (OTP) capabilities, which allows users to program custom configurations, supporting a wide range of designs.

Kit Contents

EVKT-5416 Kit contents: (Items below can be ordered separately)

#	Part Number	Item	Quantity
1	EV5416-R-00D	EV5416 evaluation board	1
2	EVKT-USBI2C-02	Includes one USB to I2C communication interface device, one USB Male A to B cable, one 10-pin ribbon cable, one 3-pin ribbon cable	1
3	MP5416GR-CCCC	MP5416 IC which can be used for OTP programming	2
4	Tdrive-5416	USB thumb drive that stores the GUI installation file and supplemental documents	1



Figure 1: EVKT-5416 Evaluation Kit Set-Up

Features and Benefits

The MP5416 is highly customizable. Users can program the PMIC via the MPS I2C GUI and one-time programming (OTP).

- ⚠ All changes made in I2C mode will NOT be retained once the EVB is powered down.
- ⚠ Information written in OTP mode CANNOT be changed.

Features adjustable under each method are outlined below.

I2C	OTP
<ul style="list-style-type: none"> • Current limit of buck 2 and 4 • Slew rate (DVS Slew rate) • Discharge (DISCHG) • System enable (SYSEN) • Software reset (SFRST) • Read status and ID2 registers 	<ul style="list-style-type: none"> • Current limit of buck 1 and 3 • Switching frequency • LDORTC output voltage • Initial on/off • Push-button timer • Mode • Power-on delay (RSTO delay) • Automatic turn-on • I2C slave address • Soft start time • Manual reset timer • Phase shift delay • Shorter key on/off • Ramp cap • Suffix number • OTP version

Kit Specifications

Features	Specification
Supply for Board	3.5V - 5V
Operating Input Voltage	2.8V - 5.5V
Operating Systems Supported	Windows XP, 7 or later
System Requirements	Minimum 22.2 MB free
GUI Software	3 Register Controls: Buck, LDO, System
EVB Size (L x W)	9.4 cm x 8.6 cm

Section 1. Hardware Specifications

1.1 Personal Computer Requirements

The following must be minimally met to use the EVKT-5416.

- Operating system of Windows XP, 7, or later
- Net Framework 4.0
- PC with a minimum of one available USB port
- At least 22.2 MB of free space

1.2 EV5416-R-00D Specifications

The EV5416-R-00D is an evaluation board for the MP5416GR-CCCC. For more information, please refer to the EV5416-R-00D datasheet.

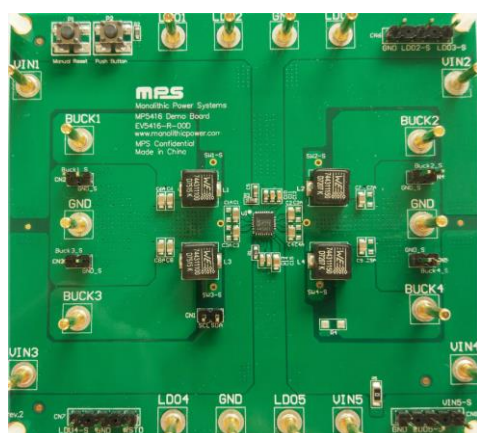


Figure 2: EV5416-R-00D Evaluation Board

Feature	Specification
Supply for Evaluation Board	3.5V - 5V
Operating Input Voltage	2.8V - 5.5V
EV5 Size (L x W)	9.4cm x 8.6cm

1.3 EVKT-USBI2C-02 Specifications

The EVKT-USBI2C-02 refers to the USB to I2C communication interface device, which connects the EVB and the PC, and its supporting accessories. It provides I2C and PMBus capabilities. Together with MPS Virtual Bench Pro and GUI tools, it provides a quick and easy way to evaluate the performance of MPS digital products. For more details, refer to the EVKT-USBI2C-02 datasheet.



Figure 3: EVKT-USBI2C-02 Communication Interface Device

Section 2. Software Requirements

2.1 Software Installation Procedure

Programming occurs through the MPS I2C GUI. Follow the instructions below to install the software.

Note: In the near future, this software can be downloaded from the MPS website. For now, it is provided on a USB thumb drive.

Note: When installed, the MPS I2C GUI will auto install the necessary USB drivers.

1. Plug the USB thumb drive into the computer using any available USB port.
2. Browse to the folder containing the thumb drive contents.
3. Double click the .exe file to open the set-up guide (see Figure 4).
4. Follow the prompts in the set-up guide.
5. Wait for status screen to verify that installation is complete (see Figure 5).

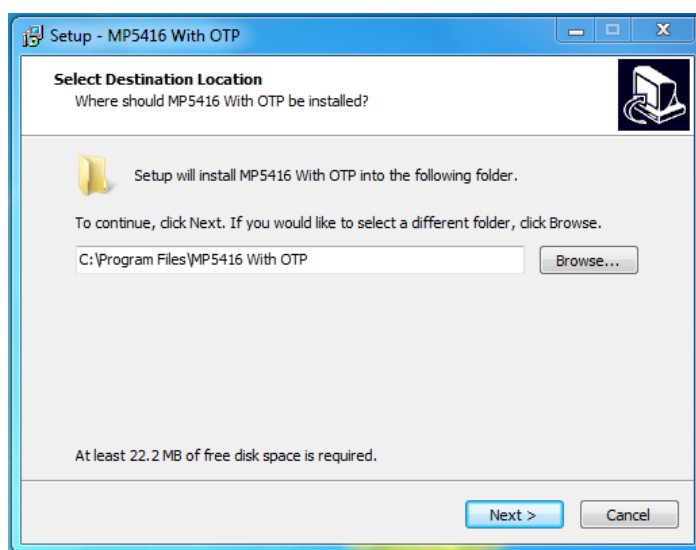


Figure 4: MPS I²C GUI Set-Up Guide

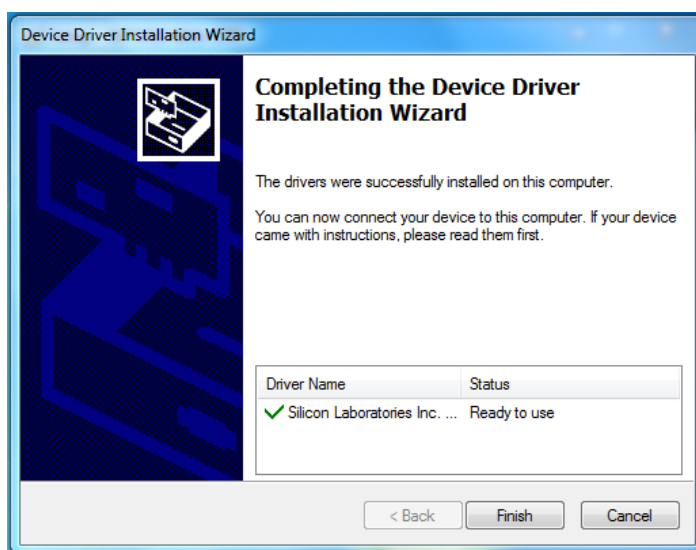


Figure 5: Driver Set-Up Success

Section 3. Evaluation Kit Test Set-up

3.1 Hardware Set-Up

The hardware must be properly configured prior to use. Follow the instructions below to set up the EVB.

1. Locate the proper wires to connect the EVB to the EVKT-USBI2C-02 communication interface device.
2. Connect SCL, SDA, and GND (see Figure 6). If needed, refer to the datasheet for further clarification.
3. Use the USB cable to connect the EVKT-USBI2C-02 communication interface device to the PC and follow the instructions below to set up the EVB.



Figure 6: EVB to MPS I²C Communication Interface Device Wire Connection

3.2 Powering up the EVB

1. Connect the positive and negative terminals of the load to the VOUT and GND pins, respectively.
2. Preset the power supply output between 3.5V and 5V, then turn off the power supply.
3. Connect the positive and negative terminals of the power supply output to the VIN and GND pins, respectively.
4. Turn the power supply on.
5. Press the P1 button on the EVB. The PMIC will enter the power on sequence automatically.

3.3 Software Set-Up

After connecting the hardware according to steps above, follow the steps below to use the GUI software.

1. Start the software. It will automatically check the EVB connection.
 - If connection is successful, the address will be listed in the “Slave Address” (see Figure 7).



-
- The screenshot shows the I2C Slave Tool interface. The top menu bar includes 'Part Numbers', 'Debug Tool', and 'Help'. The main window is divided into two panes. The left pane has a header 'ADDRESS:' and a large empty text area below it. The right pane has a header 'REGISTER' followed by a table of registers: 'HEX', 'D7', 'D6', 'D5', 'D4', 'D3', 'D2', 'D1', and 'D0'. Below the registers is a large empty text area. A red error box with the text 'No Slave Found, Please check the connection!' is positioned in the lower right of the main window, with a black arrow pointing from the bottom of the left pane towards it. A red status bar at the bottom of the application contains the text 'No Slave Found. Please check the connection!'.
- | REGISTER | HEX | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 |
|----------|-----|----|----|----|----|----|----|----|----|
| | | | | | | | | | |
- No Slave Found, Please check the connection!
- No Slave Found. Please check the connection!

MP5416 Evaluation Kit User Guide rev 1.21 MonolithicPower.com
8/22/2018 MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited.
© 2018 MPS. All Rights Reserved.

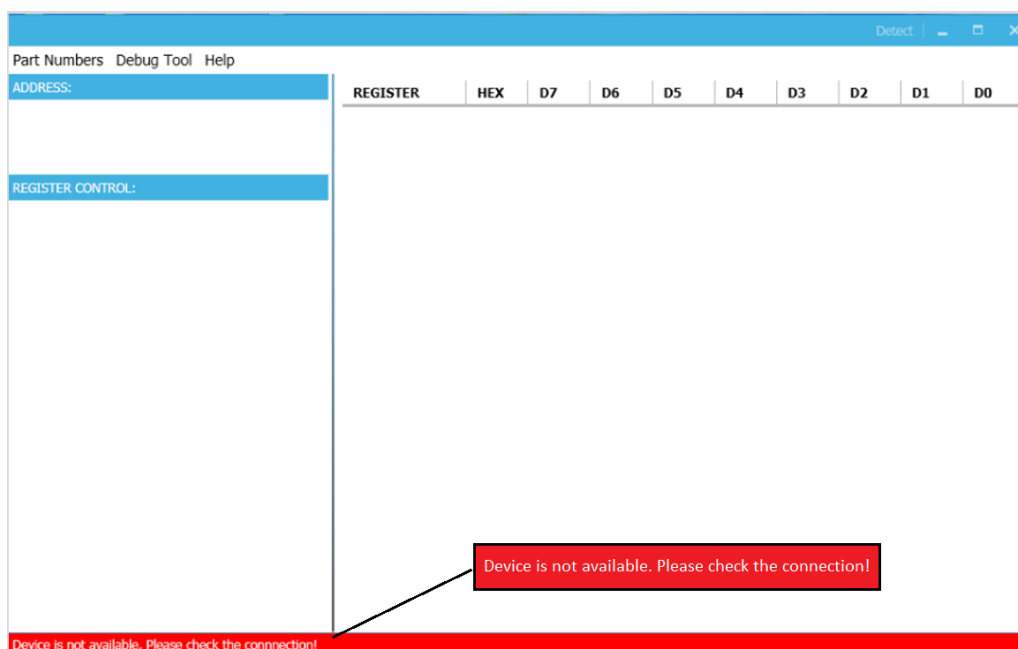


Figure 9: Warning Indicates Unsuccessful Connection – USBI2C Communication Interface Device is Not Connected

- If connection is successful, proceed to Step 3. Otherwise, check connections between the EVB, communication interface device, and PC. Re-plug the USB into the computer and restart the GUI.
- Select MP5416 UNLOCK from under Part Numbers. The Register Control menu will appear on the left side. I2C register values will be read automatically and displayed on the right (see Figure 10).

MP5416-5V POWER MANAGEMENT IC WITH I2C NO LOCKED V1.2										
Part Numbers Debug Tool Help OTP										
ADDRESS:	REGISTER	HEX	D7	D6	D5	D4	D3	D2	D1	D0
69	CTL0(0x0)	8F	1	0	0	0	1	1	1	1
	CTL1(0x1)	87	1	0	0	0	0	1	1	1
	CTL2(0x2)	7F	0	1	1	1	1	1	1	1
	ILIMIT(0x3)	AA	1	0	1	0	1	0	1	0
	VSET1(0x4)	C0	1	1	0	0	0	0	0	0
	VSET2(0x5)	9C	1	0	0	1	1	1	0	0
	VSET3(0x6)	C0	1	1	0	0	0	0	0	0
	VSET4(0x7)	E4	1	1	1	0	0	1	0	0
	VSET5(0x8)	DC	1	1	0	1	1	1	0	0
	VSET6(0x9)	28	0	0	1	0	1	0	0	0
	VSET7(0xa)	A8	1	0	1	0	1	0	0	0
	VSET8(0xb)	54	0	1	0	1	0	1	0	0
	Status1(0xd)	BF	1	0	1	1	1	1	1	1
	Status2(0xe)	0	0	0	0	0	0	0	0	0
	Status3(0xf)	0	0	0	0	0	0	0	0	0
	ID2(0x11)	80	1	0	0	0	0	0	0	0

read all

Figure 10: Values from I2C Shown in Table

- Find the item you want to change and select the desired value from the drop down menu.

- Click the “Read All” button to update values. The changed information of the item will appear on the right side (see Figure 11).

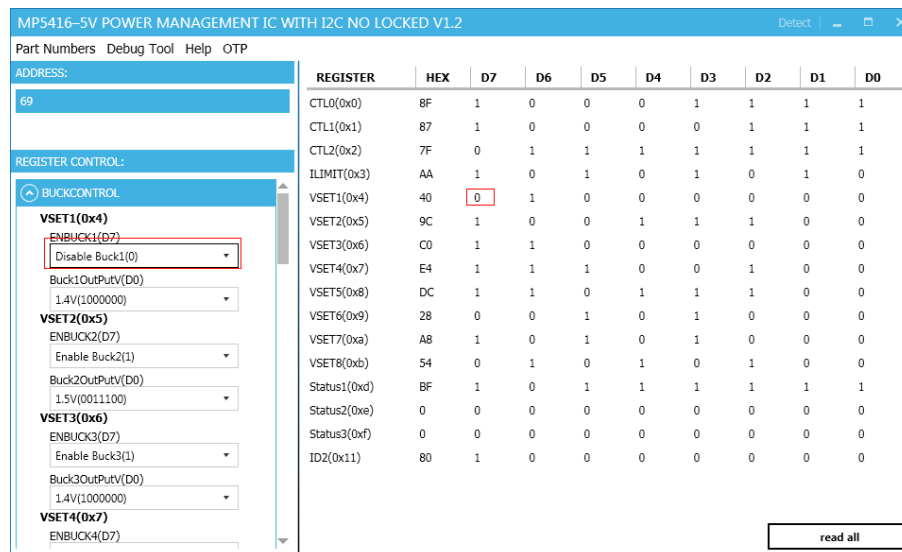


Figure 11: Refer to Datasheet to Translate 0's and 1's

⚠ All changes made via the I2C will be restored to default values once the EVB is powered down.

3.4 Device Programming Instructions

The MP5416-CCCC can be custom-programmed. Follow the instructions outlined below to create and export customized configurations.

- Using a computer, open the MPS GUI software. Make sure you have powered on the EVB.
- Ensure connection between the EVB and computer (see Figure 6).
- Select the “MP5416Unlocked” from under Part Numbers.
- Disable buck1/buck2/buck3/buck4 and LDO2-LDO5.
- Select the OTP option from under GUI (see Figure 12).

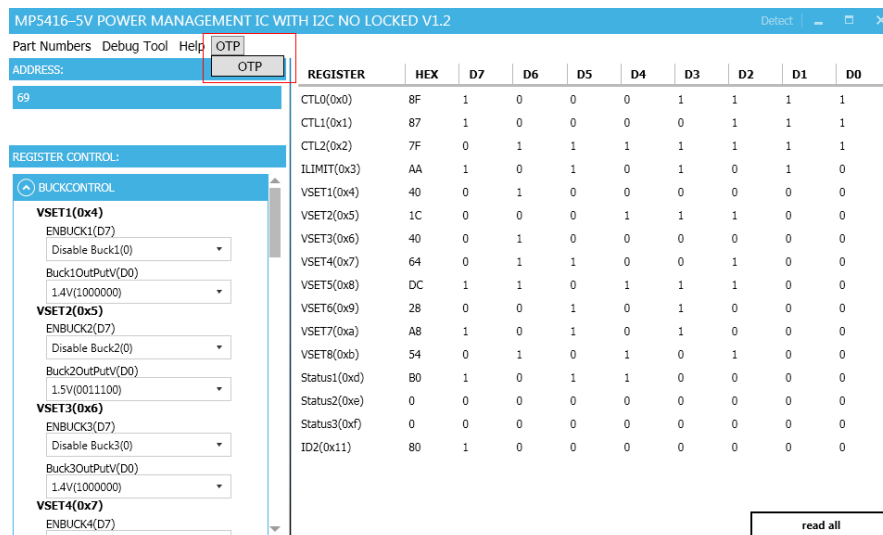


Figure 12: Select OTP, Located in Task Bar

6. Wait for a table to load (see Figure 13). You can change any parameters listed.

OTP Items	Description	Buck1	Buck2	Buck3	Buck4	LDORTC	LDO2	LDO3	LDO4	LDO5	
Switching Frequency	MHz	1.5									
Output Voltage	V										
Initial On/Off	ON/OFF	ON	ON	ON	ON	Always On	ON	ON	ON	ON	
MODE	Auto PFM/PWM	AutoPF	AutoPF	AutoPF	AutoPF	N/A					
Power On Delay/Time Slot	ms					Always On					
Automatic Turn-On	YES/NO	NO									
PushButton Timer	Second										
RSTODELAY	ms										
Buck1 PEAK Current Limit	A										
Buck3 PEAK Current Limit	A										
IIC Slave Address	Address										
Soft start time	1/0	N/A	Default	N/A							
Manual reset timer	1/0	N/A	Default	Default	N/A						
phase shift delay	1/0	Default	Default	Default	Default	N/A					
Shorter Key On/Off	1/100 scale	0									
Ramp Cap	pF	Default									
Suffix number											
OTP Version		0000									

WRITE EXPORT

Figure 13: Parameters that can be Adjusted in OTP Mode

7. Select values from the drop-down menus. Note that the WRITE and EXPORT buttons are active only when all the parameters are populated (see Figure 14).

OTP Items	Description	Buck1	Buck2	Buck3	Buck4	LDORTC	LDO2	LDO3	LDO4	LDO5	
Switching Frequency	MHz	1.5									
Output Voltage	V	1.2	1.5	1.8	3.3	1.1	1.1	2.9	1.8	2.9	
Initial On/Off	ON/OFF	ON	ON	ON	ON	Always On	ON	ON	ON	ON	
MODE	Auto PFM/PWM	FPWM	FPWM	FPWM	FPWM	N/A					
Power On Delay/Time Slot	ms	0ms/0	2ms/1	4ms/2	6ms/3	Always On	2ms/1	4ms/2	6ms/3	8ms/4	
Automatic Turn-On	YES/NO	YES									
PushButton Timer	Second	2									
RSTODELAY	ms	10									
Buck1 PEAK Current Limit	A	6.8A									
Buck3 PEAK Current Limit	A	5.6A									
IIC Slave Address	Address	69									
Soft start time	1/0	N/A	Default	N/A							
Manual reset timer	1/0	N/A	Default	Default	N/A						
phase shift delay	1/0	Default	Default	Default	Default	N/A					
Shorter Key On/Off	1/100 scale	0									
Ramp Cap	pF	21pF									
Suffix number		0055									
OTP Version		0000									

WRITE EXPORT

Figure 14: Fully Populated Table and Active "Write" and "Export" Buttons

8. Export the configuration by clicking EXPORT. Find a location for the exported file and click "OK". Your configurations will be saved in a text file (see Figure 15).

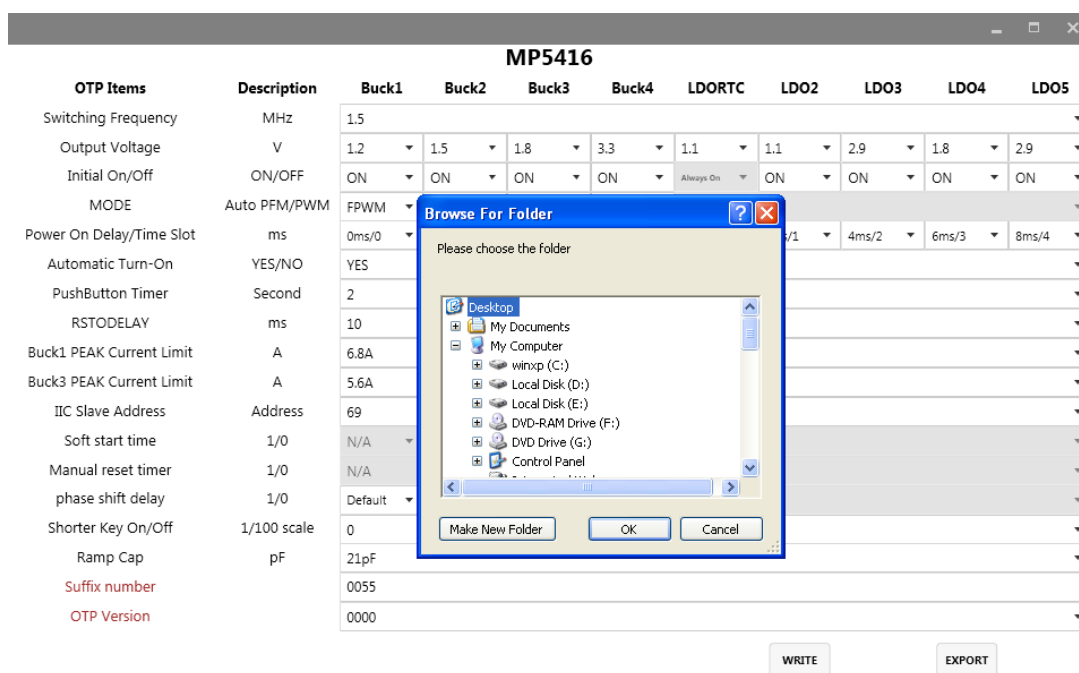


Figure 15: Various Locations Available to Export To

9. Wait for a status screen (see Figure 16).

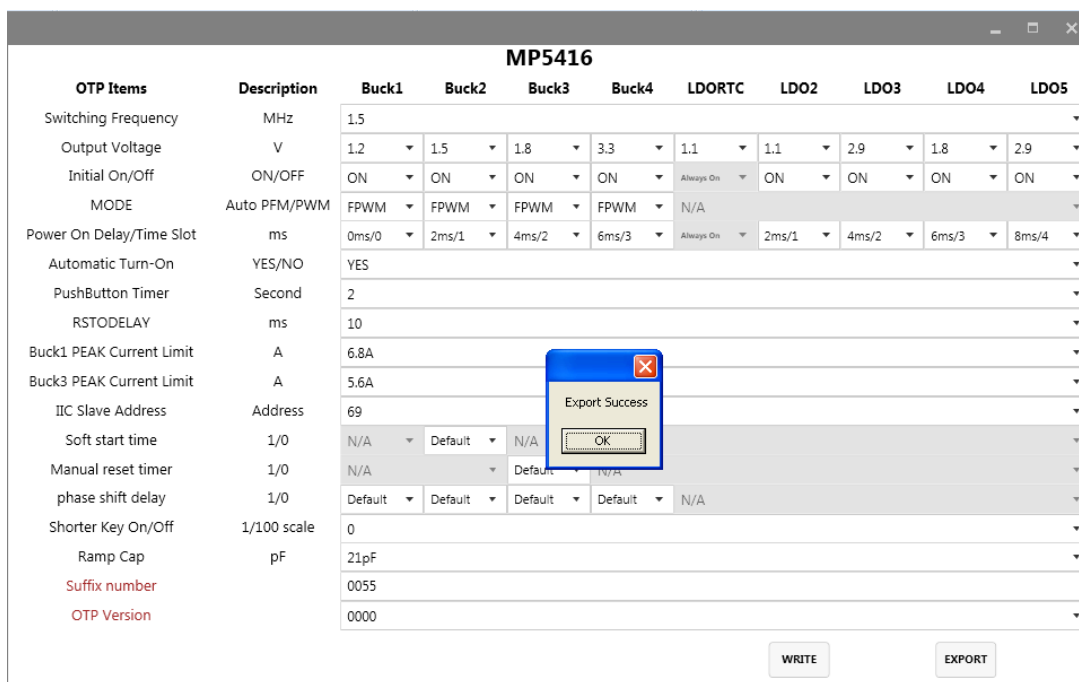


Figure 16: Status Screen Indicates Success

10. Rename the file if you would like to refer to it at a later time. Otherwise, this file will be overwritten the next time you perform OTP and export to the same location.

11. Check parameters carefully.

⚠ Once the information is written to the MP5416-CCCC, it cannot be changed.

12. Click the WRITE button. A window should pop up (see Figure 17).

The screenshot shows the MP5416 configuration window with a warning dialog box overlaid. The dialog box has a blue header with the word 'Warning' and a close button. The text inside reads: 'The input voltage must be >6.2V (<6.5V) to ensure OTP succeed. And the OTP program is NOT reversible. Are you sure to program?'. There are 'Yes' and 'No' buttons at the bottom of the dialog.

OTP Items	Description	Buck1	Buck2	Buck3	Buck4	LDORTC	LDO2	LDO3	LDO4	LDO5
Switching Frequency	MHz	1.5								
Output Voltage	V	1.2	1.5	1.8	3.3	1.1	1.1	2.9	1.8	2.9
Initial On/Off	ON/OFF	ON	ON	ON	ON	Always On	ON	ON	ON	ON
MODE	Auto PFM/PWM	FPWM	FPWM	FPWM	FPWM	N/A				
Power On Delay/Time Slot	ms	0ms/0	2ms/1	4ms/2	6ms/3	Always On	2ms/1	4ms/2	6ms/3	8ms/4
Automatic Turn-On	YES/NO	YES								
PushButton Timer	Second	2								
RSTODELAY	ms	10								
Buck1 PEAK Current Limit	A	6.8A								
Buck3 PEAK Current Limit	A	5.6A								
IIC Slave Address	Address	69								
Soft start time	1/0	N/A								
Manual reset timer	1/0	N/A								
phase shift delay	1/0	Default	Default	Default	Default	N/A				
Shorter Key On/Off	1/100 scale	0								
Ramp Cap	pF	21pF								
Suffix number		0055								
OTP Version		0000								

Buttons: WRITE, EXPORT

Figure 17: Important Warning – User Must Increase Voltage

13. Increase the input voltage to a value between 6.2V and 6.5V.

14. Click “Yes” to write. Alternatively, click “No” if adjustments are needed.

15. Wait for a status screen (see Figure 18).

The screenshot shows the MP5416 configuration window with a success dialog box overlaid. The dialog box has a blue header with the text 'Flush success!' and an 'OK' button.

OTP Items	Description	Buck1	Buck2	Buck3	Buck4	LDORTC	LDO2	LDO3	LDO4	LDO5
Switching Frequency	MHz	1.5								
Output Voltage	V	1.2	1.5	1.8	3.3	1.1	1.1	2.9	1.8	2.9
Initial On/Off	ON/OFF	ON	ON	ON	ON	Always On	ON	ON	ON	ON
MODE	Auto PFM/PWM	FPWM	FPWM	FPWM	FPWM	N/A				
Power On Delay/Time Slot	ms	0ms/0	2ms/1	4ms/2	6ms/3	Always On	2ms/1	4ms/2	6ms/3	8ms/4
Automatic Turn-On	YES/NO	YES								
PushButton Timer	Second	2								
RSTODELAY	ms	10								
Buck1 PEAK Current Limit	A	6.8A								
Buck3 PEAK Current Limit	A	5.6A								
IIC Slave Address	Address	69								
Soft start time	1/0	N/A	Default	N/A						
Manual reset timer	1/0	N/A		Default	N/A					
phase shift delay	1/0	Default	Default	Default	Default	N/A				
Shorter Key On/Off	1/100 scale	0								
Ramp Cap	pF	21pF								
Suffix number		0055								
OTP Version		0000								

Buttons: WRITE, EXPORT

Figure 18: Screen Indicates that Configurations have been Written to MP5416-CCCC

16. Click OK and turn off power.

The remaining steps are optional and instruct how to check that new configurations have been programmed.

Optional:

17. Adjust the input voltage to 3.5 - 5V.
18. Repeat steps 1-3 from this section.
19. If done correctly, new configurations will be shown in the table on the left hand side.

Notes:

- Unlike in I2C, not all of the configurations you set in OTP mode will be displayed until you write to MP5416-CCCC and power cycle.
- After OTP, you:
 - Are still able to change values using the I2C.
 - Do not need to press P1 while powering on the board.
- If you try to perform OTP on a previously programmed device, the GUI software will allow you to proceed normally. However, your configurations will NOT be saved.

3.5 Troubleshooting Tips

Note: USBI2C-02 and USBI2C-01 drivers are not compatible. USBI2C-02 uses USBXpress and USBI2C-01 uses Cyusb3. USBI2C-02 is the recommended device for MPS PMBus and I2C.

EVKT-USBI2C-01

In case that the USBI2C-01 driver is not properly installed, manual installation is required. Follow the steps below.

1. Open the Device Manager and select update driver software (see figure 19).
2. Click “Browse my computer for driver software”, find the driver located on thumb drive and install.


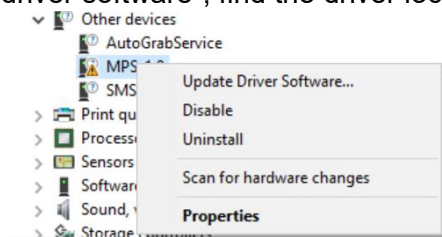


Figure 19

EVKT-USBI2C-02

In the case that the USBI2C-02 driver is not properly installed, manual installation is required. Follow the steps below.

Note: Check driver version. Find “USBXpress” Device in the Device Manager under USB controllers.



Right click and view properties Check to make sure the driver version matches the newest version. (see figure 20)

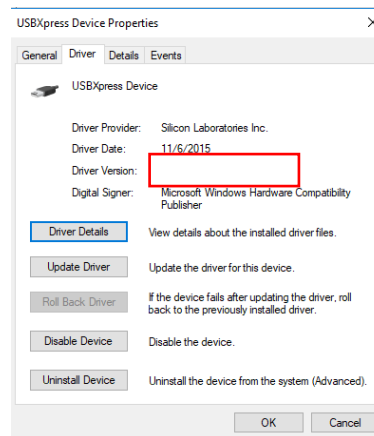


Figure 20

1. Browse the thumb drive contents and open the driver's folder.
2. Install the correct USBXpress ".exe" file
Choose either 32 bit or 64 bit operating system.
32-bit: USBXpressInstaller_x86.exe
64-bit: USBXpressInstaller_x64.exe
3. Connect the EVKT-USB12C-02 Dongle to the PC with the USB cable.

- **No Supply**

The PMIC's input pin has an under-voltage lockout (UVLO) detection circuit. If the input voltage (AVIN) is lower than the UVLO rising threshold, the PMIC's functions are disabled.

- **Shutdown Event**

If the PMIC detects that the input voltage is lower than the UVLO falling threshold (enter no supply state) or over-temperature protection is triggered (enter power off state), the PMIC switches to no supply state or power-off state, regardless of the current state.

- **Thermal Recovery**

If the MP5416 is in a power-off state due to the die temperature exceeding the thermal protection threshold, the PMIC enters a power-on sequence when the die's temperature decreases.

- **Shutdown Sequence**

When the input voltage is lower than the UVLO falling threshold or the IC is over-temperature, the PMIC enters the shutdown sequence directly.

Section 4. Ordering Information

The components of the evaluation kit can be purchased separately depending on user needs.

Part Number	Description
EVKT-5416	Complete evaluation kit
Contents of EVKT-5416	
EV5416-R-00D	EV5416 evaluation board allowing users to perform OTP
EVKT-USBI2C-02	Includes one USB to I2C communication interface device, one USB Male A to B cable, one 3-in ribbon cable, and one 10-pin ribbon cable
MP5416GR-CCCC	2 additional MP5416 ICs which can be used for OTP programming
Tdrive-5416	USB thumb drive that stores the GUI installation file and supplemental documents

Order directly from MonolithicPower.com or our distributors.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.