

MAXM17504 5V Output Evaluation Kit

Evaluates: MAXM17504 in 5V Output-Voltage Application

General Description

The MAXM17504 evaluation kit (EV kit) is a demonstration circuit of the MAXM17504 high-voltage, high-efficiency, current-mode scheme, synchronous step-down DC-DC switching power module. The MAXM17504 EV kit is designed for 5V output and delivers up to 3.5A load current from a wide input voltage range of 11V to 60V. The EV kit switches at an optimal 500kHz switching frequency to allow the use of small component sizes that help minimize solution size while maintaining high performance. The EV kit provides a precision-enable input, an open-drain $\overline{\text{RESET}}$ output signal, and external frequency synchronization to provide a simple and reliable startup sequence and eliminate beat frequency between regulators. The EV kit also includes optional component footprints to program different output voltages, an adjustable input undervoltage-lockout, and a soft-start time to control inrush current during startup. The MAXM17504 data sheet provides a complete description of the part that should be read in conjunction with this evaluation kit data sheet prior to modifying the demo circuit.

Features

- Highly Integrated Solution with Integrated Shield Inductor
- Wide 11V to 60V Input Range
- Preset 5V Output with a Fixed Resistor-Divider on Feedback Pin (FB)
- Programmable Output Voltage Feature (0.9V to 12V)
- Up to 3.5A Output Current
- High 92.5% Efficiency ($V_{\text{IN}} = 12\text{V}$, $V_{\text{OUT}} = 5\text{V}$ at 1.0A)
- 500kHz Switching Frequency
- Enable/UVLO Input, Resistor-Programmable UVLO Threshold
- Adjustable Soft-Start Time
- Selectable PWM, PFM, or DCM Mode
- Open-Drain $\overline{\text{RESET}}$ Output
- External Frequency Synchronization
- Overcurrent and Overtemperature Protection
- Low-Profile, Surface-Mount Components
- Lead(Pb)-Free and RoHS Compliant
- Fully Assembled and Tested

[Ordering Information](#) appears at end of data sheet.

MAXM17504 5V Output Evaluation Kit

Evaluates: MAXM17504 in 5V Output-Voltage Application

Quick Start

Recommended Equipment

- MAXM17504 evaluation kit
- 11V to 60V DC power supply (V_{IN})
- Dummy load capable of sinking 3.5A
- Digital voltmeter (DVM)
- 100MHz dual-trace oscilloscope

Procedure

The MAXM17504 EV kit is fully assembled and tested. Please follow the steps below to verify board operation.

Caution: Do not turn on the power supply until all connections are completed.

- 1) Set the power supply at a voltage between 11V and 60V. Disable the power supply.
- 2) Connect the positive and negative terminals of the power supply to IN and PGND PCB pads, respectively.
- 3) Connect the positive and negative terminals of the 3.5A load to OUT and PGND2 PCB pads, respectively, and set the load to 0A.
- 4) Connect the DVM across the OUT PCB pad and the PGND2 PCB pad.
- 5) Verify that no shunts are installed across pins 1-2 on jumper JU1 to enable UVLO (see [Table 1](#) for details).
- 6) Verify that a shunt is installed across JU3 to disable the external synchronization (see [Table 3](#) for details).
- 7) Verify that a shunt is installed across JU2 to enable PWM mode (see [Table 2](#) for details).
- 8) Enable the input power supply.
- 9) Verify the DVM display 5V.
- 10) Increase the load up to 3.5A to verify the DVM continue displaying 5V.

Detailed Description of Hardware

The MAXM17504 EV kit is a proven circuit to demonstrate the high-voltage, high-efficiency, and compact solution size of the synchronous step-down DC-DC power module. The output voltage is preset to 5V to operate from 11V to 60V and provides up to 3.5A load current. The optimal frequency is set at 500kHz to maximize efficiency and minimize component size. The EV kit includes jumper JU1 to enable/disable UVLO of the device, JU2 to configure in PWM, PFM, or DCM mode in advance of light-load efficiency, and JU3 to enable/disable external clock synchronize (SYNC). The $\overline{\text{RESET}}$ PCB pad is

also available for monitoring output-voltage regulation to enable/disable the application circuit of the load.

Soft-Start Input (SS)

The device utilizes an adjustable soft-start function to limit inrush current during startup. The soft-start time is programmed by the value of C1, the external capacitor from SS to GND. The selected output capacitance (C_{SEL}) and the output voltage (V_{OUT}) determine the minimum value of C1, as shown by the following equation:

$$C1 \geq 28 \times 10^{-3} \times C_{SEL} \times V_{OUT}$$

where C1 is in nF and C_{SEL} is in μF .

The soft-start time (t_{SS}) is calculated by the equation below:

$$t_{SS} = C1 / 5.55$$

where t_{SS} is in ms and C1 is in nF.

Programmable Undervoltage-Lockout (UVLO)

The EV kit offers an adjustable input undervoltage-lockout level by resistor-dividers connecting between the IN, EN/UVLO, and GND pins. For normal operation, a shunt should not be installed across pins 1-2 on JU1 to enable the output through an internal pullup 3.3M Ω resistor from EN/UVLO pin to IN pin. To disable the output, install the shunt across pins 1-2 on JU1 to pull the EN/UVLO pin to GND. See [Table 1](#) for JU1 setting details. The EV kit also provides an optional R3 PCB footprint to program a UVLO threshold voltage at which an input voltage level device turns on. The R3 resistor can be calculated by the following equation:

$$R3 = \frac{4009.5}{(V_{INU} - 1.215)}$$

where V_{INU} is the input voltage at which the device is required to turn on, and R3 unit is in k Ω .

Table 1. UVLO Enable/Disable Configuration (JU1)

SHUNT POSITION	EN PIN	MAXM17504_ OUTPUT
Installed	Connected to GND	Disable
Not installed*	Connected to VIN	Enable

*Default position.

MODE Selection (MODE)

The device's MODE pin can be used to select among PWM, PFM, or DCM modes of operation in advance of constant frequency or high-efficiency at light-load. The logic state of the MODE pin is latched when the V_{CC} and EN/UVLO voltage exceed the respective UVLO rising thresholds and all internal voltages are ready to allow LX switching. The changes on the MODE pin are ignored during normal operation. Refer to the MAXM17504 data sheet for more information on the PWM, PFM, and DCM modes of operation. [Table 2](#) shows EV kit jumper settings that can be used to configure the desired mode of operation.

External Clock Synchronization (SYNC)

The internal oscillator of the device can be synchronized to an external clock signal to eliminate beat frequency between regulators through the SYNC pin. The external synchronization clock frequency must be between $1.1f_{SW}$ to $1.4f_{SW}$, where f_{SW} is the frequency of operation set by R5. The minimum external clock high-pulse width and

amplitude should be greater than 50ns and 2.1V, respectively. The minimum external clock low-pulse width should be greater than 160ns, and the maximum external clock low-pulse amplitude should be less than 0.8V. [Table 3](#) describes the connection of the SYNC pin.

Setting V_{OUT} with a Resistive Voltage Divider at FB

The MAXM17504 EV kit is preset for 5V and offers an adjustable output voltage range from as low as 0.9V up to 12V at 3.5A maximum load. The adjustable output voltage can be programmed by the set of resistor dividers R1 and R2. Refer to Table 1 (Selection Component Values) in the MAXM17504 data sheet to select optimal component values for each specific input voltage range from 4.5V up to 60V and an output voltage from 0.9V up to 12V. To obtain an output voltage other than the default setting outputs in Table 1, only seven component (R1, R2, C1, C2, C3, C4, and C8) values are needed to modify the equation described in the *Setting the Output Voltage* section of the MAXM17504 data sheet.

Table 2. MODE Description (JU2)

SHUNT POSITION	MODE PIN	MAXM17504 MODE
Not installed	Unconnected	PFM mode of operation
1-2	Connected to V_{CC}	DCM mode of operation
2-3*	Connected to GND	PWM mode of operation

*Default position.

Table 3. SYNC Description (JU3)

SHUNT POSITION	SYNC PIN	MAXM17504_SYNC
1-2*	Connected to SGND	SYNC feature unused
Not installed	Connected to test loop on PCB	Frequency can be synchronized with an external clock






*Default position.

MAXM17504 5V Output Evaluation Kit

Evaluates: MAXM17504 in 5V Output-Voltage Application

Typical Operating Characteristics (continued)

($V_{IN} = 11V - 60V$, $V_{OUT} = 5V$, $I_{OUT} = 0 - 3.5A$, $T_A = +25^\circ C$, unless otherwise noted.)


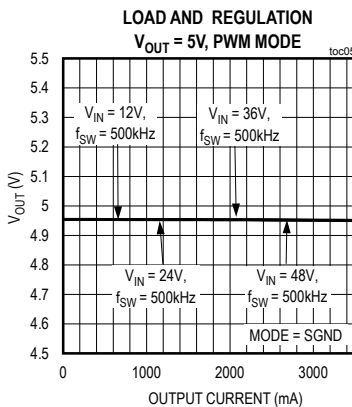
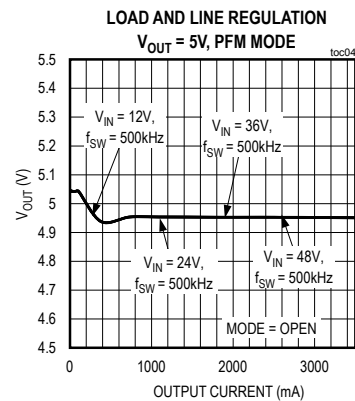
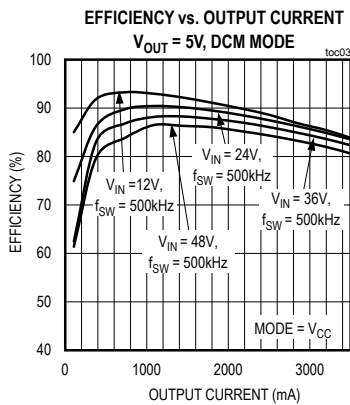
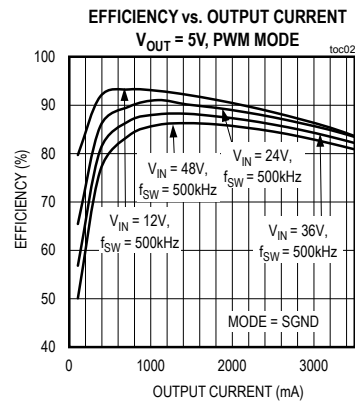
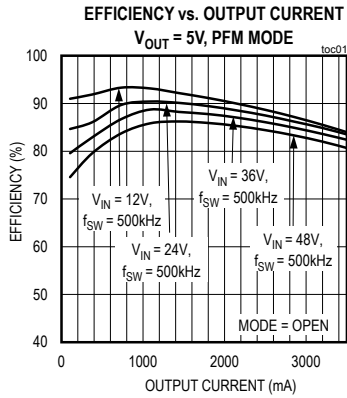


MAXM17504 5V Output Evaluation Kit

Evaluates: MAXM17504 in 5V Output-Voltage Application

Typical Operating Characteristics

($V_{IN} = 11V - 60V$, $V_{OUT} = 5V$, $I_{OUT} = 0 - 3.5A$, $T_A = +25^\circ C$, unless otherwise noted.)

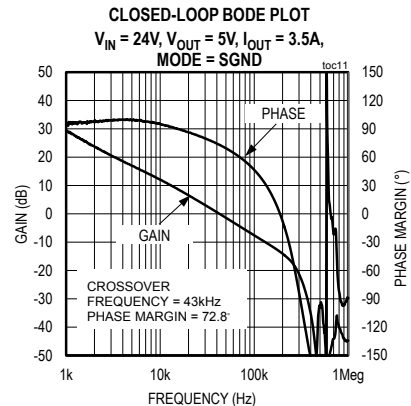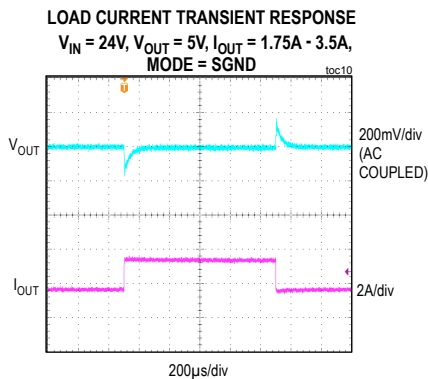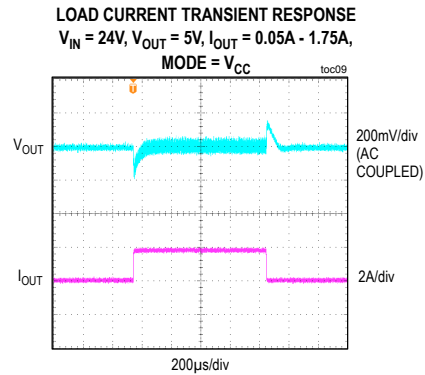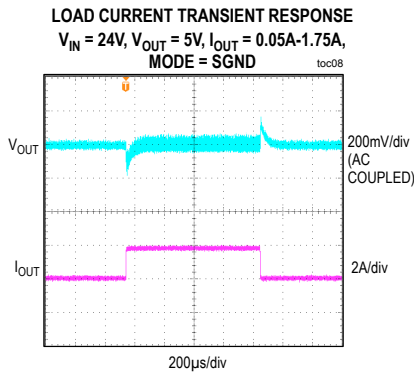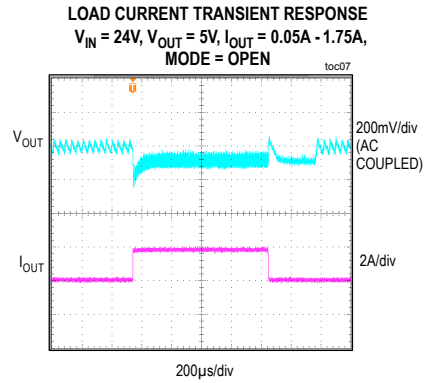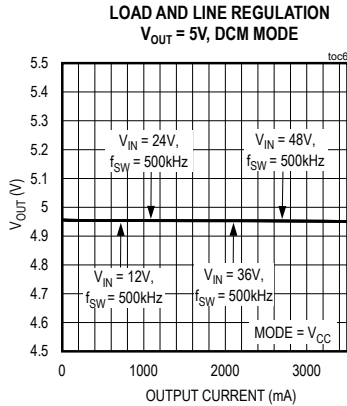

Component Suppliers

SUPPLIER	WEBSITE
Murata Americas	www.murata.com
NEC TOKIN America, Inc.	www.nec-tokinamerica.com
Panasonic Corp.	www.panasonic.com
SANYO Electric Co., Ltd.	www.sanyodevice.com
TDK Corp.	www.component.tdk.com
TOKO America, Inc.	www.tokoam.com

Note: Indicate that you are using the MAXM17504 when contacting these component suppliers.

Component List and Schematic

Refer to the following files attached to this data sheet for component information and schematic:

- MAXM17504EV_BOM.xls
- MAXM17504_EV_Schematic.pdf

MAXM17504 5V Output Evaluation Kit

Evaluates: MAXM17504 in 5V Output-Voltage Application

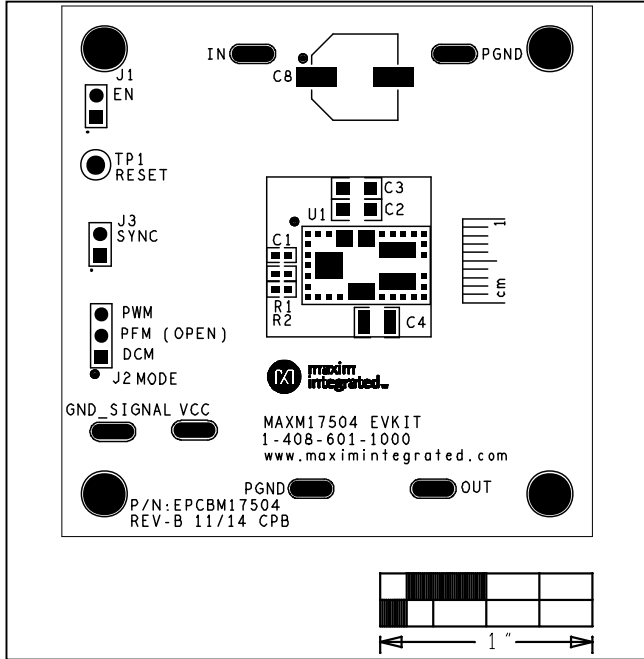


Figure 1. MAXM17504 EV Kit Component Placement Guide—Component Side

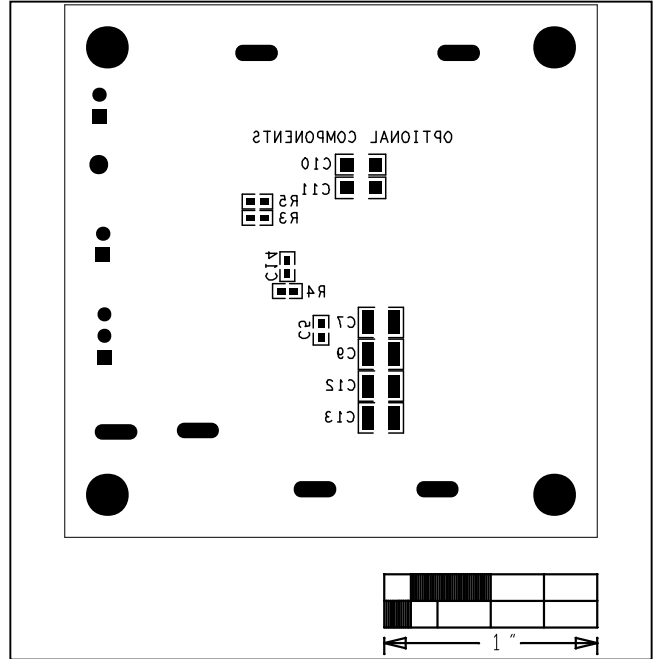


Figure 2. MAXM17504 EV Kit Component Placement Guide—Solder Side

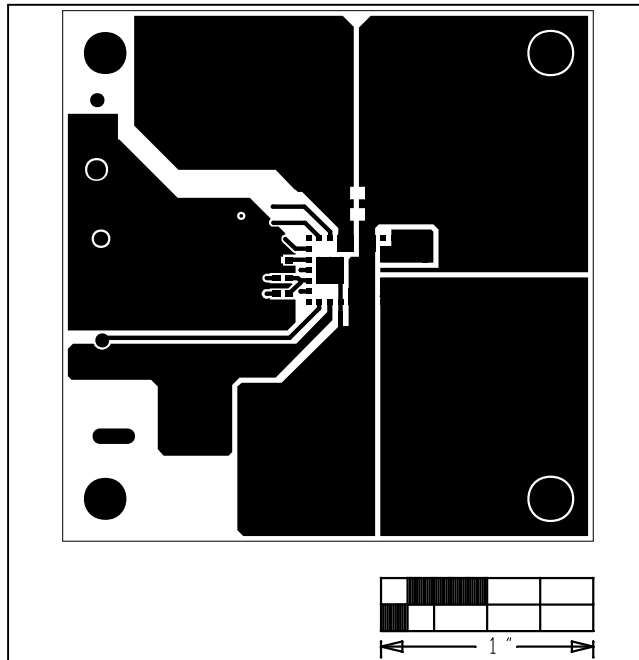


Figure 3. MAXM17504 EV Kit PCB Layout—Component Side

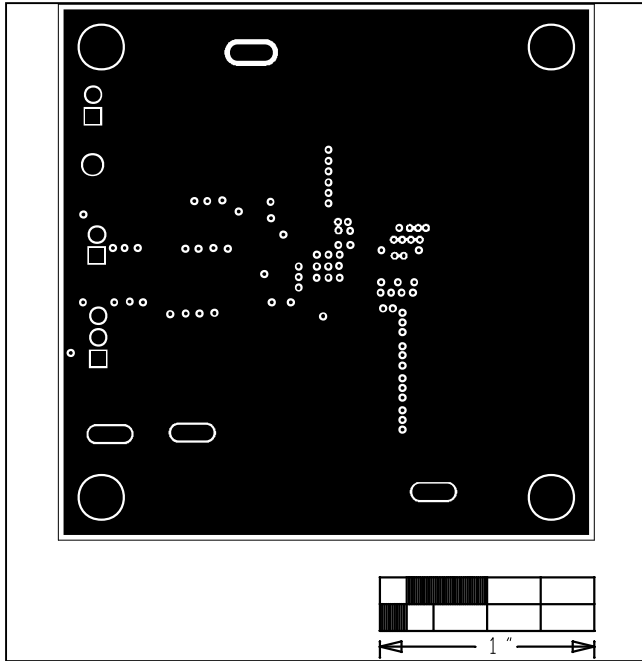


Figure 4. MAXM17504 EV Kit PCB Layout—PGND Layer 2

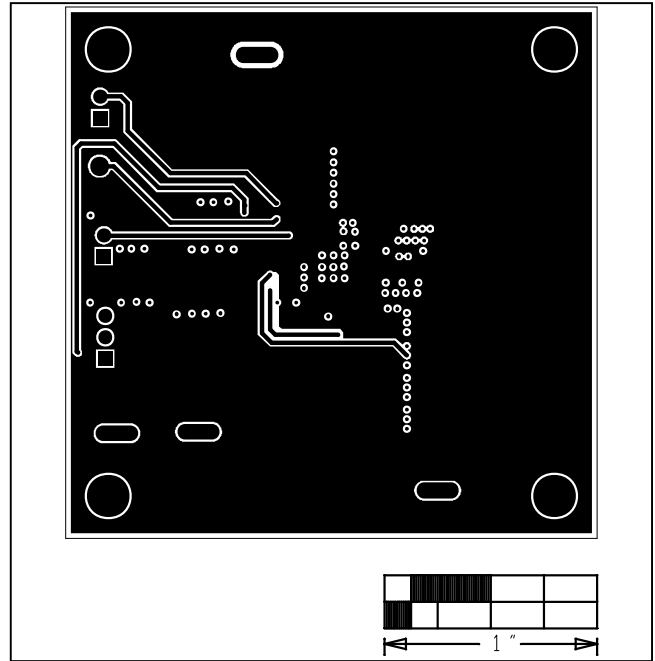


Figure 5. MAXM17504 EV Kit PCB Layout—PGND Layer 3

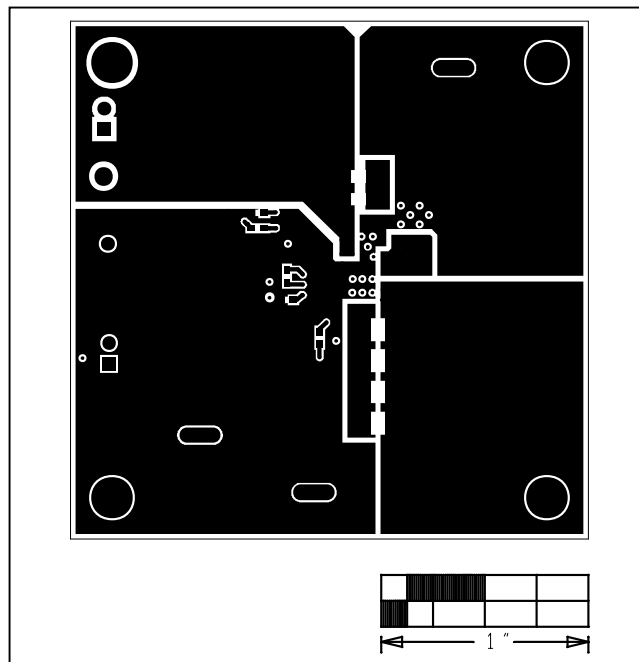


Figure 6. MAXM17504 EV Kit PCB Layout—Solder Side

MAXM17504 5V Output
Evaluation Kit

Evaluates: MAXM17504 in 5V
Output-Voltage Application

Ordering Information

PART	TYPE
MAXM17504EVKIT#	EV Kit

#Denotes RoHS compliant.

MAXM17504 5V Output
Evaluation Kit

Evaluates: MAXM17504 in 5V
Output-Voltage Application

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	4/15	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.