

RECOMMENDED FOR R&D, PROTOTYPING, MAINTENANCE & REPAIR

PRECISION CONSTRUCTION OF DURABLE HIGH CARBON STEEL


ANGLED HEAD FOR COMFORT-ABLE HAND & WRIST POSITION

EXTRA STRENGTH PIVOT PINS FOR GREATER DURABILITY

RATCHET CON-TROL ASSURES A COMPLETE CRIMPING CYCLE

EMERGENCY RATCHET RELEASE


INTERCHANGE-ABLE DIES ARE AVAILABLE

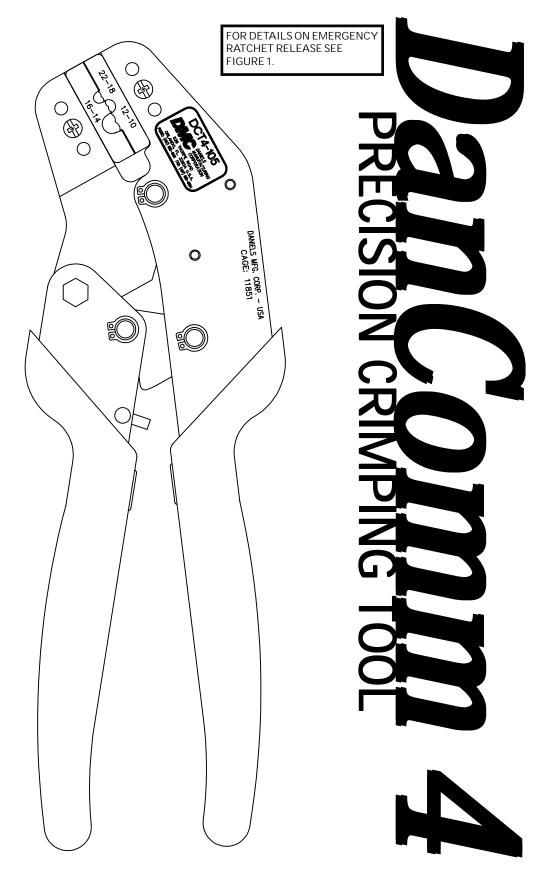



INTRODUCTION:

The Daniels DCT4-105 Hand Crimping Tool is designed to crimp non-insulated terminals onto pre-stripped wire. The tool has a replaceable die assembly with three crimping areas which are listed in Figure 1

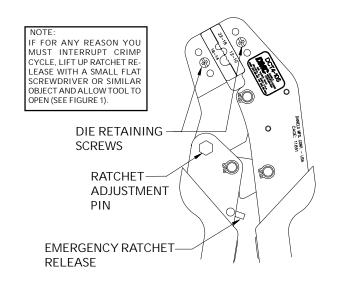

| GENERAL STRIP LENGTH INFORMATION | | | | |
|----------------------------------|----------------|------|----------------|----------------|
| WIRE | INSULATION | DMC | STRIP LENGTH | |
| RANGE | DIA (TYPICAL) | GAGE | MIN | MAX |
| 22-18 AWG | .140" (3.56mm) | G887 | .203" (5.15mm) | .234" (5.95mm) |
| 16-14 AWG | .170" (4.32mm) | G886 | .203" (5.15mm) | .234" (5.95mm) |
| 12-10 AWG | .250" (6.35mm) | G885 | .312" (7.94mm) | .344" (8.73mm) |

FIGURE 1


PROPER USE GUIDELINES:

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. Daniels hand tools are intended for occasional use and low volume applications. Daniels offers a wide selection of powered application equipment for extended-use, production operations.

CRIMPING PROCEDURE:

- 1. Strip the wire to the proper length (see Figure 1).
- 2. Choose the desired terminal and match the crimping area size designator.
- 3. Place the terminal in the crimping area (see Figure 2). Terminal should be positioned in the tool so that the wire enters from the size designator of the die.

- 4. Close the tool handles until the terminal is held in the dies without deforming the wire barrel.
- 5. Place the stripped wire in the terminal wire barrel and squeeze the handles until the ratchet releases.

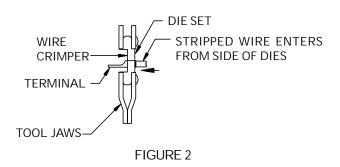

MAINTENANCE AND INSPECTION:

Daily Maintenance:

Daniels recommends that operators of the tool be made aware of, and be responsible for the following steps of daily maintenance:

- Remove dust, moisture, and any other contaminants from the tool with a clean, soft brush, or a clean, soft, lint-free cloth. DO NOT use hand or abrasive objects that could damage the tool.
- 2. Make certain the tool retaining pins are in place and that they are secured with retaining rings.
- 3. All pins, pivot points, and bearing surfaces should be protected with a thin coat of any good SAE No. 20 motor oil. Do not oil excessively.
- 4. When the tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping jaw. Store the tool in a clean, dry area.

Periodic Inspection:

Regular inspections of the tool should be performed by quality control personnel. A record of scheduled inspections should remain with the tool or be supplied to supervisory personnel responsible for the tool. Inspection frequency should be based upon the amount of use, working conditions, operator training and skill, and established company standards.



Visual Inspection:

- 1. Make certain that all retaining pins are in place and secured with retaining rings.
- 2. Close tool handles until ratchet releases and allow them to open freely. If they do not open quickly and fully, the spring is defective and must be replaced.
- 3. Inspect the tool frame for wear or damage, paying particular attention to the tool jaws and pivot points. If tool is acceptable, lubricate and return to service.
- 4. Check the crimping dies occasionally to make sure dies are not broken or chipped.

ADJUSTING RATCHET:

The ratchet adjustment is preset at the factory. If adjustment is necessary, contact the factory for instructions.

DIE INSTALLATION:

Install die set into tool frame as shown in Figure 1. Install and tighten retaining screws making sure dies are aligned and fully seated against tool frame.

DanComm 4™ TOOLS

| DMC P/N | DESCRIPTION |
|----------|------------------------------------|
| DCT4-101 | AMP STD. & MOISTURE RESISTANT CAPS |
| DCT4-102 | R/B/Y INSULATED TERMINALS |
| DCT4-103 | SLIDE ON R/B |
| DCT4-104 | HEAT-N-SEAL R/B/Y |
| DCT4-105 | UNINSULATED TERMINALS |
| DCT4-106 | .052 SQ./ .128 HEX/ .178 HEX |
| DCT4-107 | .068 HEX/ .178 HEX/ .324 HEX |
| DCT4-108 | .068 HEX/ .213 HEX/ .255 HEX |
| DCT4-119 | R/B/W SPLICES |
| DCT4-121 | .039 SQ./ .195 HEX |

CONSULT FACTORY FOR OTHER DIE CONFIGURATIONS

MISCELLANEOUS:

Daniels Manufacturing Corporation offers complete refurbishing and recalibration services.

DMC specially engineers and manufactures complete tool kits to satisfy individual customer requirements, such as total aircraft support, general shop maintenance or production, on board ship and vehicle service, etc.

LIMITATION OF LIABILITY / LIMITED WARRANTY*

DANIELS MANUFACTURING CORPORATION IS NOT LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY NATURE OR KIND RESULTING FROM THE USE OF ANY OF ITS PRODUCTS. OWNERS AND USERS OF DMC PRODUCTS ASSUME FULL RESPONSIBILITY FOR INSTRUCTING THEIR EMPLOYEES IN THE PROPER AND SAFE USE OF SUCH PRODUCTS.

Daniels Manufacturing Corporation warrants each new unit sold by it to be free from defects in material and workmanship under normal use and service. Its obligation under this warranty is limited to the free correction or, at its option, the refund of the purchase price of any such unit which proves defective within ninety (90) days after delivery to the first user, provided that the unit is returned to it with all transportation charges prepaid, and which shall appear to its satisfaction, upon inspection by it, to have been defective in material or workmanship. This warranty shall not cover any damage to such products, which in the opinion of Daniels Manufacturing Corporation, was caused by normal wear, misuse, improper operation or accident. This warranty is in lieu of all other warranties express or implied. No warranty, express or implied, is made or authorized to be made or assumed with respect to products of Daniels Manufacturing Corporation, other than that herein set forth.

*as defined by PL93-637



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.