

RCY21151W

Manual Crimp Hand Tool

For Minitek Contacts AWG 26-30 User's Manual



Rev 02

1. PURPOSE

Crimping of Minitek AWG 26-30 contacts onto dedicated stranded wire.




2. TOOL DESCRIPTION

- Single head crimp tool. The tool crimps one contact per cycle.
- Short set-up times.
- Releasable ratchet ensures the complete crimping process.
- Ergonomically handles for comfortable working.
- Optimal force transmission ratio.
- The hand tool features a terminal guide that accepts Minitek contacts on a regular carrier strip. The terminal guide is equipped with a manual contact feeder. During each crimping cycle, the tool separates the contact in process from the carrier strip.

3. PROCESS


Be sure that the tool is open. If not, close the handles until the ratchet releases. Further you must open the handles of the tool.

Insert a strip of contacts (cut to the proper length) into the terminal guide of the tool.

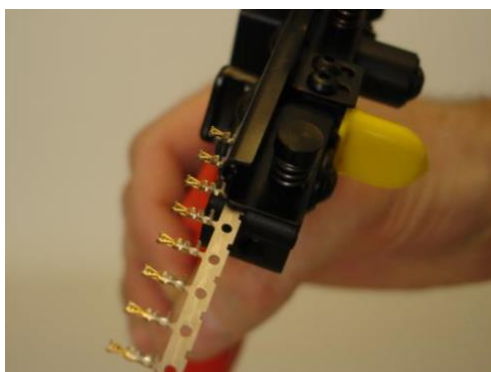

Once 50 mm of the contact strip is introduced into the terminal guide, the contacts can be fed one by one towards the crimp area. In order to do so, activate the manual feeder as shown on the pictures.

Amphenol FCI

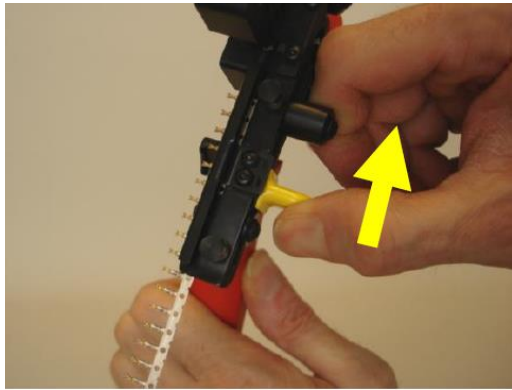


Feed a terminal into the crimping area of the hand tool.



As shown on the picture, insert the strands of a stripped and straightened wire into the slot of the wire positioner. The insulation of the wire should be pouched to the surface of the wire positioner.

Make sure that the stripped length of the wire is in the range of 1.2 to 2.2 mm. Be careful not to make cuts or nicks in the strands during the stripping operation. The use of improperly prepared wire may cause insufficient crimp performance obtained.

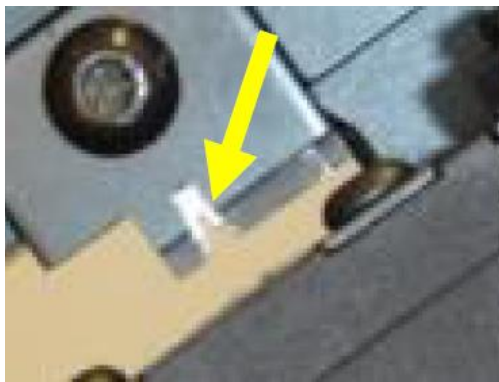


While keeping carefully the wire in position, close the handles until the ratchet releases.

Amphenol FCI



Open the tool and take the crimped wire.

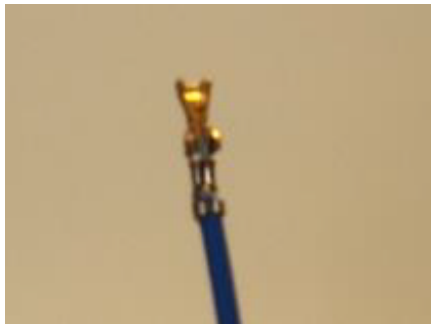

The tool is not cutting the carrier strip. In order to work properly, the operator has to cut the carrier strip on a regular base.

Before making the next crimp, feed terminal by one pitch. And repeat the crimping process.




4. ADJUSTMENTS


Depending on the applied wire, it could be possible that you need to adjust the conductor crimping height. In order to do this, remove the locking screw as shown on the picture



Be sure that the tool is open. Adjust the crimping height by means of the crimping height adjustment key. Attention! A miss adjusted crimping height can damage the tool.

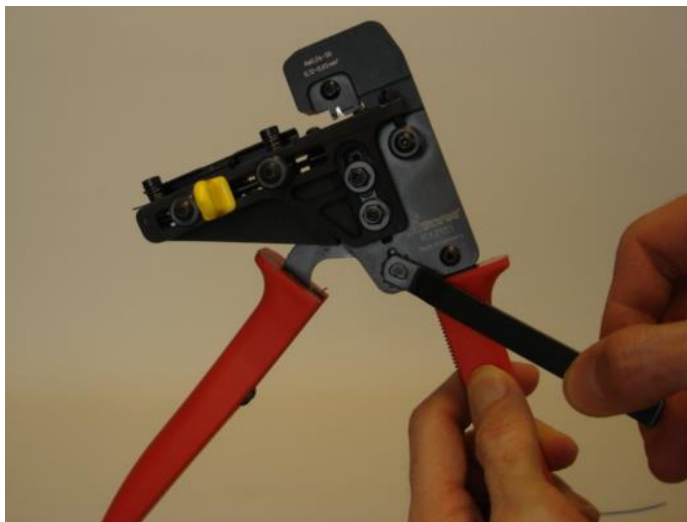

After the adjustment, install the locking screw again. Do never crimp without the locking screw in position.

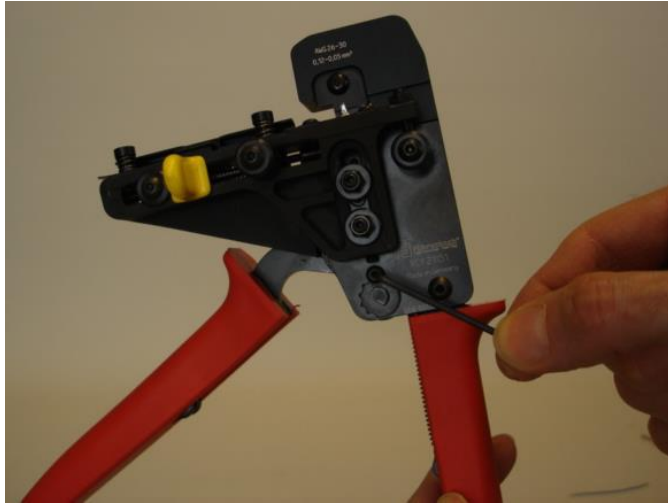

5. GENERAL SPECIFICATION

- Color : Black metal with red levers.
- Weight (tool) : 0.55kg
- Weight (tool+box) : 1.45kg
- Size (Protective box) : length 390 mm, width 300 mm, height 100mm

6. INPUT MATERIAL & FUNCTIONAL REQUIREMENTS

- Stranded wire dedicated for 77138-001 contacts.

7. PROCESS OUTPUT

Due to the manual process, the output capacity is highly depended on the skills of the operator.

8. SAFETY & ERGONOMICS

- Apply the tool only for the target as mentioned in chapter 1. Purpose.
- For operator safety, it's necessary to apply eye protection.
- Apply the tool only in a dry and clean environment.
- Apply the tool only in a well lighted environment (1000 Lux).

- Only skilful operators are allowed to apply the tool.
- In normal operation, the hand tool can only be opened after a complete closing cycle. In order to open the tool before completing the entire crimp cycle, turn the release handle in the counter clock wise direction.



9. ENVIRONMENTAL CONDITIONS

9.1. Ambient temperature

The ambient temperature is measured at a height of 1.5 m above the floor.

- | | |
|---|-------------------|
| a. Normal range | : + 15°C to +30°C |
| b. Average value | : ± 23°C |
| c. Maximum variation within a 5 min. period | : ± 5°C |

9.2. Humidity

- | | |
|--|------------------|
| a. Normal range (no condensation) | : 40 to 70% R.H. |
| b. Range not resulting in constantly reduced operation | : 10 to 90% R.H. |

9.3. Atmospheric pressure


Normal range: 533 - 1060 m bar.

10. SPARE PARTS

- Die set: RCY21151WA1

Appendix A: Release the feeding finger

In order to release the feeding finger, pouch the release lever in the direction as shown by the red arrow on the tool body. With your other hand, you can carefully slide the strip of contacts out of the tool.

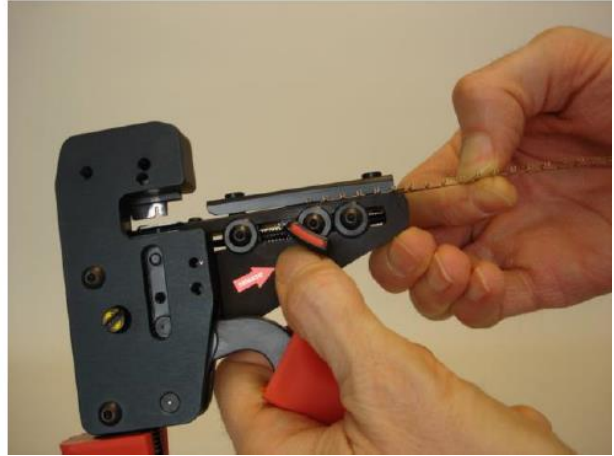



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.