

ISL78693EVAL1Z

Evaluation Board User Guide

UG098
Rev 0.00
October 28, 2016

Description

The ISL78693EVAL1Z is a complete platform for the evaluation of all datasheet specifications and functionalities. The onboard 8-bit DIP switch facilitates battery charge current programming, setting EN input, temperature monitoring status, etc. The four jumpers can set up the input source selection, USB mode selection, and can be used to make other necessary connections.

The ISL78693EVAL1Z board is intended to provide an evaluation platform for the 3mmx3mm DFN [ISL78693](#) package, single-cell Li-ion battery charger.

The device along with key components, constitute a complete charger solution demonstrating the space saving advantage of the ISL78693 in limited space applications.

LEDs connected to STATUS and FAULT pins will indicate the normal charging status or fault condition.

Onboard jumpers and a DIP switch allow the different operating conditions for the charger.

Specifications

This board has been configured and optimized for the following operating conditions:

- Ambient temperature range, -40°C to $+85^{\circ}\text{C}$
- Supply voltage, $V_{\text{IN}} = 4.3\text{V}$ to 5.5V
- Output voltage, $V_{\text{BAT}} = 3.65\text{V}$
- Trickle charge voltage, 2.6V
- Recharge threshold voltage, 3.3V
- Constant charge current up to 0.5A

Features

- Complete charger for single-cell Li-ion batteries
- Integrated pass element and current sensor
- No external blocking diode required
- 1% voltage accuracy
- Programmable current limit up to 0.5A
- NTC thermistor interface for battery temperature monitor, 8-bit DIP switch for conveniently setting up charging current, battery thermal status, EN input, etc
- Different jumpers for input source selection, USB mode selection, and the convenience of current measurement
- Test points provided for STATUS, FAULT, TIME, EN, V2P8, and TEMP functional pins to allow for monitoring the device pins
- Board size $3.5'' \times 2.5''$ for the convenience of evaluation
- Eight thermal vias in the thermal pad
- RoHS compliant

Related Literature

- For a full list of related documents please visit our website - [ISL78693](#) product page

Ordering Information

| PART # | DESCRIPTION |
|----------------|---|
| ISL78693EVAL1Z | Evaluation board for the 3x3 DFN package part |

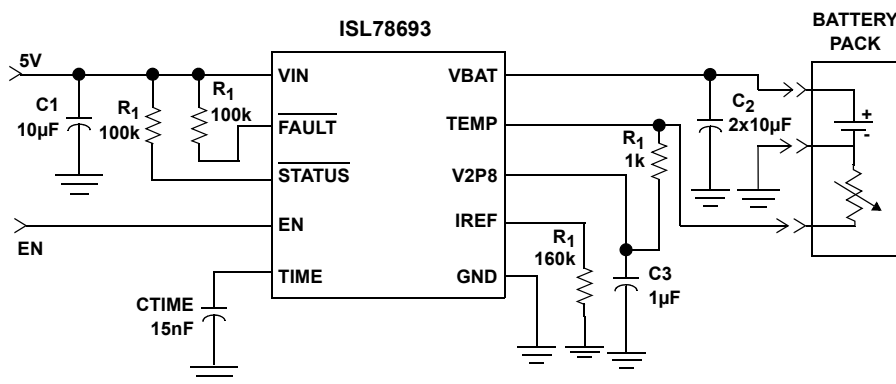


FIGURE 1. TYPICAL APPLICATION

What Is Inside

The evaluation board is shipped with:

- [ISL78693](#) datasheet
- This ISL78693EVAL1Z user guide

What Is Needed

The following instruments will be needed to perform testing:

- Power supplies:
 - PS1: DC 20V/5A,
 - PS2: DC (sinks current) 20V/5A, such as Agilent 6654A
- Electronic load: 20V/5A
- Multimeters
- Function generator
- Oscilloscope
- Cables and wires

Quick Setup Guide

1. Switch on Bits 4 and 6 of the DIP-switch. Leave all other bits off, see [Figure 2](#).

****DO NOT APPLY POWER UNTIL STEP 6****

2. Connect 5V to VIN.
3. Connect 3.25V to VBAT.
4. Connect 1.2A electronic load to VBAT.
5. Verify that no shunts are connected across all jumpers.
6. Turn on power supplies and electronic load.
7. Green LED should be on, indicating normal charging operation.
8. If current meter is in series with VIN, it shall read 400mA as the charging current.
9. Turn ON DIP-2 bit, VBAT will read 0V, IBAT will read 0A, and the green LED is OFF.
10. Turn OFF DIP-2 bit, switch off all supplies.

DIP Switch Settings

A 9-bit DIP switch is provided to set up the voltage, current reference, End-of-Charge (EOC) current, and so on. The functionality of the bits are described in [Table 2](#).

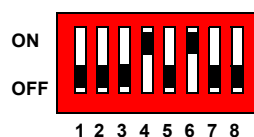


FIGURE 2. INITIAL DIP SWITCH SETTINGS

TABLE 1. JUMPER SETTINGS

| JUMPER | POSITION | FUNCTION |
|--------|------------------|--|
| JP1 | USB to VIN | USB connection |
| | Wall Cube to VIN | Wall adapter connection |
| JP2 | Installed | Connect VBAT pin to battery Current meter can replace shunt |
| JP3 | Not Installed | Default |
| | Installed | Battery attached to thermistor at J2 |
| JP4 | IREF and V2P8 | USB 500mA |
| | IREF and GND | USB 100mA |

TABLE 2. DIP SWITCH PIN DESCRIPTIONS

| BIT | DESCRIPTION | ON | OFF | REMARK |
|-----|----------------------------|--------------------|--------------------|--|
| 1 | Adjustable TIMEOUT | 5 hours 50 mins | 3 hours 30 mins | |
| 2 | Charger Enable/Disable | Charger disabled | Charger enabled | |
| 3 | I _{REF} Setting 1 | Add 0.5A | | |
| 4 | I _{REF} Setting 2 | Add 0.4A | | |
| 5 | | | | Not connected |
| 6 | TEMP Normal | Normal | | All off simulates battery removal |
| 7 | TEMP High | Too hot | | |
| 8 | TEMP Low | Too cold | | |

Initial Board Jumper Positioning (Refer to [“Schematic” on page 5](#))

JP1 - Selects the VIN pin connection to a wall adapter, or to USB connector. If the J1 connector is being used, a shunt must be installed across JP1-1, 2. If J3 (USB) connector is being used, a shunt must be installed across JP1-2, 3. J1, J3, and JP1 can be ignored if the power supply is connected directly to the VIN test point, which is directly connected to the VIN pin of the IC. A current meter can replace the shunt mentioned above, in order to measure the input current.

JP2 - Connects the VBAT pin to the battery. If the J2 connector is being used, a shunt must be installed across JP2. A current meter can also replace the shunt to measure the V_{BAT} current.

JP3 - Connects the TEMP pin to the battery. Usually no shunt is needed for JP3, as the evaluation board can simulate various battery thermal conditions. Only when a battery attached with a thermistor is applied on J2 does it become necessary to install a shunt across JP3, and at the same time, Bits 6, 7, 8 on the DIP switch all need to be turned off.

JP4 - Selects USB modes: a shunt across IREF and V2P8 will set USB 500mA mode, a shunt across IREF, and GND will set USB 100mA mode. When the charge current is programmed by the resistors connected to the IREF pin, no shunt should be installed on JP4.

Functional Description

The ISL78693 is an integrated charger for single-cell Lithium chemistry batteries. The ISL78693 functions as a traditional linear charger when powered with a voltage source adapter. When powered with a current-limited adapter, the charger minimizes the thermal dissipation commonly seen in traditional linear chargers. As a linear charger, the ISL78693 charges a battery in the popular Constant Current (CC) and Constant Voltage (CV) profile. The constant charge current I_{REF} is programmable up to 1A with an external resistor or a logic input. The charge voltage V_{CH} has 1% accuracy over the entire recommended operating condition range. The charger preconditions the battery with a 10% typical of the programmed current at the beginning of a charge cycle until the battery voltage is verified to be above the minimum fast charge voltage, $V_{TRICKLE}$. This low current preconditioning charge mode is named Trickle mode. The verification takes 15 cycles of an internal oscillator whose period is programmable with a timing capacitor on the time pin. A thermal-foldback feature protects the device from the thermal concern typically seen in linear chargers. The charger reduces the charge current automatically as the IC internal temperature rises above +100°C to prevent further temperature rise. The thermal-foldback feature guarantees safe operation when the Printed Circuit Board (PCB) is space limited for thermal dissipation.

A TEMP pin monitors the battery temperature to ensure a safe charging temperature range. The temperature range is programmable with an external negative temperature coefficient (NTC) thermistor. The TEMP pin is also used to detect the removal of the battery. The charger offers a safety timer for setting the fast charge time (TIMEOUT) limit to prevent charging a dead battery for an extensively long time. The Trickle mode is limited to 1/8 of TIMEOUT.

The charger automatically recharges the battery when the battery voltage drops below a recharge threshold of 3.3V (typical). When the input supply is not present, the ISL78693 draws less than 1μA current from the battery. Three indication pins are available from the charger to indicate the charge status. The V2P8 outputs a 2.8VDC voltage when the input voltage is above the Power-On Reset (POR) level and can be used as the power-present indication. This pin is capable of sourcing a 2mA current, so it can also be used to bias external circuits. The STATUS pin is an open-drain logic output that turns LOW at the beginning of a charge cycle until the End-of-Charge (EOC) condition is qualified. The EOC condition is when the battery voltage rises above the recharge threshold and the charge current falls below a preset of a tenth of the programmed charge current. Once the EOC condition is qualified, the STATUS output rises to HIGH and is latched. The latch is released at the beginning of a charge or recharge cycle. The open-drain FAULT pin turns low when any fault conditions occur. The fault conditions include the external battery temperature fault, a charge time fault, or the battery removal.

PCB Layout Recommendations

The ISL78693 internal thermal foldback function limits the charge current when the internal temperature reaches approximately +100°C. In order to maximize the current capability, it is very important that the exposed pad under the package is properly soldered to the board and is connected to other layers through thermal vias. More thermal vias and more copper attached to the exposed pad usually result in better thermal performance. On the other hand, the number of vias is limited by the size of the pad. The 3x3 DFN package allows nine vias to be placed in three rows. Since the pins on the 3x3 DFN package are on only two sides, as much top layer copper as possible should be connected to the exposed pad to minimize the thermal impedance. Refer to ["PCB Layout"](#) starting on [page 7](#).

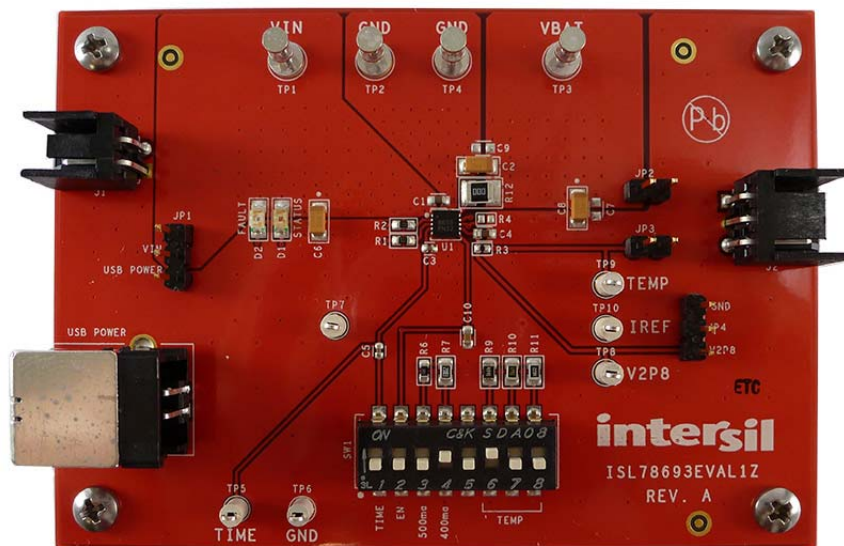


FIGURE 3. TOP VIEW

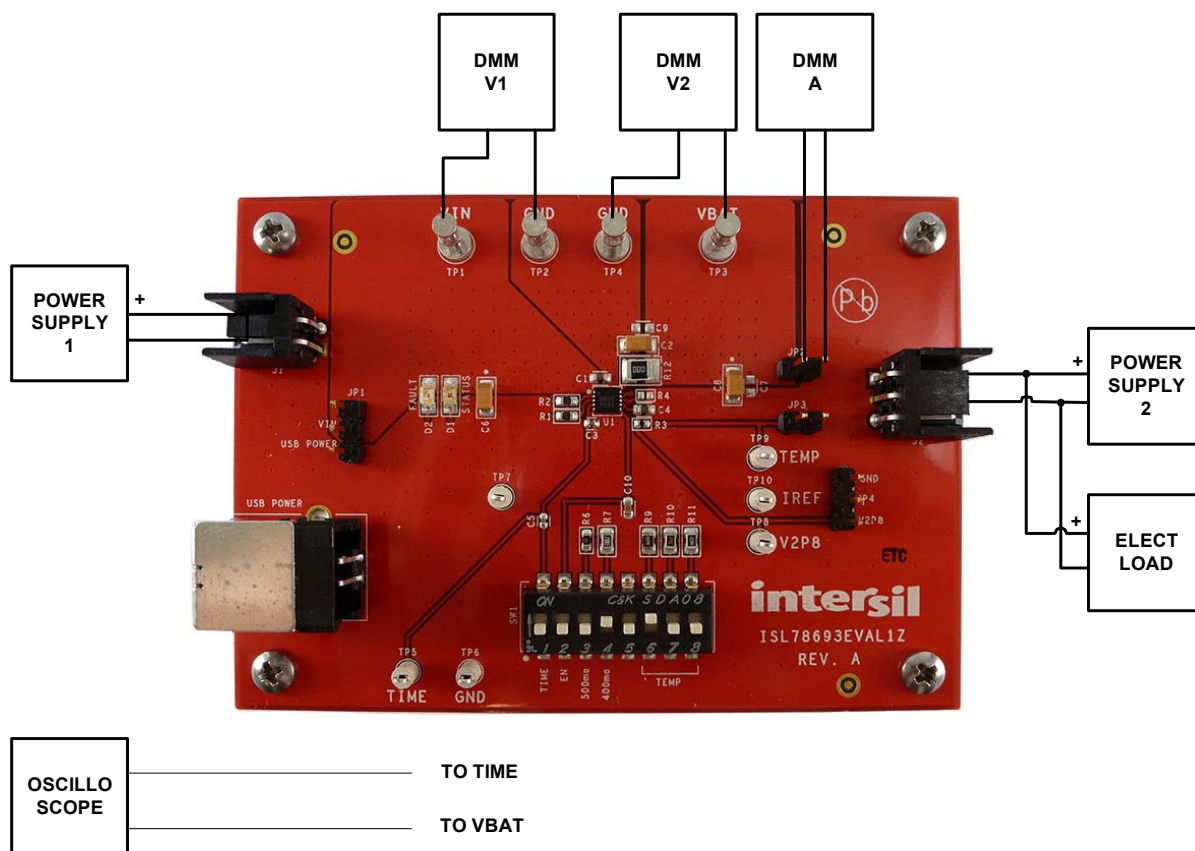


FIGURE 4. CONNECTION OF INSTRUMENTS

The schematic diagram illustrates the ISL78693ARZ evaluation board. It features a USB input (J1) connected to VIN and GND1, a power switch (SW1) with a 100k resistor (R11) and a 10uF capacitor (C10), and a USB output (J2) connected to VBAT and GND2. The ISL78693ARZ IC is connected to various pins: VIN, FAULT, STATUS, TIME, GND, EPAD, VBAT, TEMP, IREF, V2P8, EN, and EPAD. The output is connected to a USB port (J2) through a 100k resistor (R11) and a 10uF capacitor (C10). The board also features a temperature sensor (TP9) and a current sense resistor (R10).

| SW1 | Pin | Function |
|-----|-------|----------|
| 1 | TIME | TIME |
| 2 | EN | EN |
| 3 | 500MA | 500MA |
| 4 | 400MA | 400MA |
| 5 | NA | NA |
| 6 | TEMP | TEMP |
| 7 | TEMP | TEMP |
| 8 | TEMP | TEMP |

FIGURE 5. ISL78693EVAL1Z SCHEMATIC

Bill of Materials

| QTY | UNITS | REFERENCE DESIGNATOR | DESCRIPTION | MANUFACTURER | MANUFACTURER PART NUMBER |
|-----|-------|----------------------|--|----------------|--------------------------|
| 1 | ea | | PWB-PCB, ISL78693EVAL1Z, REVA, ROHS | | ISL78693EVAL1ZREVAPCB |
| 2 | ea | C1, C4 | CAP, SMD, 0603, 1.0µF, 16V, 10%, X7R, ROHS | TDK | C1608X7R1C105K |
| 1 | ea | C3 | CAP, SMD, 0402, 0.015µF, 16V, 10%, X7R, ROHS | PANASONIC | ECJ-0EB1C153K |
| 1 | ea | C5 | CAP, SMD, 0402, 0.018µF, 16V, 10%, X7R, ROHS | MURATA | GRM155R71C183KA01D |
| 1 | ea | C10 | CAP, SMD, 0603, 0.01µF, 16V, 10%, X7R, ROHS | VENKEL | C0603X7R160-103KNE |
| 0 | ea | C7, C9 | CAP, SMD, 0603, DNP-PLACE HOLDER, ROHS | | |
| 3 | ea | C2, C6, C8 | CAP-TANT, LOW ESR, SMD, A, 10µF, 16V, 20%, 200mΩ, ROHS | AVX | TCJA106M016R0200 |
| 4 | ea | TP1-TP4 | CONN-TURRET, TERMINAL POST, TH, ROHS | KEYSTONE | 1514-2 |
| 1 | ea | J1 | CONN-HEADER, 2P, SHROUDED, 2.54mm, RT. ANGLE, ROHS | AMP/TYCO | 2-644803-2 |
| 1 | ea | J2 | CONN-HEADER, 3P, SHROUDED, 2.54mm, RT. ANGLE, ROHS | AMP/TYCO | 2-644803-3 |
| 1 | ea | J3 | CONN-TYPE B RECEPTACLE, TH, 4 POS, RT. ANGLE, ROHS | AMP/TYCO | 292304-1 |
| 6 | ea | TP5-TP10 | CONN-MINI TEST POINT, VERTICAL, WHITE, ROHS | KEYSTONE | 5002 |
| 2 | ea | JP1, JP4 | CONN-HEADER, 1x3, BREAKAWY 1x36, 2.54mm, ROHS | BERG/FCI | 68000-236HLF |
| 2 | ea | JP2, JP3 | CONN-HEADER, 1x2, RETENTIVE, 2.54mm, 0.230x0.120, ROHS | BERG/FCI | 69190-202HLF |
| 1 | ea | D2 | LED, SMD, 1206, RED, 30mA, 60mW, 17mcd, ROHS | DIALIGHT | 597-3111-407F |
| 1 | ea | D1 | LED, SMD, 1206, GREEN, 75mW, 3mcd, Pb-Free | DIALIGHT | 597-3311-407F |
| 1 | ea | U1 | IC-4.1V LI-ION/LI POLYMER CHARGER, 10LD DFN 3x3, ROHS | INTERSIL | ISL78693ARZ |
| 1 | ea | R3 | RES, SMD, 0402, 10k, 1/16W, 1%, TF, ROHS | PANASONIC | ERJ-2RKF1002X |
| 0 | ea | R4 | RES, SMD, 0402, DNP, DNP, DNP, TF, ROHS | | |
| 2 | ea | R1, R2 | RES, SMD, 0603, 220Ω, 1/10W, 1%, TF, ROHS | YAGEO | 9C06031A2200FKHFT |
| 1 | ea | R6 | RES, SMD, 0805, 158k, 1/8W, 1%, TF, ROHS | YAGEO | RC0805FR-07158KL |
| 1 | ea | R11 | RES, SMD, 0805, 18.2k, 1/10W, 1%, TF, ROHS | PANASONIC | ERJ-6ENF1822V |
| 1 | ea | R7 | RES, SMD, 0805, 200k, 1/8W, 1%, TF, ROHS | VENKEL | CR0805-8W-2003FT |
| 1 | ea | R10 | RES, SMD, 0805, 499Ω, 1/8W, 1%, TF, ROHS | YAGEO | RC0805FR-07499RL |
| 1 | ea | R9 | RES, SMD, 0805, 4.99k, 1/8W, 1%, TF, ROHS | PANASONIC | ERJ-6ENF4991V |
| 1 | ea | R12 | RES, SMD, 1206 0Ω, 1/4W, 1%, TF, ROHS | PANASONIC | ERJ-8GEY0R00V |
| 1 | ea | SW1 | SWITCH-DIP, SMD, 8POS, TOP SLIDE, SPST, 24V, ROHS | C&K COMPONENTS | SDA08H1SBD |
| 4 | ea | Four corners | SCREW, 4-40X1/4in, PAN, SS, PHILLIPS | | |
| 4 | ea | Four corners | STANDOFF, 4-40X3/4in, F/F, HEX, ALUMINUM, ROHS | KEYSTONE | 2204 (.250 OD) |

PCB Layout

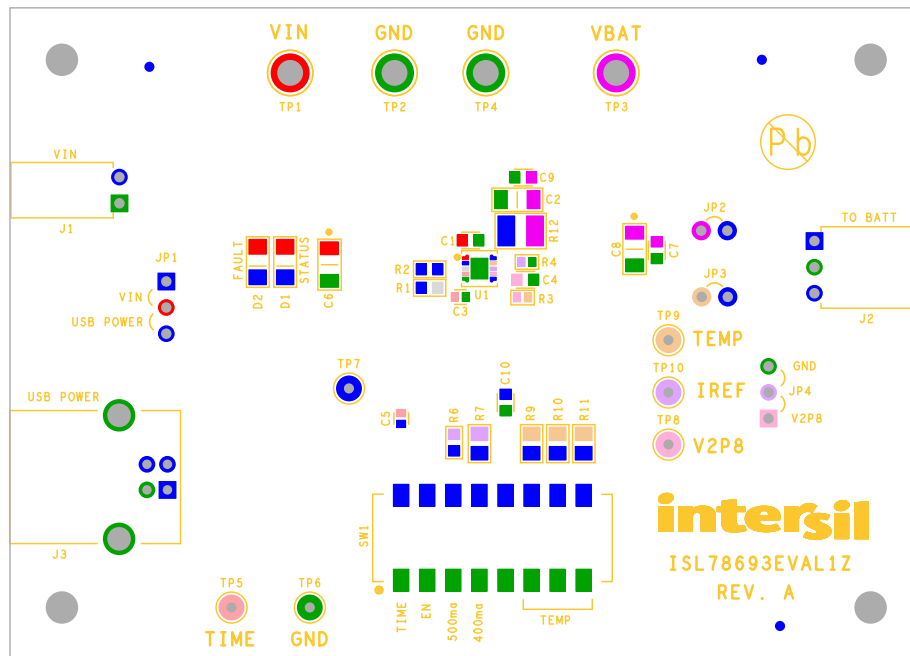


FIGURE 6. SILK LAYER TOP

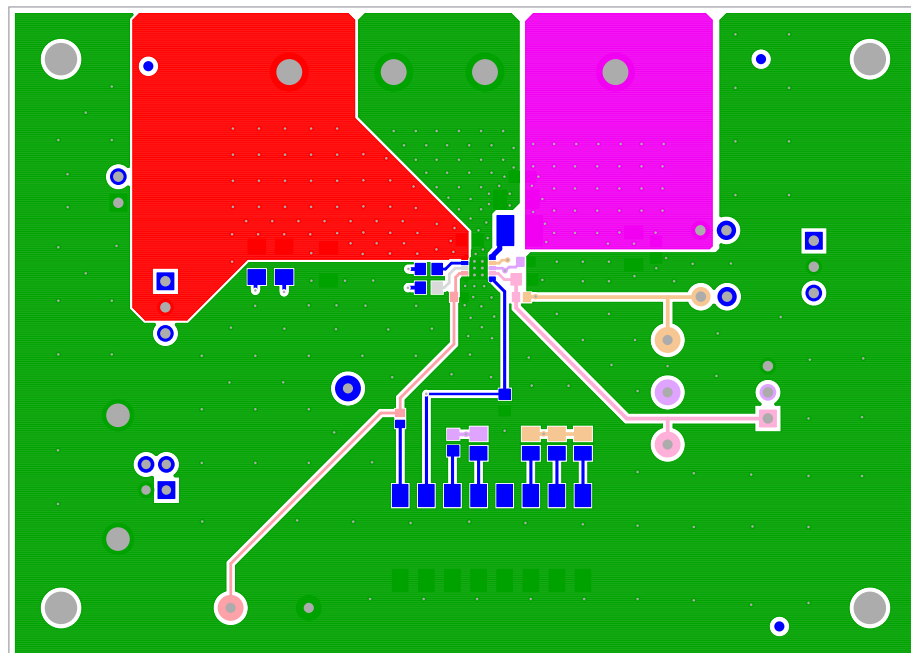


FIGURE 7. TOP LAYER COMPONENT SIDE

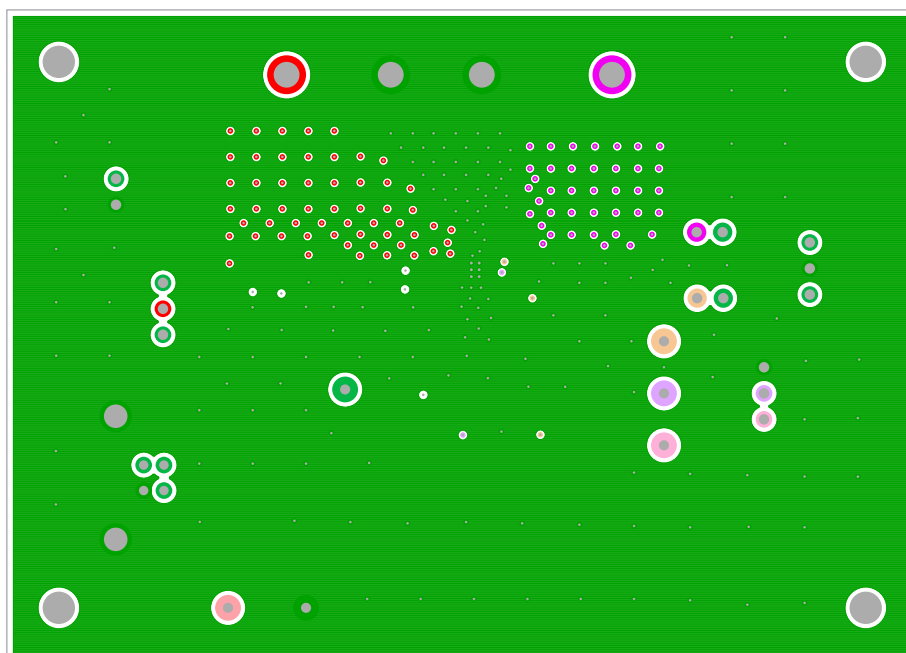
PCB Layout (Continued)

FIGURE 8. INTERNAL (LAYER 2)

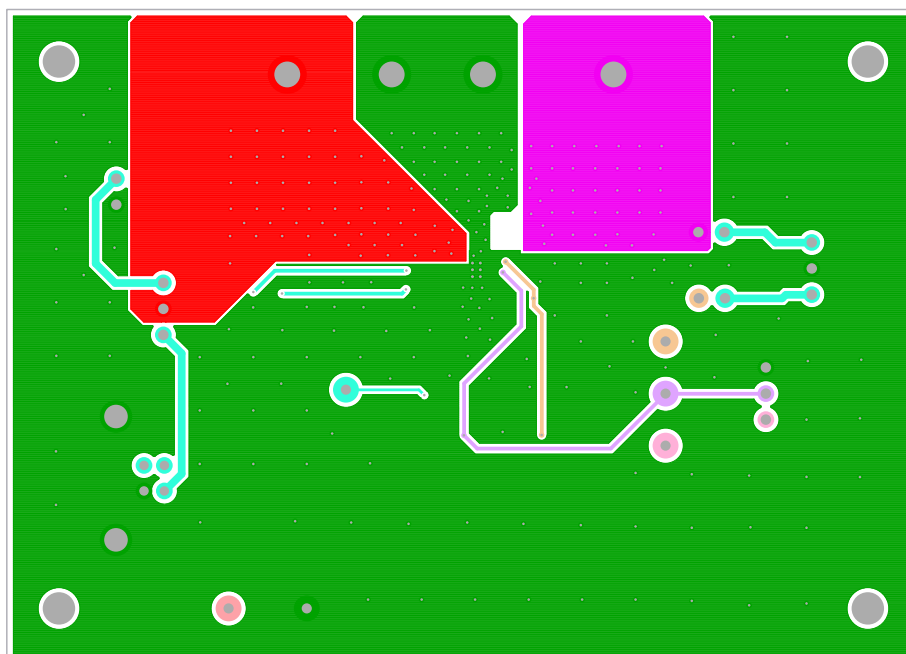


FIGURE 9. INTERNAL (LAYER 3)

PCB Layout (Continued)

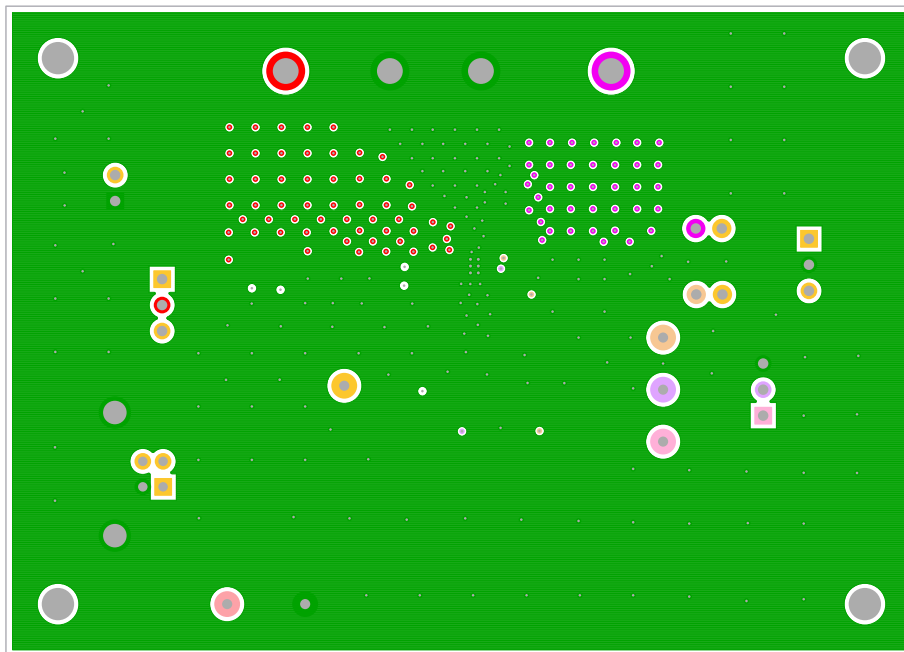


FIGURE 10. BOTTOM LAYER SOLDER SIDE

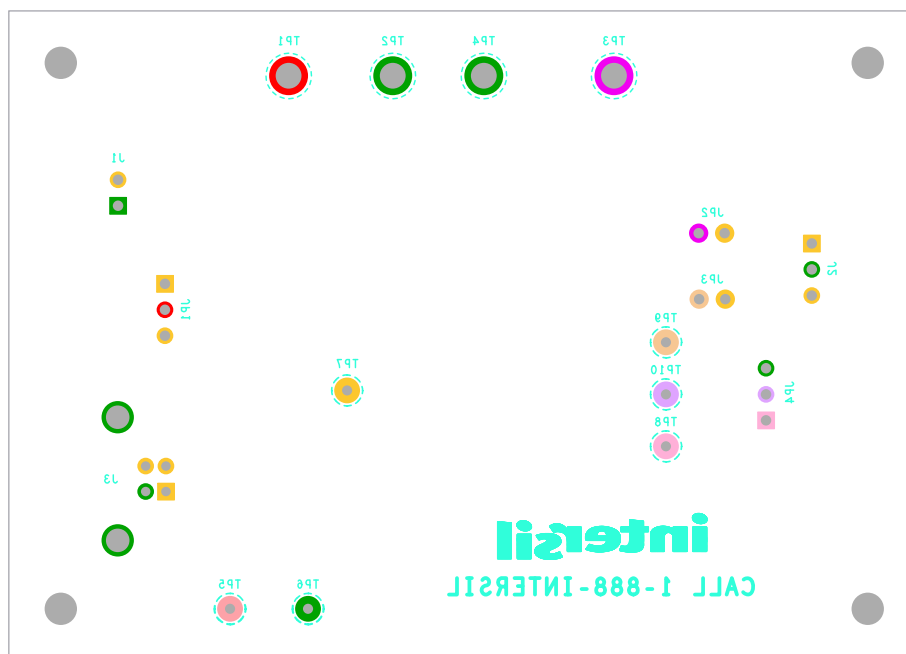


FIGURE 11. SILKSCREEN BOTTOM (TOP VIEW)

Typical Performance Curves

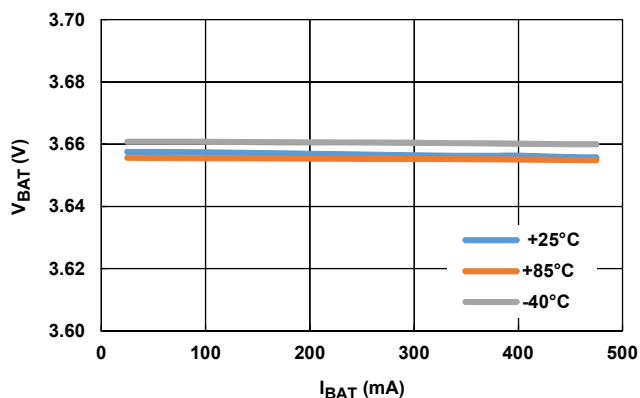


FIGURE 12. VOLTAGE REGULATION vs CHARGE CURRENT

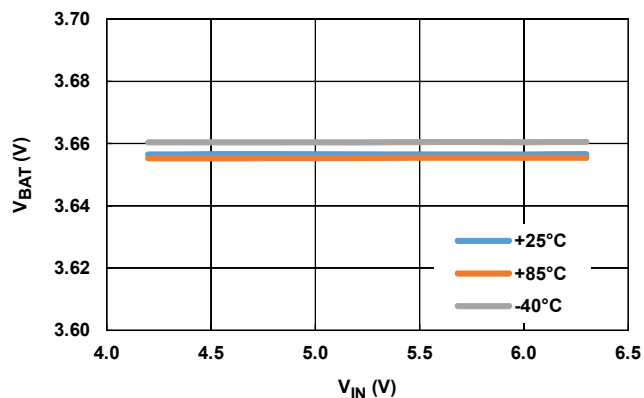
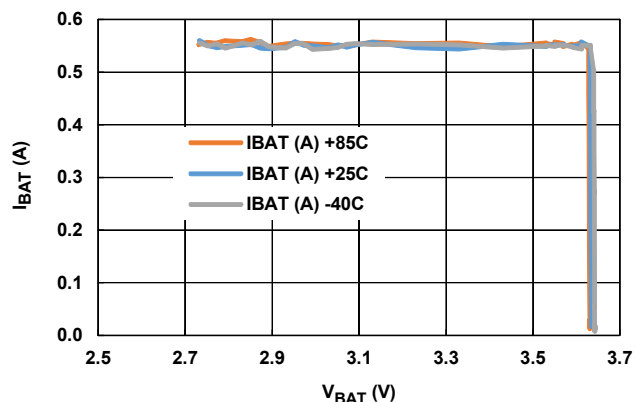
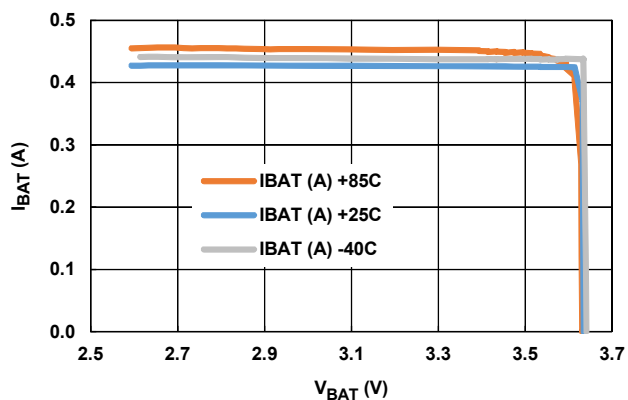
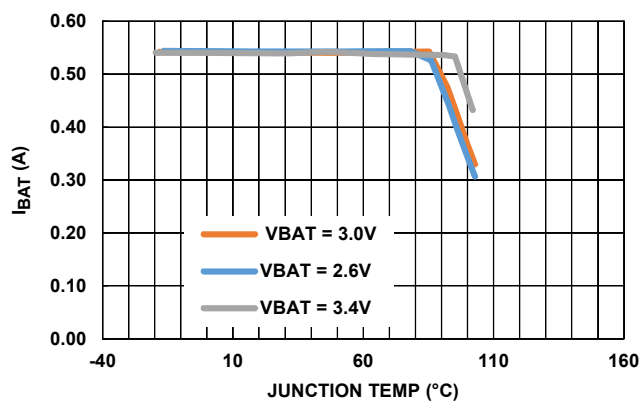
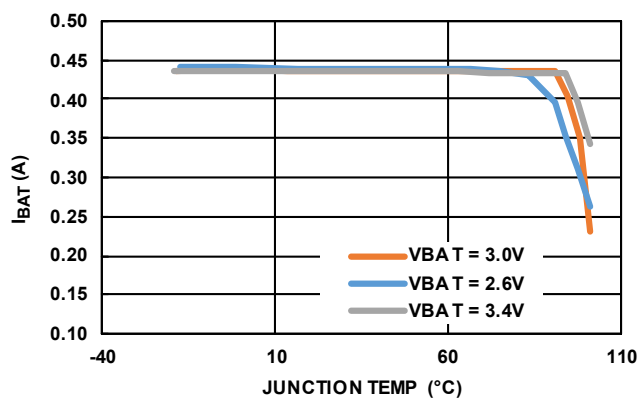


FIGURE 13. NO LOAD VOLTAGE vs TEMPERATURE

FIGURE 14. CHARGE CURRENT vs OUTPUT VOLTAGE, $R_{IREF} = 158k$ FIGURE 15. CHARGE CURRENT vs OUTPUT VOLTAGE, $R_{IREF} = 200k$ FIGURE 16. CHARGE CURRENT vs JUNCTION TEMPERATURE,
 $R_{IREF} = 158k$ FIGURE 17. CHARGE CURRENT vs JUNCTION TEMPERATURE,
 $R_{IREF} = 200k$

Typical Performance Curves

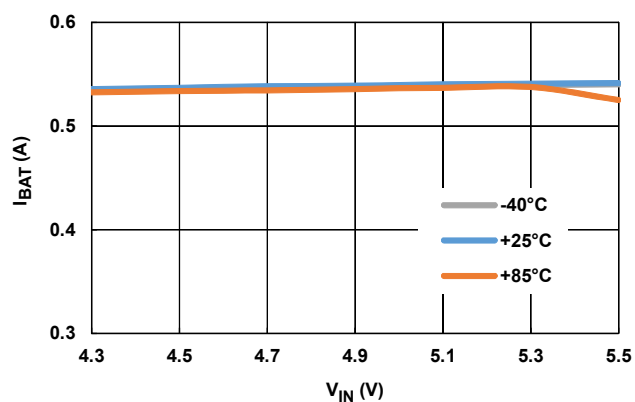


FIGURE 18. CHARGE CURRENT vs INPUT VOLTAGE, $V_{BAT} = 3V$,
 $R_{IREF} = 158k$

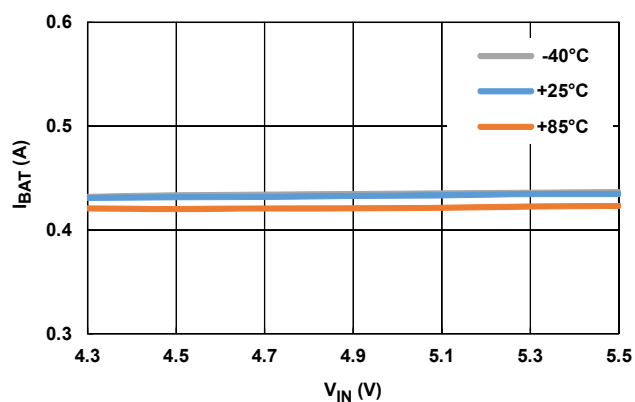


FIGURE 19. CHARGE CURRENT vs INPUT VOLTAGE, $V_{BAT} = 3V$,
 $R_{IREF} = 200k$

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.
Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-651-700, Fax: +44-1628-651-804

Renesas Electronics Europe GmbH
Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852-2886-9022

Renesas Electronics Taiwan Co., Ltd.
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

Renesas Electronics Singapore Pte. Ltd.
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5338



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.