





# Contents

|   |    |
|---|----|
| 1 Important Notice . . . . .                                    | 3  |
| 2 Getting Started . . . . .                                     | 4  |
| 3 Getting to Know the Hardware . . . . .                        | 5  |
| 4 Installing the Software and Setting up the Hardware . . . . . | 15 |
| 5 Schematic . . . . .   | 18 |
| 6 Board Layout. . . . .   | 21 |
| 7 Bill of Materials . . . . .                                   | 23 |
| 8 References . . . . .  | 25 |
| 9 Revision History . . . . .                                    | 26 |

# 1 Important Notice

Freescale provides the enclosed product(s) under the following conditions:

This evaluation kit is intended for use of ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY. It is provided as a sample IC pre-soldered to a printed circuit board to make it easier to access inputs, outputs, and supply terminals. This evaluation kit may be used with any development system or other source of I/O signals by simply connecting it to the host MCU or computer board via off-the-shelf cables. Final device in an application will be heavily dependent on proper printed circuit board layout and heat sinking design as well as attention to supply filtering, transient suppression, and I/O signal quality.

The goods provided may not be complete in terms of required design, marketing, and or manufacturing related protective considerations, including product safety measures typically found in the end product incorporating the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. In order to minimize risks associated with the customers applications, adequate design and operating safeguards must be provided by the customer to minimize inherent or procedural hazards. For any safety concerns, contact Freescale sales and technical support services.

Should this evaluation kit not meet the specifications indicated in the kit, it may be returned within 30 days from the date of delivery and will be replaced by a new kit.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typical", must be validated for each customer application by customer's technical experts.

Freescale does not convey any license under its patent rights nor the rights of others. Freescale products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale product could create a situation where personal injury or death may occur.

Should the Buyer purchase or use Freescale products for any such unintended or unauthorized application, the Buyer shall indemnify and hold Freescale and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale was negligent regarding the design or manufacture of the part. Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2015

## 2 Getting Started

### 2.1 Kit Contents/Packing List

The KITMPC5744DBEVM contents include:

- Assembled and tested evaluation board/module in anti-static bag.
- The board preloaded with demo software
- Warranty card

### 2.2 Jump Start

Freescale's analog product development boards help to easily evaluate Freescale products. These tools support analog mixed signal and power solutions including monolithic ICs using proven high-volume SMARTMOS mixed signal technology, and system-in-package devices utilizing power, SMARTMOS and MCU dies. Freescale products enable longer battery life, smaller form factor, component count reduction, ease of design, lower system cost and improved performance in powering state of the art systems.

- Go to [www.freescale.com/analogtools](http://www.freescale.com/analogtools)
- Locate your kit
- Review your Tool Summary Page
- Look for



- Download documents, software and other information

Once the files are downloaded, review the user guide in the bundle. The user guide includes setup instructions, BOM and schematics. Jump start bundles are available on each tool summary page with the most relevant and current information. The information includes everything needed for design.

### 2.3 Required Equipment and Software

KITMPC5744DBEVM is an extensible board for the KIT33908MBEVBE and cannot operate separately. Equipment list is considered for operation with the KIT33908MBEVBE uniquely. We can distinguish two modes of operation with this platform.

Recommended equipment for software development:

- Power supply 12 V/3.0 A
- USB A-B cable
- Debugger for the MPC5744P MCU
- USB-enabled PC

Recommended equipment for hardware development (validation of Analog functionality etc.):

- Power supply: typically 12 V/3.0 A
- USB A-B cable
- USB-enabled PC

Recommended software:

- MC33907\_8 Graphical User Interface (GUI)  
([http://www.freescale.com/webapp/sps/site/prod\\_summary.jsp?code=KIT33907AEEVB&fosp=1&tab=Design\\_Tools\\_Tab](http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=KIT33907AEEVB&fosp=1&tab=Design_Tools_Tab))
- Greenhills IDE for Qorivva MCU family installed ([http://www.ghs.com/products/MULTI\\_IDE.html](http://www.ghs.com/products/MULTI_IDE.html))

### 2.4 System Requirements

The kit requires the following to function properly with the software:

- x86 or compatible processor
- Windows 7, 32-bit, Service Pack 1
- .NET Framework 4.0 or higher

### 3 Getting to Know the Hardware

#### 3.1 Board Overview

The KITMPC5744DBEVM evaluation board is populated with a MPC5744P safety oriented microcontroller from the Qorivva family. The KITMPC5744DBEVM is a daughter board that extends the KIT33908MBEVBE kit (populated with MC33908 System Basis chip). Together, these two kits create a platform that forms a base for a Safety Ecosystem, which can reach the highest level in functional safety as defined by the ISO26262. The whole platform is shown in Figure 2.

The daughter board includes the MCU and external components necessary for its basic operation as the decoupling capacitors, crystal oscillator, reset circuitry, LED indicators, etc. Power supply and intelligent power management including enhanced safety features is provided to the daughter board from the mother board. Due to this, the daughter board cannot operate separately and it has to be plugged on the mother board (using four 80-pin connectors).

The daughter board is delivered with a demo software already loaded in the Flash memory of the MPC5744P. This code provides algorithms and procedures necessary to initialize and operate the MC33908 correctly. See the KT MPC5744DBSWUG - Basic SW Drivers for MPC5744P.

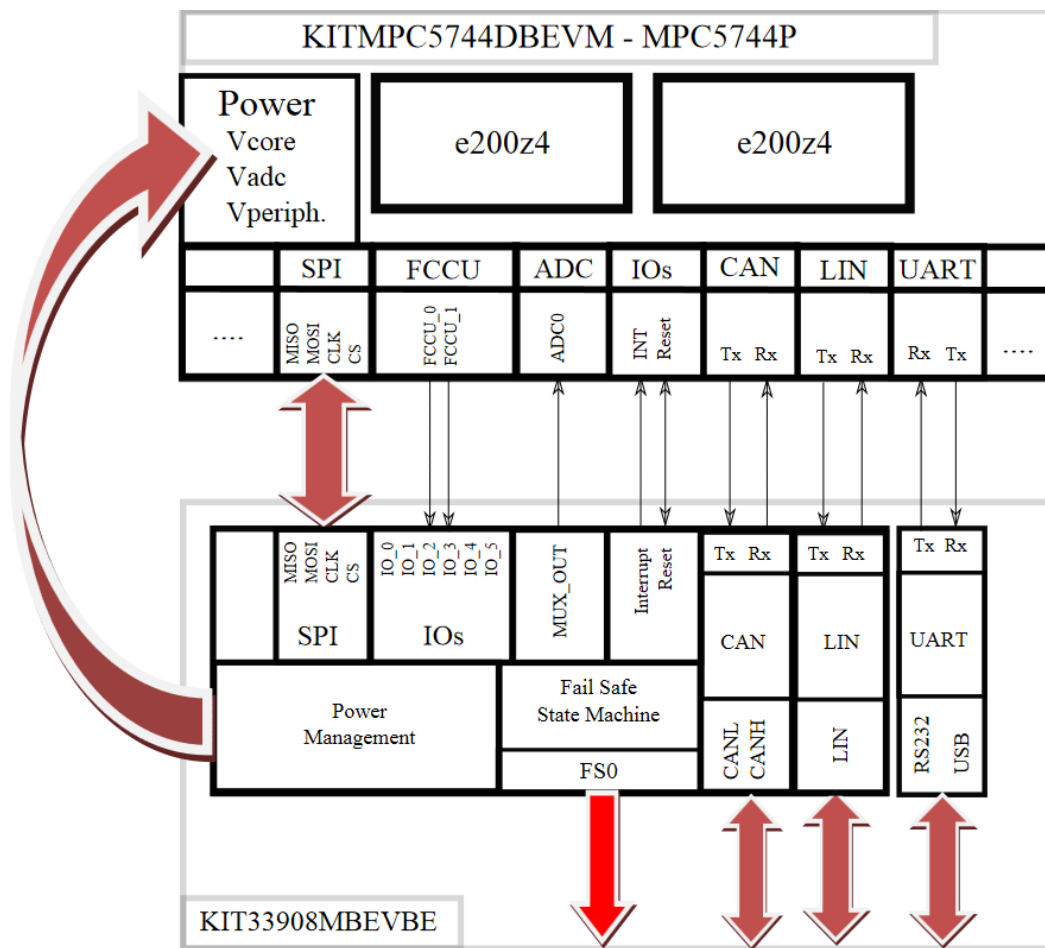


Figure 2. Interfacing with the KIT33908MBEVBE

## 3.2 Board Features

The board features are as follows:

- Qorivva MPC5744P 32-bit microcontroller with safety architecture
- Preloaded software demo for the MC33908 and MPC5744P platform
- Designed to be plugged onto the KIT33908MBEVBE Evaluation Board
- Separated power supplies for the core and the ADC
- High precision VCCA power supply connected to the ADC reference voltage
- Equipped by Nexus and JTAG for simple debug
- Possible to connect USB/RS232 through the mother board

## 3.3 Device Features

This evaluation board features the following Freescale products:

**Table 1. Device Features**

| Device   | Description   | Features   |
|----------|---|--|
| MPC5744P | The MPC5744P is a Qorivva 32-bit embedded Power Architecture <sup>®</sup> MCU family designed for automotive and industrial functional safety applications. | <ul style="list-style-type: none"> <li>• Dual e200 Z4 CPU architecture</li> <li>• Dual processing spheres including; CPU, DMA, interrupt controller, crossbar, and MPU for logic level fault detection</li> <li>• Two statically configurable modes of operation: Lockstep operation (redundant processing and calculations) and dual parallel mode (independent core operation)</li> <li>• Fault collection unit, which monitors and manages fault events</li> <li>• Error correction coding on RAM and flash memory allows detection/correction of memory errors</li> <li>• Safety oriented MCU to achieve ISO 26262 functional safety standard certification</li> <li>• Robust communications with FlexRay<sup>™</sup> and CAN/safety port high-speed low latency messaging</li> <li>• Cross-triggering unit coordinates ADC, timer, and PWM generation and minimizes CPU interrupt load</li> <li>• Peripheral modules (ADCs, eTimers, ...)</li> <li>• This product is included in Freescale's product longevity program, with assured supply for a minimum of 15 years after launch</li> </ul> |
| MC33908  | The MC33908 System Basis Chip (SBC), a Freescale Energy-Efficient solution, provides power to MCUs and other system loads and optimizes energy consumption. | <ul style="list-style-type: none"> <li>• Flexible DC/DC pre-regulator allowing Buck or Buck-Boost</li> <li>• Optional Boost to improve system availability at cranking</li> <li>• Multiple output power supplies from 0.5 A up to 2.0 A</li> <li>• DC/DC voltage regulator to supply MCU core up to 1.5 A</li> </ul>   |

### 3.4 Board Description

The evaluation board comes with a mounted Freescale MPC5744P microcontroller. The board-level logic diagram is featured in [Figure 3](#).

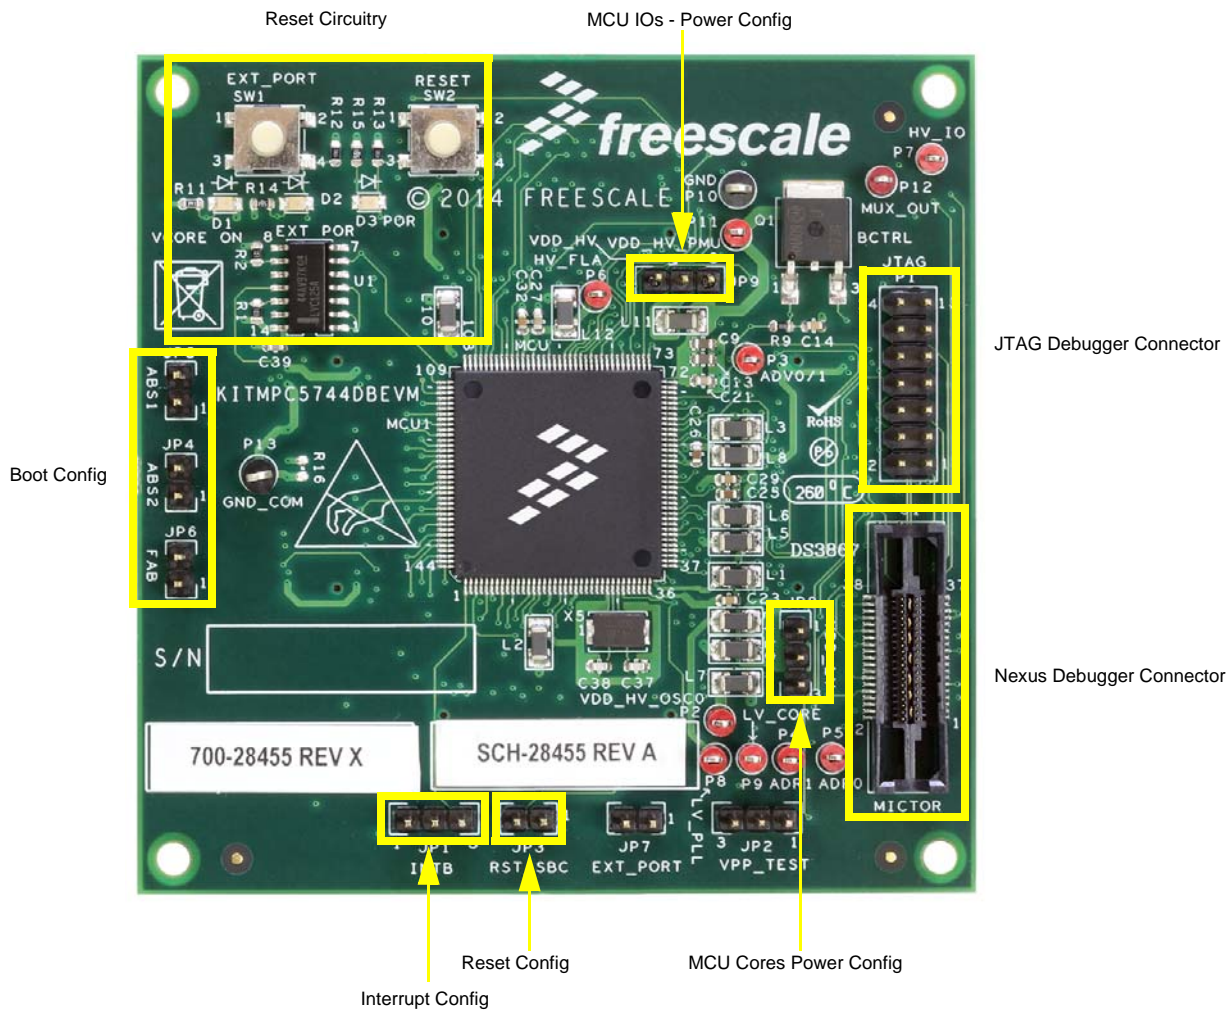


Figure 3. KITMPC5744DBEVM Board Description

### 3.4.1 LED Definitions

Table 2 LEDs are provided as visual output devices for the KITMPC5744DBEVM evaluation board:

Table 2. LEDs

| Schematic Label | Signal/Rail | Description  |
|-----------------|-------------|--|
| D1              | VCORE_ON    | V <sub>CORE</sub> power supply from the mother board |
| D2              | EXT_POR     | External Power On Reset                              |
| D3              | POR         | Functional reset (connected to the mother board)     |

### 3.4.2 Test Point Definitions

Table 3 test-point jumpers provide access to signals:

Table 3. Test Points

| Schematic Label | Signal/Rail | Description   |
|-----------------|-------------|---|
| P2              | VDD_HV_OSC0 | High voltage power supply for the internal oscillator |
| P3              | ADV0/1      | High voltage supply for the ADC modules               |
| P4              | ADR1        | ADC1 High reference voltage                           |
| P5              | ADR0        | ADC0 High reference voltage                           |
| P6              | HV_FL A     | Power Supply and decoupling pin for flash memory      |
| P7              | HV_IO       | High voltage Power supply for the I/Os                |
| P8              | LV_PLL      | Low voltage power supply for the PLL module           |
| P9              | LV_CORE     | Low voltage power Supply                              |
| P10             | GND         | Ground  |
| P11             | VDD_HV_PMU  | PMU high voltage Supply                               |
| P12             | MUX_OUT     | Analog signal coming from the Mother board            |
| P13             | GND_COM     | Analog ground   |

### 3.4.3 Connector Definitions

Table 4. Connectors








| Connector | Description                   |
|-----------|-------------------------------|
| P1        | JTAG debugger interface       |
| J1        | Nexus debugger interface      |
| X1        | Interface to the mother board |
| X2        | Interface to the mother board |
| X3        | Interface to the mother board |
| X4        | Interface to the mother board |




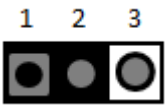

### 3.4.4 Jumper and Switch Definitions

Table 5 defines the evaluation board jumper positions and explains their functions. For each jumper a default setting is shown on the left side.

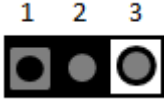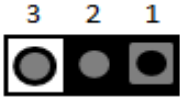Table 5. Jumpers and Switches
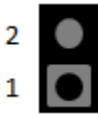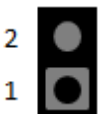
| Schematic Label   | Setting   | Description  |
|---|---|--|
| JP1   | <b>INTb_SEL – selection of the MCU interrupt pin</b>  |  |
|    | 1-2   | INTb pin from the MC3390x is connected to a standard EIRQ interrupt pin of the MCU (PA0) |
|   | 2-3   | INTb pin from MC3390x is connected to the NMI (Non Maskable Interrupt) pin of the MCU    |
| JP2   | <b>VPP_TEST – SoC Test Mode, See Table 6 for truth table</b>  |  |
|    | 1-2   | VPP_TEST pin is connected to the GND (Normal operation)                                  |
|   | 2-3   | VPP_TEST pin is connected the V <sub>DD_HV_IO</sub>                                      |
| JP3   | <b>RST_SBC – Connects RST coming from the SBC to the functional RESET of the MCU</b>                          |  |
|    |   |  |
| JP4   | <b>ABS2 – puts Alternate Boot Selector bit 1 to the Ground (for all possible configurations see Table 6).</b> |  |
|  |   |  |
| JP5   | <b>ABS1 – puts Alternate Boot Selector bit0 to the Ground (for all possible configurations see Table 6).</b>  |  |
|  |   |  |
| JP6   | <b>FAB – deactivates the Force Alternate Boot Mode (for all possible configurations see Table 6).</b>         |  |
|  |   |  |
| JP7   | <b>EXT_PORT – connects external Power On Reset of the MCU to an external port (to the mother board)</b>       |  |
|  |   |  |

**Table 5. Jumpers and Switches (continued)**

| Schematic Label  | Setting  | Description  |
|--|--|--|
| JP8  | <b>VDD_LV – power supply for the PLL and cores (<math>V_{DD\_LV\_PLL}</math> and <math>V_{DD\_LV\_CORE}</math>)</b>                  |  |
|   | 1-2  | The $V_{CORE}$ coming from the motherboard is used directly – if this option is used, <b>the <math>V_{CORE}</math> on the motherboard must be configured to 1.2 V, otherwise the MCU can be damaged!</b> |
|  | 2-3  | The $V_{DD\_LV\_xxx}$ will be supplied from $V_{CORE}$ coming from motherboard using an external ballast to generate 1.2 V ( $V_{CORE}$ is configured on the motherboard to 3.3 V).                      |
| JP9  | <b>VDD_HV – power supply for the MCU's IOs (<math>V_{DD\_HV\_IO}</math> and some other peripherals – see schematics for details)</b> |  |
|   | 1-2  | The $V_{CORE}$ is used (is configured to 3.3 V)  |
|  | 2-3  | The $V_{CCA}$ is used  |
| JP10   | <b>ADV0/1 – power supply for the ADC module</b>  |  |
|  | 1-2  | The $V_{CORE}$ is used   |
|  | 3-4  | The $V_{CCA}$ is used  |

**Table 6. Boot Mode Truth Table**

| FAB | ABS[2,0] | Boot Mode |
|-----|----------|-----------|
| 1   | 00       | UART      |
| 1   | 01       | CAN       |

### 3.4.5 Reset Circuit

In the safety applications, the RESET pin of the MCU is controlled directly by the MC33907\_8. The debugger must have a full control over the RESET pin, for debugging purposes. Reset signals coming from the JTAG and Nexus debug interfaces are connected directly to the reset of the MC33907\_8, and this common signal ("RESET\_PWSBC\_B") is connected to the functional reset of the MCU. This means any of the three signals can cause a functional reset of the MCU (see Figure 4 for details).

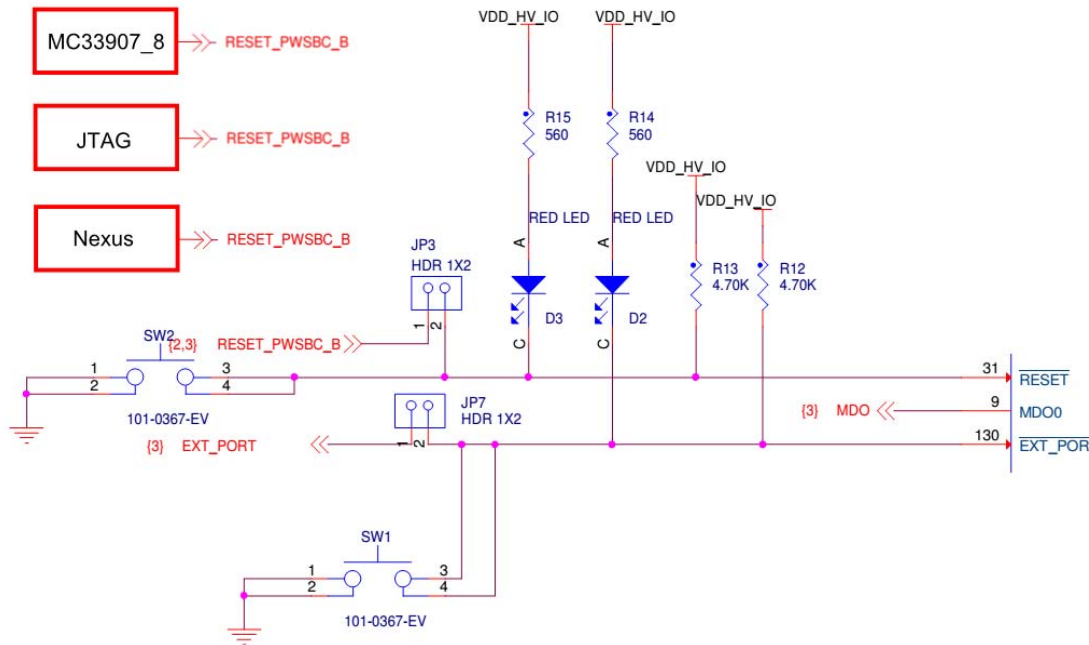


Figure 4. Reset Circuit

## 3.5 Interfacing with the Mother Board

### 3.5.1 Power Supplies

Power supply (power management) for the daughter board is completely provided by the mother board. Consequently, the mother board must be configured in a compatible way.

**Caution:**

Incorrect configuration of power supplies can damage the MCU.

The flexibility of the MC33907\_8 power management circuit provides more possible configurations in how to interface with the MPC5744P. Two of them are described with the following.

1. The first configuration provides directly 1.2 V from the MC33907\_8 to the VDD\_LV\_XX (for the cores and the PLL). In this configuration, the external ballast populated on the daughter board is not used. This provides a more efficient solution, 1.2 V will be provided directly from the DC-DC and not from an LDO (power is saved normally dissipated by the external ballast transistor). Configuration is described in Table 7.
2. In the second case, the reference voltage for the ADC is configured to 5.0 V. The rest of the circuits are supplied from the VCORE which is configured to provide 3.3 V. All the low voltage power supplies (VDD\_LV\_XX) are supplied from external ballast providing 1.2 V from the VCORE (see Table 8).

**Table 7. Power Supply Settings - scenario 1**

| V <sub>CCA</sub>         | V <sub>CORE</sub>       | KIT33908MBEVBE Settings |                        |           |  | KITMPC5744DBEVM Settings |        |        |
|--------------------------|-------------------------|-------------------------|------------------------|-----------|--|--------------------------|--------|--------|
|                          |                         | JP104                   | JP114                  | JP122     | S101   | JP8                      | JP9    | JP10   |
| 3.3 V                    | 1.2 V                   | VCORE_EN                | VCORE_SEL              | VDDIO_SEL | VCCA/VAUX  | VDD_LV                   | VDD_HV | HV_ADV |
|                          |                         | connected               | 3-4                    | 1-2       | 1-8 (V <sub>AUX</sub> = 3.3 V)<br>or<br>3-6 (V <sub>AUX</sub> = 5.0 V) | 1-2                      | 2-3    | 2-3    |
|                          |                         | V <sub>DD_HV_PMU</sub>  | V <sub>DD_LV_COR</sub> |           |  |                          |        |        |
| V <sub>DD_HV_IO</sub>    | V <sub>DD_LV_CORx</sub> |                         |                        |           |  |                          |        |        |
| V <sub>DD_HV_FL A</sub>  | V <sub>DD_LV_PLL</sub>  |                         |                        |           |  |                          |        |        |
| V <sub>DD_HV_OSC</sub>   |                         |                         |                        |           |  |                          |        |        |
| V <sub>DD_HV_ADRE0</sub> |                         |                         |                        |           |  |                          |        |        |
| V <sub>DD_HV_ADRE1</sub> |                         |                         |                        |           |  |                          |        |        |
| V <sub>DD_HV_ADV</sub>   |                         |                         |                        |           |  |                          |        |        |

**Table 8. Power Supply Settings - scenario 2**

| V <sub>CCA</sub>         | V <sub>CORE</sub>       | V <sub>CORE</sub> +<br>Ext. Ballast | KIT33908MBEVBE Settings  |                        |                        |  | KITMPC5744DBEVM Settings |        |        |
|--------------------------|-------------------------|-------------------------------------|--------------------------|------------------------|------------------------|--|--------------------------|--------|--------|
|                          |                         |                                     | JP104                    | JP114                  | JP122                  | S101   | JP8                      | JP9    | JP10   |
| 5.0 V                    | 3.3 V                   | 1.2 V                               | VCORE_EN                 | VCORE_SEL              | VDDIO_SEL              | VCCA/VAUX  | VDD_LV                   | VDD_HV | HV_ADV |
|                          |                         |                                     | connected                | 1-2                    | 2-3                    | 2-7 (V <sub>AUX</sub> =<br>5.0 V)<br>or<br>4-5 (V <sub>AUX</sub> =<br>3.3 V) | 2-3                      | 1-2    | 1-2    |
|                          |                         |                                     | V <sub>DD_HV_ADRE0</sub> | V <sub>DD_HV_PMU</sub> | V <sub>DD_LV_COR</sub> |  |                          |        |        |
| V <sub>DD_HV_ADRE1</sub> | V <sub>DD_HV_IO</sub>   | V <sub>DD_LV_CORx</sub>             |                          |                        |                        |  |                          |        |        |
|                          | V <sub>DD_HV_FL A</sub> | V <sub>DD_LV_PLL</sub>              |                          |                        |                        |  |                          |        |        |
|                          | V <sub>DD_HV_OSC</sub>  |                                     |                          |                        |                        |  |                          |        |        |
|                          | V <sub>DD_HV_ADV</sub>  |                                     |                          |                        |                        |  |                          |        |        |

### Mother Board - Power Management

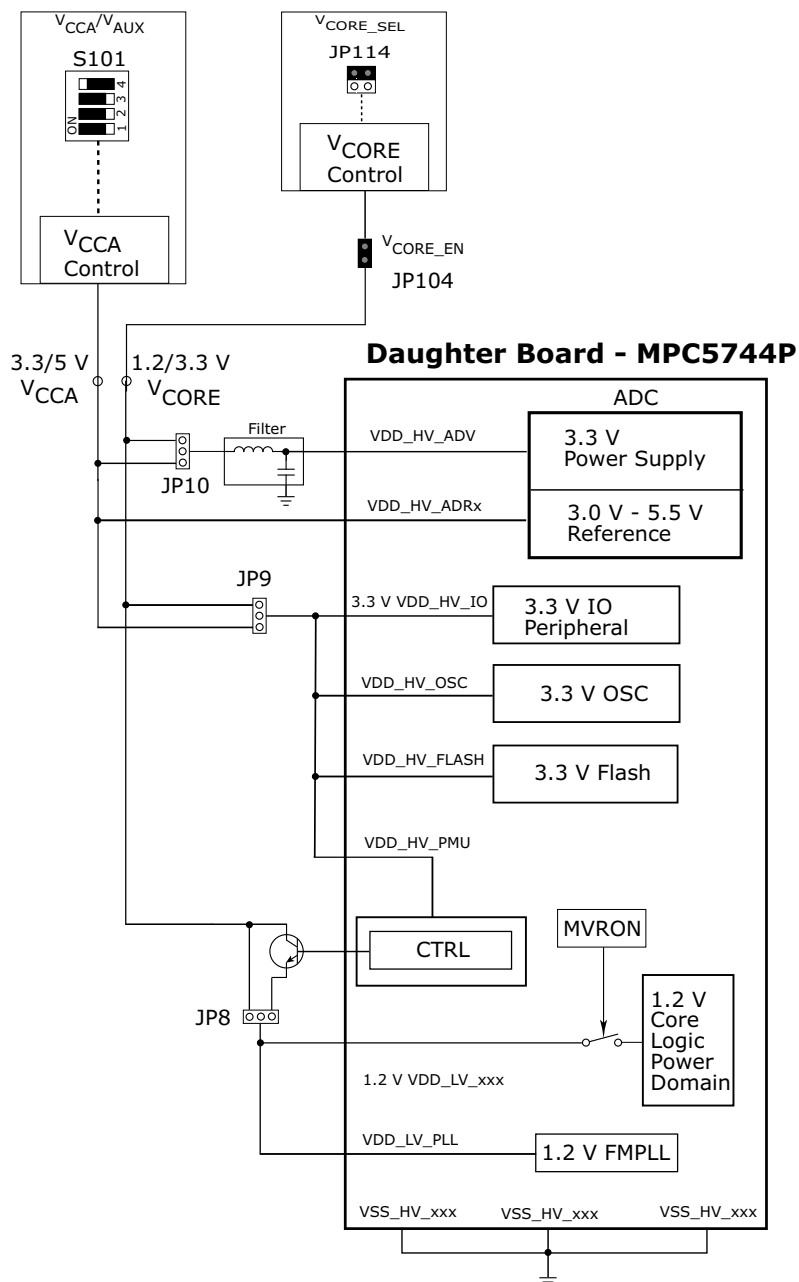


Figure 5. Power Supplies - Configuration of the Mother Board

## 3.5.2 Peripherals

Port mapping between peripherals on the mother and daughter boards is shown in [Table 9](#).

**Table 9. Port Mapping Between Mother Board and the KITMPC5744DBEVM Daughter Board**


| Module/Pin              | Pin function | MCU port | Jumper setting |                | MCU         |             |
|-------------------------|--------------|----------|----------------|----------------|-------------|-------------|
|                         |              |          | Mother board   | Daughter board | Pin         | Module name |
| SPI                     | MOSI         | PORTC    |                |                | C[6]        | DSPI_0      |
|                         | MISO         |          |                |                | C[7]        |             |
|                         | CLK          |          |                |                | C[5]        |             |
|                         | NCS          |          |                |                | C[4]        |             |
| ADC                     | Mux_OUT      | PORTB    | JP300          |                | B[7]/AN[0]  | ADC_0       |
|                         | POT          | PORTC    |                |                | B[13]/AN[0] | ADC_1       |
| UART                    | Tx           | PORTD    | JP304          |                | D[9]        | LINFlex_1   |
|                         | Rx           |          | JP305          |                | D[12]       |             |
| $\overline{\text{INT}}$ | EIRQ         | PORTA    |                | JP1            | A[0]/REQ0   |             |
|                         | NMI          |          |                |                | /NMI        |             |
| RSTb                    |              |          |                | JP3            | RESET       |             |
| FCCU                    | FCCU[0]      |          | JP110          |                | FCCU_F[0]   | FCCU        |
|                         | FCCU[1]      |          | JP109          |                | FCCU_F[1]   |             |
| SIUL                    | SW1          | PORTA    | JP306          |                | A[5]        | SIUL        |
|                         | SW2          |          |                |                | A[6]        |             |
|                         | SW3          |          |                |                | A[7]        |             |
|                         | SW4          |          |                |                | A[8]        |             |
|                         | LED1         | PORTD    | JP307          |                | D[4]        |             |
|                         | LED2         |          |                |                | D[5]        |             |
|                         | LED3         |          |                |                | D[6]        |             |
|                         | LED4         |          |                |                | D[7]        |             |
| CAN                     | Tx           | PORTB    |                |                | B[0]        | FlexCAN[0]  |
|                         | Rx           |          |                |                | B[1]        |             |
| LIN                     | Tx           | PORTB    |                |                | B[2]        | LINFlex_0   |
|                         | Rx           |          |                |                | B[3]        |             |

## 4 Installing the Software and Setting up the Hardware

### 4.1 Installing the GUI on your Computer

The Graphical User Interface (GUI) software is dedicated to the MC33907\_8 development boards. To install the GUI successfully please follow these steps:

1. Make sure that the KIT33908MBEVBE is disconnected from the PC.
2. Launch “setup.exe” as shown in [Figure 6](#).

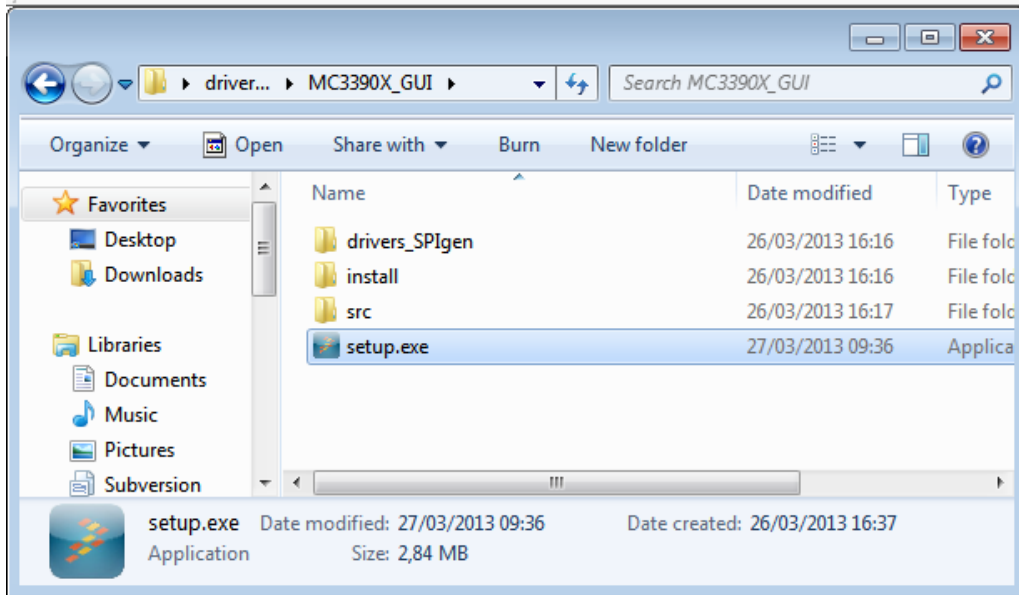

**Figure 6. GUI Installation**

3. Follow instructions of the automatic installer.
4. Connect the KIT33908MBEVBE to the PC – installation of the drivers starts automatically.
5. Launch the GUI when the installation is finished (restart is not required).

## 4.2 Configuring the Hardware

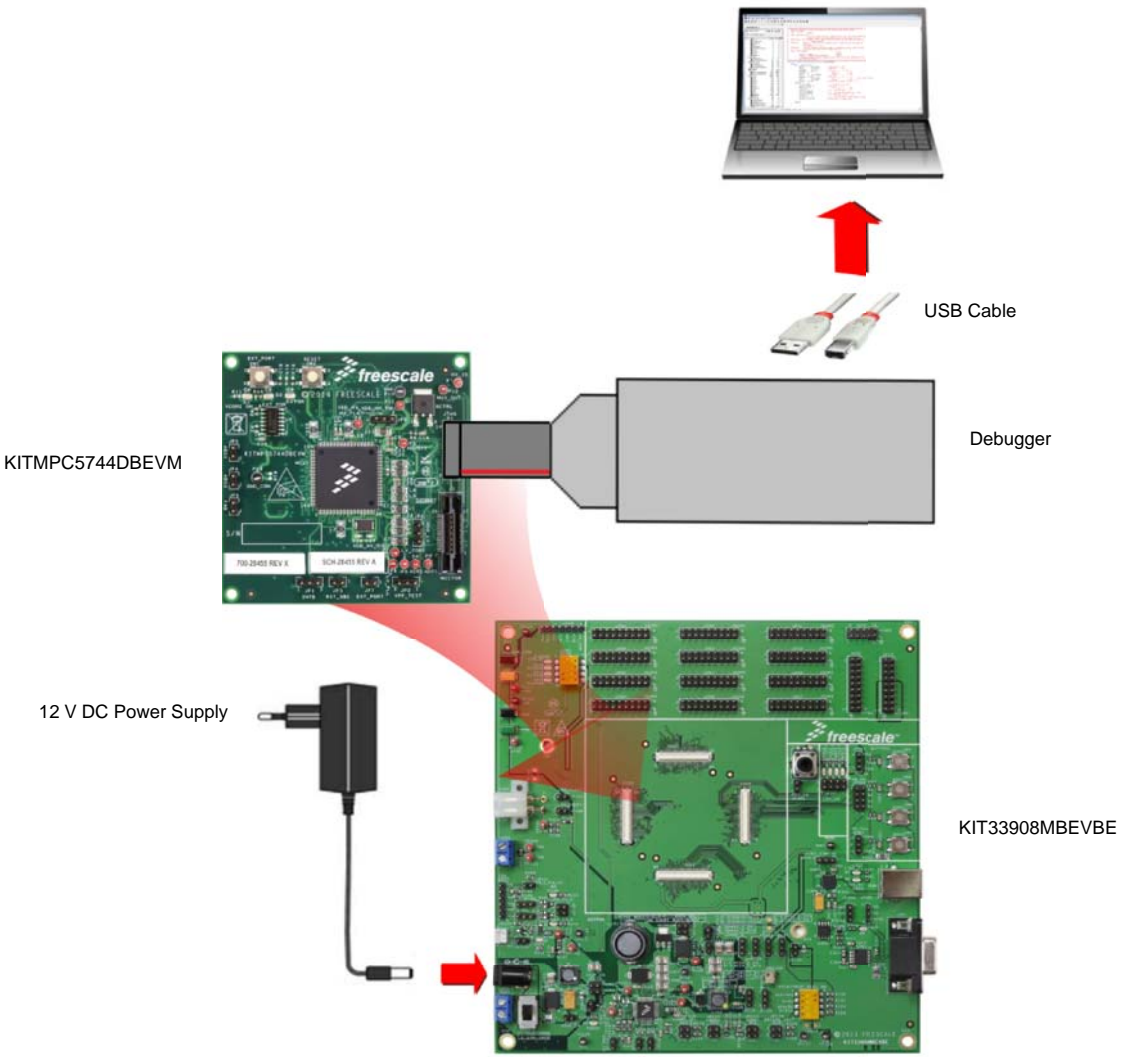


Figure 7. Recommended Configuration for Software Development



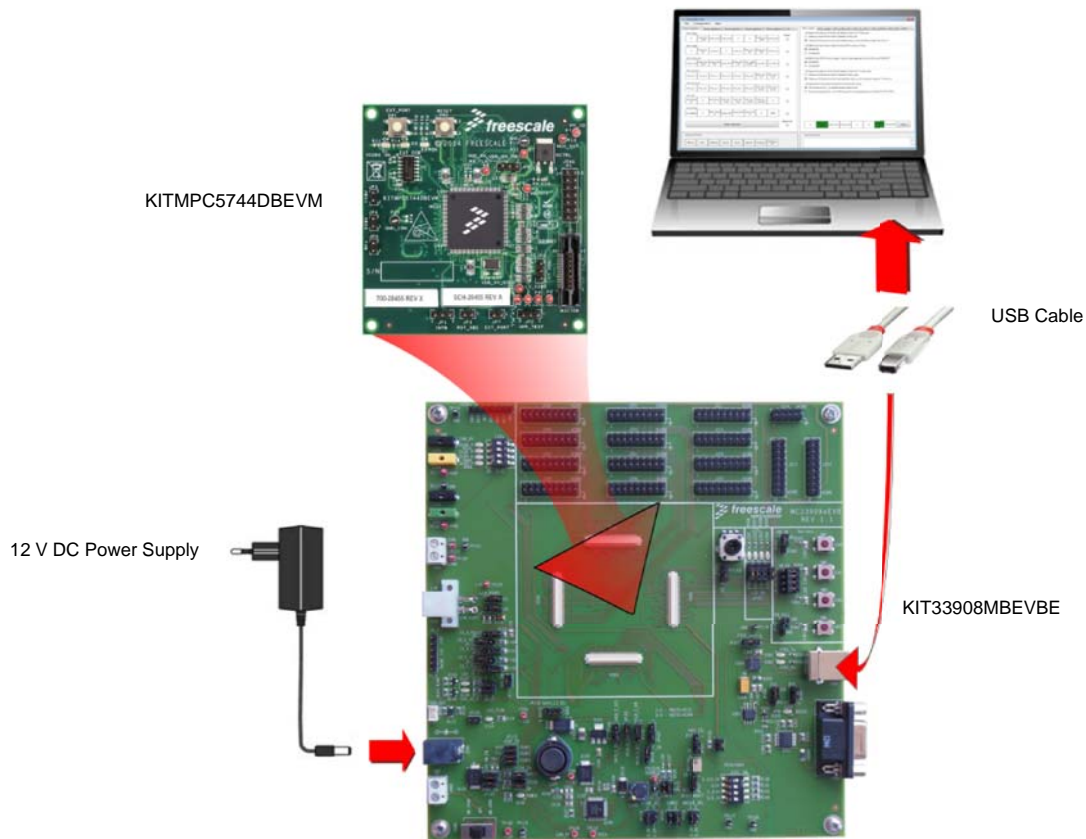



Figure 8. Recommended Configuration for Hardware Development

### 4.3 Step-by-Step Instructions for Setting Up the Hardware Using the GUI

In order to perform the demonstration examples, first set up the evaluation board hardware and software as follows:

1. Install the MC33907\_8 graphical user interface.
2. Plug-in the daughter board (KITMPC5744DBEVM) to the mother board platform (KIT33908MBEVBE).
3. Connect the power supply to the mother board and switch it on (verify the polarity of the power supply first).
4. Connect the mother board to the PC using a USB A-B cable.
5. Wait for the driver installation to complete (after the first connection, drivers for the device have to be installed). This takes several minutes.
6. When the installation is complete, a status message is displayed.
7. Launch the MC33907\_8 GUI.
8. Click the EVM button on the welcome screen to choose the enhanced evaluation board option.
9. Click on the tab called "Read register 5". If the board works properly, the bits of the WD\_LFSR register move randomly.

# 5 Schematic

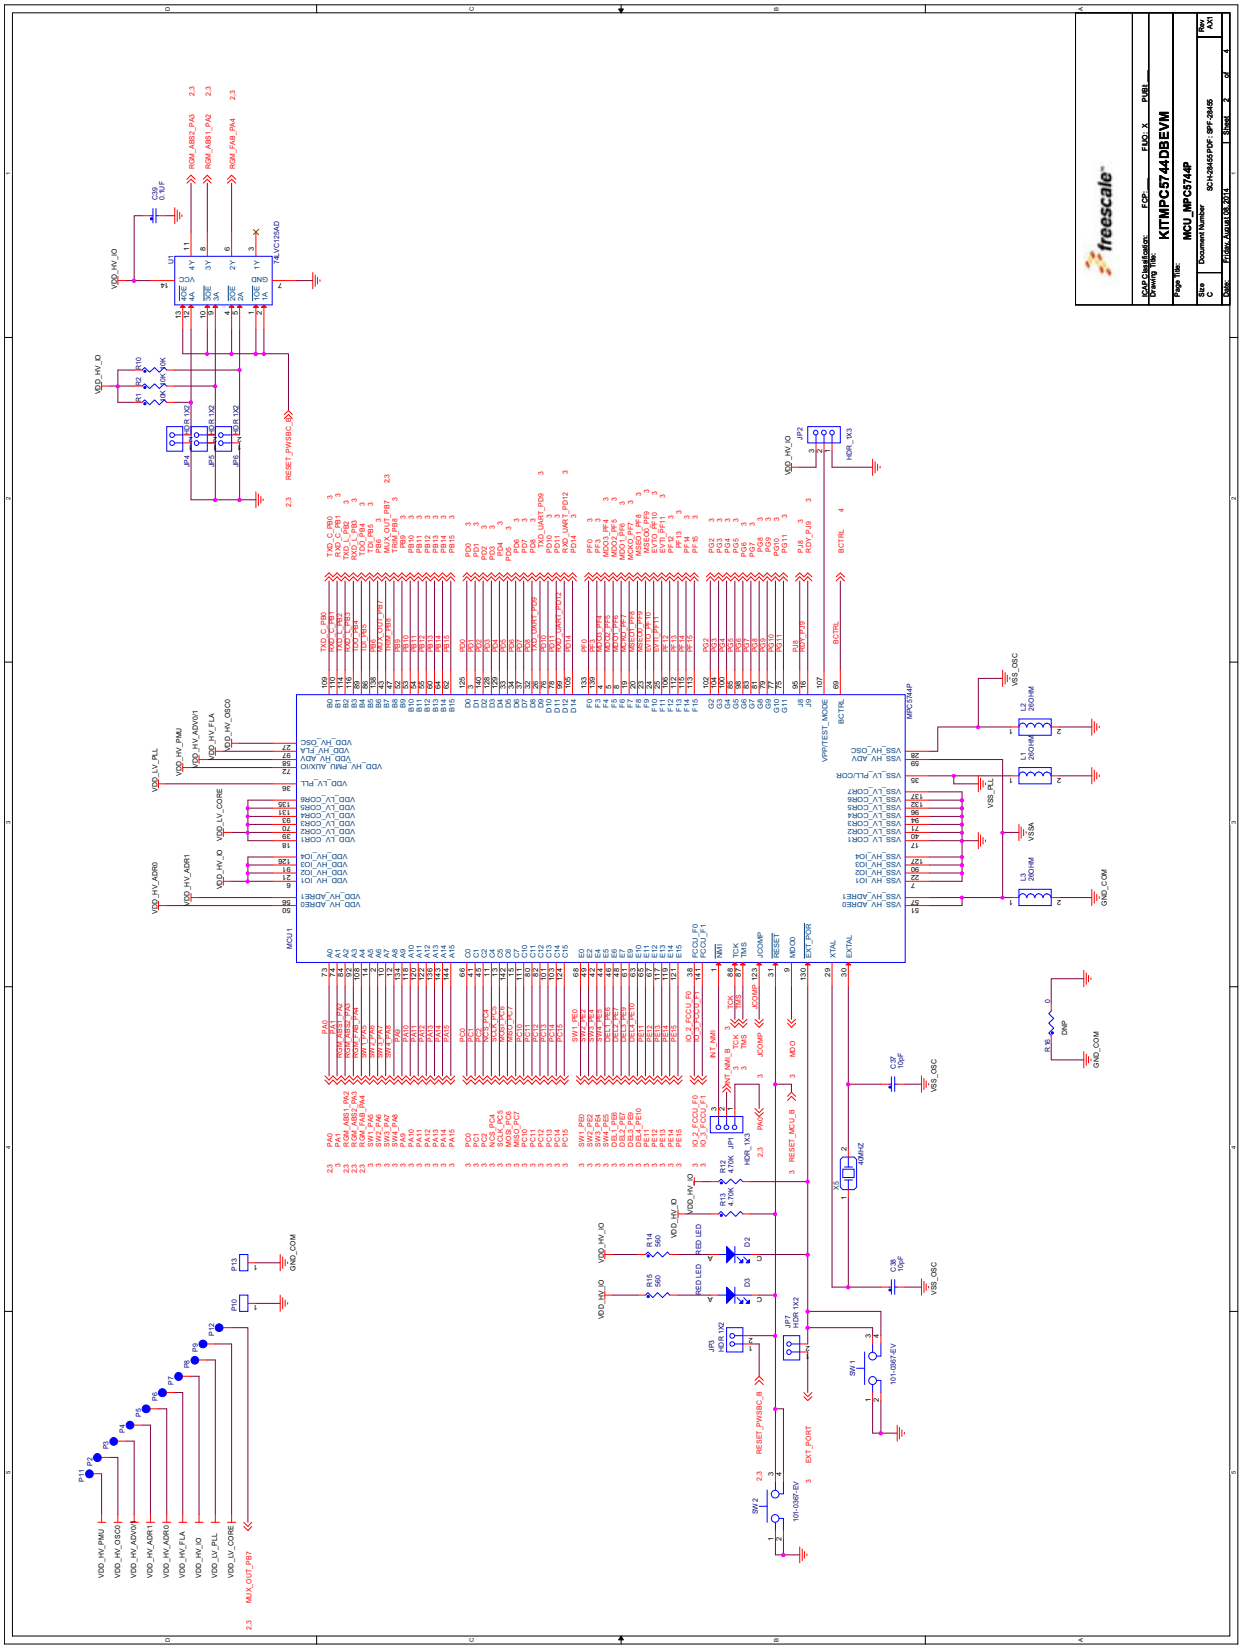

|              |                                       |                          |
|--------------|---------------------------------------|--------------------------|
| Doc ID: 5200 | Doc Type: Schematic                   | Doc Name: KTMPC5744DBEVM |
| Doc Rev: 1.0 | Doc Date: 2/2015                      | Doc Author: [Redacted]   |
| Doc Part: 1  | Doc Title: Evaluation Board Schematic | Doc Category: [Redacted] |

Figure 9. Evaluation Board Schematic, Part 1




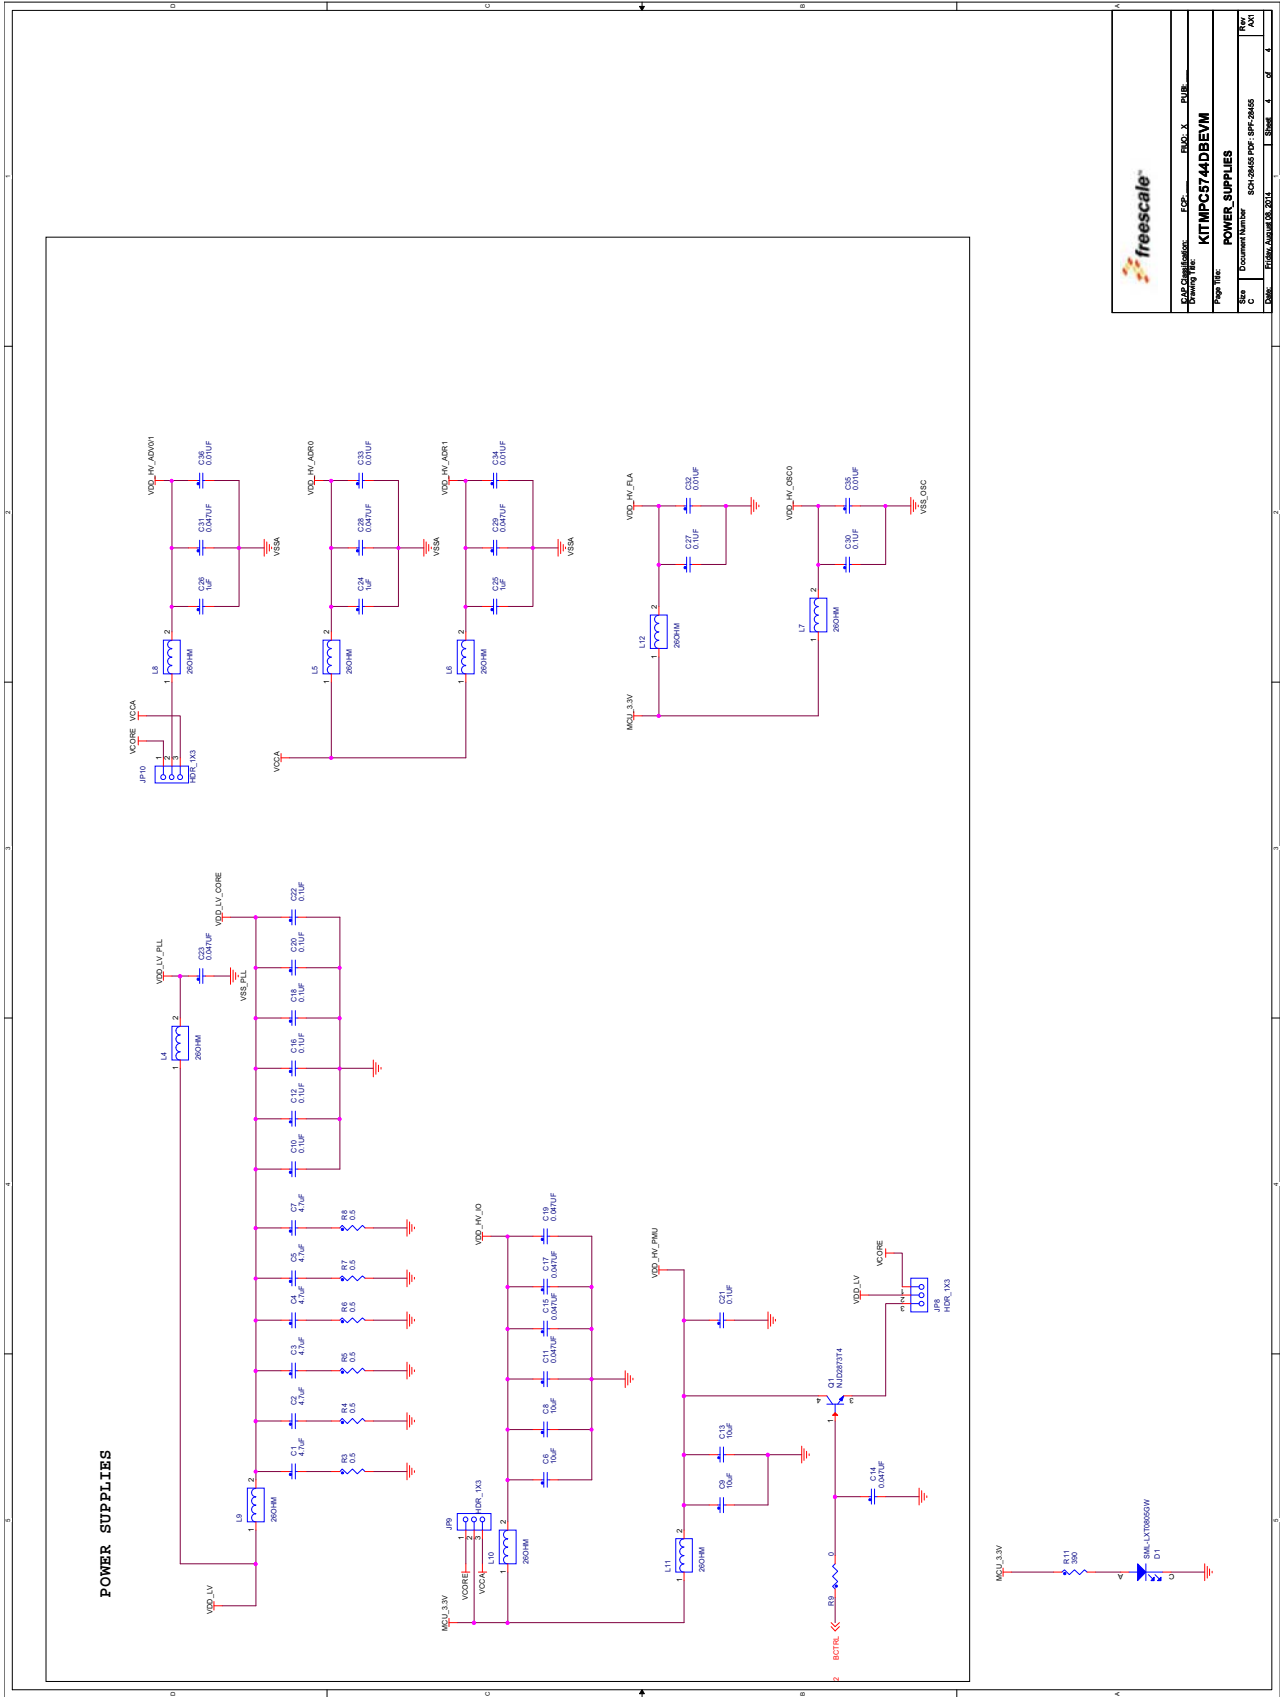


Figure 11. Evaluation Board Schematic, Part 3


|                  |                       |
|------------------|-----------------------|
|                  |                       |
| Doc. Compliance: | FCP                   |
| Doc. Name:       | KTMP5744DBEVM         |
| Doc. Rev:        | 1.0                   |
| Doc. Date:       | 08/20/15              |
| Doc. Size:       | 1.0 MB                |
| Doc. Type:       | POWER SUPPLIES        |
| Doc. Number:     | SC4-2648 Pwr-Sup-2648 |
| Doc. Rev:        | 1.0                   |
| Doc. Date:       | 08/20/15              |

# 6 Board Layout

## 6.1 Silkscreen Top

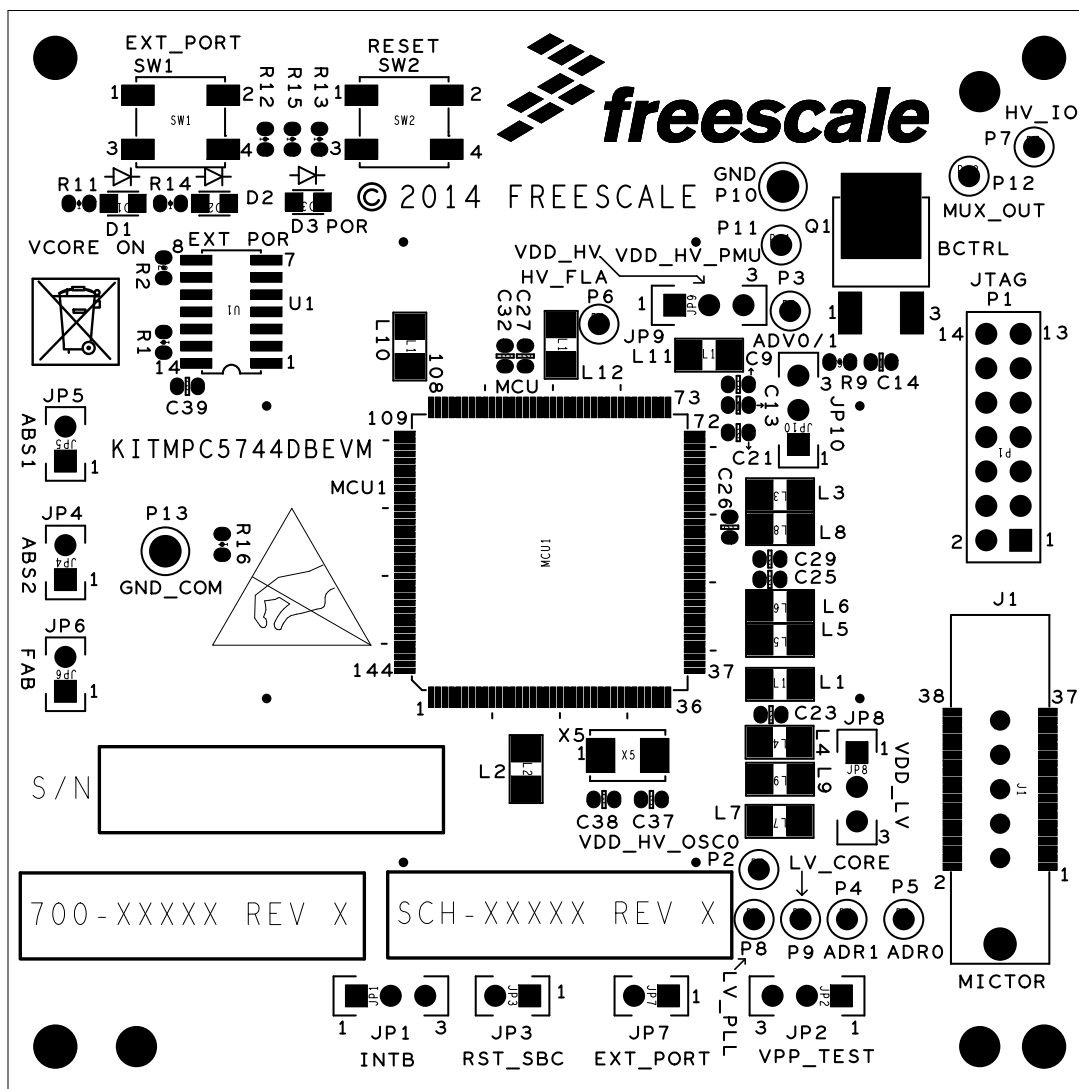

### 6.2 Silkscreen Bottom

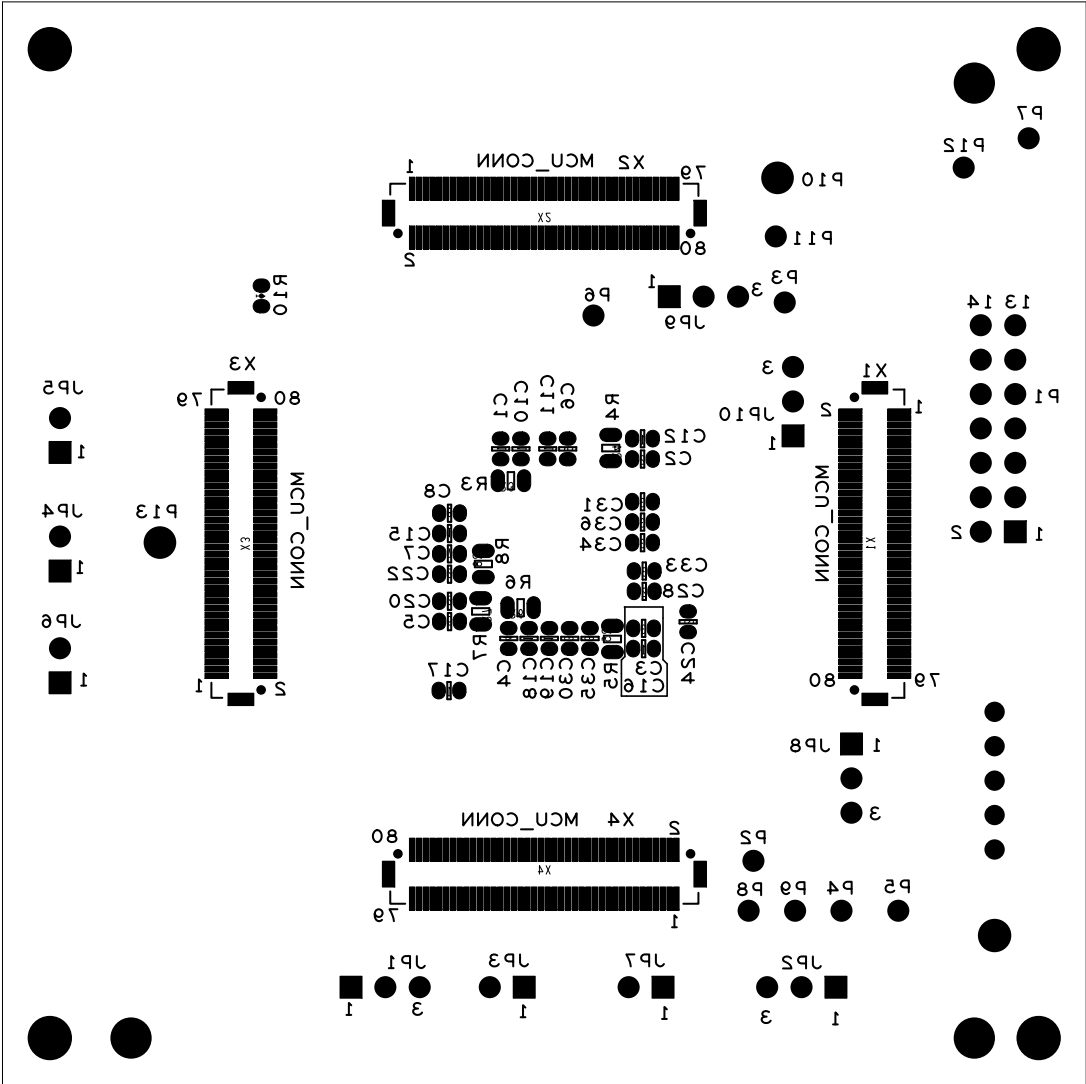

# 7 Bill of Materials

**Table 10. Bill of Materials <sup>(1)</sup>**

| Item                     | Qty | Schematic Label                                   | Value          | Description  | Part Number          | Assy Opt |
|--------------------------|-----|---|----------------|--|----------------------|----------|
| <b>Active Components</b> |     |   |                |  |                      |          |
| 1                        | 1   | U1  |                | IC BUF QUAD TS 1.2 V - 3.6 V SO14                    | 74LVC125AD           |          |
| 2                        | 1   | MCU1  |                | IC MCU 32 BIT 2.5 MB FLASH 384 KB SRAM 3.3 V LQFP144 | PPC5744PFK0AMLQ8     |          |
| <b>Resistors</b>         |     |   |                |  |                      |          |
| 3                        | 3   | R1, R2, R10                                       | 10 K           | RES MF 10 K 1/10 W 5% 0603                           | RK73B1JTDD103J       |          |
| 4                        | 6   | R3, R4, R5, R6, R7, R8                            | 0.5 $\Omega$   | RES MF 0.50 $\Omega$ 1/8 W 1% 0805                   | RL0805FR-070R5L      |          |
| 5                        | 1   | R9  | 0 $\Omega$     | RES MF 0 $\Omega$ 1/10 W 1% 0603                     | MC0603SAF0000T5E     |          |
| 6                        | 1   | R11   | 390 $\Omega$   | RES MF 390 $\Omega$ 1/10 W 5% 0603                   | RK73B1JTDD391J       |          |
| 7                        | 2   | R12, R13  | 4.70 K         | RES MF 4.7 K 1/4 W 1% AEC-Q200 0603                  | CRCW06034K70FKEAHP   |          |
| 8                        | 2   | R14, R15  | 560 K          | RES MF 560 K 1/10 W 5% 0603                          | RK73B1JTDD561J       |          |
| 9                        | 1   | R16   | 0 $\Omega$     | RES MF 0 $\Omega$ 1/10 W 1% 0603                     | MC0603SAF0000T5E     | (2)      |
| <b>Capacitors</b>        |     |   |                |  |                      |          |
| 10                       | 6   | C1, C2, C3, C4, C5, C7                            | 4.7 $\mu$ F    | CAP CER 4.7 $\mu$ F 25 V 10% X5R 0603                | GRM188R61E475KE11D   |          |
| 11                       | 4   | C6, C8, C9, C13                                   | 10 $\mu$ F     | CAP CER 10 $\mu$ F 25 V 20% X5R 0603                 | GRM188R61E106MA73D   |          |
| 12                       | 10  | C10, C12, C16, C18, C20, C21, C22, C27, C30, C39  | 0.1 $\mu$ F    | CAP CER 0.1 $\mu$ F 50 V 10% X7R 0603                | GRM188R71H104KA93D   |          |
| 13                       | 9   | C11, C14, C15, C17, C19, C23, C28, C29, C31       | 0.047 $\mu$ F  | CAP CER 0.047 $\mu$ F 25 V 10% X7R 0603              | C0603X7R250-473KNE   |          |
| 14                       | 3   | C24, C25, C26                                     | 1 $\mu$ F      | CAP CER 1 $\mu$ F 25 V 10% X7R 0603                  | 0603X105K250SNT      |          |
| 15                       | 5   | C32, C33, C34, C35, C36                           | 0.01 $\mu$ F   | CAP CER 0.01 $\mu$ F 50 V 10% X7R 0603               | C0603X7R500-103KNE   |          |
| 16                       | 2   | C37, C38  | 10 pF          | CAP CER 10 pF 50 V 10% X7R 0603                      | 06035C100KAT2A       |          |
| <b>Diodes</b>            |     |   |                |  |                      |          |
| 17                       | 1   | D1  | SML-LXT0805 GW | LED GRN SGL 2 V 20 MA SMT 0805                       | SML-LXT0805GW-TR     |          |
| 18                       | 2   | D2, D3  | RED LED        | LED RED SGL 30 MA SMT 0805                           | SML-LXT0805IW-TR     |          |
| <b>Connectors</b>        |     |   |                |  |                      |          |
| 19                       | 5   | JP1, JP2, JP8, JP9, JP10                          | HDR_1X3        | HDR 1X3 TH 100 MIL SP 338H AU 150L                   | HMTSW-103-24-S-S-230 |          |
| 20                       | 5   | JP3, JP4, JP5, JP6, JP7                           | HDR 1X2        | HDR 1X2 TH 100 MIL SP 165H AU                        | TLW-102-06-G-S       |          |
| 21                       | 1   | J1  | CON_2X19       | CON 2X19 SKT SMT 25 MIL SP AU MICTOR                 | 5767061-1            |          |
| <b>Inductors</b>         |     |   |                |  |                      |          |
| 22                       | 12  | L1, L2, L3, L4, L5, L6, L7, L8, L9, L10, L11, L12 | 26 $\Omega$    | IND FER BEAD 26 $\Omega$ 100 MHZ 1.5 A 25% 1206      | MI1206K260R-10       |          |
| <b>Test Points</b>       |     |   |                |  |                      |          |
| 23                       | 1   | P1  | HDR 2X7        | HDR 2X7 TH 100 MIL CTR 330H SN 115L                  | TSW-107-23-T-D       |          |
| 24                       | 10  | P2, P3, P4, P5, P6, P7, P8, P9, P11, P12          | TEST POINT RED | TEST POINT RED 40 MIL DRILL 180 MIL TH 109L          | 5000                 |          |
| 25                       | 2   | P10, P13  | 5006           | TEST POINT BLK 70X220 MIL TH                         | 5006                 |          |
| <b>Transistors</b>       |     |   |                |  |                      |          |
| 26                       | 1   | Q1  | NJD2873T4      | TRAN NPN PWR BJT 2 A 50 V DPAK                       | NJD2873T4G           |          |

**Table 10. Bill of Materials <sup>(1)</sup> (continued)**

| Item            | Qty | Schematic Label | Value        | Description                        | Part Number                    | Assy Opt |
|-----------------|-----|-----------------|--------------|------------------------------------|--------------------------------|----------|
| <b>Switches</b> |     |                 |              |                                    |                                |          |
| 27              | 2   | SW1, SW2        | 101-0367-EV  | SW SPST MOM NO PB 50 MA 12 V SMT   | 101-0367-EV                    |          |
| <b>Jumpers</b>  |     |                 |              |                                    |                                |          |
| 28              | 4   | X1, X2, X3, X4  | CON 2X40 HDR | CON 2X40 HDR SMT 0.5 MM SP 99 H AU | DF12 (3.0)-80DP-0.5V (86)      |          |
| <b>Crystal</b>  |     |                 |              |                                    |                                |          |
| 29              | 1   | X5              | 40 MHZ       | XTAL 40 MHZ -- -- SMT              | NX5032GA-40.000000MHZ-L N-CD-1 |          |

Notes

1. Freescale does not assume liability, endorse, or warrant components from external manufacturers are referenced in circuit drawings or tables. While Freescale offers component recommendations in this configuration, it is the customer's responsibility to validate their application.
2. Do not populate.
3. **Critical components.** For critical components, it is vital to use the manufacturer listed.



## 8 References

| Freescale.com Support Pages | Description          | URL   |
|-----------------------------|----------------------|---|
| KITMPC5744DBEVM             | Tool Summary Page    | <a href="http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=KITMPC5744DBEVM">http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=KITMPC5744DBEVM</a> |
| MC33908                     | Product Summary Page | <a href="http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=MC33908">http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=MC33908</a>                 |
| KIT33908MBEVBE              | Tool Summary Page    | <a href="http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=KIT33908MBEVBE">http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=KIT33908MBEVBE</a>   |
| MPC564xL                    | Product Summary Page | <a href="http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=MPC564xL">http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=MPC564xL</a>               |
|                             | Analog Home Page     | <a href="http://www.freescale.com/analog">http://www.freescale.com/analog</a>   |
|                             | Automotive Home Page | <a href="http://www.freescale.com/automotive">http://www.freescale.com/automotive</a>   |

### 8.1 Support

Visit [www.freescale.com/support](http://www.freescale.com/support) for a list of phone numbers within your region.

### 8.2 Warranty

Visit [www.freescale.com/warranty](http://www.freescale.com/warranty) for a list of phone numbers within your region.

## 9 Revision History

| Revision | Date   | Description of Changes |
|----------|--------|------------------------|
| 1.0      | 2/2015 | • Initial Release      |



**How to Reach Us:**

**Home Page:**  
[freescale.com](http://freescale.com)

**Web Support:**  
[freescale.com/support](http://freescale.com/support)

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: [freescale.com/SalesTermsandConditions](http://freescale.com/SalesTermsandConditions).

Freescale and the Freescale logo, Energy Efficient Solutions, and the SafeAssure, logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. SMARTMOS is a trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2015 Freescale Semiconductor, Inc.

Document Number: KT MPC5744DBUG  
Rev. 1.0  
2/2015





Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.